

Wireless Controller

Instruction Manual

For Switch/Switch OLED MODE

Switch Lite/PC/Steam Deck/Tesla




Getting Started


- Make sure you read this guide, before using the Wireless controller.
- Reading this guide will help you learn to use the controller properly.
- Store this guide safely so that you can use it in the future.



Because express strictly Limit that battery should keep low energy during transit, when you can't wake up your controller, please charge your controller first.

Product description

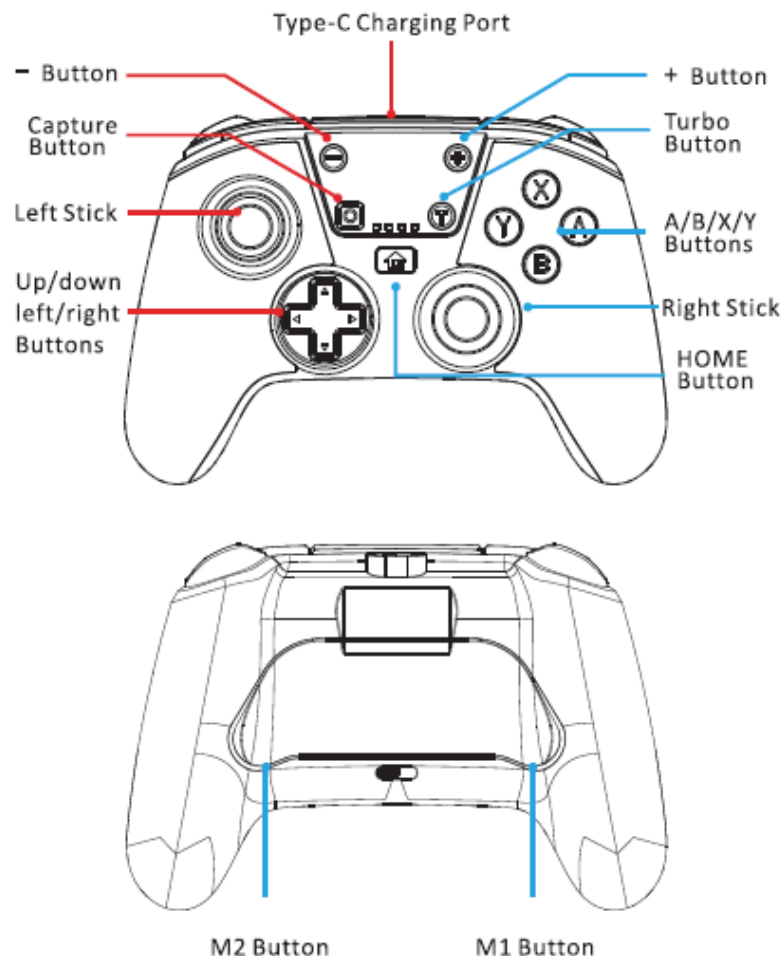

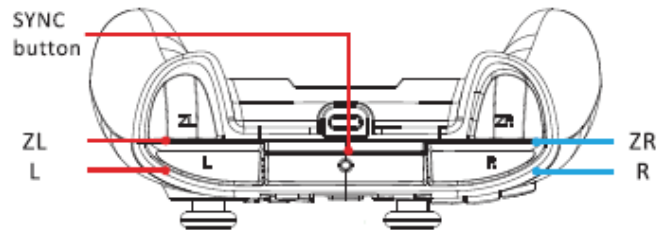


Compatible With

Switch /Switch OLED MODE /Switch Lite
PC/Steam Deck/Tesla

How to connect to Switch/Switch OLED MODE for the first time

- 1, From the HOME Menu → select "Controllers" → then "Change Grip and Order." While the following screen is displayed.
- 2, Press and hold down the [SYNC Button] on the controller for at least 7 seconds. the 4 LEDs on the front of the controller will quickly flash.
- 3, Once paired, the player LED(s) corresponding to the controller number will remain lit.

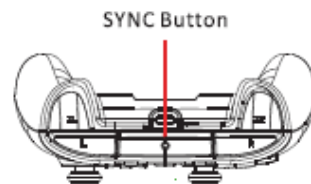

How to reconnect to Switch/Switch OLED MODE

Method 1

To reconnect

- 1) Power your Switch console on, go into HOME Menu.
- 2) Short Press the function button on the wireless controller (Function Button: A/B/X/Y/Up/Down/Left/Right/L1/ L2/R1/R2/ Capture/-/+ /SYNC)
- 3) the LED(s) on the front of the controller will flash
- 4) Once paired, the player LED(s) corresponding to the controller number will remain lit.

Method 2

To reconnect

When Switch Console is in sleep mode (Not in Airplane Mode)

- 1) Short Press the **HOME Button** on the wireless controller, the 4 LEDs on the front of the controller will quickly flash.
- 2) Controller will wake up Switch console and connect with it.
Once paired, the player LED(s) corresponding to the controller number will remain lit.

Troubleshoot your controllers

Solution 1: Because Bluetooth Pairing Problems between NS Switch and controller, If you can't finish the first connection, please restart your NS Switch as below and try again.

- Hold the power button located on the top of the Switch for around 5 seconds.
- Under sleep mode, you will see "Power Options"
- Under Power Options, you can choose to restart or turn the power off

Situation 2: Charge your controllers, Because express strictly Limit that battery should keep low energy during transit .

Situation 3: Once your controller paired with console and you have pressed A button 1 time, While the following screen is displayed, please DO NOT press [A button] again, you can press [B button] or [HOME button]



How to set up Turbo and Auto Turbo function



Turbo Mode

The turbo button causes the game function assigned to the button to fire in rapid succession

E.g. Fire 1 bullet when you hit the button once, when turbo is on and you hold down the button, fires continuously.

Auto Turbo Mode

The Auto Turbo function allows continuous rapid fire without having to hold the button

The following button can be set to Turbo or Auto Turbo Mode:

A/B/X/Y/L1/L2/R1/R2

The Turbo function of the controller can be saved even it is powered off

How to set to Turbo mode and Auto Turbo mode

Turbo mode

Turn on:

Hold down the button that you want to set to Turbo, then press the Turbo button **one time**.

○ (A/B/X/Y/L1/L2/R1/R2) + ⊗

Turn off:

Method 1

After setting up Turbo mode, you want to cancel this button's Turbo function.

Hold down the button, then press the Turbo button **Two times**.

○ + ⊗ (two times)

■ Method 2

If you forget which buttons you have set to Turbo mode, turn off turbo function of all buttons and reassign.

Hold down Turbo button for at least 5 seconds

 Hold down Turbo button for at least 5 seconds

Auto Turbo mode

Turn on:

Under Turbo mode, Press the button you set to Turbo mode and Turbo button **once more**, the button will remain in Auto Turbo mode.

 (A/B/X/Y/L1/L2/R1/R2) + 

Under Turbo mode

If not in Turbo mode, Press the button you want to set to Auto Turbo mode and press Turbo button two times, the button will remain in Auto Turbo mode.

 (A/B/X/Y/L1/L2/R1/R2) + 

NOT in Turbo mode

Turn off:

■ Method 1

If you want to deactivate Auto Turbo function

Hold down the button you set to Auto Turbo mode, then press the Turbo button.

 + 

Under Auto Turbo mode

■ Method 2

If you want to turn off turbo function of all buttons and reassign.
Hold down TURBO Button for more than 5 seconds

Turbo speed adjustment

This Controller provides 3 levels turbo speeds:

5 shoots/s → 12 shoots/s → 20 shoots/s

Turbo speed adjustment

Pressing "Turbo" button, push up on the Right Analog Stick to change the Turbo speed: 20 times/second

Pressing "Turbo" button, push down on the Right Analog Stick to change the Turbo speed: 5 times/second

The Turbo function and speed of the controller can be saved even it is powered off

Vibration intensity adjustment

4-level vibration intensity adjustment:

100% → 70% → 30% → 0%

Strengthen Vibration—Keep Pressing “Turbo” and “+” button simultaneously for least 3 seconds

Weaken Vibration—Keep Pressing “Turbo” and “-” button simultaneously for least 3 seconds

The vibration strength of the controller can be saved even it is powered off

Calibrate the Controller

Solution 1: When controller is connecting with console

Correcting axis of the Controller, From the HOME Menu, select “System Settings” > “Controllers and Sensors” > “Calibrate Motion Controls” > “Calibrate controllers” Then complete calibrating as instructions



How to turn the controllers off

1. Short press the [Sync Button] to power off the controller.
2. Holding down the [HOME Button] on the controller for at least 5 seconds to turn it off.

How to connect the controller to a PC

Compatible with

PC running Windows 7/10 and MacOS

Complete these steps

The Controller can be paired to the PC in the following ways:

Bluetooth pairing on your Windows 7/10 computer

- 1, Open the Settings app.
- 2, Navigate to Devices and go to Bluetooth.
- 3, Make sure the Bluetooth switch is in the On position. (You'll know it is working because you'll notice the message that reads "Your PC is searching for and can be discovered by Bluetooth devices.")
- 4, Press and hold down the [SYNC Button] on the controller 7 seconds to complete bluetooth pairing
- 5, Select [Pro Controller] to connect and click Pair. (NOT JYS Controller)
If for some reason your device doesn't appear [Pro Controller] name, click the "Add Bluetooth or Other Device" button located at the top of the Settings window. select [Pro Controller] name to connect

Bluetooth pairing on your Mac OS

- 1, Click on "Mac" icon and select "System Preference".
- 2, Click on "Bluetooth" icon.
- 3, Click on "Setup new device" button to find bluetooth devices
- 4, Press and hold down the [SYNC Button] on the controller 7 seconds to complete bluetooth pairing.
- 5, Select the Bluetooth controller name [Pro Controller] and click on "Continue" button to pair.

- 1, Before connecting, make sure your PC supports Bluetooth.
- 2, If PC running Mac OS system, Controller just can pair with it via Bluetooth

USB connection pairing

Method 1

- 1, Press and hold the R3 button on the controller, Connect the Controller to your PC with the included Type C cable

Note: 1, Controller works on PC Steam Platform.
2, Features like Sixaxis motion/Vibration/Turbo work in this mode.

Method 2

- 1, Connect the Controller to your PC with the included Type C cable

Controller will have better compatibility in this connection mode, but Sixaxis motion function does not work on PC Steam Platform

R3 Button

R3 button = Pressing down right thumb stick



How to connect the controller to Tesla

USB connection pairing

Connect the Controller to your Tesla with the included Type C cable

- 1, Plug one end of the USB cord into a USB Port of the Tesla
- 2, Plug the other end of the USB cord into your controller

How to connect the controller to Steam Deck

Bluetooth pairing

- 1, On Steam Deck, enable Bluetooth:
Settings → Bluetooth → ON
- 2, Press and hold down the [SYNC Button] on the controller 7 seconds to complete bluetooth pairing

How to Charge the Controller

To charge your Controller via USB Port:

- 1, Plug one end of the USB cord into an USB Port
- 2, Plug the other end of the USB cord into your controller

To charge your Controller via AC Adapter:

- 1, Plug one end of the USB cord into an outlet
- 2, Plug the other end of the USB cord into your controller

* The AC Adapter is not included in the bundle.

Charging indicator

1. When controller is disconnected with console and charging, the player LEDs will slow blink → Fully charged, LEDs will go out.
2. When controller is connecting with Switch console and charging, the player LED(s) corresponding to the controller number will slow blink → Fully charged, LEDs will remain lit.

Low power warning

When controller's battery voltage is lower than 3.35V, the corresponding channel light will blink, indicating that the controller needs recharging

Receiving distance

The receiving distance at about 10M (barrier-free environment)

Lamplight

The lamplight of the controller can be adjusted as below

Keep pressing [Turbo button],then press Right direction of D-PAD

The lamplight has 8-level and can be adjusted circularly
Level 1 is to turn off the lamplight

Reset function

When the controller is out of order,which can be reset by pressing down HOME button about 15 seconds.

Package Contents

- 1x Game controller
- 1x 1.8M Data Cable
- 1x User Manual

Specification

- | | |
|---|--------------------------|
| ■ Dimensions: Length:153mm,Width:111mm,Height61mm | |
| ■ Battery:Lithium Ion Battery | ■ Working current:30mA |
| ■ Battery Capacity:500mAh | ■ Charging Voltage:5V |
| ■ Battery using time:About 16 Hours | ■ Charging current:350mA |
| ■ Charging time:About 1.5 Hours | |

How to use the APP KeyLinker

KeyLinker is a APP that can be used to modify the configuration of the JYS Controller,Such as Changekey,Joystick,Trigger,Motor,Turbo,Marco, Lamplight. Users can modify the configuration of the controller according to their habits. KeyLinker is able to provide 1-to-1 gaming precision that consistently performs in every game you Play. It's quick and easy to set up your preferred gaming environment through its wireless smartphone tool.while using the controller on Switch/PC/Switch/PC/ Steam Deck/Tesla,which can be connected to KeyLinker APP simultaneously.

1,Download [KeyLinker] APP from APP Store.

2,Install [KeyLinker] APP and run it.

3,Pair controller with smartphone

- ① Turn on Bluetooth on your smartphone settings
- ② Make sure your controller is awake
- ③ Our controller name will appear on the Detected Device.Bluetooth Name: JYS BLE Controller, Just tap it to pair the smartphone with controller.
- ④ Once paired,Bluetooth Name:JYS BLE Controller will appear on the Paired Deice

4,Click the Bluetooth Name: JYS BLE Controller to enter into page of modifying the configuration



Scan QR code for KeyLinker



ChangeKey

Keylinker makes it easy to change the button mapping of your controllers and save them to system that work in every game. You can also swap thumbsticks. Here's how

For example, replace the function of key A with key X. Operation method: Click the drop-down button that needs to be changed, select the target key from the drop-down list, or press the corresponding target key directly on the Controller, Click Apply button to confirm.

Joystick

It is used to adjust the effective range of joystick, X-axis reverse, Y-axis reverse, exchange left and right joystick, and adjust the sensitivity curve, Click Apply button to confirm.

Left/Right Motor

It is used to adjust the vibration strength of the motor. Each time choose a motor. Vibration intensity is a large adjustment, and custom is fine tuning Operation method:

Click "+" and "-" key or pull the status bar to adjust the vibration strength of the motor, Click Apply button to confirm.

Turbo

Turbo Mode

The turbo button causes the game function assigned to the button to fire in rapid succession

Auto Turbo Mode

The Auto Turbo function allows continuous rapid fire without having to hold the button

Simplify the user's operation. For example, if the skill key is changed to Auto Turbo Mode, the skill will be released all the time when the global switch is turned on. If the skill key is changed to Turbo Mode, the skill will be released all the time only after pressing and holding the key Operation method:

1. Each key can be set to either Turbo or Auto Turbo Mode, click on the switch settings behind the key
2. You can click on "+" and "-" key or pull the status bar to adjust the Turbo /Auto Turbo speed
3. Click Apply button to confirm.

The Turbo function of the controller can be saved even it is powered off

Marco M1/M2

Simulate one click triggering multiple steps, and one macro supports 42 steps, Operation steps:

- a. Click the drop-down button and select M1 or M2 Key as the key of macro
 - b. Click "red circle" below
 - c. Press the combo action on the controller. Click stop key to save
 - d. Click Apply button to confirm.
2. After recording, you can long press the status bar to add or reduce a procedure
 3. Click the corresponding serial number on the status bar to edit the contents of this column
 4. Long press the status bar of the joystick or D-PAD key to switch and choose the direction you want (Joystick and D-PAD have 8 directions respectively)
 5. Circulation: long press M1 or M2 to trigger saved Macro.
 6. Cancel Marco function: 1, select M1 or M2 page 2, Double click "red circle" below to cancel Marco function.

Lamplight1/2

It is used to adjust the lamplight of the controller. You can select the light you want to adjust in the lamplight drop-down list and adjust a single lamplight each time.

Operation method:

1. You can click the arrow behind the[R] [G] [B] letter to adjust the RGB value, and you can select your favorite lamplight color in the color block list and color block bar
2. Constant light mode: you can adjust the brightness of the lamplight.
Breathing mode: you can adjust the speed of lamplight change

Other

Operation method:

1. Click calibration, and then follow the prompts to calibrate the sensor
2. You can pull the status bar to set the shutdown time of the controller

For more information

Help for many of KeyLinker's features can be found by clicking the icon on the top-right corner of the page

Update device

In order to prevent mismatch between system and controller. We'll provide upgrading files here to update your controller system Online

Factory reset

After having problems with the controller, resetting your controller to its factory defaults erases all settings.

KeyTest

Verify all keys are functioning on your controller

About

Information of APP and Controller

Help

Instructions for APP

For more information about how to use KeyLinker, please check out here.

無線コントローラー

取扱説明書


Switch/Switch有機モデル
Switch Lite/PC/Steam Deck
Tesla用


このたびは無線コントローラーをお買い上げいただきありがとうございます
ご使用前に必ずこの取扱説明書をお読みください
そして、いつでも取り出せるところに大切に保管ください



リチウム電池のお取り扱い、国際宅配便約款に基づき、運送で電池の電圧が3.7V以下でなければなりません。ですから、コントローラーが届くとき、電力不足で起動できない場合があります。ご使用になる前に、お客様がまずコントローラーを充電してお願いします。

各部のなまえ

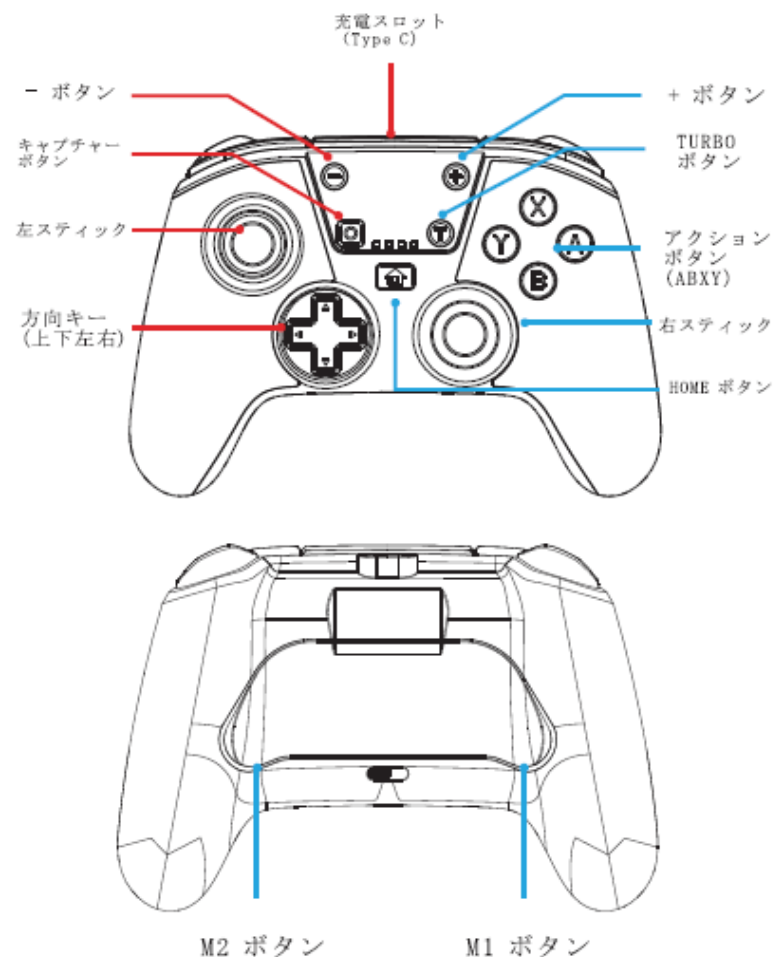

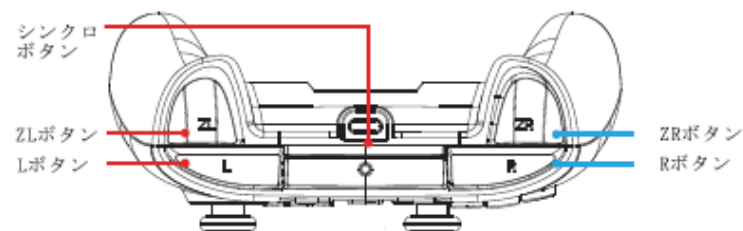

対応機種

Switch/Switch有機ELモデル
PC/Steam Deck/Tesla


Switch/Switch有機EL モデル本体で初めてご使用

はじめてのペアリングは、以下の手順でお手入れしてください。

1. HOMEメニューの「コントローラー」→「持ちかた/順番を変える」を選択します



2. 図のような画面が表示されたら、登録したいコントローラーのシンクロボタンを7秒ぐらい長押しします。

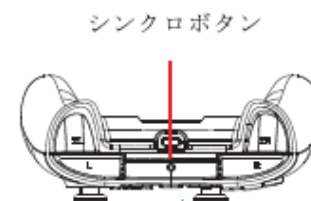

3. 画面に「登録しました」という表示が出たら、登録は完了です。Aボタンを押して終了します。



再接続する方法

コントローラーが本体に登録してから、今度で再接続したいと、下記の方法をご覧ください

方法1

1. Switch本体がスリープ状態に入ります
2. コントローラーのHOMEボタンを押し、コントローラーを起動します

3. コントローラーが本体と接続して、Bluetoothの接続が完了してから、コントローラーのプレイヤー インジケーターは、プレイヤー番号にあわせて1か所点灯します

方法2

1. Switch本体を起動します ホームページに入ります
2. コントローラーの機能ボタンを押し、コントローラーを起動します（機能ボタン：アクションボタン(ABXY)/方向キー/L2/L1/R1/R2/キャプチャー/+/-/シンクロボタン）
3. コントローラーが本体を復帰させて接続して、Bluetoothの接続が完了してから、コントローラーのプレイヤーインジケーターは、プレイヤー番号にあわせて1か所点灯します

困ったときは

Q

コントローラーが本体と接続できないときは何をすればよいですか

A

- ❶ 方法1：本体を再起動してから、再び登録してみます
本体の「電源ボタン」を3秒間押し続ける。電源メニューが表示されるので「電源オプション」を選択する。「再起動」を選択する
- ❷ 方法2：コントローラーとの通信を切ってから、再び登録してみます
HOMEメニューの「設定」→「コントローラーとセンサー」→「コントローラーとの通信を切る」を選択すると、本体に登録されているコントローラーがすべて解除されます
- ❸ 方法3：ケーブル接続時に有線コントローラーとして使いたい場合はNintendo Switch ProコントローラーとNintendo SwitchドックをUSB充電ケーブルでつないでいる間、有線で通信するように設定できます。

HOMEメニューの「設定」→「コントローラーとセンサー」→「Proコントローラーの有線通信」を「ON」にしてください。

Turboモードと自動Turboモードについて

Turboモード

Turboボタンが連射機能付きるので、射撃ゲームに役に立ちます


例えば、一発銃弾を射撃したいとTurboボタンを1回で押します。もしTurbo機能を起動すると、このボタンを押し続けると、連続射撃できます

自動Turboモード

自動Turbo機能とはTurboボタンを押し続けなくても、自動的に射撃できます

下記のボタンがTurboまたは自動Turbo機能に変更できます

A/B/X/Y/L1/L2/R1/R2

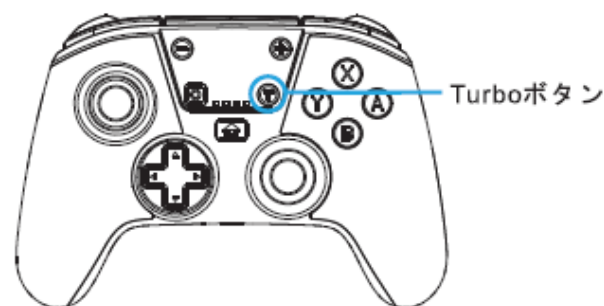


コントローラーを閉じた後で、Turboモードと自動Turboモード機能は保存できます Turbo機能を使えない場合、閉めて下さい

Turboモードと自動Turboモードを設定する方法

■Turboモード

オン:

Turbo機能に設定したいボタンを押し、同時にTurboボタンを一回で押します



オフ:


方法1

変更したボタンのTurbo機能をキャンセルしたいと、このボタンを押し続けて、同時にTurboボタンを二回で押します。



方法2

もしTurbo機能に変更したボタンを忘れたら、Turboボタンを5秒ぐらいで押し続けて、すべてのボタンのTurbo機能をキャンセルします



■自動Turboモード

オン:

方法1


ボタンをTurboモードに起動させた上で、同時にTurboボタンをもう一度押し、自動Turboモードに入ります。



Turboモードをオンした場合

方法2

Turboモードに設定しない場合、設定したいボタンを押し、同時にTurboボタンを二回で押します。



Turboモードをオフした場合

オフ:

方法1

自動Turbo機能に変更したボタンを先に押し続けて、後でTurboボタンを押します。



自動Turboモードをオンした場合

Turboスピードの設定方法

- Turboスピードが12回/秒をデフォルトで設定されます。
- Turboボタンを押し、同時に右のスティックの「上」を押し、Turboスピードを変更できます。 **スピード: 20回/秒**
- Turboボタンを押し、同時に右のスティックの「下」を押し、Turboスピードを変更できます。 **スピード: 5回/秒**

コントローラーを閉じた後で、Turboモードと自動Turboモード機能は保存できます 使えない場合、閉めて下さい

震動機能の設定について

震動レベルは4段階: 100% → 70% → 30% → 0%

震動の強さを調整したいと:

震動の強さを強めようと、[Turbo] と [+] ボタンを同時に3秒ぐらいで押します

震動の強さを弱めようと、[Turbo] と [-] ボタンを同時に3秒ぐらいで押します

ご注意: コントローラーを閉じた後で、震動の強さは保存できます

ジャイロセンサーの補正方法

ゲーム中に視点・照準がずれる場合は、ジャイロセンサーを補正することで改善する可能性があります。

ゲーム内で補正する方法と、本体設定で補正する方法があります

方法1. HOMEメニューの「設定」→「コントローラーとセンサー」→「ジャイロセンサーの補正」を選択する。→「コントローラーを補正する」を選択する。



(1)

(2)

ピーシーに接続について

対応ピーシーシステム

対応OS: Windows 10、Windows 7、MacOS

Windowsシステムでブルートゥース接続

- 1、PCで「設定」ページに入ります
- 2、「Bluetooth」のスイッチをオンにします
- 3、「Bluetooth & デバイスを追加」をクリックして、コントローラーのBluetoothを見つけます
- 4、登録したいコントローラーのシンクロボタンを7秒ぐらい長押しします
- 5、リストで[Pro Controller]を選択、追加の手順に従って、「完了」を選択します

Macシステムでブルートゥース接続

- 1、Macで「システム環境設定」のページに入ります
- 2、「Bluetooth」のスイッチをオンにします
- 3、登録したいコントローラーのシンクロボタンを7秒ぐらい長押しします
- 4、リストで[Pro Controller]を選択し、ペアリングします

Bluetooth接続する場合：

- 1、ピーシーが必ずBluetooth機能を持ち、Bluetooth機能がないと、ペアリングできません
- 2、イヤホンの機能が使えません

USBケーブルで接続

方法1

- 1、コントローラーのR3ボタンを押し続けて、ピーシーにパッケージで付属するケーブルで接続します

ご注意：1、ピーシーに接続する場合、Steamでジャイロセンサーと振動、Turbo機能が使えます

方法2

- 1、直接でコントローラーをピーシーにパッケージで付属するケーブルで接続します

この方法で接続すると、コントローラーのコンパチビリティが高いで、でもSteamでジャイロセンサー機能が使えません

R3ボタンについて

R3ボタンとは右スティックを下に押します



Steam Deckに接続について

Bluetooth接続

- 1、Steam Deckの設定を変えます
設定→BluetoothをONにします
- 2、コントローラーのシンクロボタンを7秒ぐらい長押しします

TESLAに接続について

USBケーブルで接続

コントローラーをTESLAにパッケージで付属するケーブルで接続します

- (1)USBケーブルでコントローラーのType C 端子にさし込みます
- (2)コントローラーをTESLAのUSBポートに接続します

コントローラーを充電する

コントローラーは、次のいずれかの方法で充電できます

- (1)充電中のドックに取り付けると、充電する
- (2)ACアダプターあるいはUSB充電ケーブルで充電する
※ ACアダプターが付属していません
- (3)フル充電にかかる時間：約1.5時間ぐらいです

充電指示について

1. コントローラーが本体との接続を解除する場合、
充電中：プレイヤーランプ4LEDs点滅
フル充電：プレイヤーランプが消します
2. コントローラーが本体と接続する場合、
充電中：プレイヤー番号にあわせて1か所点滅します
フル充電：プレイヤー番号にあわせて1か所点灯します

低電力警告について

コントローラーのバッテリーの電圧が3.35Vに足りないと、対応なプレイヤーランプが点滅して、コントローラーを再充電してください。

ライト

コントローラーの雰囲気ライトは調整できます

Turboボタンを押しながら、方向キーの右ボタンを押します
コントローラーのライトは8レベルあり、ひとまわりして調整できます
レベル1はライトを閉じることです

コントローラーの閉めについて

1. コントローラーの「シンクロボタン」を短押しして、
コントローラーを閉じます
2. コントローラーの「HOMEボタン」を5秒ぐらい押して、
コントローラーを閉じます

パッケージ内容

- ① コントローラー 1個
- ② 1.8メートルデータケーブル 1個
- ③ 取扱説明書 1冊

製品仕様 (Switch本体で)

- 外形寸法: 幅153×高さ111×厚さ61mm
- 電池のセルタイプ: リチウム電池
- バッテリー容量: 500mA
- 充電電圧: 5V
- 電池の作業時間: 約16時間
- 充電電流: 350mA
- 充電時間: 約1.5時間

KeyLinker アプリのご使用

KeyLinkerはコントローラーのパラメータの調整をサポートできるアプリです。例えば、キーの変更、スティック、モーター、連発、マクロM1/M2、ライト1/2などの機能を調整します

コントローラーはゲーム本体に接続しながら、携帯電話でパラメータを調整できます。調整の効果がすぐに見られます

① APP Storeから「KeyLinker」を検索してダウンロードします

② 「KeyLinker」をインストールして実行します

③ コントローラーを携帯電話に接続します

- 3.1 携帯電話のブルートゥースをONにします
- 3.2 コントローラーを起動します
- 3.3 検索されたデバイスに本コントローラーのブルートゥース
名前をクリックしてペアリングします。ブルートゥース
名前: JYS BLE Controller
- 3.4 ペアリングが完了した後で、JYS BLE Controllerは
ペアリングされたデバイスに表示されます

④ JYS BLE Controllerの名前をクリックして、パラメータの調整ページに入ります



KeyLinkerをダウンロード
QRコードをスキャンする



キーを変更

KeyLinkerはボタンのレイアウトの変更に役に立ちます

例えば：A ボタンの機能は Xボタンに取り替えたいと：

- 1、A ボタンのプルダウンメニューをクリックします
- 2、プルダウンメニューから X ボタンを選択します
(コントローラーで直接にXボタンを押すこともいいです)
- 3、ページの底のアプリボタンをクリックします

スティック

スティックの動作範囲、X軸とY軸の逆転、左と右スティックの交換、感度の曲線を調整します 調整が完了してから、ページの底のアプリボタンをクリックします

左/右モーター

コントローラーの震動の強さを調整します モーターを一つずつ調整します

- 1、「+」と「-」ボタンをスライドして、振動の強さを調整します
- 2、ページの底のアプリボタンをクリックします

連打 (Turbo)

Turboモード

Turboボタンが連射機能付きるので、射撃ゲームに役に立ちます
例えば、一発銃弾を射撃したいとTurboボタンを1回で押します。もしTurbo機能を起動すると、このボタンを押し続けると、連続射撃できます

自動Turboモード

自動Turbo機能とはTurboボタンを押し続けなくても、自動的に射撃できます

- 1、ボタンの後ろのステータスバーをクリックして、Turboモードと自動Turboモードを選択します
- 2、「+」と「-」ボタンをクリックして、あるいは、ステータスバーをスライドして、Turboスピードを調整します
- 3、ページの底のアプリボタンをクリックします

コントローラーを閉じた後で、Turboモードと自動Turboモード機能は保存できます Turbo機能を使えない場合、閉めて下さい

マクロM1/M2

マクロとはコントローラーのM1/M2ボタンにほしいボタンの組み合わせをプログラミングして連発することです
最大で42個のボタンを設定できます

- a、プルダウンメニューをクリックします M1あるいはM2を選択します
 - b、底のレッドボタンをクリックします
 - c、コントローラーでほしい組み合わせボタンを順に押します
再びレッドボタンをクリックして終わります
 - d、ページの底のアプリボタンをクリックします
- 2、ステータスバーを長押しして、設定したマクロにボタンを添加して減らすことができます
 - 3、番号ボタンを押すと、本列の内容を編集できます
 - 4、スティックと方向キーのステータスバーを長押しして、方向を切り替えて選択します
 - 5、ループとはM1あるいはM2をずっと押すと、設定したマクロは連続役立ちます
 - 6、マクロ機能をキャンセルしたいと、APPでM1あるいはM2ページを選択して、底のレッドボタンをダブルクリックします

ライト1/2

この機能はコントローラーの雰囲気ライトを調整するのです
プルダウンメニューで調整したいライト番号を選択します

- 1、「R」「G」「B」の後ろの矢印をクリックして、RGBの数値を調整します
- 2、カラーパッチをスライドして、好きなライト色を選択します
モード：常時点灯ライトと呼吸ライト2種類があります
呼吸ライトモードでスピードを調整できます

その他

- 1、「検証」をクリックして、センサを補正します
- 2、ステータスバーをスライドして、コントローラーを操作しないと、自動的に閉じる時間を設定します

他の情報

もっとKeyLinkerについての情報はページの右上のコーナーのアイコンをクリックしてチェックしてください

ハンドル更新

コントローラーのシステムを更新の必要があると、ここでクリックして、オンラインでアップデートできます。更新の必要がないと、ファイルがありません

初期化

コントローラーのシステムの初期化をします

キーテスト

コントローラーのボタンの動作チェック、ボタンを押して認証するか確認します

情報

APPバージョンとデバイス名などの情報について、記載されます

ヘルプ

APPの使い方について、詳しい説明しました
参考してください

无线手柄 使用说明书


Switch/Switch OLED MODE
Switch Lite/PC/Steam Deck
Tesla用


使用本产品前,请仔细阅读本指南,并妥善保管,以备将来参考之用。



由于快递运输对于电池电压的限制,可能手柄到您手上时,会出现电池馈电,手柄无法启动的情形,请您先为手柄充电,再尝试启动手柄进行配对

按键标识

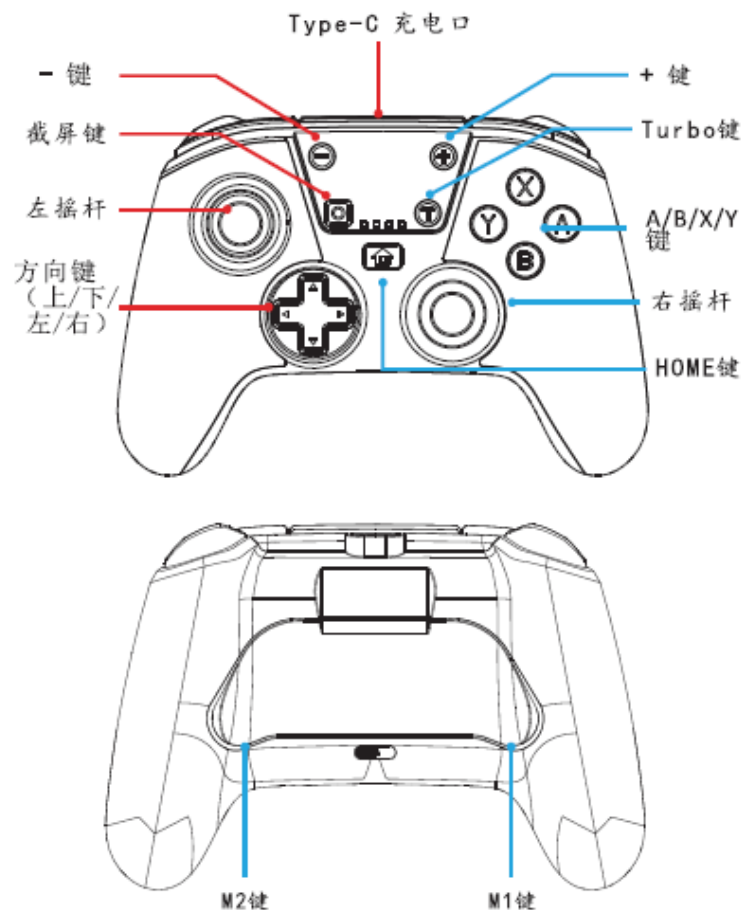

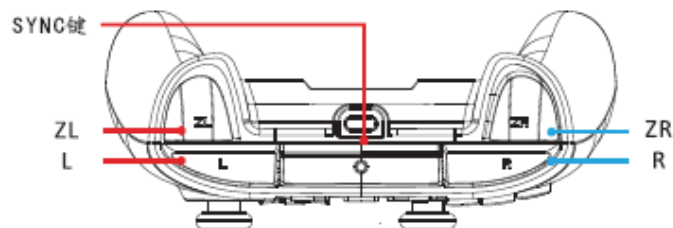


适用的主机

Switch/Switch OLED MODE
PC/Steam Deck/Tesla

如何在Switch/Switch OLED 平台完成初次配对

- 1, 进入主机的主界面 → 选择“手柄” → 更改握法/顺序
- 2, 按住手柄的“SYNC”键约7秒左右, 直到手柄的4个LED指示灯快速闪烁
- 3, 一旦配对成功, 手柄相应的通道指示灯长亮

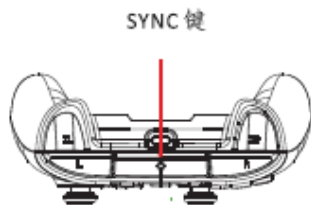

如何回连

方法1

- 1, 将Switch主机开启, 进入主机的主界面
- 2, 短按手柄的功能键唤醒手柄(功能键: 十字键/A/B/X/Y/L1/R1/L2 R2/Capture/-/+ / SYNC键)
- 3, 手柄的4个LED灯呈现流水灯闪烁
- 4, 手柄自动与上一次配对过的主机连接, 连接成功, 手柄相应的通道灯长亮

方法2

当主机处于休眠模式 (不是飞行模式)

- 1, 短按手柄的HOME键, 手柄的4个LED灯快闪
- 2, 手柄会唤醒Switch主机并与之连接
- 3, 配对成功, 手柄相应的通道灯长亮

当无法顺利完成连接时, 请参考以下信息检查

方案1: 重启主机, 尝试再次连接

- 按住主机的电源键5秒
- 此时屏幕上出现[电源选项]
- 在电源选项菜单栏里, 你可以选择重启主机

方案2: 为你的手柄充电, 可能由于电池馈电, 导致无法开机或手柄无法配对

方案3: 删除所有手柄的配对记录, 重新连接
设置 → 手柄与感应器 → 断开与手柄的连接

方案4: 如果通过有线连接时, 请确认已开启主机的有线连接
设置 → 手柄与感应器 → 专业手柄的有线连接 → 开启

如何设置连发和自动连发功能

Turbo功能（连发功能）

当设置连发功能之后，只需要按住功能键，就可以实现持续连射的效果。譬如，设置前，在游戏中，需要按一次射击一次，设置后，按住功能键可以实现持续不断的射击。

Auto Turbo功能（自动连发功能）

当设置自动连发功能之后，不需要按住按键就可以实现持续不断的射击。

Turbo功能和Auto Turbo功能在设置好之后会被保存，手柄断电也不会取消，如果不想使用时，请手动取消此功能。

下面的按键可以设置连发和自动连发功能

A/B/X/Y/L1/L2/R1/R2



Turbo键

■ Turbo模式

开启：

按住想要设置连射功能的按键，同时按一次Turbo键

○ (A/B/X/Y/L1/L2/R1/R2) + (T)

关闭：

方法1：

按住想要取消Turbo功能的按键，同时按Turbo键两次

○ + (T) (按Turbo键两次)

方法2：

如果您忘记哪些按键设置了连射功能，想解除所有按键的连射功能，按住Turbo键5秒不放，来取消所有按键的连射功能


(T) (按住Turbo键5秒不放)

■ 自动连发功能

开启：

方法1

在已经设置好连射功能的按键的基础上,再按一次Turbo键,此按键进入自动连发功能



设置好连射功能的按键

方法2

按键在没有设置连射功能时,按住功能键,同时按两次Turbo键



按键没有设置连射功能

关闭：

方法1

按住设置好自动连发功能的按键,按一次Turbo键



设置好自动连发功能的按键

如何调节连发速度 (Turbo速度)

手柄有3档Turbo速度可供调节：

5次/秒 → 12次/秒 → 20次/秒

调节方法

按住[Turbo]键,然后把右摇杆往上推: 20次/秒

按住[Turbo]键,然后把右摇杆往下推: 5次/秒

当手柄关闭之后,Turbo速度可被保存

如何调节震动强度

手柄有4档震动强度可供调节：

100% → 70% → 30% → 0%

增强震动: 同时按住[Turbo键]和[+]键3秒

减弱震动: 同时按住[Turbo键]和[-]键3秒

当手柄关闭之后,设置好的震动强度可被保存

如何校正手柄的六轴

方法1: 把手柄连接到主机

主界面 → 设置 → 手柄与感应器 → 校正陀螺仪感应器

根据屏幕提示完成校准

如何在PC平台完成配对

适用的系统

Windows 7/10 and MacOS

连接方式

连接方式：PC端的连接可以有线/蓝牙连接

*当PC端无蓝牙功能时，可有线连接使用

Windows系统下蓝牙连接

- 1, 进入PC的“设置”窗口界面
- 2, 单击“蓝牙”开关，让蓝牙设置处于“开”的状态
- 3, 点击“添加蓝牙或其他设备”命令项，搜索手柄的蓝牙
- 4, 按住手柄的[SYNC键]7秒进入配对状态与PC进行蓝牙配对
- 5, 点击蓝牙名称：[Pro Controller]确认连接

Mac系统下蓝牙连接

- 1, 点击电脑上的偏好设置，接着点击蓝牙
- 2, 单击“蓝牙”开关，让蓝牙设置处于“开”的状态
- 3, 按住手柄的[SYNC键]7秒进入配对状态与PC进行蓝牙配对
- 4, 点击蓝牙名称：[Pro Controller]确认连接

- *蓝牙连接必须在有蓝牙功能的PC上进行，PC端无蓝牙，无法连接
- *Mac OS系统下，手柄只能通过蓝牙进行配对
- *注意PC端连接时，不要点击[JYS BLE Controller]

有线连接

方法1

- 1, 按住手柄的R3键，然后将手柄通过包装内的Type C线连接到PC
此连接方式下，在Steam平台六轴/震动/Turbo功能可正常使用

方法2

- 1, 将手柄通过包装内的Type C线连接到PC,
此连接方式下，PC端兼容性更好，但在Steam平台不支持六轴功能

R3 键

R3键是将右摇杆向下按



如何与特斯拉完成配对

有线连接

将手柄通过包装内的Type C线连接到特斯拉

- 1, 将USB线端子插入手柄的Type C端子
- 2, 将另一端插入特斯拉的USB口，完成连接

如何与Steam Deck完成配对

蓝牙连接

- 1, 打开Steam Deck的蓝牙
设定→蓝牙→开启
- 2, 按住手柄的SYNC键7秒与Steam Deck进行蓝牙配对

如何为手柄充电

将充电线的Type C端子插入手柄的充电口

- (1)将充电线的另外一端插入Switch底座的USB端子
- (2)或者将充电线连接到充电器

*本包装内不含充电器，客户需另外购买

充电指示灯

- 1,当手柄没有与主机连接时进行充电,充电时LED指示灯慢闪 → 充满熄灭
- 2,当手柄和主机连接时进行充电,充电时主机分配给手柄的通道指示灯慢闪 → 充满长亮

低电提醒

当电池电压低于3.35V时，当前通道灯快闪，提示电压低
当电池电压低于3.25V时，手柄自动休眠

氛围灯

手柄的摇杆周围设置有氛围灯，可通过如下方式调节氛围灯

按住Turbo键不放，然后按十字键的右键

手柄的氛围灯设置有8个档位，可循环调节；档位1为关闭氛围灯

蓝牙接收距离

蓝牙接收距离在10米左右（无障碍物时）

重置功能

当手柄出现功能混乱时，手柄可以恢复出厂设置，操作方法：
按住HOME键15秒

如何关闭手柄

- 1, 当手柄和主机处于连接状态，通过按手柄的HOME键5秒可以关闭手柄
- 2, 当手柄和主机处于连接状态，5分钟内手柄无操作,自动关闭

包装内容

- 1XSwitch手柄
- 1X1.8米数据线
- 1X使用说明书

规格

- 尺寸:长153mm,宽111mm,高61mm
- 电池: 锂电池
- 工作电流: 30mA
- 电池容量: 500mAh
- 充电电压: 5V
- 电池使用时长: 大约16小时
- 充电电流: 350mA
- 手柄充电时长: 约1.5小时

如何使用KeyLinker

KeyLinker是一款用于定制手柄的按键、灯光、震动、摇杆、扳机等多项功能参数的APP。

用户可以根据自己的习惯来修改手柄的参数，灵活的设置参数，用以增强手柄的操作性，提高玩家体验。手柄可以同时手机上连接本APP和其他设备，一边在手机上设置参数，一边在游戏平台上体验。

❶ 从APP Store搜索和下载「KeyLinker」

❷ 装载和运行「KeyLinker」

❸ 将手柄连接至手机上的「KeyLinker」

3.1 开启手机的蓝牙

3.2 按任意功能键唤醒手柄

3.3 在APP的搜索的设备里面点击蓝牙名称

「JYS BLE Controller」

3.4 配对完成后，JYS BLE Controller的蓝牙名称出现在已配对的设备

❹ 点击JYS BLE Controller的名称，进入参数设置界面



扫描二维码下载
KeyLinkerAPP



⊕ 改键

通过KeyLinker可以对按键的布局进行改变

例如：想把A键设置成X键的功能

- 1、点击A键后面的下拉菜单
- 2、从下拉菜单中选择X键（也可以按手柄的X键）完成选择
- 3、点击页面下方的应用来确认修改

🎮 摇杆

用于调节手柄摇杆的有效范围、X轴反向，Y轴反向，交换左右摇杆，调节灵敏度曲线

- 1、可以通过拉动状态条来调整手柄摇杆有效范围，蓝色部分表示摇杆的有效区域
- 2、点击页面中间的【交换】可以交换左右扳机
- 3、可以拉动网格中的点来调节灵敏度曲线，也可以使用官方推荐的设置
- 4、应用后，可以在按键测试界面测试

🔊 左/右马达（震动）

用于调节马达的震动强弱

每次选择一个马达，震动强度是大幅度调整；自定义则是微调

操作方法：

- 1、可以点击“+”“-”、或拉动状态条来调节马达的震动强度
- 2、点击底部的「应用」来让设置生效

连击 (Turbo)

Turbo功能 (手动连发功能)

当设置连发功能之后, 只需要按住功能键, 就可以实现持续连射的效果 譬如, 设置前, 在游戏中, 需要按一次射击一次, 设置后, 按住功能键可以实现持续不断的射击

Auto Turbo功能 (自动连发功能)

当设置自动连发功能之后, 不需要按住按键就可以实现持续不断的射击

Turbo功能和Auto Turbo功能在设置好之后会被保存, 手柄断电也不会取消, 如果不想使用时, 请手动取消此功能。

下面的按键可以设置连发和自动连发功能

A/B/X/Y/L1/L2/R1/R2

操作方法:

- 1、点击按键后面的状态条, 选择Turbo (手动连发功能) 和 Auto Turbo (自动连发功能)
- 2、按「+」和「-」键或者拖动状态条来调节速度快慢
- 3、点击底部的「应用」来让设置生效

- 1, 手柄关闭之后、Turbo (手动连发功能) 和Auto Turbo (自动连发功能) 的设置可以被保存
- 2, 如果想取消此功能, 请手动关闭

宏M1/M2 (连招)

将一系列的按键出招步骤存储在M1或者M2按键上, 只需要按M1或者M2就可以触发, 用于模拟一键连招, 1个宏可支持设置42个步骤

1、操作步骤:

- a、点击下拉按键, 选M1或M2键作为宏按键
- b、点击下方的“红色圆圈”进入连招录入状态
- c、在手柄上按下连招动作
- d、再次点击“红色圆圈”保存
- e、点击底部的「应用」来让设置生效

2、录制完成后可以长按状态条来添加或者减少一个步骤

3、点击状态条上面序号, 可以编辑本列的按键

4、长按摇杆或方向键的状态条可以切换方向; 因为摇杆和方向键各有8个方向, 每按一次可以切换一个方向, 直至调到想要的方向

5、循环: 长按M1或者M2键可持续触发宏连招

6、当想取消M1或者M2键的宏连招时, 可进入APP相应的界面, 双击界面下方的红色按钮可取消宏连招

氛围灯1/2

用于调节手柄的氛围灯

操作步骤如下:

- 1, 在灯光按钮上选择想要调节的灯光的编号
- 2, 点击「R」「G」「B」字母后面的箭头来调节数值
- 3, 滑动色块来选择想要的颜色

模式: 有长亮和呼吸灯两种模式

呼吸灯模式下可以调节灯的亮度和闪烁的速度

其他

- 1、点击「传感器校准」, 可以校准六轴, 校准完成通道灯长亮
- 2、滑动状态条来设置手柄的无操作关机时间

其它信息

更多关于KeyLinker的信息，可以点击页面右上角的三个点的图标里面有如下内容

固件更新

当手柄的性能需要更新时，我们会放升级文件到这里，玩家可以点击这里进行固件更新；当手柄运行正常时，无升级文件,不需要更新

恢复出厂

可以对手柄恢复出厂设置

按键测试

可按下手柄的按键，检查是否识别

关于

关于APP的版本，设备名称等信息

帮助

里面记载有APP各功能的详细介绍

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.