

POR TABLE CD PLAYER

Model: MD-601



User Manual

► CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
PACKAGING & PRODUCT	03
What's in the box	03
The CD player	03
TROUBLESHOOTING	04
USER GUIDE	05
Insert a disc	05
Insert TF Card	05
There are two ways to turn on the player	05
There are two ways to turn off the player	06
Charge for the player	06
How to connect Bluetooth devices	07
OTHER FEATURES	07
Key lock	07
Connect to the car radio/speaker	07
Connect to other 3.5mm audio devices	07
PLAY	08
How to setup the circle mode	08
How to program the play	08
How to Set A-B Repetition	08
How to setup sound	08

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. Never touch the lens of the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.
2. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.
3. Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.
4. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
5. The player can not be used or stored in moist environment, please keep the player away from any liquid, steam or vapor, such as rain drop, mist etc.
6. Please do not place any liquid or metal gadgets onto the player, such as pin or a cup of coffee.
7. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment.
8. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design.
9. Please do not stick or hit the player with sharp objects.
10. There are light emitting diodes in this player, staring directly with eyes should be avoid to prevent visual impairment from being caused.
11. Children under 12 years is not allowed to use the player individually.
12. When charging, ensure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above 140°F (60°C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.

Hearing protection

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Set the volume to a low level:

Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.

Environmental protection


To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

PACKAGING & PRODUCT

What's in the box

1*CD player	1*3.5 to 3.5mm AUX cable
1*USB to Type-C charging cable	1*User manual
1*Earphones	

The CD player

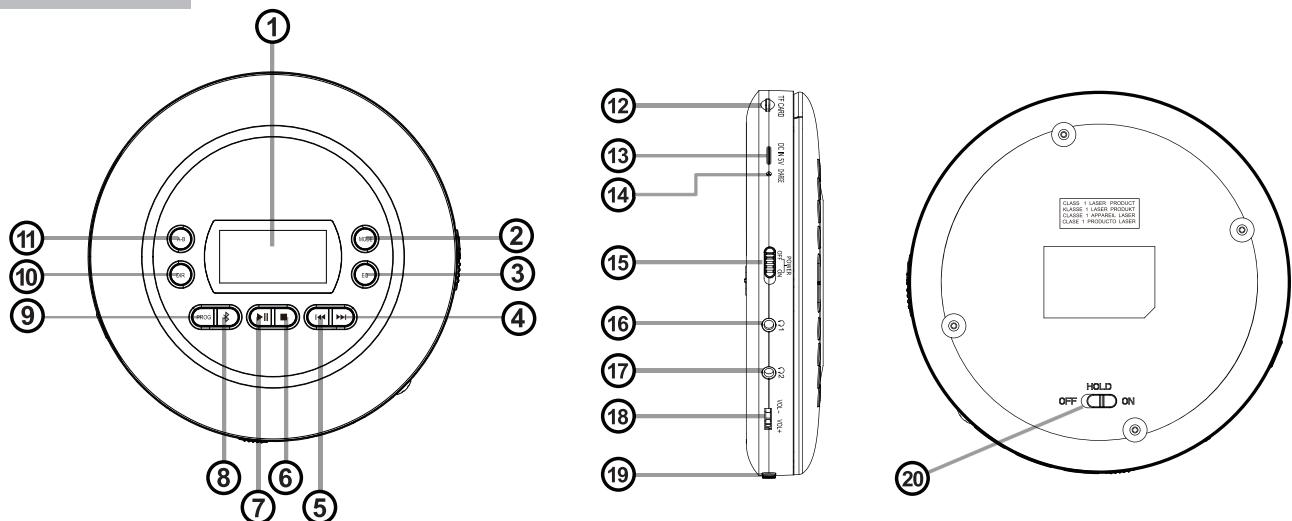

Item	Function	Item	Function
1	Display screen	11	A-B
2	MODE	12	TF CARD
3	EQ	13	DC 5V
4	Next / Fast forward	14	Charging LED
5	Previous / Rewind	15	Power ON / OFF
6	Stop	16	Headphone jack 1
7	Play / Pause	17	Headphone jack 2
8	Bluetooth	18	Volume Knob
9	PROG	19	OPEN
10	DIR	20	HOLD ON / OFF

TROUBLESHOOTING


Problems	Reasons	Solutions
Can't turn on the cd player.	Power switch is not in ON position.	Please toggle the power switch to ON position.
	Buttons are locked.	Please make sure the HOLD button at the back of the player is in OFF position.
	CD player is running out of power.	Please charge the cd player.
	The player is damaged.	Please contact us or ask a professional for repairs.
Cannot read discs.	The disc is installed incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is inserted fully into the place.
	The disc cannot be recognized.	The player is only compatible with CD, CDR, MP3, HDCD formats.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab. NOTE: DO NOT TOUCH THE LENS WITH YOUR HANDS.
Can't charge the CD player.	There is no current at power outlet.	Make sure the power outlet is working.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cords are connected properly.
	The charger is damaged.	Replace the charger with another one matching the specification (DC 5V/1A).
	The player is damaged.	Please contact us or ask a professional for repairs. NOTE: While charging, please make sure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.
Skip in the middle of the track.	Discs are scratched or not smooth.	Please use a dry cloth to clean the disc, or try other discs to see it works well.
Noisy and screaming when it plays.	Usage time of the disk may be too long, so the disk is not smooth.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty.
	If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	Please change to another disc, and do not use the old one again to prevent the player from damage.

USER GUIDE

How to insert a disc

Push the OPEN button to the right to open the door. Insert your index finger into the center hole of the disc and take the edge of the disc with your thumb. Keep the side with words upward while inserting the disc into CD player, press the disc gently to make it steady, and make sure if the disc has been in place. Close the disc door gently and completely, otherwise the player will not read the disc.

(Note: The player is only compatible with CD, CDR, MP3, HDCD formats.)

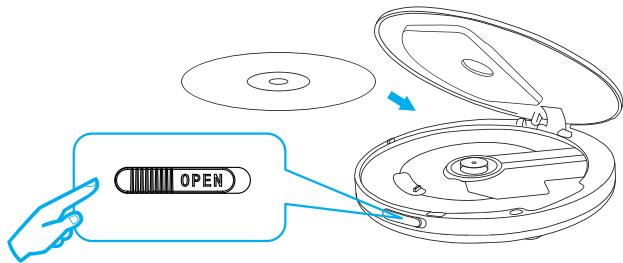

Insert TF card

After plugging in a TF card into the cd player, Long-press the MODE button to enter into TF card playback mode. NOTE: The TF card supports up to 32GB. Over 32GB cannot work with it.

Insert an earphone

Only earphone with 3.5mm plug is compatible with this player. In order to experience better sound quality, you can use standard earphones of an iPhone on the player, but some earphones of cellphone may produce noise. If the earphone cannot be supported by the player, please use standard headphones of this player.


How to turn on the player

There are two ways to turn on the player:

1. The power switch is located on the side. Slide it to the ON position to turn on the player.

2. When the power switch is in the ON position, just press the PLAY button once to turn on the player.

NOTE: When a disc is played to the end and there is no activity within 20 seconds, the player will turned off automatically. Please press the PLAY button to restart the player.

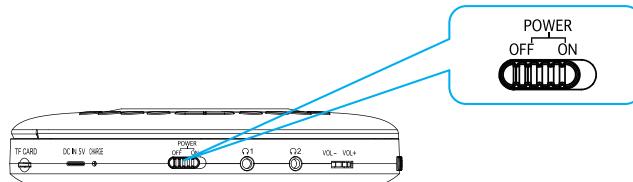


How to turn off the player

There are two ways to turn off the player:

1. Press the STOP button twice to turn off the player.

2. Slide the power switch to the OFF position to turn off the player.

NOTE: Please toggle the power switch to the OFF position if the player is not used for a long time.

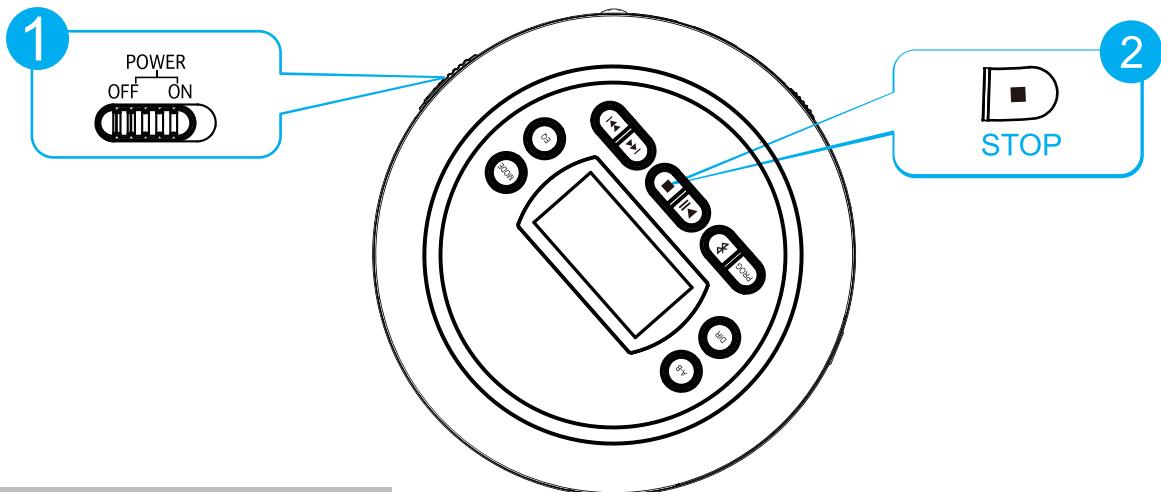


How to charge for the player

How to Charge: This player only comes with a TYPE C charging cable. Please use a power adapter to connect with the charging cable to charge the player. Any 5V, 1A USB power adapter will compatible with it.


NOTE: When the battery sign is flashing on the screen, it means that you need to charge the player.

Charging Time: It will need about 3-4 hours for a full charge. When it is charging, the LED indicator near the charging port will light up in RED; when it's fully charged, the indicator will turn to GREEN.

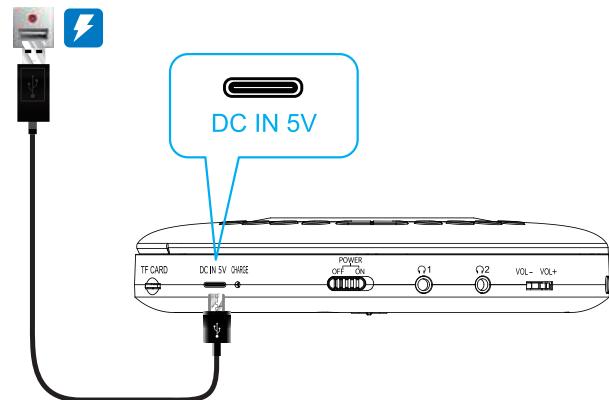

How to connect Bluetooth devices


1. Turn on your Bluetooth headphone/speaker and make sure that the Bluetooth is turned on.
2. Press the Bluetooth button () of the player. If the Bluetooth is off, you need to press the play button () to turn on the Bluetooth.
3. Select “ BT Search ” option, then press the PLAY button, the cd player will start searching nearby Bluetooth devices.
4. Press the PLAY button to select the name of your device that needs to connect to.
5. After paired successfully, press the BLUETOOTH button to return to the play interface.

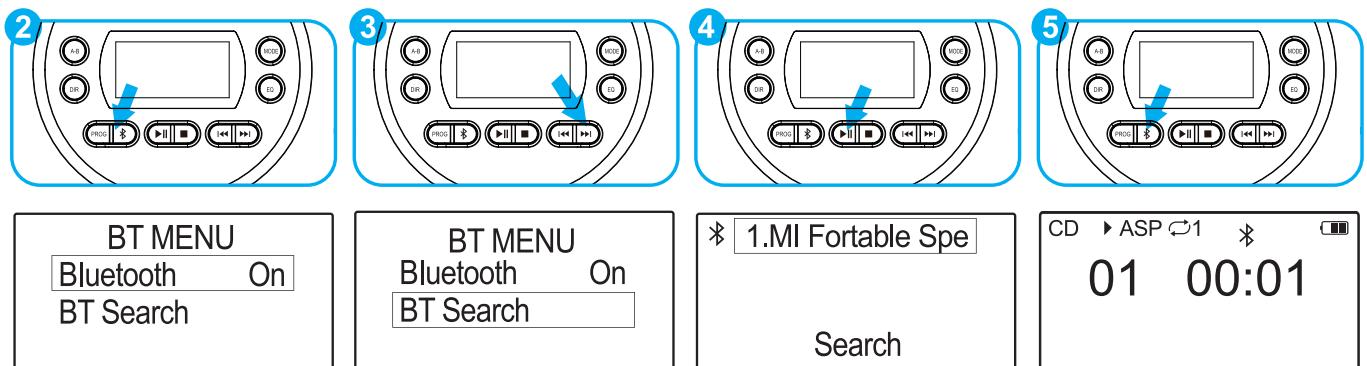

OTHER FEATURES

Key lock

After playback mode and sound effects have been setup, you can toggle the power switch to the HOLD position in order to prevent the environment, for example naughty children or crowded occasions from affecting the setting of player.

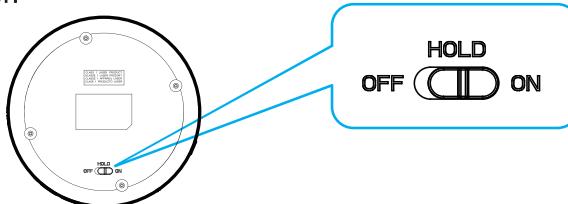

Connect to the car radio/speaker

You can use this cd player in the car via the car's radio/speaker, using the included 3.5mm male-to-male cable to connect your car's 3.5mm AUX port with cd player's headphones jack.

NOTE: The player ONLY works with the 3.5mm AUX port. (A USB port is NOT supportable).

Connect to other 3.5mm audio devices

You can use this cd player to connect any other audio devices that also have a 3.5mm audio jack, such as speakers, home theater, headphones amplifiers, etc.

PLAY

How to setup the circle mode

Each time the MODE button is pressed, the order of the tracks played will be as follows:Repeat 1 ( 1), Repeat all ( ALL),random play (RAND),preview play (INTRO) (only 10 second per track will be played in this mode).



How to program the play

Press the PROG button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, press PROG again to confirm the programming. Up to 30 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.



How to Set A-B Repetition


If you just want to repeat the specific part of a track, when the player is played that part, please press the A-B button one time, the display show "A ON", then when it plays to the end of that part, press the A-B button once again, the display show "Ab ON" .After that, the player will only repeat that specific part.

NOTE: If you want to stop repeating that part, just press the A-B button once again, the display show "Ab OFF", it will play in an order.

How to setup sound

How to adjust volume

The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

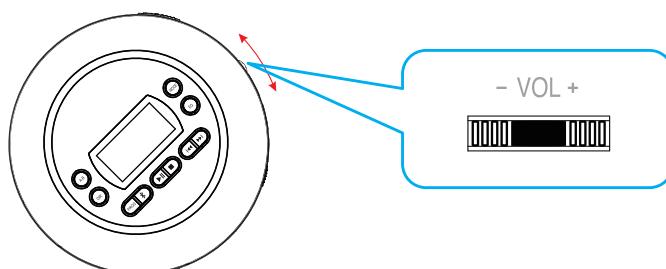

How to setup EQ effect

Press the EQ button to changes the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC.



ポータブル型CDプレーヤー

Model: MD-601



取扱説明書

▶ 取り扱い説明書について

安全上の注意事項	01
使用注意点	01
バッテリー	01
聴力保護	02
環境保護	02
梱包内容&キー表示	03
パッケージ内容	03
ボタンに詳細表示	03
故障に解決対策	04
CD使用方法	05
ディスクを挿入する	05
イヤホンを挿入する	05
電源を入れる方法	05
イヤホン接続&調節する方法	05
プレーヤーをオフにする方法	06
プレーヤーを給電する方法	06
Bluetoothの接続方法	07
他の機能	07
キーロック機能	07
3.5mmAUXデバイスに接続する	07
再生する	07
リピートモードを設定する方法	08
プログラミングを設定する方法	08
A-B機能	08
音量調節方法	08

取り扱い説明書について

ご使用になる前にこの取り扱い説明書をよくお読みください。お読みになったあと、いつでも見られるところに必ず保管してください。

安全上の注意事項

使用注意点

火事と人体事故に起こる防ぐためにご使用前に取扱説明書をご覧下さい。

- プレーヤーのレンズ部分を触れないでください。レンズ表面に汚れなど付着しないように、使用しないときはトレイドアを閉じてください。
- ディスを認識できない場合、市販の洗剤でレーザー部品をクリーニングしてください。ほかの方法なら、レーザー部品を損傷する恐れがあります。
- 濡れた布で本体を拭いてください。いかなる洗剤を使わないでください。
- プレーヤーが稼働しない場合、すぐに当社のアフターサービスセンターに問い合わせてください。プロの技術者がより詳しく回答いたします。
- プレーヤーは湿気が多い環境でのご使用、ご保管を避けてください。雨、霧など、液体、蒸気から離れてください。
- ピンやコーヒーカップなど、液体や金属製のものをプレーヤーの上に置かないでください。
- 直射日光の当たる場所、ヒーターの熱が直接当たる場所から離れてください。プレーヤーを高温環境に置かないでください。
- 豊富な電子知識とメンテナンス経験を持つすべての専門技術者は本体を解体し、修理することが可能ですが、部品交換も必ず電子回路設計規格通りに行ってください。
- 鋭利なもので突き刺したり、プレーヤーにぶつけたりしないでください。
- 本製品に発光ダイオードがあるので、視力に損害を与えないように、直視しないでください。
- 12歳未満のお子様は一人で本製品を使用しないでください。
- 充電の際、電源と充電電圧がDC 5V/1 Aであることを確認してください。過度の電圧入力は、本体が過負荷による損傷を引き起こす可能性があります。

バッテリー

ご購入したプレーヤーにバッテリーが含まれている場合は、回路の故障を避けるためプレーヤーを分解したり、本 製品の電気規格に適合しないアダプターを使用したりしないでください。安全のために、以下の手順に従って、内蔵の大容量ポリマーリチウム電池を扱ってください。

- バッテリーパックは取り外さないでください。
- 本製品を倒したり、ぶつけたりしないでください。
- バッテリーをショートさせたり、穴を開けたりしないでください。
- バッテリーを140°F (60°C)以上の高温の場所に置かないでください。
- バッテリーを火の中に投入しないでください。
- バッテリーが破損した場合は、専門技術者に同じ仕様のバッテリーに交換してもらってください。あるいは、当社アフターサービスセンターに問い合わせてください。

聴力保護

中音量で聴力保護:

音量を適切なレベルに調整してください。音量が大きすぎると、聴力を損ね、永久的な障害になる恐れがありますので、低音量に設定してください。

音量を低レベルに設定する:

ゆっくりと音量を増やして、快適で綺麗な音が聞こえます。

合理的な時間にプレーヤーを利用する

適切な音量でも長時間続けて聞くと、聴力に悪い影響を与える恐れがあります。本製品を適切に使用し、適時に休憩してください。

環境保護


環境と人の健康を守るために、現地の法規に基づき、パッケージ、電子製品、バッテリーを捨ててください。本製品を生ごみと一緒に捨てないでください。

梱包内容&キー表示

パッケージ内容

1*CDプレーヤー本体	1*3.5~3.5mmAUXケーブル
1*USB type-c充電ケーブル	1*ユーザーマニュアル
1*イヤホン	

ボタンに詳細表示

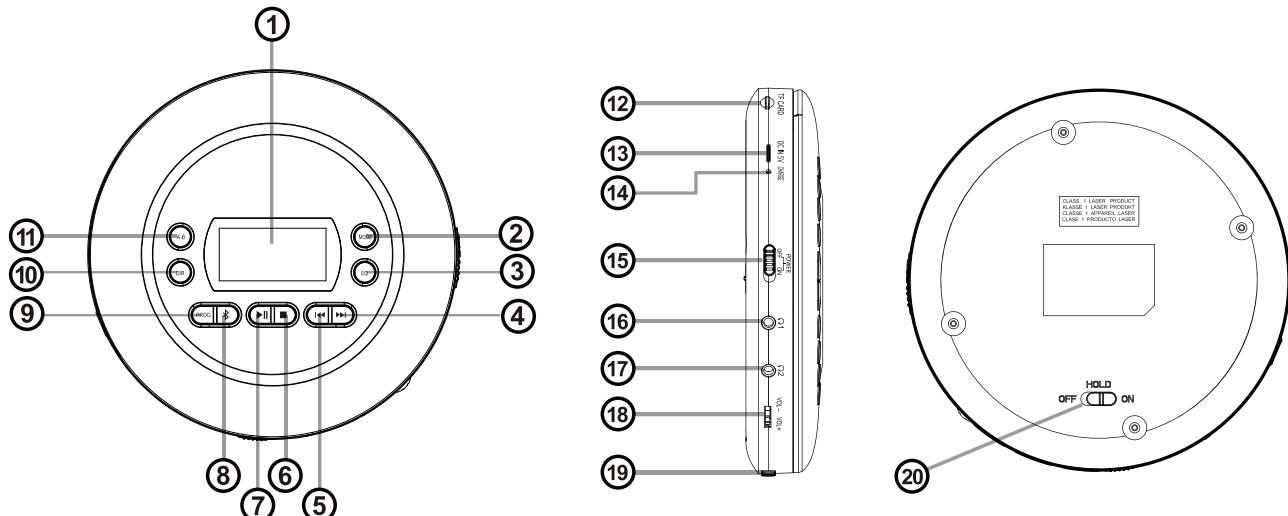

目次	鍵表示	目次	鍵表示
1	LED液晶画面	11	A-B区間リピート機能
2	再生モード	12	TFカード
3	5EQモード	13	USB電源ポート(DC5V)
4	次へ/早送り	14	LED電源ライト
5	前へ/早戻し	15	電源鍵(オン・オフ)
6	ストップ(停止画面・電源スリープモード)	16	イヤホンポート1
7	再生/一時停止	17	イヤホンポート2
8	ブルートゥース	18	音量鍵
9	PROG(曲順設定機能)	19	OPEN(蓋をオン・オフ)
10	フォルダ(MP3フォルダの選択用)	20	HOLD鍵(オン・オフ)


故障に解決対策

問題	原因	対策
電源が入れない	スイッチを入れていない	電源鍵を"ON"に開いてください
	ホールド状態になっている	HOLD鍵を"OFF"にしてください
	電量不足	充電してください。
ディスクを読み取れない	ディスクが正しく取り付けられていません	1、ディスクのラベル面は上に向こいでいることが確認してください 2、ディスクが完全に所定の場所に収まっていることが確認してください
	ディスクが認識されません	プレーヤーの互換性はCD, CDR, MP3, HDCDのみディスク
	ディスクは汚れているまたは破損した	1、ディスクにひどい傷や破損していないかを確認してください 2、きれいで柔らかな布で、ディスクを中心から端まで優しく拭いてください 3、別の新しいディスクを入れて、ディスクに欠陥があるかを確認してください
	ローダーが汚れている	脱脂綿棒でレンズを優しく拭いてください
バッテリーが充電できません	コンセントに電流が流れていません	コンセントが機能していることを確認してください
	プラグが正しく差し込まれていません	電源コードの2つのプラグが正しく接続されているかを確認してください
	充電器が破損しました	別のDC 5V/1Aの充電器に交換してください
	プレーヤーが破損した	弊社にご連絡ください。または修理業者に依頼してください。注:充電中電源と電圧がDC 5V/1Aであることを確認してください。入力電圧制限を超えると過負荷による損傷を引き起こす恐れがある
曲の途中からスキップ	ディスクに傷や凹凸がある	乾いた布でディスクをきれいにするか、別のディスクを試してください。
再生の際、騒音や雑音がでる	ディスクが長時間使用されたら、ディスク表面がフラットではなくなった	1、ディスクが損傷ないことがご確認ください。2、きれい柔らかい布で中央から周りまでディスクをゆっくり拭き取ってください。3、他のディスクが再生して、ディスクは問題が生じかどうかご確認ください
	イヤホンから「ジジ」という音がする場合は、ディスクに傷が付いているかもしれない	新しいディスクが交換してください。デバイスが保護するために、古いディスクを使用しないでください

CD使用方法

ディスクを挿入する

オープンボタンを右に押してCDドアが開きます。薬指をディスク中央穴に差し、親指でディスクの端部を握ってください。文字がある面を上に向いてCDプレーヤーに入れてください。ディスクが動かないまで指で軽く押さえて、また正しく固定されているかを確認してください。
(注;本製品はCD、CDR、MP3、HDCDしか対応できません。)

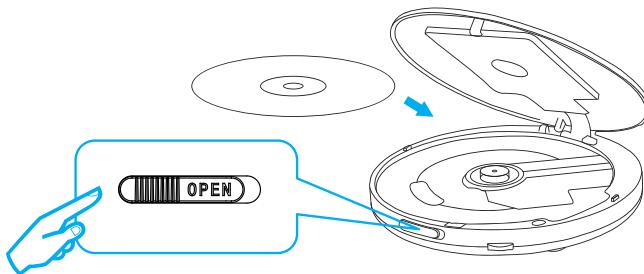

TFカードを挿入します


TFカードをCDプレーヤーに挿入した後、MODEボタンを長押ししてTFカード読み取りモードに入ります。
※再生可能なTFカードの最大容量は32GBで、32GBを超えると再生できません。

イヤホンを挿入する

本製品は3.5mmのイヤホンのみ対応可能です。より良い音質を体験するため、AndroidやiPhoneスマホ付きの標準のイヤホンを使用してください。

起動方法は2つあります

1. 電源ボタンは本機の側面にあります。電源ボタンをオンの位置にします。
2. 電源ボタンがオンの位置にあるときは、再生ボタンを1回押してオンにしてください。
※ディスクが最後の曲まで再生した後、20秒以内に何の操作もない場合、自動的にシャットダウンします。
再生ボタンを押して再起動します。




プレーヤーをオフにする方法

プレーヤーをオフにする方法、下記の二つはあります。

- 1、プレーヤーが長時間使用しない場合には、電源スイッチをオフに切り替えてください。
- 2、スタップボタンを2回連続押すと、スタンバイ状態になり、この時点ではプレーヤーの電源が完全に切れていません。


注意:プレーヤーを長時間使用しない場合は、電源スイッチをオフにしてください。

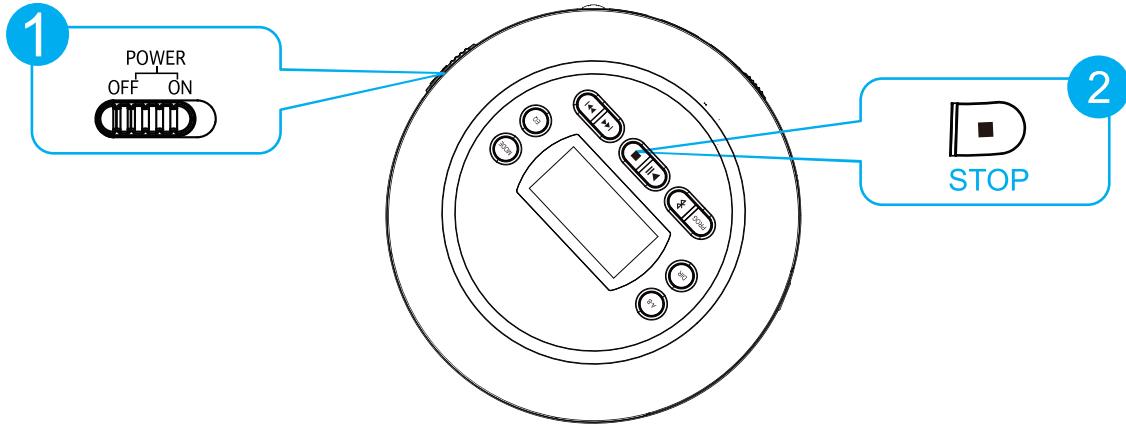

プレーヤーを給電する方法


充電器の選択方法:本製品はUSB充電ケーブルが1本付きで、Android、iOSシステムで動作するスマホのUSB2.0プロトコルまたは標準的なUSB充電器をサポートできる充電器を選択し、プレーヤーを充電できます。
※画面上のバッテリー記号が点滅し始めると、充電が必要になったことを示します。

充電時間:USB2.0ケーブルでプレーヤーを完全に充電するのに、約4時間かかります。充電するときに、LEDライトが赤く点灯します。フル充電するとLEDライトが緑に点灯します。

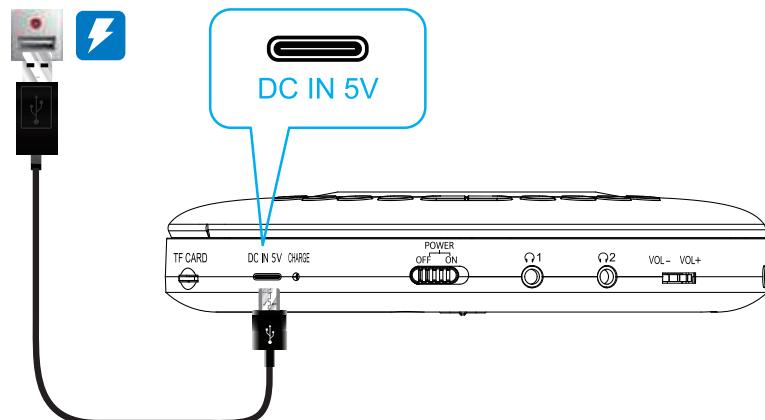

Bluetoothの接続方法


- 接続したいスピーカーのBluetooth機能をオンにして、スピーカーはペアリング状態になることを確保します。
- CDプレーヤーのBluetoothボタンを押したあと、再生ボタンを押して、Bluetooth機能をオンにします。その後、早送りボタンを押すと、BT Searchモード（ペアリングしたいデバイスを検索する）に入ります。（デフォルトでは、Bluetooth機能はオフになっています。）
- デバイスを検索済みまで、画面に（＊）マークが点滅しています。
- 再生ボタンを押すと、ペアリングしたいデバイスを選択できます。ペアリング完了したら、画面に（＊）マークが点滅しません。（デフォルトでは、一番近いデバイスを接続します。）
- ペアリング完了した後、Bluetoothボタンを押してください。ここまで、Bluetooth機能が搭載されるスピーカーを接続完了しました。

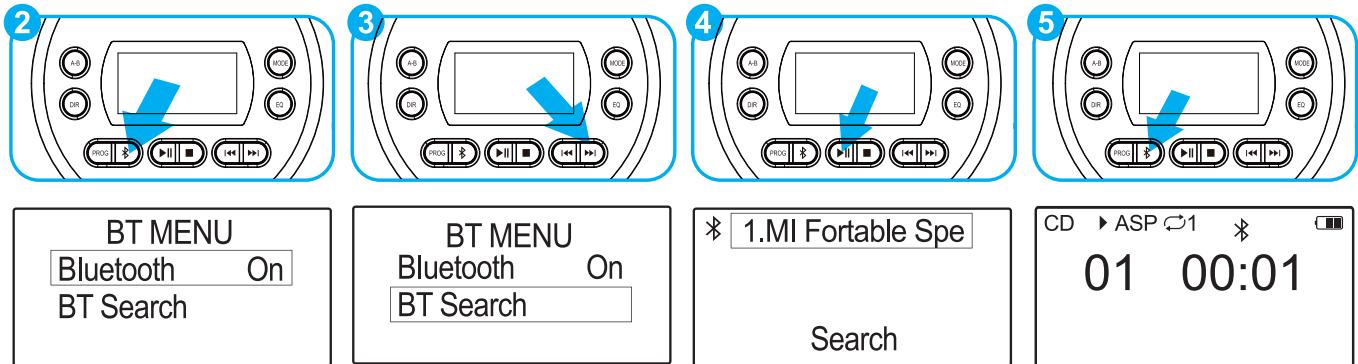

他の機能

キーロック機能

再生モードと音響効果を設定した後、電源スイッチをホールドに切り替えることができます。お子様のいたずらや混雑の環境の影響をなくすことができます。

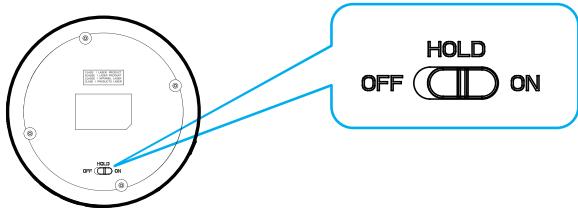

3.5mmAUXデバイスに接続する

様々なシーンで本製品を利用できるため、AUXケーブルを用意しております。ホームシアター、ミュージックセンター、ブルートゥーススピーカー、車、ヘッドフォンアンプなど、AUX端子がついているデバイスに簡単に接続できます。

再生する


リピートモードを設定する方法

MODE鍵を押すたびに、リピート1、リピート(ALL)、ランダム再生(SHUF)、プレビュー再生(INRTO)(このモードで、曲を10秒しか再生しない)という順番で切り替えます。



プログラミングを設定する方法

再生が停止したときにプログラムボタンを押してプログラミングモードに入り、PREVIOUS(前へ)またはNEXT(次へ)ボタンを押して曲を選択し、もう一度プログラムボタンを押してプログラミングを確定します。このモードでは、最大30トラックをプログラムできます。それに、再生ボタンを押してプログラミング再生モードに入ります。STOPボタンを押して停止モードに入り、キャンセルまたは再プログラミングします。

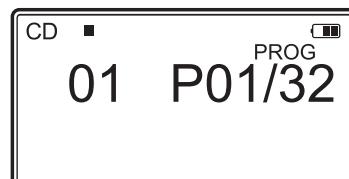


A-B機能

「A-B」を押すと、ディスプレイに「Aオン」と表示されます、もう一度「A-B」を押すと、ディスプレイに「Abオン」と表示されます、つまり、AからBまで繰り返します。
「A-B」の取り消し:もう一度「A-B」を押すと、ディスプレイに「ABオフ」と表示されます。


音量調節方法

ボリュームボタンは本体の側面にあります。左または右に回すことで音量が増減できます。聴力を保護するために、適当な音量で音楽を楽しんでください。

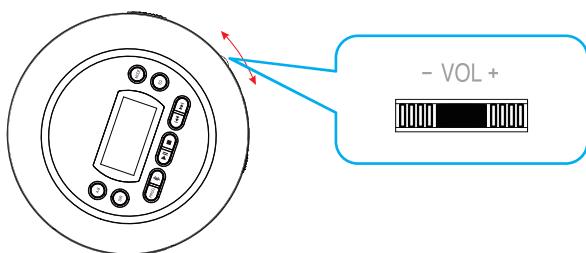

イコライザー音響を設定する方法

EQボタンを押して、BBS、POP、JAZZ、ROCK、CLASSICの5種類の音響効果を選択できます。

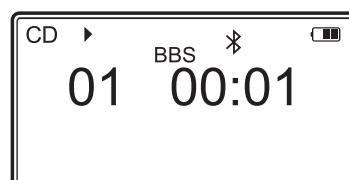

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.