

设计说明：

物料编码	PlimPad P50
版本号码	V2.0
设计担当	
设计日期	2021-7-30
材 质	80g 双面铜版纸
尺 寸	宽:100mm 高:140mm
印刷方式	4 色印刷
表面工艺	过哑油
装订方式	胶装
备 注	34P+2 空页 P, 2 种语言


要求：

- ✓ 条码扫描等级达到 C 级以上；
- ✓ 必须满足 RoHS2.0、 REACH 要求；
- ✓ 必须符合我司要求；
- ✓ QR Code 的制作或打印过程中需选择模型 2 (M2)；
- ✓ 所用油墨必须达到质量部门检测标准；
- ✓ 胶袋材质、胶袋上透气孔的大小、位置以结构认可书为准；
- ✓ PE 材质的胶袋其上面的丝印内容整体长度允许 3mm 误差；
- ✓ 珍珠棉等材质的胶袋其上面的丝印内容整体长度可允许 5mm 误差；

Plimpton

PlimPad P50

User Manual

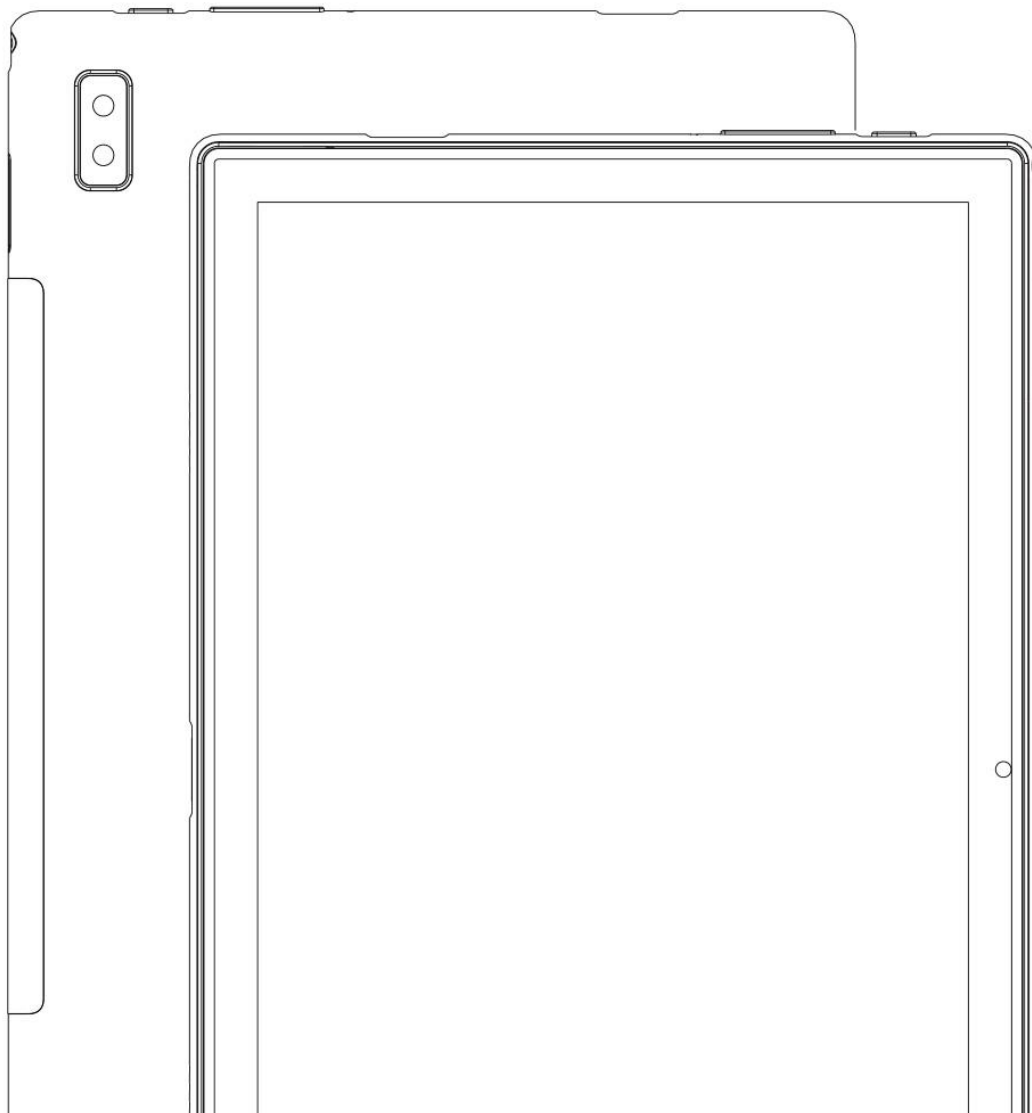


Tablet with Android: Please read this manual before operating your tablet, and keep it for further reference.

CONTENTS

01-15English

16-30日本語

Function Overview

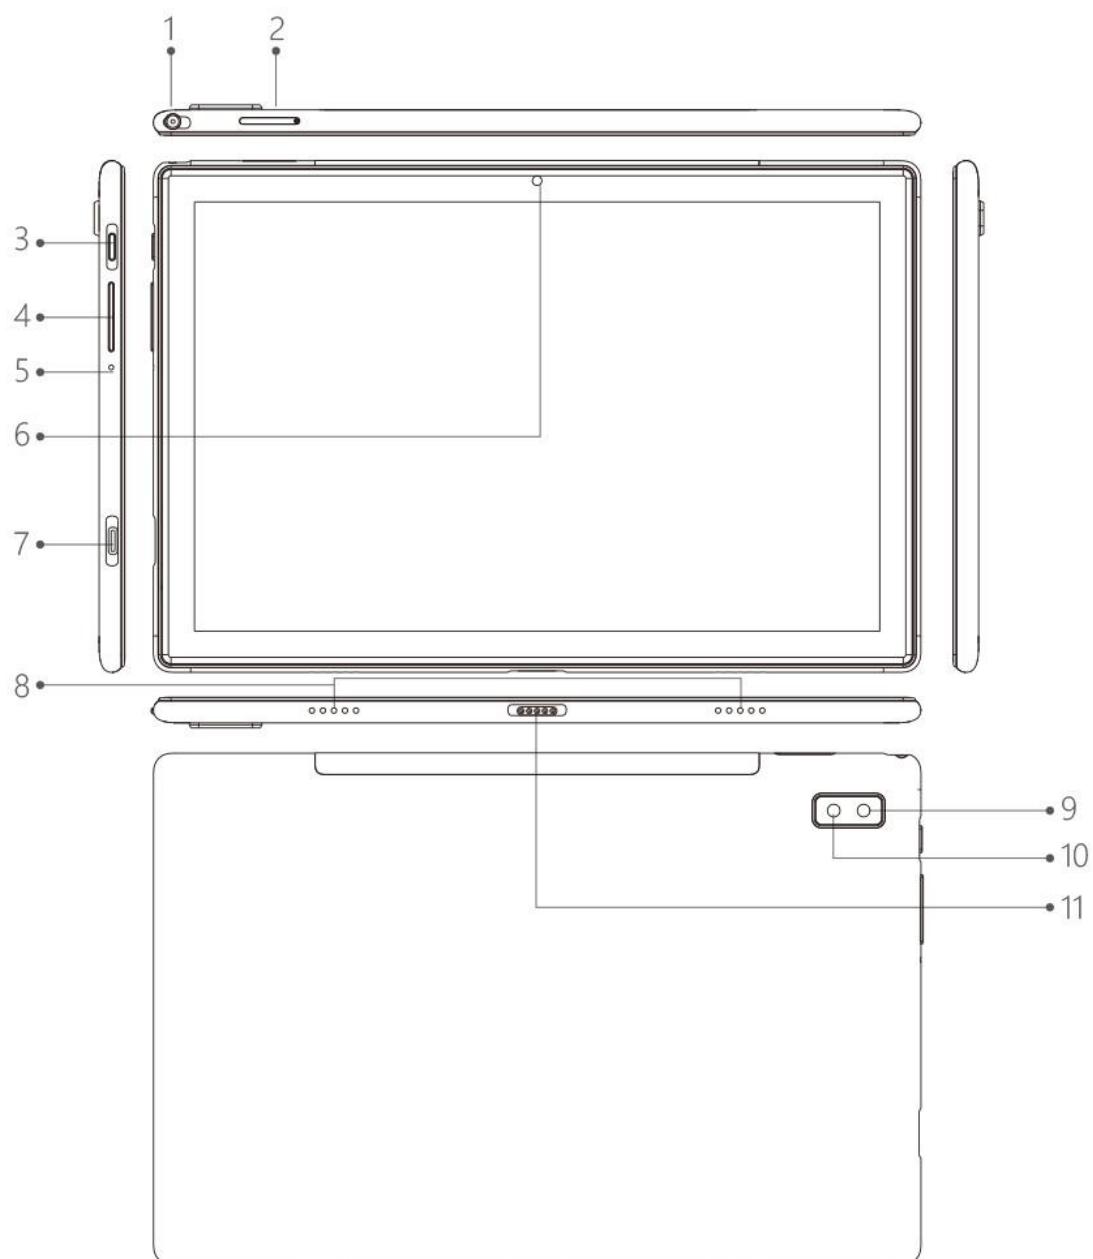

① 🎧 Headphone

② 📁 Micro SD Slot

③ 🔌 Power Button

④ 🔊 Volume+ / Volume-

⑤ ↺ Reset

⑥ 📷 Front Camera

⑦ 🔌 Type C

⑧ 🔊 Speaker

⑨ 📷 Rear Camera


⑩ ⚡ Flash

⑪ 🔌 Docking Contact

Getting Started

POWER ON/POWER OFF

- **Power on:** Press and hold the Power button until the LCD screen turns on. Select your language and set up your tablet following the start guide.
- **Power off:** Press and hold the Power button until the Device Options menu appears, it will show "Power off", "Restart" and "Screenshot", select "Power off" to turn off the tablet.

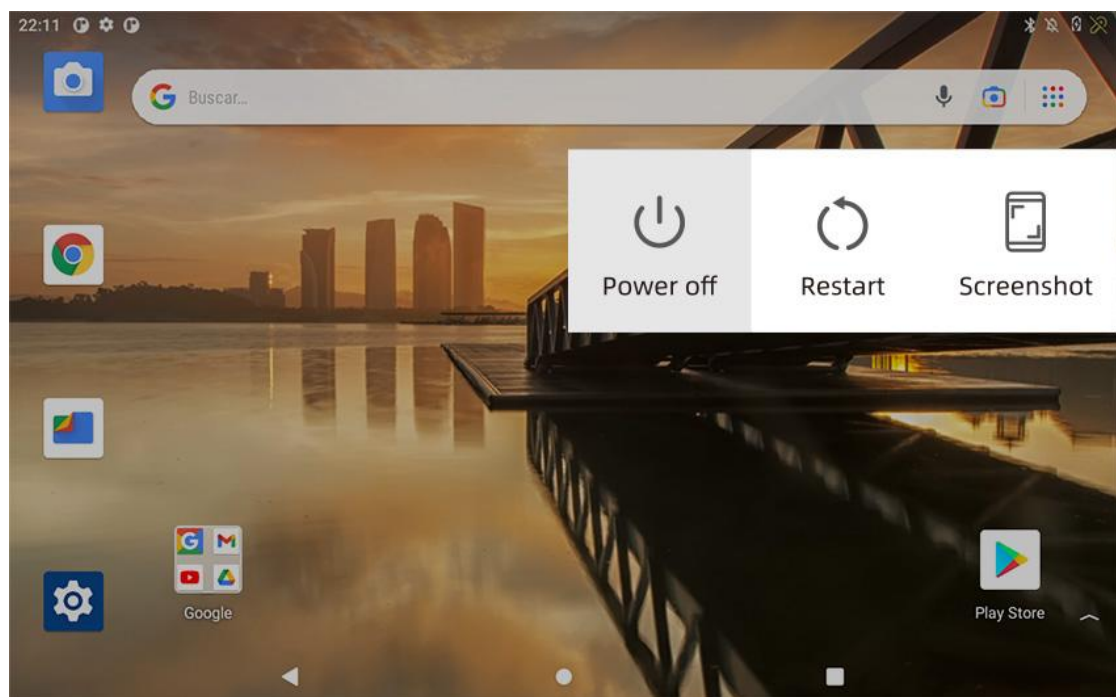

- **Reboot:** If it's frozen, press and hold the power button for 7-8s to do a force reboot.

SLEEP MODE

When the tablet is on, you can turn off the screen to save battery power. Simply press the power button once to turn the screen off. Press the power button again to turn the screen back on.

Tip: Go to **Settings - Display - Advanced - Sleep** to set the time gap for initiating "sleep mode"

BATTERY


A RECHARGEABLE Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if you only use your tablet occasionally.

Do Not dispose the tablet in a fire.


SCREENSHOT

- **Method 1:** Press and hold the power button and volume "-" at the same time to screenshot. The screenshot will be saved in the photos file.
- **Method 2:** Press and hold the power button until the Device Options menu appears, it will show "Power off", "Restart" and "Screenshot", select "Screenshot" to capture a screenshot.

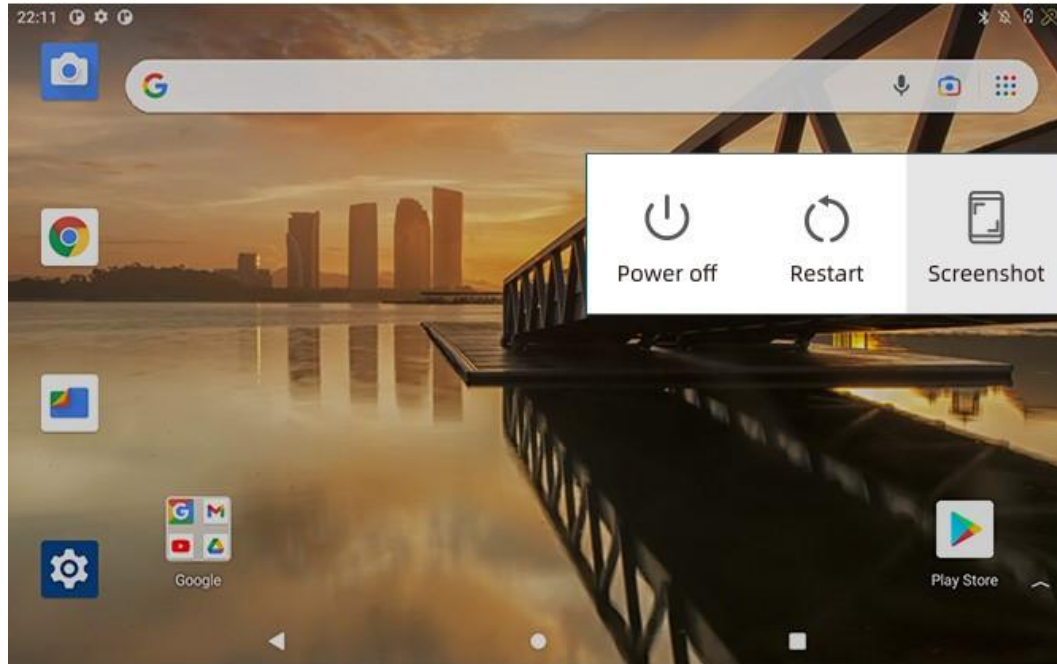

Home Screen

ICONS ON THE BOTTOM

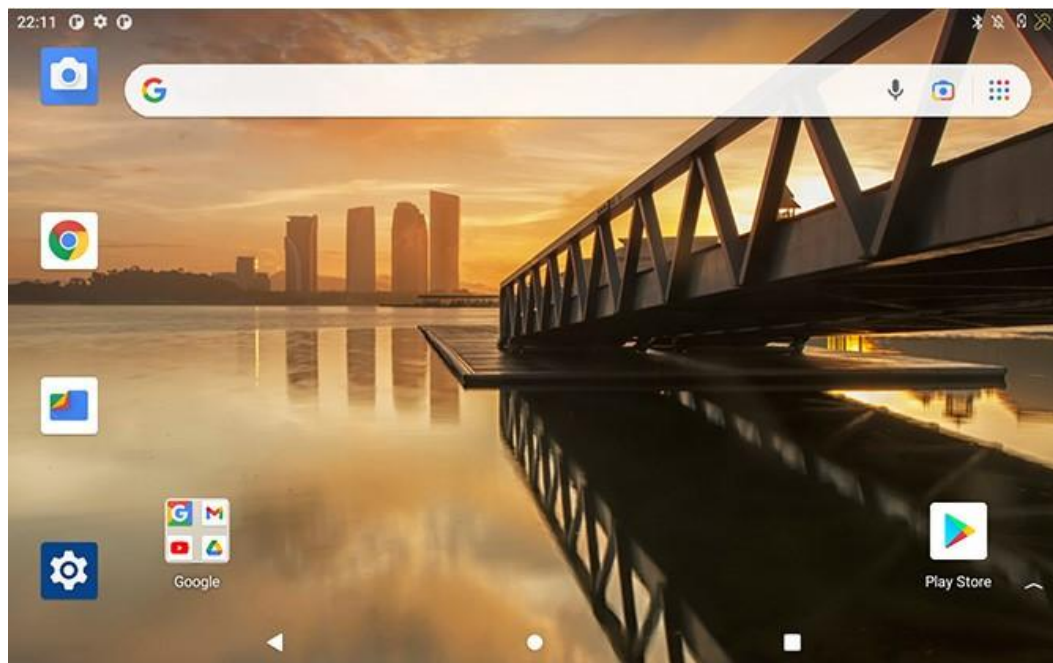


1 Back

2 Home

3 Recent Activities

HOME SETTINGS & WIDGETS & WALLPAPER

Tap and hold your finger in any blank space of the home screen, you will see a pop-up menu: "Home Settings", "Widgets" and "Wallpaper" button will be displayed.

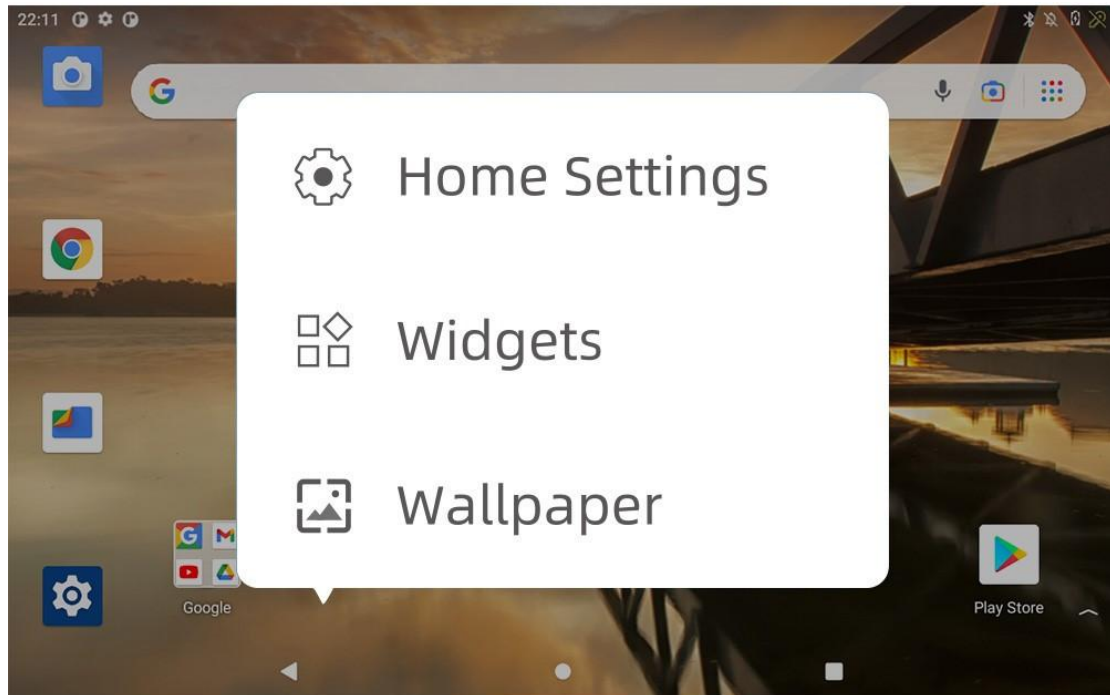

- Select "Home Settings", you can enable/disable "Add icons to Home Screen". This is applicable to any new Apps installed on "Google Play". You can also change settings for "pull down actions", "notification dots", "home screen style" and more.
- Select "Widgets", touch and hold any application (e.g. clock), then slide and add it to Home Screen, remove it by sliding to "x Remove" above.


Tip:

Hold one icon and drag it on top of another icon to create a new folder on home screen. Open the folder; Click 'Unnamed Folder' to rename the folder.

- Select "Wallpapers" to change the current wallpaper of the tablet from default wallpapers, live wallpapers or photos.

Basic Settings

Swipe down vertically from the top to enter quick notification menu

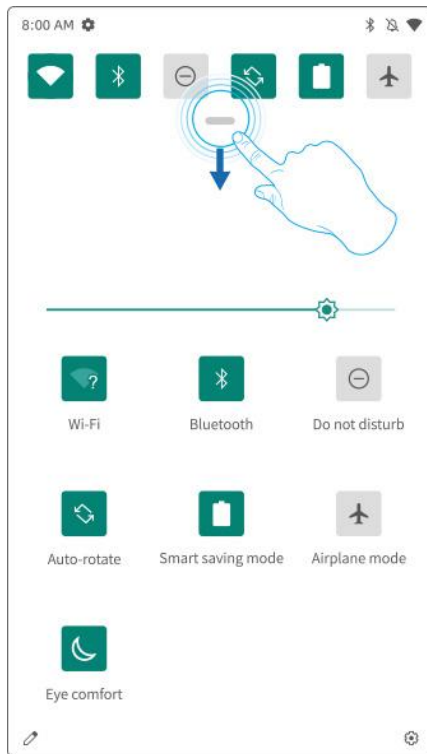

Wi-Fi: Tap to connect/disconnect to a wireless network



Bluetooth: Enable/disable the Bluetooth of this tablet



Do not disturb: Block sound after enabling this function



Auto-rotate: Turn on/off the "Auto-rotate" of the screen



Battery Saver: Tap to choose the power setting you prefer to save battery time





Airplane mode: Turn on/off all network connectivity

Tap the  icon to change the options in the "Quick Settings".
Long press each icon to enter the interface of the detailed setting pages.

DETAILED SETTINGS

Swipe down from the top of the screen, tap  icon to enter the detailed setting interface. Or, tap the "Settings" App from the home screen to enter.

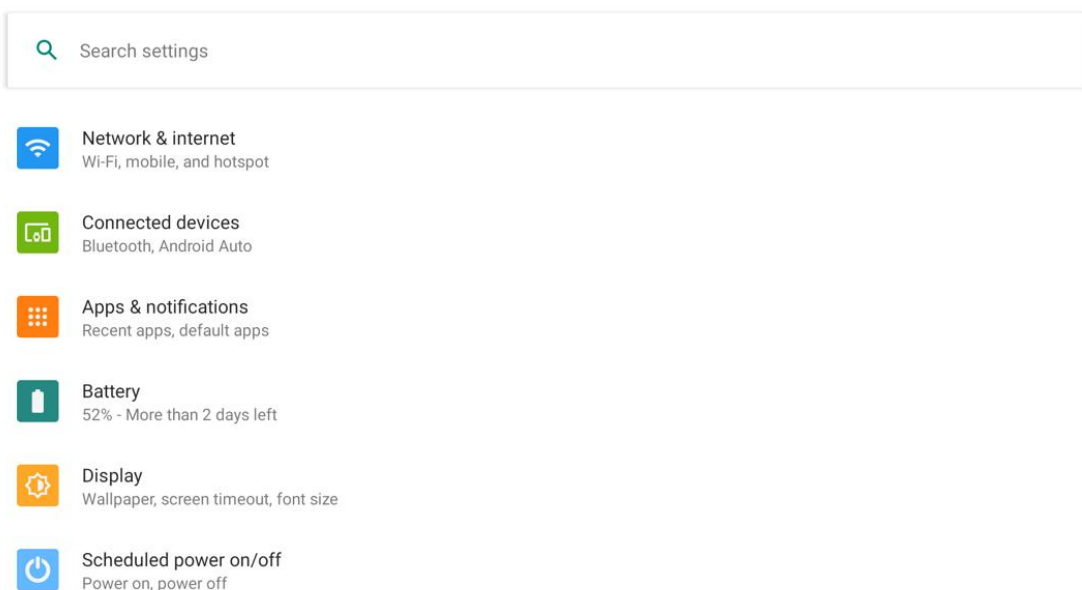

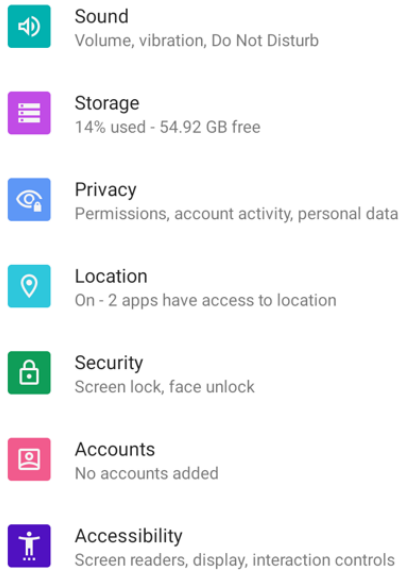

Network & internet

- Connect to Wi-Fi
- Enable/disable "Airplane Mode"
- Monitor the data usage and more

Connected devices

- Turn on/off Bluetooth
- Pair with Bluetooth devices and check the paired devices
- Check the received files from other devices via Bluetooth connection
- Add and check printers and more

Apps & notifications

- Check the Apps recently opened
- Check all the Apps on the tablet
- Set the App permissions
- Uninstall third-party Apps
- Adjust App notification settings
- Clear the cache of the Apps
- Check the screen time and more

Battery

- Display or hide the remaining power as a percentage
- Enable/ disable Battery Manager
- Set Power saving optimization
- Manage the battery optimization for apps and more

Display

- Adjust the screen brightness
- Adjust the font size and display size
- Set a screen saver
- Change the wall paper
- Adjust the time for entering the Sleep Mode
- Adjust Color and Contrast of display
- Set to check the notifications and other info and more

Scheduled power on/off

- Set the time and days of the week for the tablet to automatically turn on/off

Sound

- Set the volumes for notifications, media and alarm

Storage

- View and manage your storage space

Privacy

- Set App permissions, autofill services and more

Location

- Turn on/ off the location services for certain Apps

Security

- Set screen lock pattern (Password, PIN, Swipe etc.) and more

Accounts

- Add and manage the user accounts on your tablet

Accessibility

- For vision and hearing-impaired users, manage settings for **Screen readers**, **Display**, **Interaction controls** and more

Digital Wellbeing & Parental Controls

- Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**.
- Set a schedule for **Wind Down** and turn on the setting you prefer
- Manage the related notification settings to reduce interruptions
- Set up Parental controls to help your kids balance their screen time and more

Google

- Set the preferences for Google related services



System

- Set Language: Tap **Language & input**- **Languages** - **Add a language** to add your language
- Restore Factory Setting: Tap **Advanced**- **Reset options** -**Erase all data (factory reset)** to restore the factory setting
(Please note that if you perform a Hard Reset, all user applications and user data will be deleted. Please remember to backup any important data before performing a Hard Reset).
- Set date and time
- Turn on/off the Back up to Google Drive
- Check and update the tablet's system and more

Network Connection

● Turn on the Wi-Fi

Tap "Network & Internet" and turn on the "Wi-Fi", all available connections will be listed. Select your Wi-Fi and input the correct password.

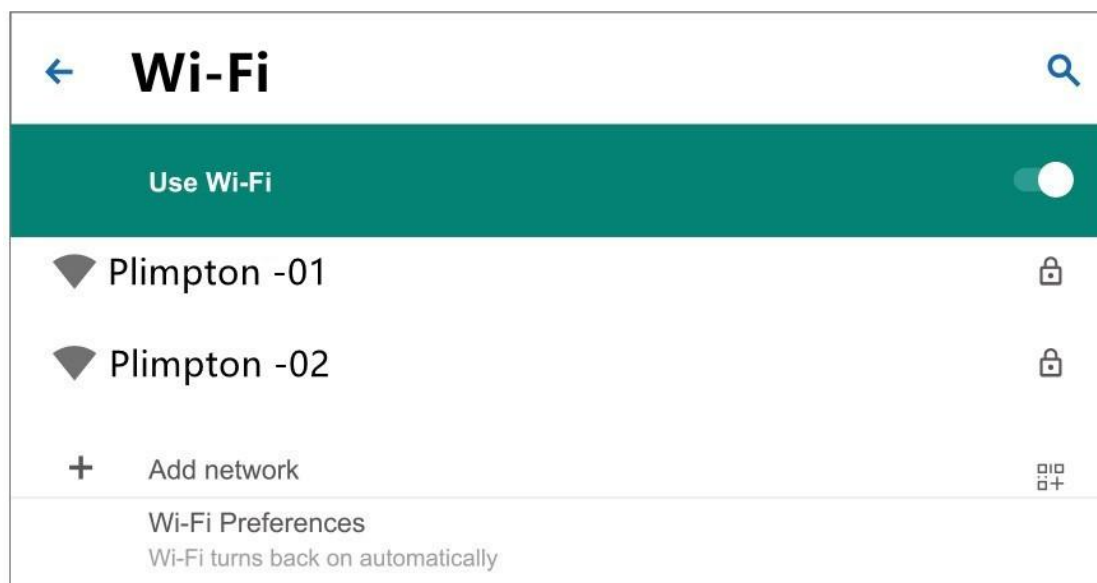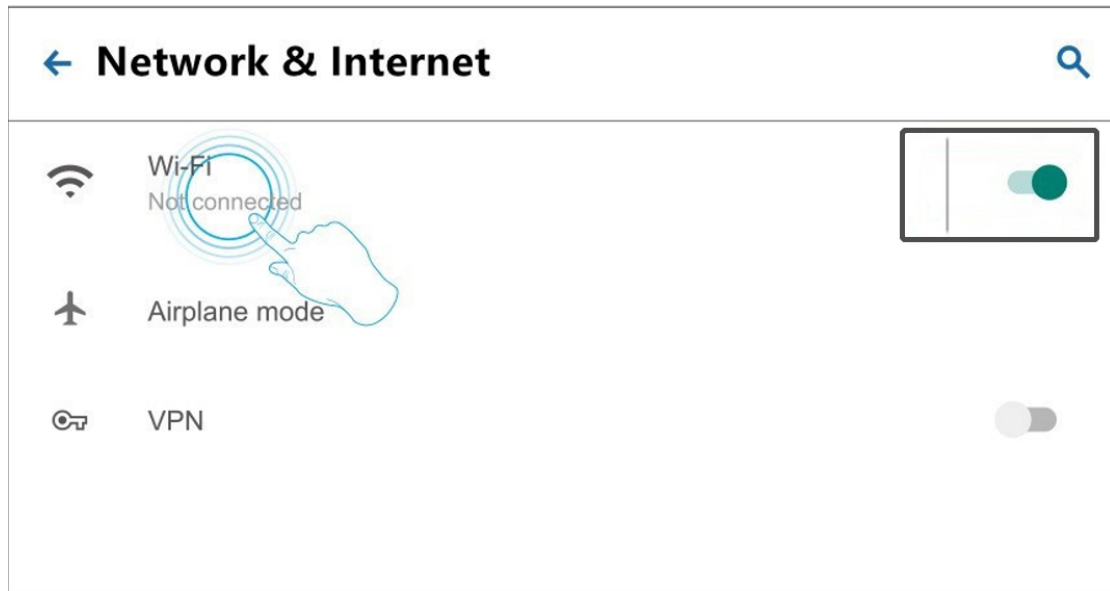

Internet Navigation


Please make sure the tablet is connected to a working Wi-Fi network before navigating the internet.

You may use the pre-installed **Chrome** browser or download one on **Google Play**.

Bluetooth

Please turn on the Bluetooth on your tablet and your Bluetooth device first.

- Enter **Settings- Connected devices -Pair new device** to enter the scanning interface. Devices available will be displayed after a few seconds.
- Tap the desired device to get a pairing code and click PAIR on both devices. The automatic connection is applied to some devices.

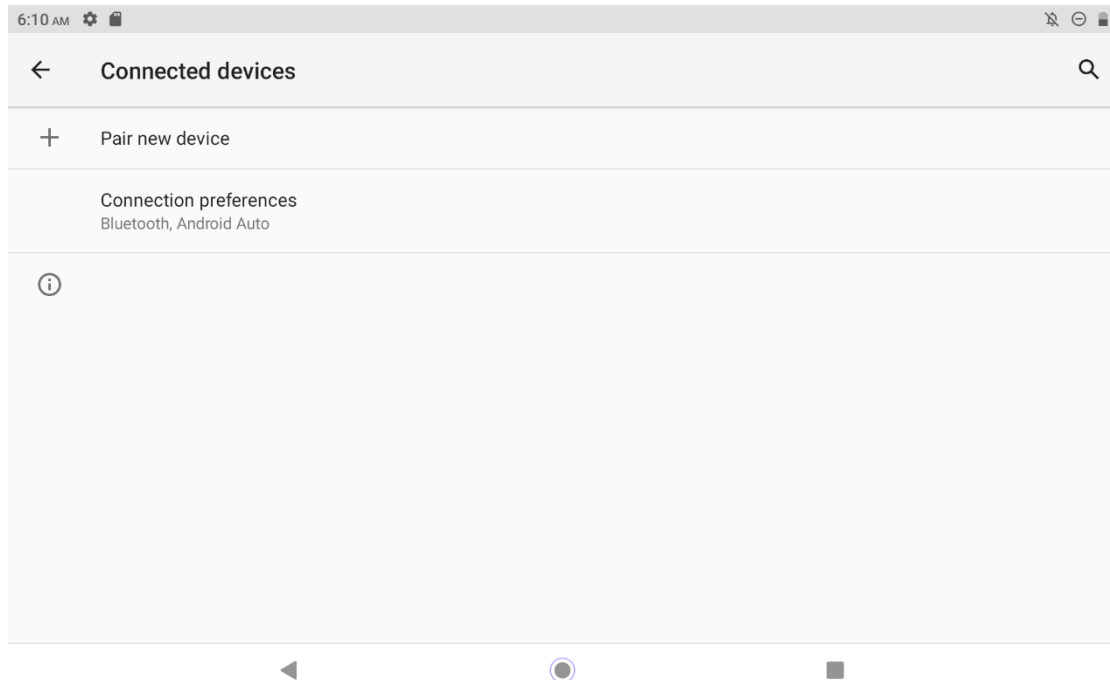

App Management

- Open Play Store on the home screen
- Log in your Google Account, search and download the Apps you need

Move the App

Tap and hold on the App, slide it onto the desired places.

Remove the App from Home Screen

Tap and hold on the App, slide to X Remove above, to remove it from your Home Screen.

Uninstall the App

Touch and hold the App, then slide to the  above, to uninstall the App.

Optional Connections


CONNECTING A COMPUTER

- Connect your tablet to the computer with a USB cable.
- Go to your computer and find your tablet **PlimPad P50** to transfer files between your tablet and computer



Tips:

Go to Quick Settings, tap Android system Charging this device via **USB** - Tap for more options - **USB computer connection** to select the option needed.

- | | |
|----------------------|---------------------------------------|
| ● Charge only | : to charge your tablet |
| ● Media Device (MTP) | : for file transfer |
| ● Camera (PTP) | : Transfer photos between the devices |
| ● MIDI | : Play MIDI instruments on the tablet |
| ● USB Virtual drive | : enable USB virtual drive |


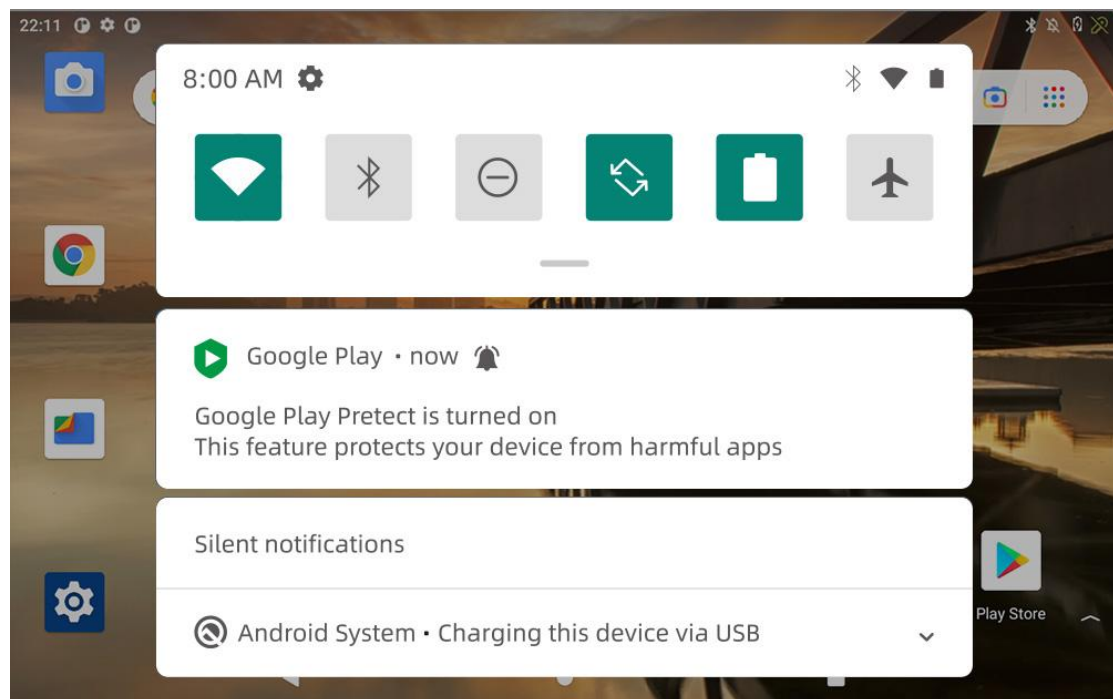


CONNECTING TO A COMPUTER

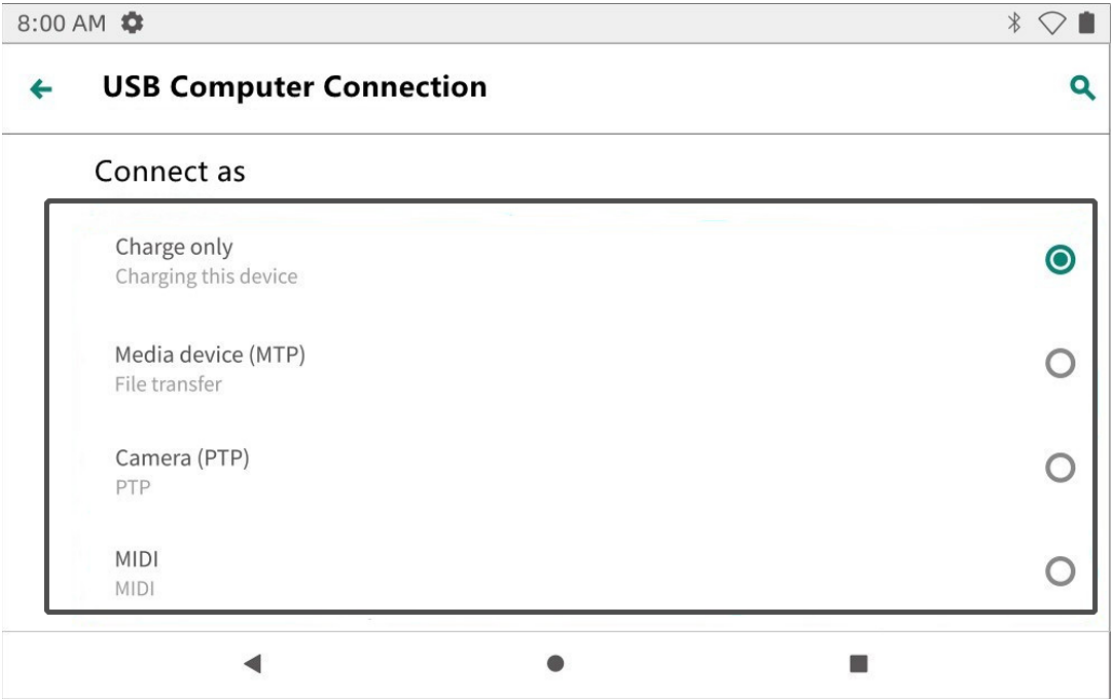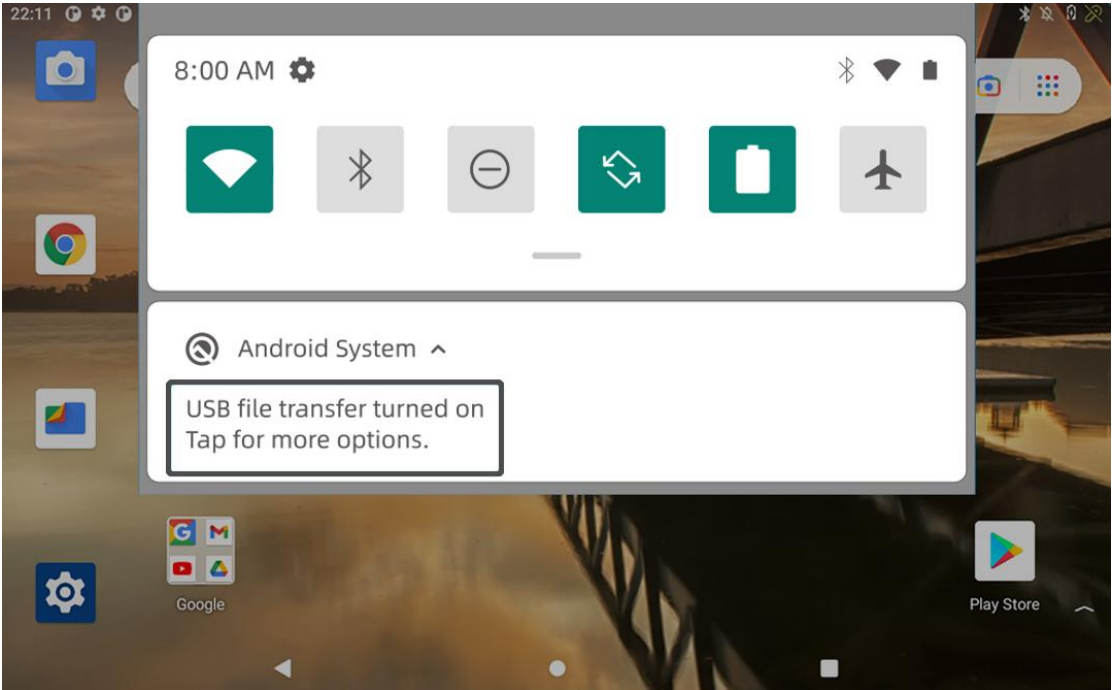

CONNECTING TO AN EXTERNAL SD CARD

- Install the microSD card into the microSD card slot and go to Quick Setting.
- Tap **SET UP**, Set the microSD card as a portable storage by selecting **Portage Storage**. Enter microSD Card storage to move files between the card and tablet.

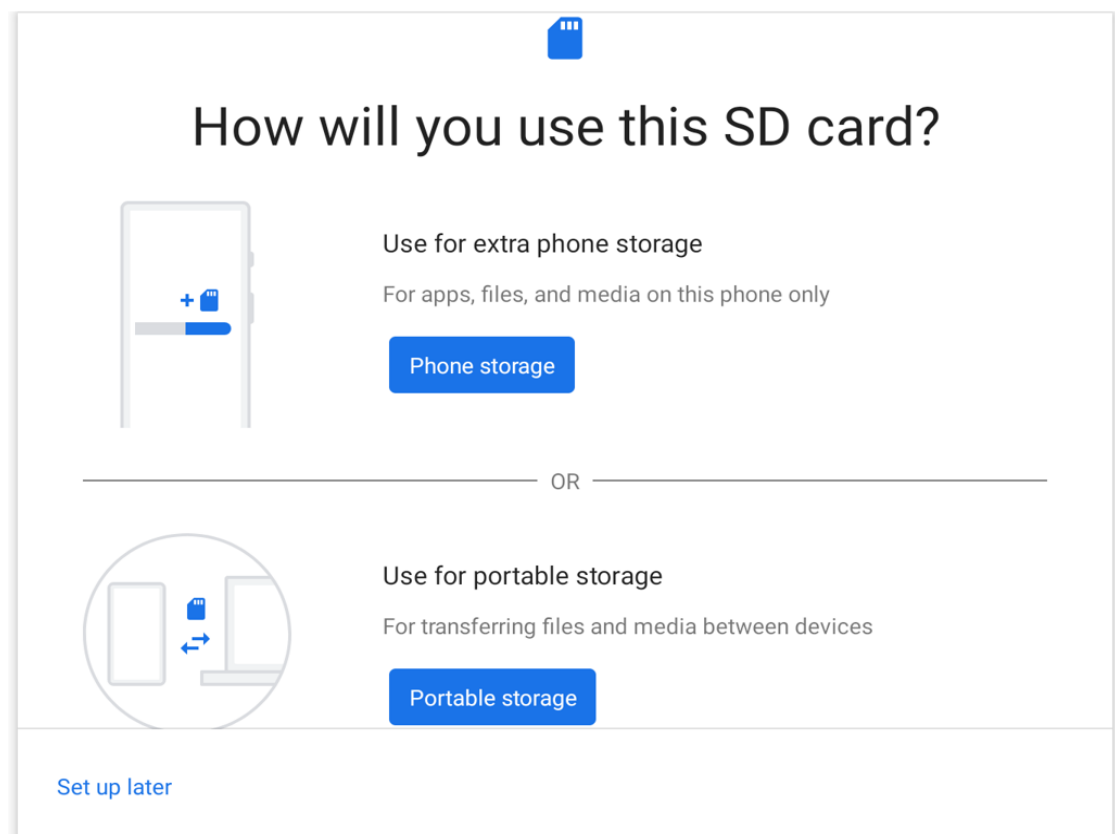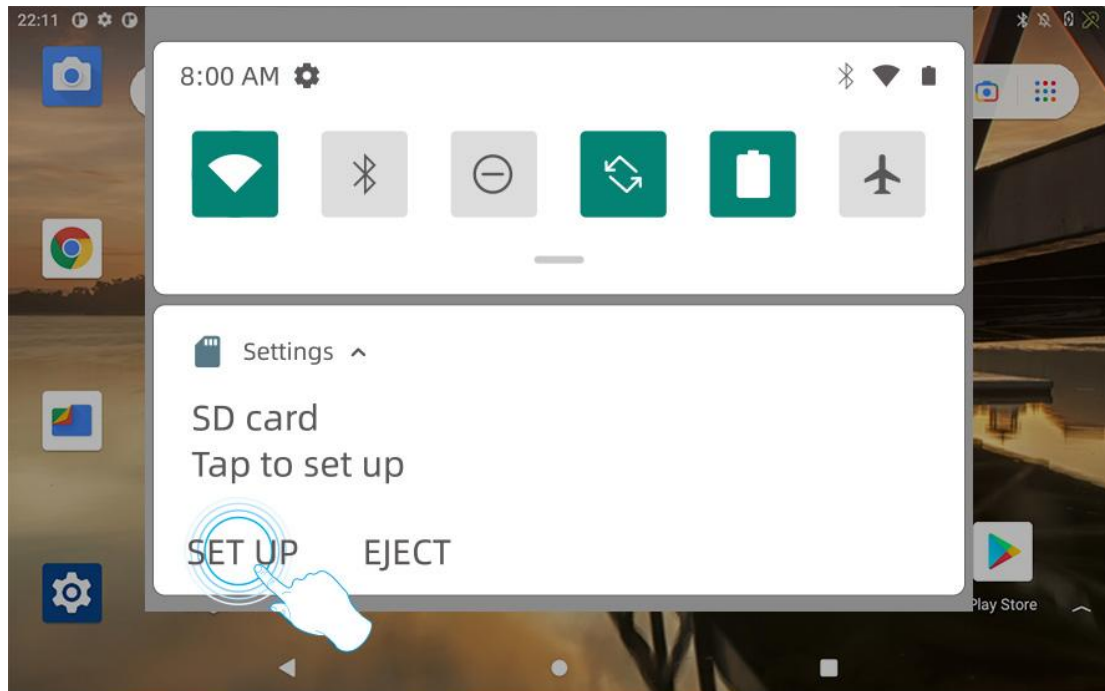

Specification

Display	10.1 inch
GPU	ARM Mali G52 3EE 2-Core
CPU	Octa-Core, 2 x A75@1.8GHz + 6 x A55@1.8GHz
Chipset	Unisoc T610
Resolution	1920*1200 IPS
Storage	64GB (expandable by up to 512GB)
RAM	4GB
Operation System	Android 11
Battery	6000mAh
Audio	Dual speakers
Ports	USB-C (2.0)/ earphone port/ microSD Card Slot
WIFI	2.4Ghz and 5Ghz
Front Camera	5MP
Rear Camera	13MP
Weight	520g
Dimensions	9.4 x 6.3x 0.3 inches
Power supply	DC 5V 2A
Bluetooth	BT5.0

Troubleshooting

Q1: The tablet doesn't power on.

- Reboot your tablet after charging for 30 minutes.
- Press the power button in case your device is in sleep mode.
- Press the power button for about 7-8 sec to reboot.
- Press the Reset button with a pin to reboot the tablet.

Q2: The tablet doesn't charge.

- Keep your device plugged in for 30 minutes if it was completely drained.
- Check and make sure the charger is properly plugged into the charging port.
- Try another compatible USB cable and adapter.

Q3: Error message during operation.

- Uninstall the application for error message and download to install again. You can also update certain applications for the error.
- Press the Reset button with a pin to reboot the tablet.

Q4. The tablet can't be detected by the computer.

- Make sure the tablet is powered on.
- Try another USB cable.
- Connect your tablet to a different port on your PC.
- Instead of Charge only, choose Media device (MTP) Or Camera (PTP) when connecting the tablet to the computer.

Q5. Device cannot connect to Wi-Fi.

- Make sure the Wi-Fi in your tablet is ON.
- Make sure you input the correct password.
- Restart the router.
- Make sure there is no filtering setting or device connection limit in your router setting.
- Forget the original Wi-Fi connection, reset the router, and connect again.

Q6: The storage space of the tablet is not enough.

- Delete any applications you don't use.
- Clean the caches in your device regularly.
- Install a microSD card to expand the storage.

Q7: The tablet comes with scratches on the screen.

- Check if the scratches are on the film, if yes, please remove the film.

Q8: The screen is unresponsive.


- Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth.

Q9: How to use your voice to search for a fact?

- Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

Google, Android, Google Play, YouTube, Gmail and other marks are trademarks of Google LLC.

各部の名称

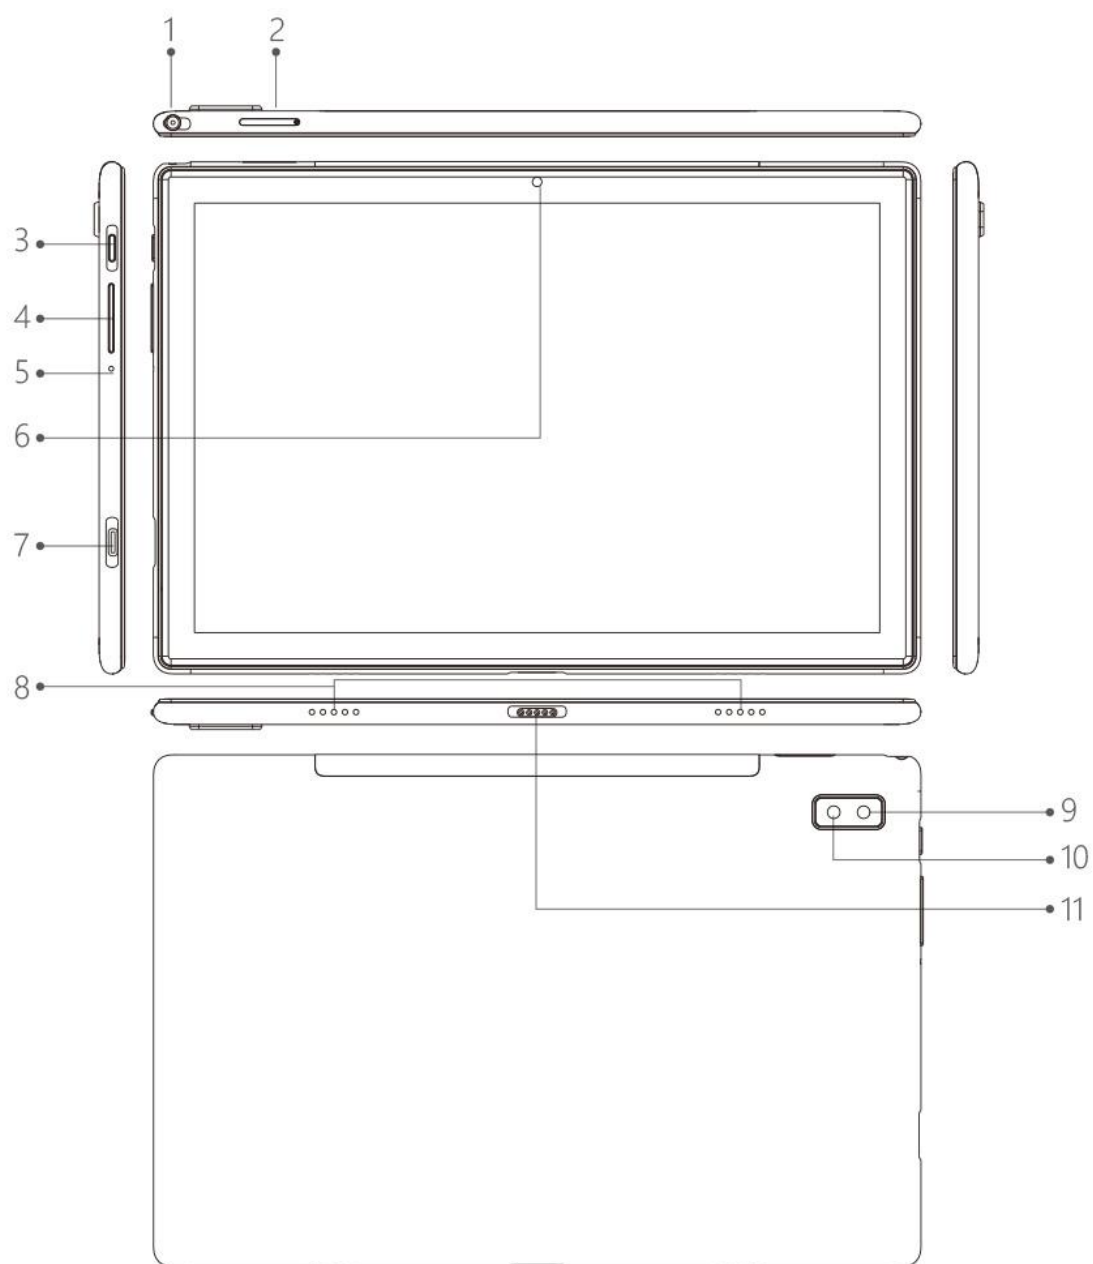

① ヘッドホン

② Micro SD Slot

③ 電源ボタン

④ 音量+ -

⑤ リセット

⑥ 前面カメラ

⑦ Type C

⑧ スピーカー

⑨ 背面カメラ


⑩ 閃光

⑪ ドッキング接点

基本の操作

電源の ON/OFF

- **電源 on:** 液晶ディスプレイの電源が入るまで、電源ボタンを長押しします。言語を選択し、画面の支持にしながらタブレットをセットアップしてください。
- **電源 off:** 端末オプションメニューが表示されるまで、電源ボタンを長押ししてください。「電源を切る」「再起動」「画面の保存」の中から、「電源を切る」を選択してタブレットの電源を切ります。

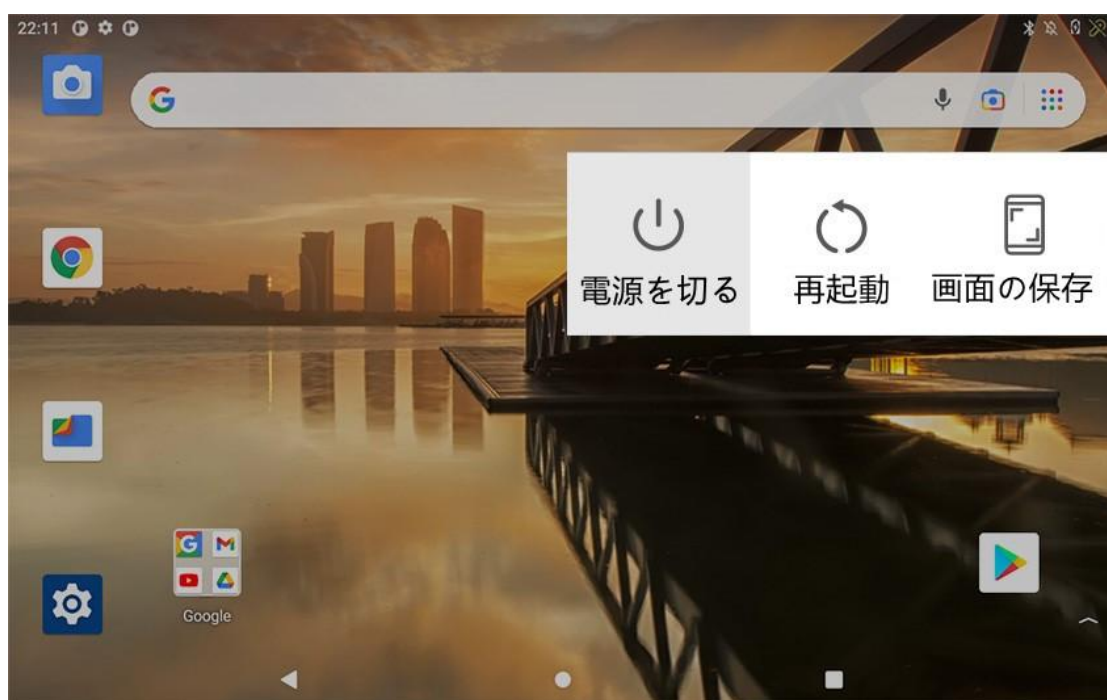

- **再起動:** 端末がフリーズした際は、電源ボタンを **7 から 8 秒間**長押しして強制再起動を行ってください。

スリープモード

タブレットの電源が入っていても、ディスプレイを **OFF** にすることでバッテリー消費量を抑える事ができます。電源ボタンを短く押してディスプレイを **OFF** にします。もう一度電源ボタンを押して、ディスプレイを **ON** にします。

アドバイス: 設定 - ディスプレイ - 詳細設定 - 画面消灯 の順に進み、スリープモードに移行するまでの時間を設定できます。

バッテリー


このタブレットには、再充電可能なリチウムイオンバッテリーが内蔵されています。

タブレットを頻繁に使用しない場合は、1 ヶ月に 1 度はバッテリーを使い切ることを推奨します。

タブレットを火の中に入れてください。


スクリーンショット

- 方法 1: 電源ボタンと音量「-」ボタンを同時に押して、スクリーンショットを撮ります。スクリーンショットは写真ファイルに保存されます。
- 方法 2: 端末オプションメニューが表示されるまで電源ボタンを長押しして、「電源を切る」「再起動」「画面の保存」の中から、「画面の保存」を選択してスクリーンショットを撮ります。

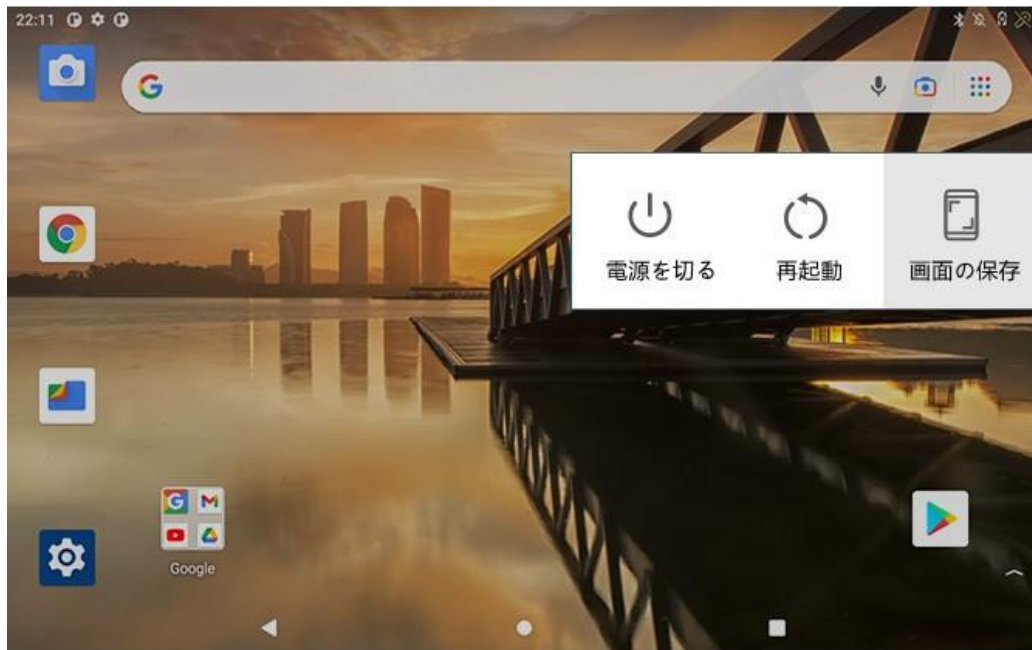

ホーム画面


画面下部のアイコン

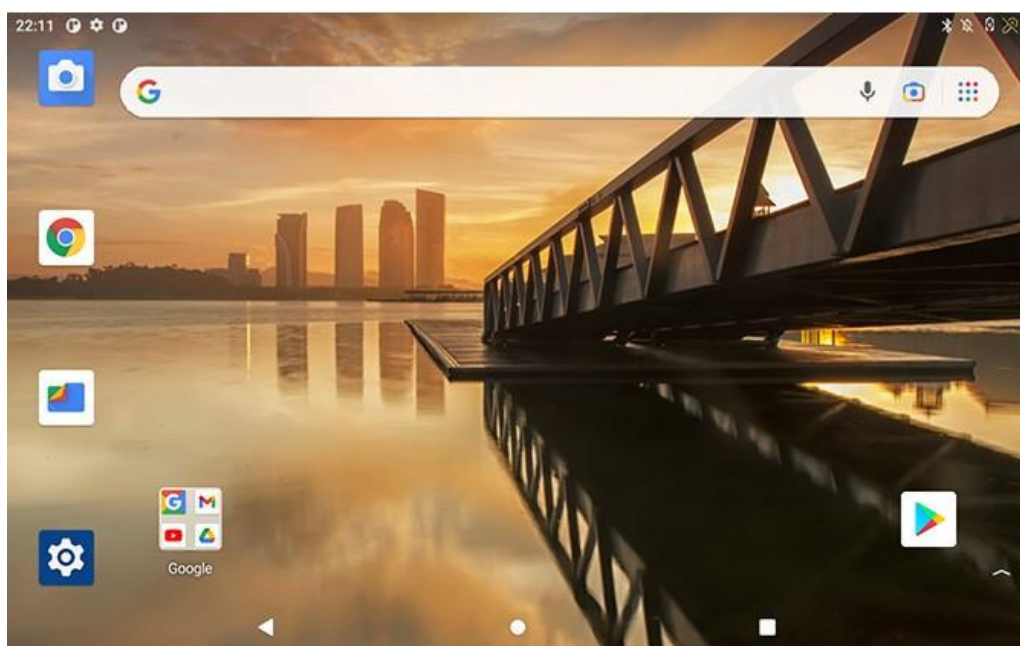

1 戻る 2 ホーム 3 最近のアクティビティ

ホーム設定&ウィジェット&壁紙

ホーム画面の空いているスペースに指をおいて長押しすると、ポップアップメニュー:「ホームの設定」「ウィジェット」「壁紙」が表示されます。

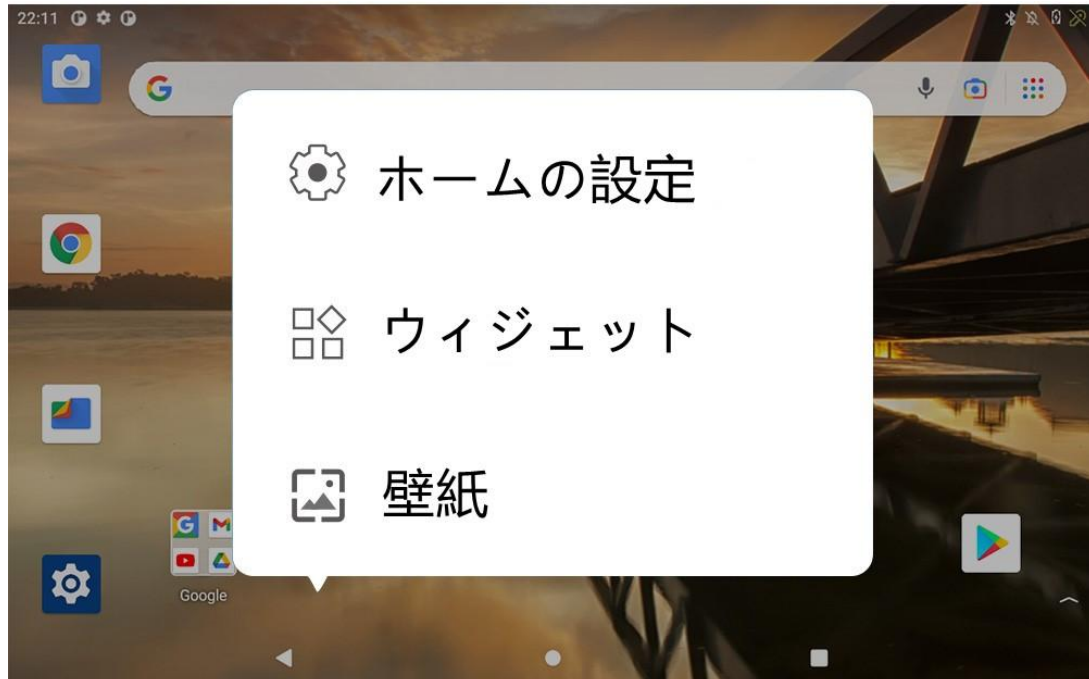

- 「ホームの設定」を選択し、「ホーム画面にアイコンを追加」オプションを有効/無効に設定できます。「Google Play」で新しいアプリをインストールした際の挙動にかかわります。「スワイプダウンアクション」や「通知バッジ」「ホーム画面のスタイル」などの設定を変更できます。
- 「ウィジェット」を選択して、自由にアプリを長押しして（時計など）ホーム画面上にスライドして追加します。上部の「X 削除」に持っていくと削除できます。

アドバイス:

アプリのアイコンをドラッグして他のアプリのアイコン上に重ねると、ホーム画面上に新しいフォルダを作成できます。フォルダを開き、「名前のないフォルダ」をタップして名称を変更します。

- 「壁紙」を選択して壁紙の設定をデフォルトの壁紙、ライブ壁紙、または写真に変更します。

基本設定

画面上部から下方向にスワイプしてクイック通知メニューを開きます。



 **Wi-Fi:** ワイヤレスネットワークを **ON** または **OFF** にします。

 **Bluetooth:** タブレットの Bluetooth 機能を ON/OFF します。

 **サイレントモード:** この機能を ON にして音をミュートします。

 **自動回転:** 画面の「自動回転」を ON/OFF にします。

 **バッテリーセーバー:** 好みの電源設定を選択してバッテリーの消費を抑えます。

 **機内モード:** 全てのネットワーク接続を ON/OFF します

 アイコンをタップして、「クイック設定」に表示するメニューをカスタマイズします。それぞれのアイコンを長押しして、詳細な設定画面に移動します。

詳細設定

画面上部から下方向にスワイプし、 アイコンをタップして詳細設定画面を開きます。またはホーム画面上から「設定」アプリを起動してください。





ネットワークとインターネット

- Wi-Fi に接続します
- 「機内モードを」有効化または無効化します
- その他、データ使用量の確認など

接続済みのデバイス

- Bluetooth を ON/OFF します
- 新しい Bluetooth デバイスとのペアリングや接続済み端末の確認が行えます
- Bluetooth 接続で他の端末から受信したファイルを確認します
- その他、プリンターの追加や確認など

アプリと通知

- 最近使ったアプリを確認します
- 端末上のすべてのアプリを管理します
- アプリごとの権限を管理します
- サードパーティ製アプリをアンインストールします
- アプリの通知設定を変更します
- アプリのキャッシュを確認します
- その他、アプリの利用時間など

電池

- 電池残量の%表示を表示または非表示にできます
- バッテリーマネージャを ON または OFF にします
- パワーセーブ最適化を設定します
- その他、アプリごとのバッテリー最適化など

ディスプレイ

- 画面の明るさを調整します
- フォントサイズや表示サイズを調整します
- スクリーンセーバーを設定します
- 壁紙を変更します
- スリープモードに移行するまでの時間を設定します
- ディスプレイのカラーやコントラストを調整します
- その他、ロック画面の表示設定など

電源 **ON/OFF** のスケジュール

- タブレットの電源を自動的に ON または OFF にする曜日や時間を設定します

音

- 通知やメディア、アラームの音量を設定します

ストレージ

- ストレージの空き容量を確認および管理します

プライバシー

- アプリの権限や自動入力サービス設定など

位置情報

- アプリごとに位置情報サービスを ON/OFF にします

セキュリティ

- 画面ロックのパターン設定（パスワード、PIN、スワイプなど）など

ユーザー補助

- 視覚または聴覚に障害をお持ちの方は、スクリーンリーダー、表示、操作のコントロールなどの設定を変更してください

アカウント

- タブレットにユーザーアカウントを追加および管理します

Digital Wellbeing と保護者による使用制限

- 利用時間、受信した通知、ロック解除の回数に基づいたアプリの使用状況をダッシュボード上で確認します
- おやすみ時間を設定し、お好みの設定を選択します
- 関連する通知設定を管理して割り込みを制限します
- ペアレンタルコントロールを設定して子供が適切な使用時間を守れるようにします

Google

- Google 関連サービスの設定を変更します


システム

- 言語を変更する: 言語と入力- 言語- 言語を追加 の順に選択して、使用したい言語を追加します
- 出荷時設定を復元: 詳細設定- リセットオプション -すべてのデータを消去（出荷時リセット）の順に選択して出荷時設定を復元します
（ハードリセットを行うと、インストールしたすべてのアプリケーションとユーザーデータが削除されることに留意してください。リセット前に重要なデータを必ずバックアップしてください）
- 日付と時刻を設定します
- Google Drive へのバックアップを ON または OFF にします
- タブレットのシステムアップデートを確認し実行します

ネットワーク接続

● Wi-Fi を ON にする

「ネットワークとインターネット」をタップして Wi-Fi を ON にします。利用可能な接続が一覧表示されます。あなたの Wi-Fi を選択して正しいパスワードを入力してください。

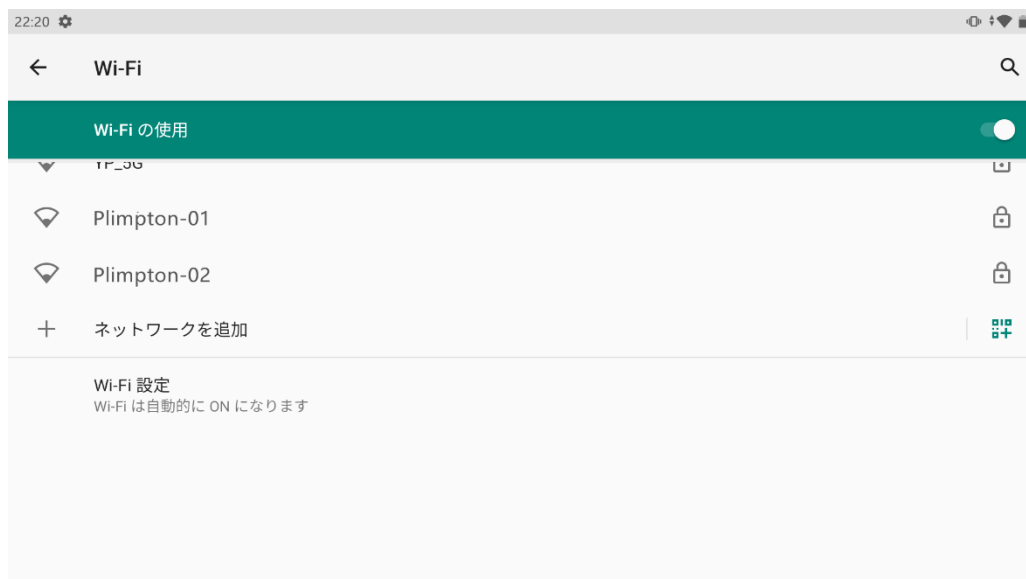

Internet Navigation


インターネットを利用する前に、タブレットが利用可能な Wi-Fi に接続されていることを確認してください。

予め端末にインストールされている **Chrome** ブラウザを使用するか、Google Play からダウンロードしてインターネットを利用できます。

Bluetooth

タブレットの Bluetooth 機能を ON にして、お使いの Bluetooth 機器の電源を入れてください。

- **設定- 接続済みのデバイス -新しいデバイスとペア設定する** の順に選択して端末検索画面を開きます。数秒経過後、利用可能な端末のリストが表示されます。
- お使いのデバイスを機器して、ペアリングコードを取得し、PAIR を両方の端末上でタップします。一部のデバイスでは自動接続機能が利用できます。

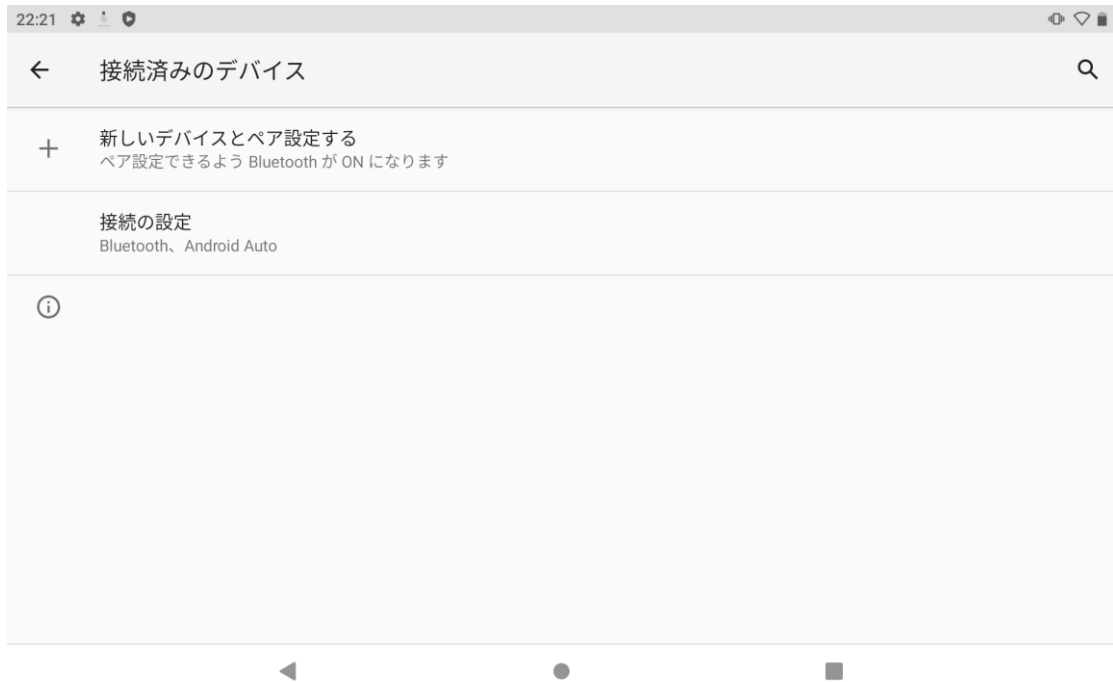

アプリの管理

- ホーム画面から Play Store を開きます。
- お使いの Google アカウントでログインし、好きなアプリを検索してダウンロードします。

アプリの移動

アプリをタップして長押しし、好きな位置に移動してください。

ホーム画面からアプリを削除する

アプリをタップして長押しし、上部の **X 削除** にスライドして離すとホーム画面から削除できます。

アプリのアンインストール

アプリをタップして長押しし、上部の  アイコンに移動してアプリをアンインストールします。

Optional Connections


PC に接続する

- USB ケーブルでタブレットをコンピューターと接続します。
- お使いのコンピューターをいて **PlimPad P50** を探し、タブレットとコンピューターの間でファイルを移動します。



アドバイス:

クイック設定を開き、**Android システム 接続した端末に USB で給電** - タップしてその他のオプションを表示します- コンピューターへの **USB 接続** の順に進み、目的に合った選択肢を選びます。

- | | |
|------------------|--------------------------|
| ● 充電のみ行う | : タブレットを充電します |
| ● メディアデバイス (MTP) | : ファイル転送を行います |
| ● カメラ (PTP) | : 端末間で写真を転送します |
| ● MIDI | : タブレットを MIDI 端末として使用します |
| ● USB バーチャルドライブ | : USB バーチャルドライブを有効化します |

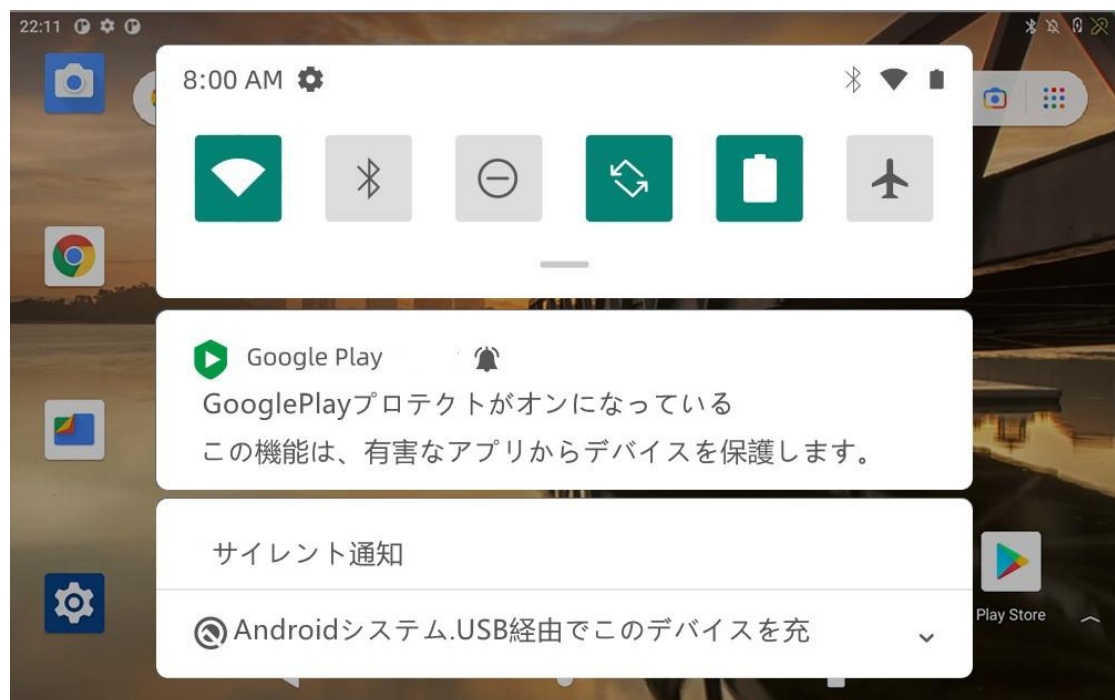


PC に接続する

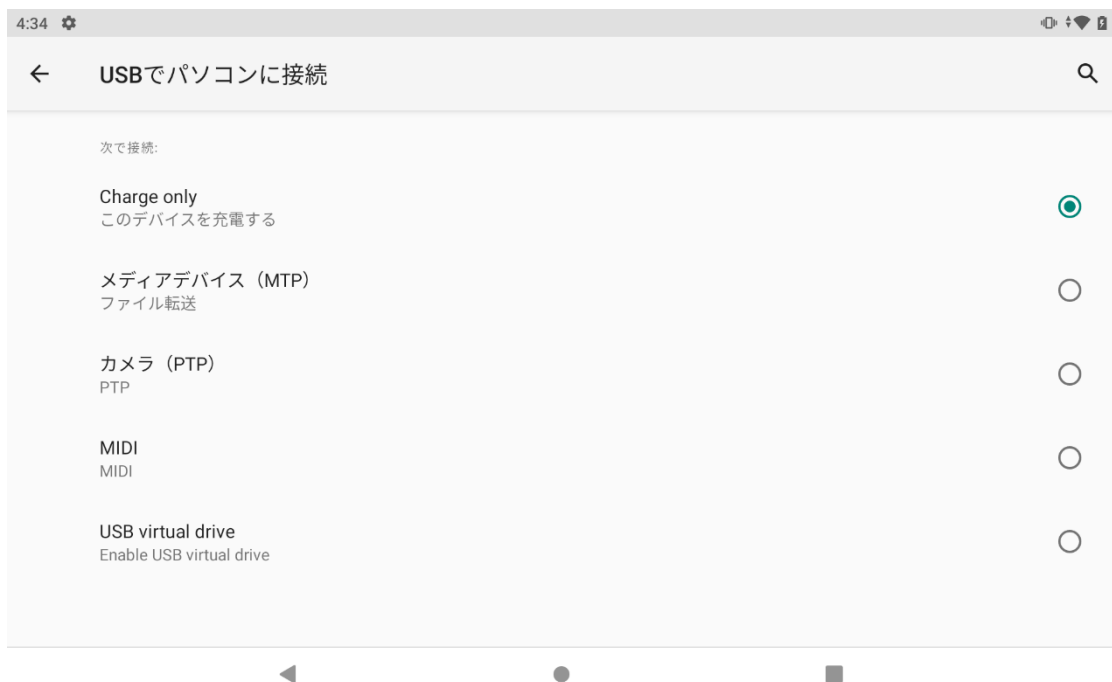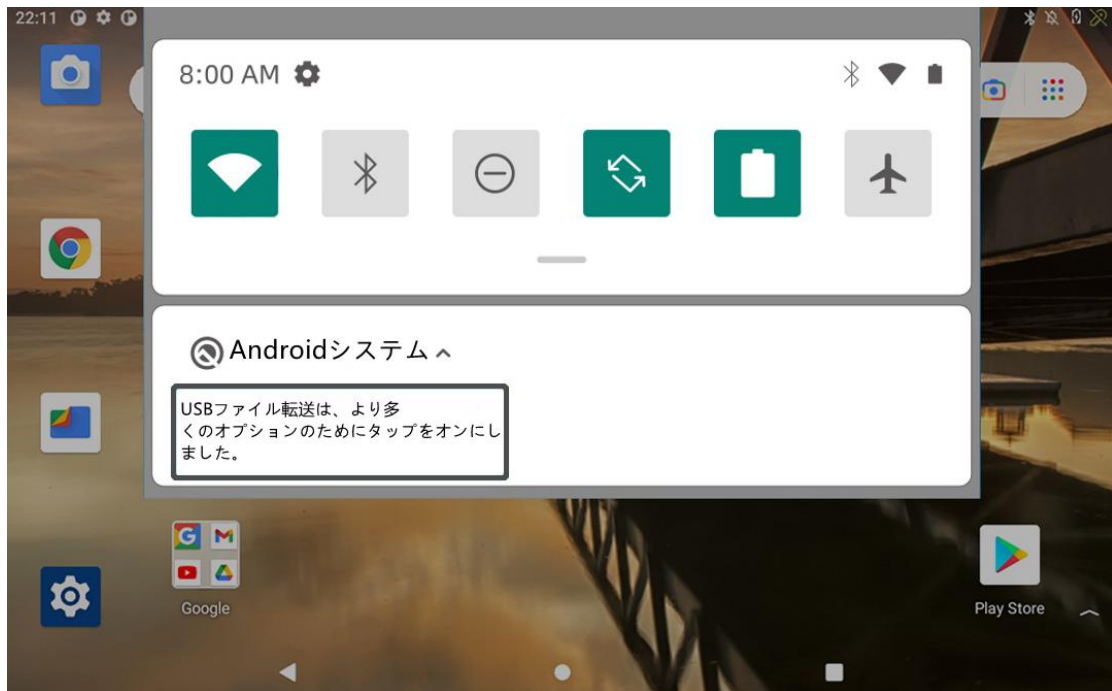


外部 SD カードを接続

- microSD カードスロットに microSD カードを挿入し、クイック設定を開きます。
- セットアップ を選択し、ポータブルストレージ を選択して microSD カードをポータブルストレージとして使用します。microSD カードストレージを開いてタブレットとカードの間でファイルを転送します。

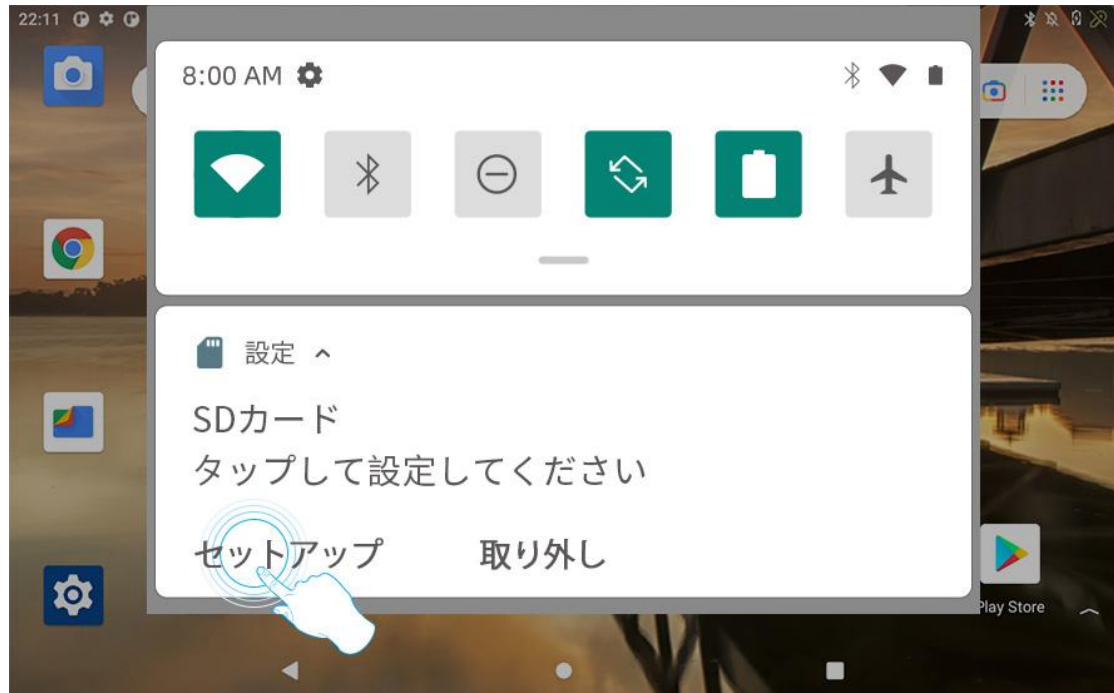

この SDカードの使用目的

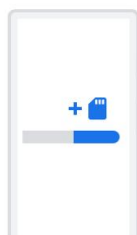

追加のスマートフォン ストレージとして使用

このスマートフォンのアプリ、ファイル、メディアのみ

スマートフォンのストレージ

または



外部ストレージとして使用

デバイス間でファイルやメディアを移動するため

外部ストレージ

後でセットアップ

詳細仕様

ディスプレイ	10.1 インチ
GPU	ARM Mali G52 3EE 2-Core
CPU	8 コア, 2 x A75@1.8GHz + 6 x A55@1.8GHz
チップセット	Unisoc T610
解像度	1920*1200 IPS
ストレージ	64GB (最大 512GB まで拡張可能)
RAM	4GB
オペレーティングシステム	Android 11
バッテリー	6000mAh
オーディオ	Dual speakers
外部端子	USB-C (2.0)/ イヤホンポート/ microSD カードスロット
Wi-Fi	2.4Ghz and 5Ghz
前面カメラ	5MP
背面カメラ	13MP
重量	520g
寸法	240x160x8mm
電源	DC 5V 2A
Bluetooth	BT5.0

トラブルシューティング

Q1: タブレットの電源が入りません。

- タブレットを 30 分間以上充電してから端末を再度起動してください。
- 念の為、端末の電源ボタンを押してスリープモードでないか確かめてください。
- 電源ボタンを 7 から 8 秒間長押しして端末を強制再起動してください。
- ピンでリセットボタンを押してタブレットを再起動してください。

Q2: タブレットを充電できません。

- バッテリーが完全放電した場合は充電器に接続して 30 分以上放置してください。
- 充電器がコンセントに正しく接続されていることを確認してください。
- その他の USB ケーブルと充電器をお試しください。

Q3: エラーメッセージが表示されました。

- エラーメッセージが表示されたアプリをアンインストールして再度インストールしてください。新しいアップデートが公開されている場合は更新してください。
- ビンでリセットボタンを押してタブレットを再起動してください。

Q4. コンピューター上にタブレットが表示されません。

- タブレットの電源が入っていることを確かめてください。
- 他の USB ケーブルをお試してください。
- タブレットを PC の異なる USB ポートに接続してみてください。
- PC に接続する際は**充電のみ**ではなく、**メディアデバイス (MTP)**または**カメラ (PTP)**を選択してください。

Q5. 端末を Wi-Fi に接続できません。

- タブレットの Wi-Fi が ON になっていることを確かめてください。
- 正しくパスワードを入力したことを確かめてください。
- ルーターを再起動してください。
- ルーターの設定でフィルタリングや端末の接続制限が設定されていないことを確かめてください。
- 保存済みの Wi-Fi 接続設定を削除し、ルーターをリセットし、再度接続設定を行ってください。

Q6: 端末の空き容量が足りません。

- 使用しないアプリケーションをアンインストールしてください。
- 端末のキャッシュをこまめに削除してください。
- microSD カードを挿入してストレージを拡張してください。

Q7: タブレットの画面に傷がついた状態で届きました。

- 保護フィルムに傷がついていた場合は、フィルムを剥がしてご使用ください。

Q8: 画面が反応しません。

- 画面がに埃や油汚れが付着していないか確かめてください。汚れていた場合は、布で優しく拭き取ってください。

Q9: 音声操作で知りたい情報を検索したいです。

- Google 検索バーのマイクアイコンをタップして、知りたいことをタブレットに向かって話しかけてください。検索結果が表示されます。

Google, Android, Google Play, YouTube, Gmail やその他のロゴは Google LLC の商標です。

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

More Product & warranty Info.....

www.plimptonline.com 

Customer Support

North America: support@plimptonline.com

United Kingdom: support.uk@plimptonline.com

Europe: support.eu@plimptonline.com

Japan: support.jp@plimptonline.com