

PORTABLE CD PLAYER



MODEL:MD-602

► User Manual

USER MANUAL-EN
BENUTZERHANDBUCH-DE
MANUAL DE USUARIO-ES

MANUEL D'UTILISATION-FR
MANUALE UTENTE-IT
取扱説明書-JP



IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. Never touch the lens of the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.
2. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.
3. Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.
4. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
5. The player can not be used or stored in moist environment, please keep the player away from any liquid, steam or vapor, such as rain drop, mist etc.
6. Please do not place any liquid or metal gadgets onto the player, such as pin or a cup of coffee.
7. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment.
8. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design.
9. Please do not stick or hit the player with sharp objects.
10. There are light emitting diodes in this player, staring directly with eyes should be avoid to prevent visual impairment from being caused.
11. Children under 12 years is not allowed to use the player individually.
12. When charging, ensure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above 140°F (60°C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.



Hearing protection

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Set the volume to a low level:

Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.

Environmental protection


To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

PACKAGING & PRODUCT

What's in the box

1*CD player	1*3.5 to 3.5mm AUX cable
1*USB to Type-C charging cable	1*User manual
1*Earphones	

The CD player

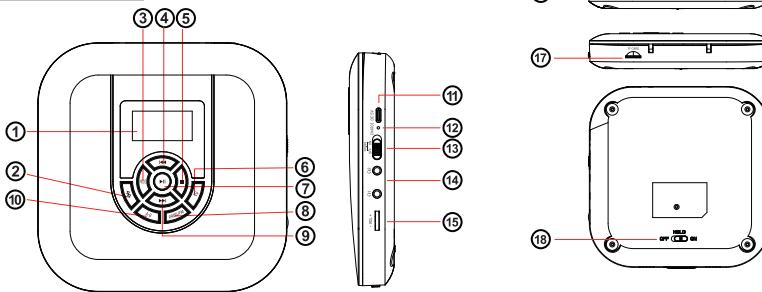

Item	Function	Item	Function
1	Display screen	11	DC 5V
2	Bluetooth	12	Charging LED
3	MODE	13	Power ON / OFF
4	Previous / Rewind	14	Headphone jack 1 / jack 2
5	Stop	15	Volume Knob
6	EQ	16	OPEN
7	Play / Pause	17	TF CARD
8	PROG/FM	18	HOLD ON / OFF
9	Next / Fast forward		
10	A-B		

TROUBLESHOOTING

Problems	Reasons	Solutions
Cannot be turned on.	Switch is not turned on. HOLD is be turned on. The battery is exhausted. The player is damaged.	Please turn the OFF/ON button on the side to ON. Please turn the HOLD button on the side to ON. Charge the battery. Please contact us or ask a professional for repairs.
Cannot read discs.	The disc is installed incorrectly. The disc cannot be recognized. The disc is dirty or damaged. The loader is dirty.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is inserted fully into the place. The player is only compatible with CD, CDR, MP3, HDCD formats. 1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty. Wipe the lens gently with a degreasing cotton swab. NOTE: DO NOT TOUCH THE LENS WITH YOUR HANDS.
Cannot charge battery.	There is no current at power outlet. The plug is not plugged in correctly. The charger is damaged. The player is damaged.	Make sure the power outlet is working. Make sure that the two plugs of the power cords are connected properly. Replace the charger with another one matching the specification (DC 5V/1A). Please contact us or ask a professional for repairs. NOTE: While charging, please make sure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.
Automatically skips part of the contents of disc.	The player has MODE function (Repeat, Repeat all, Random play, Preview play). Preview play means that only 10 s per track will be played.	Please ensure the Preview play MODE is off
Noisy and screaming when it plays.	Usage time of the disk may be too long, so the disk is not smooth. If there is a "Jiji" sound inside the earphone, it may be caused by scratching of the disc.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radically out to the edge with a clean & soft cloth; 3. Try another new disc to check if the disc is faulty. Please change to another disc, and do not use the old one again to prevent the player from damage.


USER GUIDE

How to insert a disc

Push the OPEN button to the right to open the door. Insert your index finger into the center hole of the disc and take the edge of the disc with your thumb. Keep the side with words upward while inserting the disc into CD player, press the disc gently to make it steady, and make sure if the disc has been in place. Close the disc door gently and completely, otherwise the player will not read the disc.

Keep pressing  for 2 seconds to switch to TF card

(Note: The player is only compatible with CD, CDR, MP3, HDCD formats.)

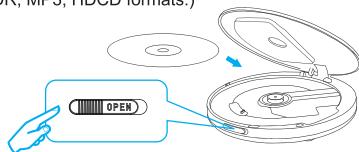


Insert an earphone

Only earphone with 3.5mm plug is compatible with this player.

(Note: Only "Q1" supports headset control)

How to turn on the player

The power switch is located on the side. Please toggle it to ON position to play normally. When a disc is played to the end or there is no disc, the player will enter a standby mode after 20 seconds. Please press the PLAY button again to restart the player.




► EN-05 ◀

How to turn off the player

There are two ways to turn off the player:

1. Please toggle the power switch to OFF position if the player will no longer be used for a long time;
2. The player will enter a standby mode by pressing the STOP button twice in succession, but at this time, the power of the player is not completely disconnected.


Note: Please turn the power switch to OFF position if the player will no longer be used for a long time.

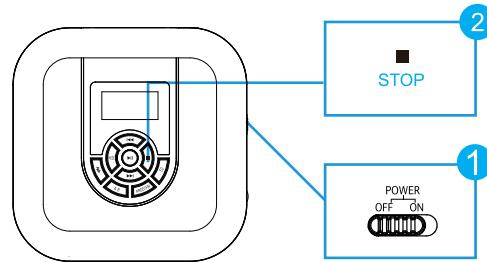

How to charge for the player

How to choose a charger: This product is only equipped with one charging cable. You can choose any charger that supports USB2.0 protocol or standard USB charger of a cellphone running in Android or iOS system to charge for the player.

Charging time: It will take around 4 hours to fully charge the player according to the standard USB2.0 protocol. When the battery is being charged, the LED indicator is red. Once the player is fully charged, the LED indicator will turn green.

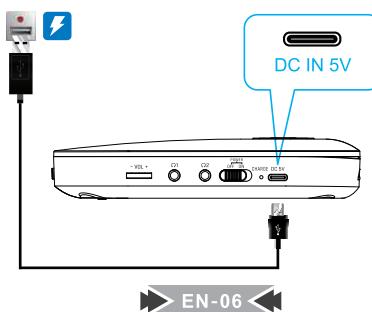



PLAY


How to setup the circle mode

Each time the MODE button is pressed, the order of the tracks played will be as follows:Repeat 1( 1), Repeat all ( ALL),random play (RAND),preview play (INTRO) (only 10 second per track will be played in this mode).



How to program the play

Press stop() button firstly press the PROG/FM button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, press PROG again to confirm the programming. Up to 30 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.



A-B


If you just want to repeat the specific part of a track, when the player is played that part, please press the A-B button one time, the display show "A ON", then when it plays to the end of that part, press the A-B button once again, the display show "Ab ON". After that, the player will only repeat that specific part.

NOTE: If you want to stop repeating that part, just press the A-B button once again, the display show "Ab OFF", it will play in an order.

How to setup sound

How to adjust volume

The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

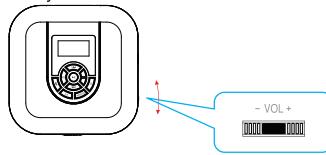


How to setup EQ effect

Press the EQ button to changes the different sound effects. There are a total of 5 sound effects: BBS, POP, JAZZ, ROCK, and CLASSIC.



How to connect Bluetooth devices

1. Turn on your Bluetooth headphone/speaker and make sure that the Bluetooth is turned on.
2. Press the Bluetooth button (BT) of the player. If the Bluetooth is off, you need to press the play button (PLAY) to turn on the Bluetooth.
3. Select "BT Search" option, then press the PLAY button, the cd player will start searching nearby Bluetooth devices.
4. Press the PLAY button to select the name of your device that needs to connect to.
5. After paired successfully, press the BLUETOOTH button to return to the play interface.

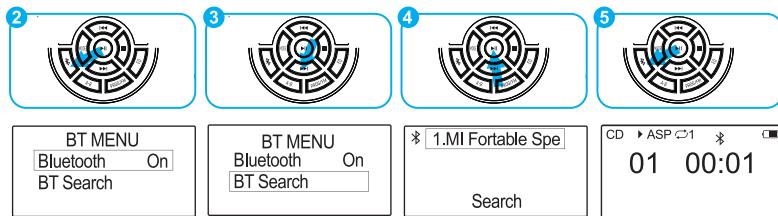


OTHER FEATURES

Time setting of screen sleep

The screen will be turned off after 10 second of inactivity. The screen will be turned on when any button is pressed.

Key lock

After playback mode and sound effects have been setup, you can toggle the power switch to the HOLD position in order to prevent the environment, for example naughty children or crowded occasions from affecting the setting of player.



Connect to AUX devices

In order to use this player in different occasions, an extra AUX cable has been supplied to connect this player to any device with AUX interface conveniently, such as: home theater, music center, Bluetooth speakers, vehicles, headphone amplifiers and more.

How to use FM transmitter

please follow the below steps to use FM transmitter to connecting the car radio device :

1. When playing CD discs, press play/pause (▶||) button firstly press PROG/FM button, FM transmitter frequency will show up on the display. Press it again, the frequency will change. Choose one frequency you prefer.
[Six FM transmitter frequency are optional : 78.1, 79.3, 87.5, 88.5, 93.6, 103, 107.1, OFF]
2. Turn on the car radio device and adjust the frequency to the same frequency you choose on CD player.
3. You can listen the CD by the car radio device now.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PORTABLER CD PLAYER



MD-602

► Benutzerhandbuch

WICHTIGE SICHERHEITSANWEISUNGEN

Bitte lesen Sie dieses Handbuch sorgfältig durch, bevor Sie den Player verwenden und bewahren Sie es zum späteren Nachschlagen auf.

Warnung:

Der Player

Befolgen Sie bitte die folgenden Anweisungen, um das Risiko von Feuer oder Schäden am menschlichen Körper zu vermeiden:

1. Berühren Sie niemals das Objektiv am Gerät. Halten Sie das Disc-Fach immer geschlossen, um zu verhindern, dass sich Staub auf der Linse ansammelt.
2. Wenn das Gerät die Discs nicht einwandfrei scannen kann, reinigen Sie die Laser Optik mit einer handelsüblichen Standard Reinigung. Andere Reinigungsmethoden können die Laseroptik beschädigen.
3. Reinigen Sie das Gerät mit einem sauberen, feuchten Ledertuch. Verwenden Sie keine Reinigungsmittel.
4. Falls der Player nicht funktioniert, wenden Sie sich bitte rechtzeitig an unsere Kundendienstmitarbeiter. Professionelle technische Supportmitarbeiter geben Ihnen detaillierte Antworten.
5. Der Spieler kann nicht in feuchter Umgebung verwendet oder gelagert werden. Bitte halten Sie den Player von Flüssigkeiten, Dampf oder Dämpfen wie Regen, Nebel usw. fern.
6. Bitte keine flüssigen Gegenstände oder Metallgegenstände wie Nadeln oder eine Tasse Kaffee auf den Player legen.
7. Setzen Sie den Player nicht dem Sonnenlicht aus und halten Sie ihn von der Heizung fern. Der Player kann nicht in Umgebungen mit hohen Temperaturen aufgestellt werden.
8. Alle Fachleute mit umfangreichen Kenntnissen in der Elektronik und Instandhaltung dürfen den Player zu Wartungszwecken demontieren. Der Austausch von Ersatzteilen muss in strikter Übereinstimmung mit den Parametern des Schaltungsdesigns erfolgen.
9. Bitte stoßen Sie den Player nicht mit scharfen Gegenständen.
10. In diesem Player sind Leuchtdioden enthalten. Nicht direkt in diese Lichtquelle schauen, um eine Beeinträchtigung des Sehvermögens zu vermeiden.
11. Kinder unter 12 Jahren dürfen den Player nicht alleine verwenden.
12. Stellen Sie während des Ladevorgangs sicher, dass die Stromquelle und die Ladespannung DC 5V / 1A sind. Ein zu hoher Spannungseingang kann zur Überlastung des Gerätes führen.

► DE-01 ◀

Batterie

Wenn der von Ihnen erworbene Player Akkus/Batterien enthält, dann bauen Sie diesen bitte nicht selbst auseinander und laden Sie ihn nicht mit Adapters auf, die nicht den elektrischen Parametern dieses Produktes entsprechen. Auf diese Weise vermeiden Sie Fehler in der Schaltung. Verwenden Sie die eingebaute Hochleistungs-Lithium-Polymerbatterie zu Ihrer eigenen Sicherheit gemäß den folgenden Anweisungen:

1. Bitte entfernen Sie nicht die Batterie.
2. Bitte schlagen oder stoßen Sie nicht diesen Spieler.
3. Bitte verursachen Sie an der Batterie keinen Kurzschluss und durchstoßen sie diese nicht.
4. Setzen Sie den Player nicht einer Temperatur von über 140°C (60°C) aus.
5. Bitte werfen Sie die Batterie nicht in Feuer.
6. Wenn die Batterie beschädigt wurde, bitten Sie einen Fachmann, die Batterie durch dieselbe Spezifikation zu ersetzen, oder wenden Sie sich an unseren Kundendienst.

Gehörschutz

Hören auf mittlerer Lautstärke:

Bitte stellen Sie die Lautstärke auf ein angemessenes Niveau. Wenn die Lautstärke zu hoch ist, kann das Ihr Gehör schädigen oder sogar einen dauerhaften Schaden verursachen.

Einstellen der Lautstärke auf einen niedrigen Pegel:

Erhöhen Sie die Lautstärke langsam, bis ein angenehmer, klarer Ton zu hören ist.

Hören Sie die Audio innerhalb eines angemessenen Zeitrahmens:

Langes Hören, selbst bei einer angemessenen Lautstärke, kann Ihr Gehör schädigen. Bitte verwenden Sie das Produkt ordnungsgemäß und erholen Sie sich bei Bedarf.

Umweltschutz


Befolgen Sie zum Schutz der Umwelt und der Gesundheit von Menschen die örtlichen Gesetze und Bestimmungen zur Entsorgung der Verpackung, des elektronischen Produkts oder der Batterie. Bitte entsorgen Sie das Produkt nicht im Hausmüll.

VERPACKUNG & PRODUKT

Packungsinhalt

1*CD Player	1*3.5mm AUX Kabel
1*Typ-C-Ladekabel	1*Benutzerhandbuch
1*Kopfhörer	

Der CD Player

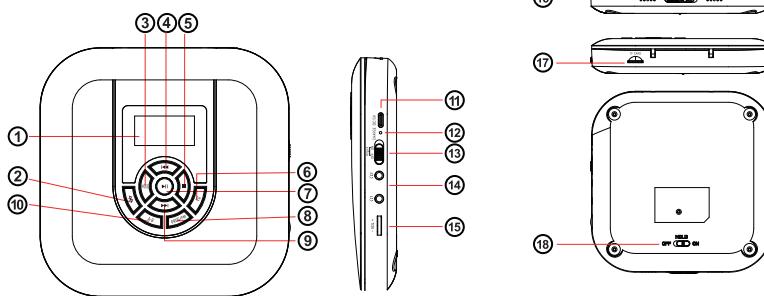

Gegenstand	Funktion	Gegenstand	Funktion
1	Anzeigebildschirm	10	A-B Wiederholen
2	Bluetooth	11	DC Eingang 5V
3	MODUS	12	Lade-LED
4	Zurück / Zurückspulen	13	Einschalten / Ausschalten
5	Stoppen	14	Kopfhöreranschluss 1/2
6	EQ / Equalizer	15	Lautstärke Konb
7	Abspielen / Pause	16	OFFEN
8	PROG/FM	17	TF-KARTE
9	Weiter / Schneller Vorlauf	18	Tastensperre

► DE-03 ◀


PROBLEMLÖSUNG

Problem	Gründe	Lösung
Kann nicht eingeschaltet werden.	Der Schalter ist nicht eingeschaltet.	Stellen Sie bitte die OFF / ON-Taste an der Seite auf ON.
	HOLD ist eingeschaltet.	Stellen Sie bitte die HOLD-Taste an der Seite auf ON.
	Die Batterie ist leer.	Laden Sie die Batterie auf.
	Der Player ist beschädigt.	Bitte kontaktieren Sie uns, oder lassen Sie das Gerät von einem Fachmann reparieren.
Discs können nicht gelesen werden.	Die Disc ist falsch installiert.	Stellen Sie sicher, dass die Label Seite der Disc, nach oben zeigt. Vergewissern Sie sich, dass die CD / DVD richtig eingelegt ist.
	Die Disc kann nicht erkannt werden.	Der Player ist nur mit den Formaten CD, CDR, MP3 und HDCD kompatibel.
	Die Disc ist verschmutzt oder beschädigt.	Stellen Sie sicher, dass die Disc nicht zu stark zerkratzt, oder beschädigt ist. Wischen Sie die Disc, mit einem sauberen und weichen Tuch, von der Mitte aus ab. Verwenden Sie eine andere neue Disc, um zu prüfen, ob die Disc fehlerhaft ist.
	Der Lader ist schmutzig.	Wischen Sie die Linse vorsichtig mit einem Wattestäbchen ab. Hinweis: Berühren Sie die Linse nicht mit Ihren Händen.
Akku kann nicht geladen werden.	Die Stromversorgung der Steckdose, ist ausgefallen.	Stellen Sie sicher, dass die Steckdose funktioniert.
	Der Stecker ist nicht richtig angeschlossen.	Stellen Sie sicher, dass die beiden Stecker des Netzkabels, richtig angeschlossen sind.
	Das Ladegerät ist beschädigt.	Ersetzen Sie das Ladegerät durch ein anderes, das der Spezifikation entspricht (DC 5V / 1A).
	Der Player ist beschädigt.	Bitte kontaktieren Sie uns, oder lassen Sie es von einem Fachmann reparieren. HINWEIS: Stellen Sie während des Ladevorgangs sicher, dass die Stromquelle und die Ladespannung 5 V / 1A DC beträgt. Ein zu hoher Spannungseingang, kann zur Überlastung des Gerätes führen.
Überspringt automatisch einen Teil des Disc-Inhalts.	Der Player verfügt über die MODE-Funktion, (Wiederholen, All wiederholen, Zufallswiedergabe, Vorschauwiedergabe). Bei der Vorschauwiedergabe werden nur 10 Sekunden pro Titel gespielt.	Stellen Sie sicher, dass der Preview-Play-Modus, deaktiviert ist.
Noisy and screaming when it plays.	Möglicherweise ist die Abspielzeit zu lang, daher ist die Festplatte nicht ausreichend.	Stellen Sie sicher, dass die Disc nicht zu stark zerkratzt oder beschädigt ist. Wischen Sie die Disc mit einem sauberen und weichen Tuch von der Mitte nach außen ab. Verwenden Sie eine andere neue Disc, um zu
	Wenn im Ohr ein "Jiji" - Ton hören, kann dies durch Kratzen der Disc verursacht werden.	Bitte nehmen Sie eine andere Disc und verwenden Sie die alte Disc nicht mehr, um Schäden am Player zu vermeiden.

BENUTZERHANDBUCH

Einlegen einer CD

Drücken Sie die OPEN-Taste nach rechts, um die Klappe zu öffnen. Führen Sie Ihren Zeigefinger in das mittlere Loch der CD und greifen Sie den Rand der CD mit dem Daumen. Halten Sie die Seite mit der Schrift nach oben, während Sie die CD in den CD-Player einlegen. Drücken Sie die CD vorsichtig, um sie zu sichern, und überprüfen Sie anschließend, ob die CD fest sitzt. Schließen Sie die Klappe vorsichtig und vollständig, da der Player die CD sonst nicht lesen kann.
(Hinweis: Der Player ist nur mit den Formaten CD, CDR, MP3 und HDCD kompatibel.)

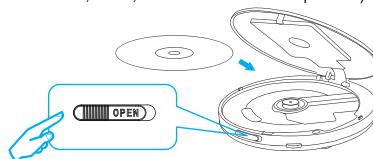


Kopfhörer einstecken

Nur Kopfhörer mit 3,5-mm-Stecker sind mit diesem Player kompatibel.
(Hinweis:Nur "Kopfhöreranschluss 1" unterstützt die Headset-Steuerung)

Einschalten des Players


Der Netzschalter befindet sich an der Seite. Bitte schalten Sie ihn auf ON, um wie gewohnt abzuspielen. Wenn eine CD bis zum Ende abgespielt wird oder keine CD vorhanden ist, wechselt der Player nach 20 Sekunden in den Standby-Modus. Drücken Sie erneut die PLAY-Taste, um den Player neu zu starten.

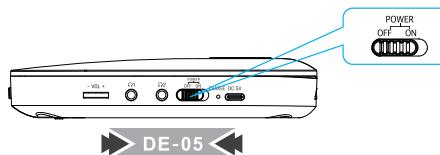

Ausschalten des Players

Es gibt zwei Möglichkeiten, den Player auszuschalten:


1. Schalten Sie den Netzschalter in die Position OFF, wenn der Player längere Zeit nicht verwendet wird.
2. Der Player wechselt in den Standby-Modus, indem Sie die STOP-Taste zweimal hintereinander drücken.
Zu diesem Zeitpunkt ist die Stromversorgung des Players jedoch nicht vollständig unterbrochen.
Hinweis: Stellen Sie den Netzschalter bitte auf OFF, wenn der Player längere Zeit nicht verwendet wird.

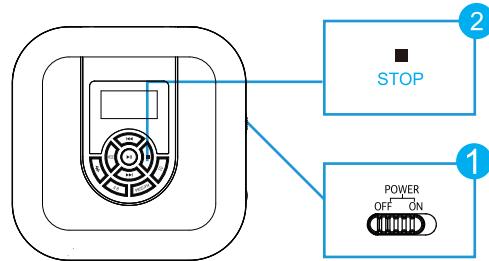

Aufladen des Players

Auswahl des Ladegerätes: Dieses Produkt ist nur mit einem Ladekabel ausgestattet. Sie können ein Ladegerät auswählen, das das USB 2.0-Protokoll unterstützt, oder ein Standard-USB-Ladegerät eines Mobiltelefons, das unter Android oder iOS läuft, um den Player aufzuladen.

Ladezeit: Es dauert ungefähr 4 Stunden, um den Player gemäß dem Standard-USB 2.0-Protokoll vollständig aufzuladen. Wenn die Batterien laden, dann ist die LED Anzeige Rot. Wenn der Player vollständig aufgeladen ist, wird die LED Grün werden.

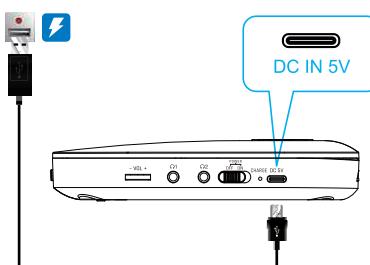

► DE-06 ◀

ABSPIELEN


Dauerschleife einstellen

Jedes Mal, wenn Sie die MODE-Taste drücken, wird die Reihenfolge der Titel wie folgt festgelegt:
1 Wiederholen (REP1), Alle Wiederholen (ALL), Zufallswiedergabe (SHUF), vorherige Wiedergabe
(INTRO) (nur 10 Sekunden pro Titel werden in diesem Modus abgespielt).

Abspielen programmieren



Klicken Sie zuerst die & stopps(■) Drücken Sie die PROG/FM-Taste, um den Programmiermodus aufzurufen, wenn die Wiedergabe stoppt. Drücken Sie die PREVIOUS- oder NEXT-Taste, um den Titel auszuwählen, den Sie programmieren möchten. Drücken Sie erneut PROG, um die Programmierung zu bestätigen. In diesem Modus können bis zu 30 Titel programmiert werden. Drücken Sie danach die PLAY-Taste, um den Programmiermodus zu aktivieren. Drücken Sie die STOP-Taste direkt, um den Stopmodus aufzurufen, um den Vorgang abzubrechen oder neu zu programmieren.




A-B Wiederholen

Wenn Sie nur einen bestimmten Teil eines Titels wiederholen möchten, wenn der Player diesen Teil abspielt, drücken Sie bitte einmal die AB-Taste, das Display zeigt "A ON" an AB-Taste noch einmal, das Display zeigt "Ab ON". Danach wiederholt der Spieler nur diesen bestimmten Teil. HINWEIS: Wenn Sie die Wiederholung dieses Teils beenden möchten, drücken Sie einfach erneut die A-B-Taste, das Display zeigt "Ab OFF" an, es wird in einer Reihenfolge abgespielt.

Sound einstellen


Lautstärke anpassen

Der Lautstärkeregler befindet sich an der Seite des Players. Drehen Sie ihn nach links oder rechts, um die Lautstärke zu verringern oder zu erhöhen. Bitte hören Sie Musik in einer angemessenen Lautstärke, um Ihre Ohren zu schützen.

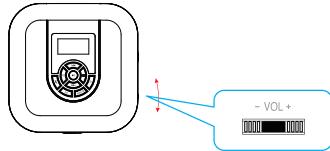

Soundeffekte einstellen

Drücken Sie die EQ -Taste, um die verschiedenen Soundeffekte zu ändern. Es gibt insgesamt 5 Soundeffekte: BBS, POP, JAZZ, ROCK und CLASSIC.



► DE-07 ◀