


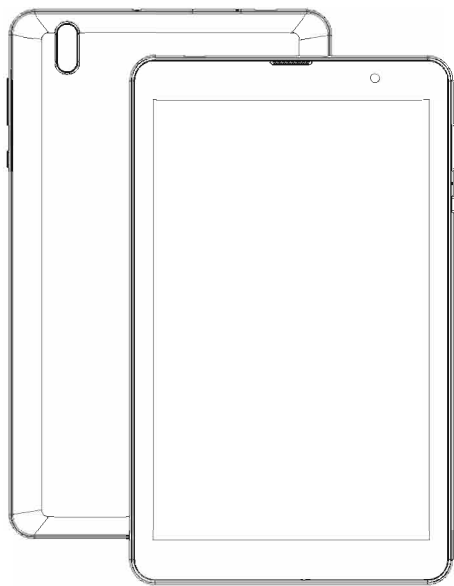


USER GUIDE

Please read this instruction thoroughly before using this product and keep it for future reference.

ENGLISH

* Google, Android, Google Play and other marks are trademarks of Google LLC.

FUNCTION OVERVIEW

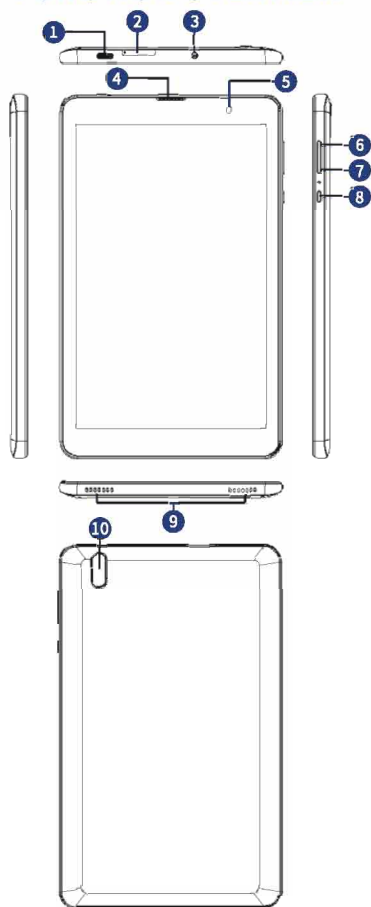

- 1. TYPE-C
- 2. SIM Card & Micro SD
- 3. Headphone Jack
- 4. Receiver
- 5. Front Camera
- 6. Volume+
- 7. Volume-
- 8. Power ON/OFF
- 9. Speakers
- 10. Rear Camera

GETTING STARTED

POWER ON/OFF

- * Press and hold the power button for 3s to turn on your tablet. Select your language and set up your tablet following the start guide.
- * Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Power off** to turn off the tablet.
- * Press and hold the power button for 7-8s to do a forced reboot when it's frozen.

BATTERY

- * A rechargeable Li-ion battery is installed in the tablet.
- * DO NOT dispose of tablet in a fire.

SLEEP MODE

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is **ON**; press again to wake it up.

Tip:

Go to **Settings > Display > Advanced > Sleep** to set the time of entering the **Sleep Mode**.

SCREENSHOT

- * Press and hold the **Volume-** button and the **Power On/Off** button together to capture a picture.
- * Press and hold the power button for 2s, then release it. It will show **Power off**, **Restart** and **Screenshot** on the screen. Tap **Screenshot** to capture a screenshot.

HOME SCREEN

ICONS ON THE BOTTOM MENU




1.Back

2.Home Screen

3.Recent Activities

Home Settings, Widgets and Wallpapers

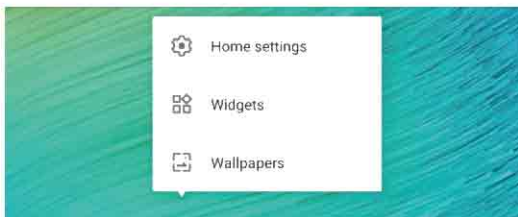


Tap and hold the empty section of a Home screen, **Home settings**, **Widgets** and **Wallpapers** will be displayed.

- * Tap **Home Settings** to enable/disable **Add icon to Home screen**. This is applicable to the new Apps installed from **Play Store**. It also provides the shortcut to enable/disable the notification dots. In addition, you can set the option for **Pull down action** on the screen and change **Home screen style**, and more.
- * Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **X Remove**.
- * Tap **Wallpapers** to change the current wallpaper of the tablet from the default wallpapers, live Wallpapers or your photos.

SETTING BASICS

QUICK SETTINGS

Swipe down from the top of the screen to access **Quick Settings**.



-  : **Wifi**. Tap to connect/disconnect to a wireless network
-  : **Bluetooth**. Enable/disable the Bluetooth of the tablet
-  : **Do not disturb**. Block sound after enabling this function
-  : Turn on/off the **Auto-rotate** of the screen
-  : Tap to choose the power setting you prefer to save the battery time
-  : **Airplane mode**. Turn on/off all the network connectivity

 : **Eye comfort.** Enable/disable the eye protection mode


 : **Read mode.** Enable/disable read mode

 : **Location.** Enable/disable location access

Tap the  icon to change the options in the **Quick Settings**. Long press each icon to enter the interface of its detailed settings.

MORE SETTINGS

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the **Settings App** on the Home screen to enter.

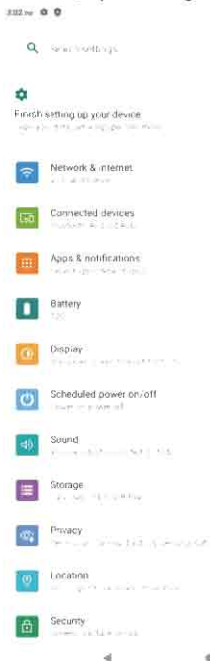

Network & internet

- * Connect to any working Wifi
- * Enable/disable the **Airplane Mode**
- * Monitor the data usage and more

Connected devices

- * Turn on/off Bluetooth
- * Pair with Bluetooth devices and check the paired devices
- * Check the received files from other devices via bluetooth connection
- * Add and check printers and more

Apps & notifications

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Set the App permissions
- * Uninstall the third-party Apps
- * Adjust App notification settings
- * Clear the cache of the Apps
- * Check the screen time and more

Battery

- * Display or hide the remaining power as a percentage
- * Enable/disable **Battery Manager**
- * Set **Power saving optimization**
- * Manage the battery optimization for apps and more

Display

- * Adjust the screen brightness
- * Adjust the font size and display size
- * Set a screen saver
- * Change the wallpaper

- * Adjust the time of entering the **Sleep Mode**
- * Adjust **Color and Contrast** of display
- * Set to check the notifications and other info. when you lift the tablet with screen locked
and more

Scheduled power on/off

- * Set the time and days of the week for the tablet to automatically turn on/off

Navigation bar

- * Show or hide the navigation bar
- * Select a combination of navigation buttons from the four options provided

Audio profiles

- * Select audio profiles from **General** and **Silent**
- * Set the volumes for notification, media and alarm

Storage

- * View and manage your storage space

Security & location

- * Set screen lock pattern, e.g. **Password**, **PIN**, **Swipe** etc.
- * Enable/disable all the notifications while the screen is locked
- * Enable **Face Lock** to unlock screen by your face
- * Turn on/off the location services for specific Apps
- * Set to show/hide the password when input a password
and more

Accounts

- * Add and manage the user accounts on your tablet

Accessibility

- * For vision and hearing impaired users, manage settings for **Screen readers**, **Display**, **Interaction Controls**
and more

Digital Wellbeing & parental controls

- * Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- * Set a schedule for **Wind Down** and turn on the setting you prefer
- * Manage the related notification settings to reduce interruptions
- * Set up **Parental controls** to help your kids balance their screen time and more

Google

- * Set the preferences for Google™ related services

System


- * Set Language
Tap **Languages & input** > **Languages** > **+Add a language** to add your language. After adding, hold and slide the  to the top to change the language.
- * Restore factory setting
Tap **Advanced** > **Reset options** > **Erase all data (factory reset)** to restore the factory setting
- * Set the date and time
- * Turn on/off the **Back up to Google Drive**
- * Check and update the tablet's system
- * Check the detailed information about the tablet
- * Enable/Disable **Gestures** to quickly launch camera or lift tablet to check notifications and more

NETWORK CONNECTION

Go to network settings from the **Settings App** or by long pressing the **Wifi/Bluetooth icon** in **Quick Settings**.

WIFI CONNECTION

1. Tap **Network & internet** and turn on the **Wifi**. All the **Wifi** connections available will be listed.
2. Select your **Wifi** and input the correct password.

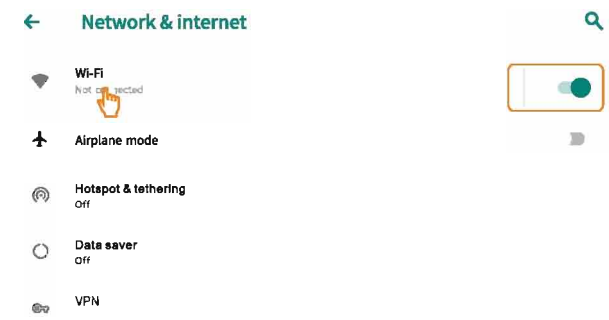

BLUETOOTH PAIRING

Please turn on the Bluetooth on your tablet and your bluetooth device.

1. Tap **Connected devices**.
2. Tap **+Pair new device** to enter the scanning interface. Devices available will be displayed after a few seconds.
3. Tap the desired device to get a pairing code and click **PAIR** on both devices. The automatic connection is applied to some devices.

APP MANAGEMENT

APP DOWNLOAD AND INSTALLATION

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

APP MANAGEMENT

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to **X Remove** to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the  **Uninstall** to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps & notifications**.
2. Select an App > **Storage > CLEAR CACHE** to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wifi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from **Play Store**.

MULTIMEDIA



CONNECTING TO A COMPUTER

1. Connect your tablet to the computer with a USB cable.
2. **Media device(MTP)** is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

Tips:

Go to **Quick Settings**, tap **Android System** · **USB file transfer turned on** > Tap for **more options** > **USB computer connection** to select the option preferred.


- * Select **Charge Only** to charge your tablet.
- * Select **Camera(PTP)** to transfer photos between the devices.
- * Select **MIDI** to play MIDI instruments on the tablet.

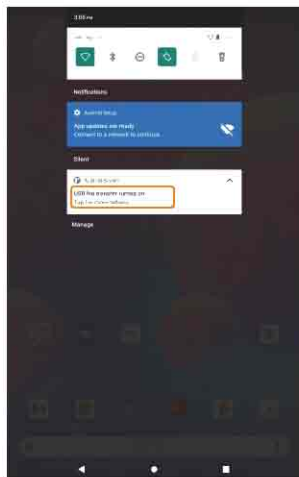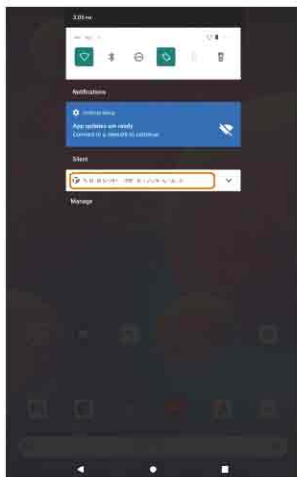



CONNECTING TO AN EXTERNAL DEVICE

1. Install a microSD card into the microSD card slot and go to **Quick Settings**.
2. Tap **SET UP**.
3. Set the microSD card as a portable storage by selecting **Portable storage**. Enter microSD Card storage to move files between the card and tablet.

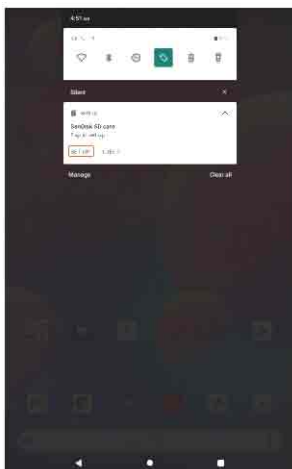

Display	8"
Chipset	SC9863A
GPU	IMG GE8322
CPU	Octa-core Cortex A53, 1.6GHz
RAM	2GB
Storage	32GB
Display Resolution	800X1280/IPS
Front-facing Camera	0.3MP
Rear Camera	2.0MP
Battery	4200mAh
Operating System	Android™ 11 Go
Connection	Wi-Fi + BT
Network	4G LTE + 802.11 b/g/n + BT5.0
Power Supply	DC 5V/2A
Touch	Multi-touch
Ports	Type-c Port/Micro SD Card Slot/Sim Card

TROUBLESHOOTING

Q1. The tablet doesn't power on.

- * Reboot your tablet after charging for more than 30 minutes.
- * Press the power button to check if the tablet is in the **Sleep Mode**.
- * Press and hold the power button for 7-8s to reboot it.
- * Press the **Reset** button with a pin to reboot the tablet.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port.
- * Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the App with the error message, then download and install again.
- * Press the **Reset** button with a pin to reboot the tablet.

Q4. The tablet cannot be detected by the computer.

- * Make sure the tablet is powered on.
- * Try another USB cable.
- * Try another USB port on the computer.
- * Instead of **Charge only**, choose **Media device(MTP)** or **Camera(PTP)** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the Wifi.

- * Make sure the **Wifi** in your tablet is **ON**.
- * Make sure you input the correct password when connecting the Wifi.
- * Restart the router.
- * Make sure there is no filter setting or device connection limitation in the setting of the router.
- * Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough.

- * Delete the Apps you don't use.
- * Clear the cache of the Apps regularly.
- * Install a microSD card to expand the storage.

Q7. The tablet comes with scratches on the screen.

- * Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

- * Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. How to use your voice to search a fact?

- * Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS




The symbol indicates DC voltage



RECYCLING

ESPAÑOL

DESCRIPCIÓN GENERAL DE LAS FUNCIONES

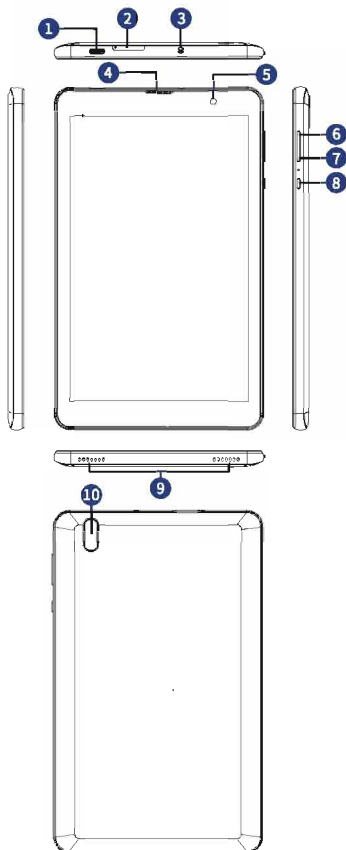

1. Puerto tipo C
2. Ranura para tarjeta de memoria
3. Entrada de Auricular
4. Reinicio
5. Cámara frontal
6. Volumen +
7. Volumen -
8. Encendido/Apagado
9. Altavoces
10. Cámara trasera

GUÍA DE INTRODUCCIÓN

Encendido / Apagado

- * Mantenga presionado el botón de encendido durante 3 segundos para encender su tableta. Elija su idioma y siga la guía de introducción para configurar su tableta.
- * Mantenga presionado el botón de encendido durante 2 segundos, luego suéltelo. La pantalla mostrará **Apagado, Reinicio y Capturas de Pantalla**. Haga clic en **Apagado** para apagar la tableta.
- * Mantenga presionado el botón de encendido durante 7-8 segundos para forzar un reinicio cuando la tableta se congele.

Batería

- * La tableta tiene una batería recargable de iones de litio incorporada.
- * NO arroje la tableta al fuego.

Modo de Sueño

Cuando la tableta está encendida, solo presione el botón de encendido una vez para cambiar la tableta al "modo de sueño"; presione el botón nuevamente para reactivar la tableta.

Consejo:


Vaya a **Configuraciones > Visualización > Avanzado > Sueño** con el fin de establecer el tiempo de entrar en el **Modo de Sueño**.

Captura de Pantalla

- * Mantenga presionado el botón **Volumen-** y el botón de **Encendido / Apagado** al mismo tiempo para capturar una imagen.
- * Mantenga presionado el botón de encendido durante 2 segundos, luego suéltelo. La pantalla mostrará **Apagado, Reinicio y Capturas de Pantalla**. Haga clic en **Captura de Pantalla** para capturar una imagen.

PANTALLA DE INICIO

Iconos en el Menú Inferior

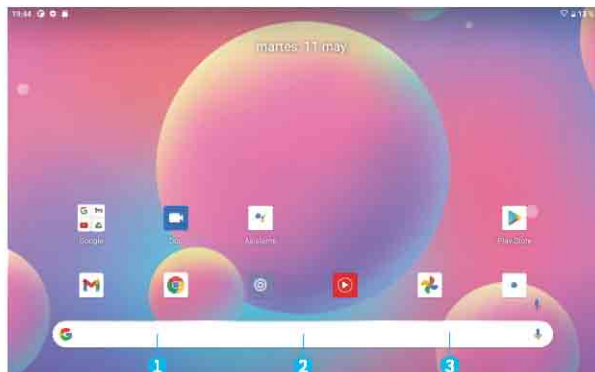


1. Volver

2. Pantalla de inicio

3. Actividades recientes

Configuración de la página de inicio, widgets y fondos de pantalla

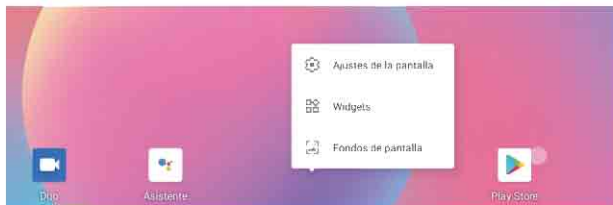


Mantenga presionada la parte en blanco de la pantalla de inicio, se mostrarán la configuración de la página de inicio, los widgets y el fondo de pantalla.

- * Haga clic en "Configuración de la página de inicio" para habilitar / deshabilitar Agregar iconos a la pantalla de inicio, lo cual se aplica a las nuevas Apps instaladas en Google Play. Esta función también proporciona acceso directo para habilitar / deshabilitar puntos de notificación. Además, usted puede configurar la opción "acción desplegable" en la pantalla y cambiar el estilo de la pantalla de inicio, etc.
- * Haga clic en Widgets, mantenga presionada cualquier App (por ejemplo, Reloj), y luego deslícela para agregarla a la pantalla de inicio. Deslícela a X Eliminar para quitarla.
- * Haga clic en Fondos de Pantalla para cambiar el fondo de pantalla actual de la tableta a través de los fondos de pantalla predeterminados, fondos de pantalla dinámicos o sus fotos.

CONFIGURACIONES BÁSICAS

Configuraciones Rápidas

Deslice el dedo hacia abajo desde la parte superior de la pantalla para acceder a Configuraciones Rápidas.



-  **Wifi:** Haga clic en el botón para conectarse a / desconectarse de una red inalámbrica.
-  **Bluetooth:** Haga clic en el botón para activar / desactivar el Bluetooth de la tableta.
-  **No molestar:** Se bloqueará el sonido después de habilitar esta función.
-  **Activar / desactivar la rotación automática de la pantalla**
-  **Haga clic en el botón para seleccionar la configuración de energía que desea usted para ahorrar el tiempo de la batería.**
-  **Modo vuelo.** Haga clic en el botón para activar / desactivar todas las conexiones de red.

- 👁 **Protección ocular.** Haga clic en el botón para activar / desactivar el modo de protección ocular.
- 📖 **Modo de lectura.** Haga clic en el botón para activar / desactivar el modo de lectura.
- 📍 **Localización.** Haga clic en el botón para habilitar / deshabilitar el acceso a la ubicación.

Haga clic en el icono  para cambiar las opciones en las **Configuraciones Rápidas**. Mantenga presionado cada icono para ingresar a la interfaz de configuración detallada.

Más Configuraciones

Deslice el dedo hacia abajo desde la parte superior de la pantalla y luego haga clic en el icono  para ingresar a la interfaz de configuración detallada. O haga clic en la App "Configuraciones" en la pantalla de inicio para ingresar a tal interfaz.



Red & Internet

- * Conectar a cualquier Wifi que esté funcionando.
- * Activar / desactivar el modo Vuelo.
- * Monitorear el uso de datos, etc.

Dispositivos conectados

- * Activar / desactivar Bluetooth
- * Emparejar con dispositivos Bluetooth y verificar los dispositivos emparejados.
- * Verificar los archivos recibidos de otros dispositivos a través de la conexión bluetooth
- * Agregar y verificar impresoras, etc.

Apps & notificaciones

- * Verificar las Apps abiertas recientemente.
- * Verificar todas las Apps en la tableta
- * Establecer los permisos de la App.
- * Desinstalar Apps de terceros
- * Ajustar la configuración de notificaciones de la App
- * Borrar caché de las Apps
- * Verificar el tiempo de pantalla, etc.

Batería

- * Mostrar u ocultar el porcentaje de energía restante.
- * Activar / desactivar el administrador de batería
- * Establecer optimización de ahorro de energía
- * Administrar optimización de batería de Apps, etc.

Visualización

- * Ajustar el brillo de la pantalla
- * Ajustar el tamaño de la fuente y de la pantalla
- * Establecer un protector de pantalla
- * Cambiar el fondo de pantalla

- * Ajustar el tiempo de entrar en el modo de sueño
- * Ajustar el color y el contraste de visualización
- * Configurar para verificar las notificaciones y otra información cuando levanta la tableta cuya pantalla está bloqueada, etc.

Encendido / apagado programado

- * Configurar la hora y los días de la semana para que la tableta se encienda / apague automáticamente

Barra de navegación

- * Mostrar u ocultar la barra de navegación
- * Seleccionar una combinación de botones de navegación desde las cuatro opciones proporcionadas.

Perfiles de audio

- * Seleccionar perfiles de audio desde General y Silencio
- * Establecer volumen de notificación, medios y alarma

Almacenamiento

- * Ver y administrar su espacio de almacenamiento

Seguridad & ubicación

- * Establecer el modo de bloqueo de pantalla, como Contraseña, PIN, deslizar, etc.
- * Activar / desactivar todas las notificaciones mientras la pantalla está bloqueada.
- * Habilitar el bloqueo facial para desbloquear la pantalla con su cara.
- * Activar / desactivar los servicios de ubicación para Apps específicas
- * Configurar para mostrar / ocultar la contraseña al ingresar una contraseña, etc.

Cuentas

- * Agregar y administrar las cuentas de usuario en su tableta.

Accesibilidad

- * Administrar la configuración de lectores de pantalla, visualización, controles de interacción, etc para los usuarios con problemas de visión y audición.

Bienestar digital & controles parentales

- * Verificar el uso de su App según el tiempo de pantalla, las notificaciones recibidas o las horas abiertas desde el panel.
- * Establecer el horario para relajarse y activar la configuración que prefiera usted.
- * Administrar la configuración de notificaciones relacionadas para reducir las interrupciones.
- * Configurar controles parentales para ayudar a sus hijos a equilibrar el tiempo que pasan frente a la pantalla, etc.

Google

- * Establecer las preferencias para los servicios relacionados con Google™.

Sistema

- * Establecer idioma
Haga clic en Idiomas & Entrada > Idiomas > +Agregar idioma para agregar su idioma. Después, mantenga presionado y deslice  hacia la parte superior para cambiar el idioma.
- * Restaurar configuración de fábrica
Haga clic en Avanzado > opciones Reiniciar > Borrar todos los datos (restablecimiento de fábrica) para restaurar la configuración de fábrica.
- * Establecer la fecha y la hora
- * Activar / desactivar copia de seguridad en Google Drive
- * Verificar y actualizar el sistema de la tableta
- * Consultar la información detallada sobre la tableta.
- * Habilitar / deshabilitar gestos para iniciar rápidamente la cámara o levantar la tableta para verificar notificaciones, etc.

CONEXIÓN DE RED

Abra la App Configuraciones o mantenga presionado el icono Wifi / Bluetooth en Configuraciones Rápidas para acceder a la configuración de red.

Conexión WIFI

1. Pulse Red & Internet y encienda el Wifi. Se enumerarán todas las conexiones Wifi disponibles.
2. Seleccione su Wifi e introduzca la contraseña correcta.



Emparejamiento de Bluetooth

Active el **Bluetooth** en su tableta y su dispositivo bluetooth.

1. Haga clic en **Dispositivos conectados**.
2. Haga clic en **+ Emparejar nuevo dispositivo** para ingresar a la interfaz de escaneo. Los dispositivos disponibles se mostrarán después de unos segundos.
3. Haga clic en el dispositivo deseado para obtener un código de emparejamiento y haga clic en **EMPAREJAR** en ambos dispositivos. La conexión automática está disponible para algunos dispositivos.

GESTIÓN DE APP

Descarga e Instalación de la App

1. Haga clic y abra **Play Store** en la pantalla de inicio.
2. Inicie sesión en su cuenta de Google, busque y descargue la App que necesita usted.

Gestión de App

Mover la App

Mantenga presionada la App, luego deslícela a la pantalla deseada.

Eliminar la App de la pantalla de inicio

Mantenga presionada la App, luego deslícela hasta **X Eliminar** para eliminarla de la pantalla de inicio.

Desinstalar la App

Mantenga presionada la App, luego deslícela a  **Desinstalar** para desinstalar la App.

Borrar caché de la App

1. Vaya a **Configuraciones > Apps & notificaciones**.
2. Seleccione una App > **Almacenamiento > BORRAR CACHÉ** para borrar caché.

NAVEGACION POR INTERNET

Asegúrese de que la tableta esté conectada a una red Wifi en funcionamiento antes de navegar por Internet.

Puede utilizar el navegador Chrome preinstalado u otro navegador descargado en Play Store.



Conectarse a una Computadora

1. Conecte su tableta a la computadora con un cable USB.
2. Dispositivo multimedia (MTP) es la configuración predeterminada. Vaya a su computadora y busque su tableta para transferir archivos entre la tableta y computadora.

Consejos:

Vaya a Configuraciones Rápidas, haga clic en Sistema Android activar transferencia de archivos USB > haga clic para ver más opciones > Conexión de computadora USB para seleccionar la opción preferida.


- * Seleccione Solo Cargar para cargar su tableta.
- * Seleccione Cámara (PTP) para transferir fotos entre los dispositivos.
- * Seleccione MIDI para reproducir instrumentos MIDI en la tableta.

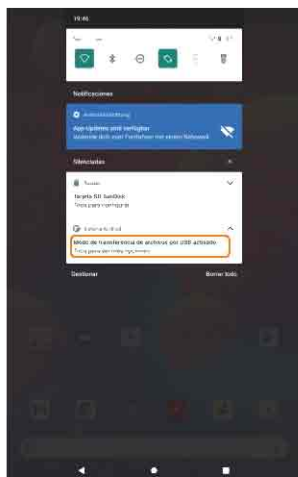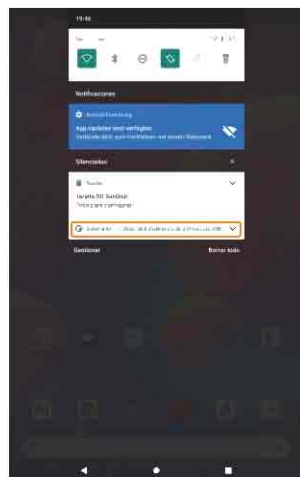



Conectarse a un Dispositivo Externo

1. Inserte una tarjeta microSD en la ranura de tarjeta microSD y vaya a Configuraciones Rápidas.
2. Haga clic en Configurar.
3. Configure la tarjeta microSD como almacenamiento portátil seleccionando **Almacenamiento portátil**. Ingrese al almacenamiento de la tarjeta microSD para transferir archivos entre la tarjeta y la tableta.

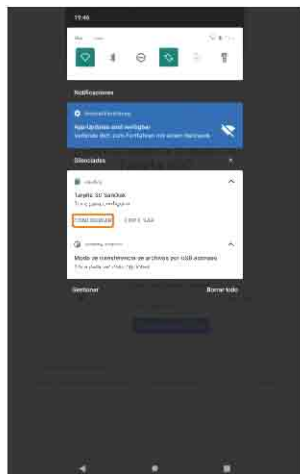

ESPECIFICACIÓN



10.1°

SC9863A

IMG GE8322

Cortex-A55,1.6GHz

3GB

32GB/64GB

1280X800/IPS

5.0MP

8.0MP

6000mAh

Android™ OS

12.5

802.11b/g/n BT5.0

DC 5V/3A

Multitáctil

Puerto Tipo C /Ranura para tarjeta microSD

SOLUCIÓN DE PROBLEMAS

P1. La tableta no se enciende.

- * Reinicie su tableta después de cargarla durante más de 30 minutos.
- * Presione el botón de encendido para verificar si la tableta está en modo de sueño.
- * Mantenga presionado el botón de encendido durante 7-8 segundos para reiniciar la tableta.
- * Presione el botón Reiniciar con un pin para reiniciar la tableta.

P2. La tableta no se carga.

- * Asegúrese de que el cable USB esté correctamente conectado al puerto de carga.
- * Use otro cable y adaptador USB compatibles.

P3. Aparece un mensaje de error durante la operación.

- * Desinstale la App con el mensaje de error, luego descárguela e instálela nuevamente.
- * Presione el botón Reiniciar con un pin para reiniciar la tableta.

P4. La tableta no puede ser detectada por la computadora.

- * Asegúrese de que la tableta esté encendida.
- * Use otro cable USB.
- * Pruebe con otro puerto USB en la computadora.
- * En lugar de Solo cargar, elija Dispositivo multimedia (MTP) o Cámara (PTP) al conectar la tableta a la computadora.

P5. La tableta no se puede conectar a Wifi.

- * Asegúrese de que el Wifi en su tableta esté encendido.
- * Asegúrese de ingresar la contraseña correcta al conectar el Wifi.
- * Reinicie el enrutador.
- * Asegúrese de que no haya una configuración de filtro o una limitación de conexión de dispositivo en la configuración del enrutador.
- * Olvídense del Wifi actual, reinicie el enrutador y vuelva a conectar el Wifi.

P6. El espacio de almacenamiento de la tableta no es suficiente.

- * Elimine las Apps que no usa.
- * Borre caché de las Apps con regularidad.
- * Instale una tarjeta microSD para ampliar el almacenamiento.

P7. La tableta viene con arañazos en la pantalla.

- * Compruebe si los arañazos están en la película. Si es así, retire la película.

P8. La pantalla no responde.

- * Compruebe si la pantalla tiene polvo o grasa. En caso afirmativo, limpie suavemente la pantalla con un paño.

P9. Cómo usar su voz para buscar un hecho?

- * Haga clic en el icono de micrófono en la barra de búsqueda de Google, dígame a la tableta lo que desea saber y le mostrará los resultados de búsqueda.

Precaución

Si usa la batería de tipo incorrecto, existe peligro de explosión. Siga las instrucciones para desechar las baterías usadas.

 El símbolo indica voltaje CC.

 Reciclaje

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular

Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United

States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged

over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional

protection for the public and to account for any variations in measurements.

SAR compliance for body-worn operation is based on a separation distance of 0 mm between the unit and the human body. Carry this device at least 0 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 0 mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.