

# momcozy

## Sound Machine

WN06

### User Manual



EN

DE

FR

IT

ES

Before using the Sound Machine, please read this user manual carefully and keep it in a safe place for future reference


## CONTENTS

|          |    |
|----------|----|
| EN ..... | 02 |
| DE ..... | 11 |
| FR ..... | 20 |
| IT ..... | 29 |
| ES ..... | 38 |

## WHAT'S IN THE BOX



1pcs



1pcs





1pcs


→ English

## CHARGE YOUR SOUND MACHINE

The charging indicator will pulsing red when the battery is low. It becomes pulsing green while charging, and turns solid green once it is fully charged.

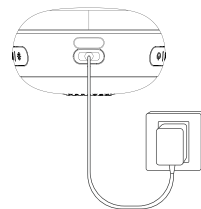

## BUTTON DESCRIPTION

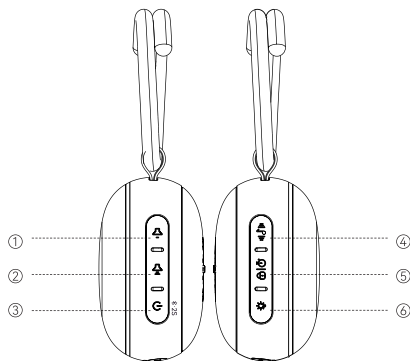


- ① Volume -
- ② Volume +
- ③ Power Button

- ④ Audio Control
- ⑤ Auto-off Timer/Child Lock
- ⑥ Light Control

|                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power Button</b>              | <ol style="list-style-type: none"> <li>1. Short press to turn on/off white noise.</li> <li>2. When the power is on, long press 2s to activate Bluetooth Speaker mode; long press 2s again to turn off the Bluetooth Speaker mode.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Audio Control</b>             | <ol style="list-style-type: none"> <li>1. When the power is on, press to start the music, press again to skip the music;</li> <li>2. Long press to turn off the music.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Volume +</b>                  | <ol style="list-style-type: none"> <li>1. Short press to increase the volume.</li> <li>2. Long press to fast forward.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Volume -</b>                  | <ol style="list-style-type: none"> <li>1. Short press to lower the volume.</li> <li>2. Long press to rewind.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Auto-off Timer/Child Lock</b> | <ol style="list-style-type: none"> <li>1. Press the button to start the timing cycle of 1h/3h/6h/untimed, and the corresponding timer light will be solid.</li> <li>2. In the timing state, press to switch the time duration with a new time interval being reclocked, and press to switch to "untimed" to cancel the timer.</li> <li>3. Long press for 3 seconds to activate/unlock the child lock function, after which the three timer lights will flash at the same time.</li> <li>4. When the child lock is enabled in the timing state, apart from the corresponding timing status light, the other two lights will flash.</li> </ol> |
| <b>Light Control</b>             | <ol style="list-style-type: none"> <li>1. Short press to turn the light on/off.</li> <li>2. Long press the button to adjust the brightness gradually.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## Bluetooth Mode

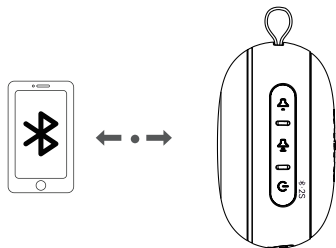

- Long press  2s to activate Bluetooth Speaker mode, the power indicator will be pulsing yellow.
- To pair, go to Settings > Bluetooth on your device, and select WN06.

## ROOM PLACEMENT

- WN06 works best when it is placed away from your bed so it can fill the room with sound.
- If your bedroom is subject to outside noise, place WN06 between your bed and the noise to reduce the magnitude of the disturbance.

## SOUND VOLUME ADVISORY

To avoid potential hearing damage, care should be taken to limit volume, especially for young children.

**We recommend** 1) maximizing the distance between the unit and yourself, 2) keeping the volume on the lowest setting required, and 3) limiting the duration of use as possible.

Never place WN06 directly next to a person's ears, including directly next to an infant's ears when using WN06 outside of the bedroom, in a car seat, or stroller.

## BEFORE USE

- Please do not disassemble or repair the product by yourself to avoid damage to the product;
- Please keep the product away from water to prevent it from entering the product and causing damage;
- Please keep the product away from heat sources and fire;
- Please do not wash the product with corrosive detergent;
- Please wipe the surface with a damp towel or alcohol wipe.

## AVAILABLE SOUNDS

|                       |                                                                                                    |
|-----------------------|----------------------------------------------------------------------------------------------------|
| <b>Nature Sounds</b>  | Rainforest, Crickets, Wind, Rainfall, Heavy Rainfall, Running Stream, Ocean Waves, Campfire, Train |
| <b>Fans Sounds</b>    | Fan Sound 1, Fan Sound 2, Fan Sound 3                                                              |
| <b>White Noise</b>    | White Noise 1, White Noise 2, White Noise 3                                                        |
| <b>Baby Favourite</b> | Brahms Lullaby, Meditation Music, Twinkle Twinkle Little Star, Baby Heartbeats, Hiss               |

## APPLIANCE SPECIFICATIONS

|                  |                     |
|------------------|---------------------|
| Product Name     | White Noise Machine |
| Product Model    | WN06                |
| Size             | Φ86mm x50mm         |
| Power Input      | AC (100V-240V)      |
| Output Power     | 5V = 1A             |
| Battery Capacity | 1200mAh             |

## DECLARATION OF CONFORMITY

EU Compliance Statement: Hong Kong Lute Technology Co., Limited.  
Hereby declares that this device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive (RED) 2014/53/EU.



### IMPORTANT SAFETY INFORMATION

- This appliance can be used persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved;
- Children shall not play with the appliance;
- Cleaning and user maintenance shall not be made by children without supervision;

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## DISPOSAL



At the end of the product life cycle, do not throw this product into the normal household garbage, but bring it to a collection point for the recycling of electronic equipment and battery. Waste

Electrical and Electronic Equipment may have potentially harmful effects on the environment. Improper disposal may lead to the accumulation of harmful toxins in the air, water, and soil, which is harmful to human health. you have obligation to dispose of the device correctly. Consult your municipal authority for information about disposal.

## FCC COMPLIANCE STATEMENT

Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### IC CAUTION:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes

aux RSS exemptés de licence d'innovation, sciences et développement économique

Canada. Le fonctionnement est soumis aux deux conditions suivantes:

- (1) ce dispositif ne peut pas causer d'interférence.
- (2) ce dispositif doit accepter toute interférence, y compris l'interférence qui peut causer


un fonctionnement indésirable du dispositif.

L'appareil a été évalué pour répondre aux exigences générales d'exposition R.F. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.

## WAS IN DER BOX IST



1pcs



1pcs




1pcs


→ **Deutsch**

## AUFLADEN IHRER SOUNDMASCHINE

Die Ladeanzeige leuchtet rot, wenn der Akku fast leer ist. Während des Ladevorgangs leuchtet sie pulsierend grün auf und leuchtet dauerhaft grün, sobald der Akku vollständig aufgeladen ist.

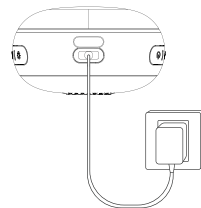

## TASTENBESCHREIBUNG

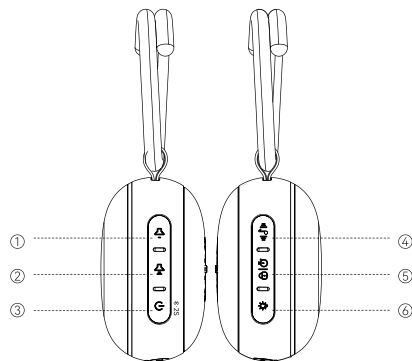


- ① Lautstärke -  
② Lautstärke +  
③ Ein/Aus-Taste

- ④ Audio-Steuerung  
⑤ Auto-off Timer/Kindersicherung  
⑥ Lichtsteuerung

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Ein/Aus-Taste</b>                  | <ol style="list-style-type: none"> <li>1. Durch kurzes Drücken schalten Sie das weiße Rauschen ein/aus.</li> <li>2. Bei eingeschaltetem Gerät halten Sie die Taste 2 Sekunden lang gedrückt, um den Bluetooth-Lautsprechermodus zu aktivieren. Halten Sie die Taste erneut 2 Sekunden lang gedrückt, um den Bluetooth-Lautsprechermodus auszuschalten.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Audio-Steuerung</b>                | <ol style="list-style-type: none"> <li>1. Wenn das Gerät eingeschaltet ist, drücken Sie, um die Musik zu starten, zum Überspringen der Musik drücken Sie erneut;</li> <li>2. Langes Drücken, um die Musik auszuschalten.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Lautstärke +</b>                   | <ol style="list-style-type: none"> <li>1. Kurz drücken, um die Lautstärke zu erhöhen.</li> <li>2. Lang drücken, um vorzuspulen.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Lautstärke -</b>                   | <ol style="list-style-type: none"> <li>1. Kurz drücken, um die Lautstärke zu verringern.</li> <li>2. Lang Drücken, um zurückzuspulen.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Auto-off Timer/Kindersicherung</b> | <ol style="list-style-type: none"> <li>1. Tippen Sie auf die Schaltfläche, um den Zeitzyklus von 1h/3h/6h/ohne Zeitangabe zu starten, und das entsprechende Timer-Lämpchen wird dabei durchgehend leuchten.</li> <li>2. Zum Wechseln der Zeitdauer mit einem neuen getakteten Zeitintervall tippen Sie auf den Timer, und tippen Sie auf "nicht getaktet", um den Timer zu deaktivieren.</li> <li>3. Drücken Sie 3 Sekunden lang auf die Taste, um die Kindersicherungsfunktion zu aktivieren/entsperren. Danach blinken die drei Timer-Lämpchen gleichzeitig.</li> <li>4. Wenn die Kindersicherung im Timing-Status aktiviert ist, blinken neben dem entsprechenden Timing-Statuslämpchen auch die beiden anderen Lämpchen.</li> </ol> |
| <b>Lichtsteuerung</b>                 | <ol style="list-style-type: none"> <li>1. Drücken Sie, um das Licht ein-/auszuschalten.</li> <li>2. Drücken Sie lange auf die Taste, um die Helligkeit stufenweise einzustellen.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## Bluetooth-Modus

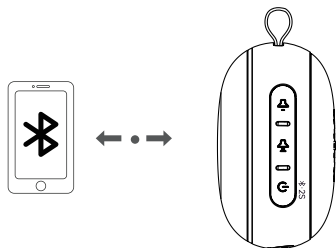

- Drücken Sie 2 Sekunden lang auf , um den Bluetooth-Lautsprechermodus zu aktivieren.
- Die Betriebsanzeige blinkt gelb. Zum Koppeln gehen Sie auf Ihrem Gerät zu „Einstellungen“ > „Bluetooth“ und wählen Sie „WN06“ aus.

## PLATZIERUNG IM RAUM

- WN06 arbeitet am besten, wenn es nicht in der Nähe Ihres Bettes aufgestellt wird, damit es den Raum mit Klang füllen kann.
- Wenn Ihr Schlafzimmer Außengeräuschen ausgesetzt ist, platzieren Sie WN06 zwischen Ihrem Bett und der Lärmquelle, um die Stärke der Störung zu reduzieren.

## EMPFEHLUNG ZUR LAUTSTÄRKE

**Um mögliche Hörschäden vorzubeugen, sollte die Lautstärke begrenzt werden, insbesondere bei kleinen Kindern.**

**Wir empfehlen** 1) den Abstand zwischen dem Gerät und Ihnen zu maximieren, 2) die Lautstärke auf der niedrigsten erforderlichen Einstellung zu halten und 3) die Nutzungsdauer so kurz wie möglich zu halten.

Platzieren Sie WN06 niemals direkt neben den Ohren einer Person, und auch nicht direkt neben den Ohren eines Säuglings, wenn Sie WN06 außerhalb des Schlafzimmers, in einem Autositz oder Kinderwagen verwenden.

## VOR DER NUTZUNG

- Bitte bauen Sie das Produkt nicht selbst auseinander oder reparieren Sie es nicht selbst, um Schäden am Produkt zu vermeiden;
- Bitte halten Sie das Produkt von Wasser fern, um zu verhindern, dass es in das Produkt eindringt und Schäden verursacht;
- Bitte halten Sie das Produkt von Wärmequellen und Feuer fern;
- Bitte waschen Sie das Produkt nicht mit ätzenden Reinigungsmitteln;
- Bitte wischen Sie die Oberfläche mit einem feuchten Handtuch oder einem alkoholhaltigen Wischtuch ab.

## VERFÜGBARE GERÄUSCHE

|                               |                                                                                                  |
|-------------------------------|--------------------------------------------------------------------------------------------------|
| <b>Naturgeräusche</b>         | Regenwald, Grillen, Wind, Regen, starker Regen, fließendes Wasser, Meereswellen, Lagerfeuer, Zug |
| <b>Ventilatoren-Geräusche</b> | Ventilatoren-Geräusch 1, Ventilatoren-Geräusch 2, Ventilatoren-Geräusch 3                        |
| <b>Weißes Rauschen</b>        | Weißes Rauschen 1, Weißes Rauschen 2, Weißes Rauschen 3                                          |
| <b>Baby-Favoriten</b>         | Brahms-Wiegenlied, Meditationsmusik, Twinkle Twinkle Little Star, Baby-Herzschläge, Zischen      |

## TECHNISCHE DATEN DES GERÄTS

|                    |                      |
|--------------------|----------------------|
| Produktname        | White-Noise-Maschine |
| Produktmodell      | WN06                 |
| Größe              | Φ86mm x50mm          |
| Eingangsleistung   | 5V = 1A              |
| Batterie-Kapazität | 1200mAh              |



## WARNHINWEIS

- Die Entsorgung einer Batterie im Feuer oder in einem heißen Ofen, oder das mechanische Zerkleinern oder Zerschneiden einer Batterie, kann zu einer Explosion führen;
- Die Aufbewahrung einer Batterie in einer Umgebung mit extrem hohen Temperaturen, kann zu einer Explosion oder zum Auslaufen einer entflammenden Flüssigkeit oder eines entflammenden Gases führen; und
- Wenn eine Batterie einem extrem niedrigen Luftdruck ausgesetzt wird, kann dies zu einer Explosion oder zum Austreten von entflammenden Flüssigkeiten oder Gasen führen.

## KONFORMITÄTSERKLÄRUNG

EU-Konformitätserklärung: Hong Kong Lute Technology Co., Limited. erklärt hiermit, dass dieses Gerät den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Niederspannungsrichtlinie RED 2014/53/EU.



## WICHTIGE SICHERHEITSINFORMATIONEN

Dieses Gerät kann von Personen mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten oder mangelnder Erfahrung und Kenntnis benutzt werden, wenn sie beaufsichtigt oder in die sichere Benutzung des Geräts eingewiesen wurden und die damit verbundenen Gefahren verstehen;

- Kinder dürfen nicht mit dem Gerät spielen;
- Die Reinigung und Benutzerwartung darf nicht von Kindern ohne Aufsicht durchgeführt werden;

- Die Entsorgung einer Batterie ins Feuer oder in einen heißen Ofen oder das mechanische Zerkleinern oder Zerschneiden einer Batterie kann zu einer Explosion führen;
- Eine Batterie in einer Umgebung mit extrem hohen Temperaturen zu lassen kann zu einer Explosion oder zum Austreten von brennbaren Flüssigkeiten oder Gasen führen;
- Eine Batterie, die einem extrem niedrigen Luftdruck ausgesetzt ist, kann zu einer Explosion oder dem Austritt von entflammenden Flüssigkeiten oder Gasen führen.

## ENTSORGUNG



Werfen Sie dieses Produkt am Ende seines Lebenszyklus nicht in den normalen Hausmüll, sondern bringen Sie es zu einer Sammelstelle für das Recycling von elektronischen Geräten und Batterien. Elektro- und Elektronik-Altgeräte können potenziell schädliche Auswirkungen auf die Umwelt haben. Unsachgemäße Entsorgung kann zur Anreicherung von Schadstoffen in der Luft, im Wasser und im Boden führen, was für die menschliche Gesundheit schädlich ist. Wenden Sie sich an Ihre Gemeindeverwaltung, um Informationen zur Entsorgung zu erhalten.

→ **Français**