

USER MANUAL



CD528B

USER MANUAL - EN

ユーザーマニュアル - JP

BENUTZERHANDBUCH - DE

MODE D'EMPLOI - FR

MANUALE UTENTE - IT

MANUAL DEL USUARIO - ES



Want to learn more
and activate your
lifetime warranty?
Scan the QR code
to proceed to the next step!

Any questions? Contact us
e-mail: miki@osh-service.com

► CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
TURN ON/OFF THE DEVICE	03
Charging the Device	03
Turning On the Device	03
Turning Off the Device	03
LOADING A DISC	04
Opening the Disc Compartment	04
Loading the Disc	04
Closing the Disc Compartment	04
REMOVING A DISC	04
Opening the Disc Compartment	04
Removing the Disc	05
INSTALLING A TF CARD (MICRO SD CARD)	05
Installing the TF Card	05
Removing the TF Card	05
CONNECTING HEADPHONES	06
Inserting Headphones	06
BUTTON FUNCTIONS	06
DISC PLAYBACK	10
TF CARD PLAYBACK	10
AUX CONNECTION	10
TROUBLE SHORTING	11

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. Never touch the lens of the device. Always keep the disc compartment closed to prevent dust from collecting on the lens.
2. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.
3. Clean the device with a clean, damp leather cloth. Do not use any cleaning agents.
4. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
5. The player can not be used or stored in moist environment, please keep the player away from any liquid, steam or vapor, such as rain drop, mist etc.
6. Please do not place any liquid or metal gadgets onto the player, such as pin or a cup of coffee.
7. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment.
8. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design.
9. Please do not stick or hit the player with sharp objects.
10. There are light emitting diodes in this player, staring directly with eyes should be avoid to prevent visual impairment from being caused.
11. Children under 12 years is not allowed to use the player individually.
12. When charging, ensure that the Power source and the Charging voltage are DC 5V/1A. Excessive voltage input may cause machine overload damage.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above140°F (60°C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.

Hearing protection

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Set the volume to a low level:

Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.


Environmental protection

To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

TURN ON/OFF THE DEVICE


Charging the Device

1. Connect the USB end of the included charging cable to a power adapter (Note: a power adapter is not included with this product, but any USB-compatible adapter can be used). Insert the other end into the charging port of the CD player.
2. Ensure the battery icon indicates a full charge.

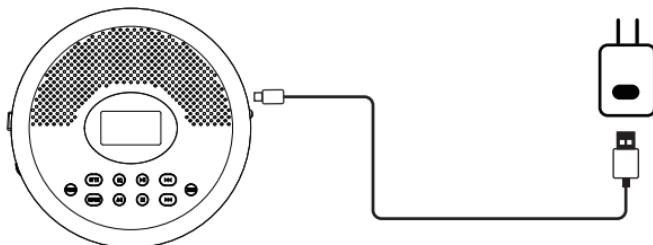

Turning On the Device

1. Slide the power switch to the 'ON' position.

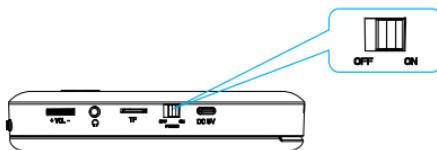

2. Press the '▶||' button to power on the device.


Turning Off the Device

1. Quickly press the '■' button twice until the screen turns off.
2. Slide the power switch to the 'OFF' position.

LOADING A DISC

Opening the Disc Compartment

1. Hold the device with your left hand, positioning the front of the device towards you.
2. Locate the '**open**' button on the side and slide it to the right with your right thumb until the compartment cover pops open.

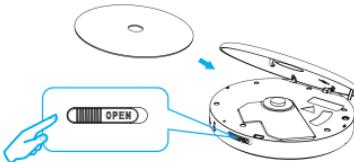

Loading the Disc

1. Hold the disc with your right hand and gently place it into the disc compartment, aligning it properly.
2. Press down on the disc lightly until you hear a click, ensuring the disc is securely loaded.

Closing the Disc Compartment

1. Use both hands to close the compartment cover until you hear a click, ensuring the cover is securely shut.


REMOVING A DISC

Opening the Disc Compartment

1. Hold the device with your left hand, positioning the front of the device towards you.
2. Locate the “**open**” button on the side and slide it to the right with your right thumb until the compartment cover pops open.

Removing the Disc

- 1.Place your right thumb in the recessed area of the device, press the center spindle with your index finger, and lift the disc out using your thumb.
- 2.Use both hands to close the compartment cover until you hear a “click”, ensuring the cover is securely shut.

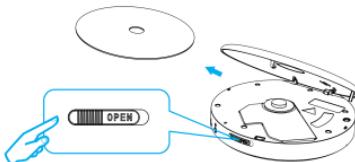


INSTALLING A TF CARD (MICRO SD CARD)

(Note: The TF card must be formatted in FAT32 and have a capacity of no more than 64GB. Supported file formats include WMA, MP3, APE, and FLAC)


Installing the TF Card

- 1.Hold the device with your left hand.
- 2.Locate the TF card slot at the back of the device.
3. Gently push the prepared TF card into the slot until you hear a “click”.



Removing the TF Card


- 1.Locate the TF card slot.,
- 2.Gently push the TF card until you hear a “click”, and the TF card will automatically eject.



CONNECTING HEADPHONES

Inserting Headphones

On the right side of the device, there are two headphone jacks, which only support φ 3.5mm plugs. Both Android and Apple 3.5mm headphones are compatible (Note: Type-C and Lightning interface headphones are not supported).

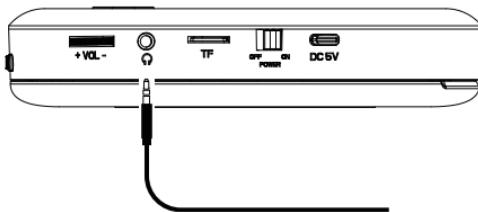

BUTTON FUNCTIONS

Press the MODE button to cycle through CD/SD/BT modes.

- CD Mode: Plays audio CDs.
- SD Mode: Plays MP3 files from the SD card.
- BT Mode (Bluetooth Receiver):

Search for "CD528" on your phone's Bluetooth and connect.

Once connected, the CD player will emit a confirmation tone.

This function allows your phone's music to play through the CD player, turning it into a Bluetooth speaker.

2.PROG: Programming Playback

PROG Programming Playback Mode: In stop mode, press the **PROG** button to enter programming playback mode. Use the track buttons to select your favorite tracks, then press the **PROG** button to store the selected tracks. Repeat this step for multiple tracks. Press the **▶|** button to start playback according to the programmed sequence.

3.EQ: Sound Equalizer

EQ Sound Equalizer Switch: In normal playback mode, each press of the **EQ** button will cycle through 7 different equalizer modes, allowing users to choose based on their listening preferences.

4. |◀◀ Previous Track:

- ① In normal playback mode, a single press skips to the previous track.
- ② In menu mode, this button is used to move up.

5. ■ Stop Button:

- ① In normal playback mode, pressing this button once stops playback.
- ② In any mode, quickly pressing this button twice turns off the device.

6. ▶| Next Track:

- ① In normal playback mode, a single press skips to the Next track.
- ② In menu mode, this button is used to move down.

7. ▶|| Play/Pause Button

- ① **Turning on the Device:** With the power switch in the ON position, press the ▶|| button to power on the device.
- ② **Playing Music:** With media files on a CD or TF Card, press the Play button to start playing music.
- ③ **Pausing Music:** In normal playback mode, press the ▶|| button to pause playback. Press again to resume.

8. A-B Button

Press it,the display says"A -", Press it again,the display says"A-B", that is say it will be repeat by A-B. cancel A-B:press A-B button once again,the display says" AB OFF ".

9. REPEAT Button

Press the REPEAT button to select the song repeat mode.

REP1: Single song repeat

DIR: Folder repeat (only supported for MP3 discs with folders)

ALL: All songs repeat

SHUF: Shuffle play

INTRO: Preview mode (plays only the first 10 seconds of each song)

10. BT TX Button

Press the BT TX button to activate Bluetooth transmission. The Bluetooth icon will appear on the display (solid when connected, blinking when disconnected). While playing a CD, you can use this function to connect to your Bluetooth headphones/speaker.

Note: Bluetooth transmission connects automatically. Please ensure your Bluetooth device is in pairing mode, otherwise connection will fail.

11. Volume Control

The volume control is a toggle switch. In normal playback mode, pushing the volume switch towards “**VOL+**” increases the volume by one step. Pressing and holding will continuously increase the volume. To decrease the volume, push the switch towards “**VOL-**”. Each push decreases the volume by one step, and pressing and holding will continuously decrease the volume.

12. Power Switch

- ① Sliding the power switch to the “**OFF**” position completely disconnects the power, rendering all buttons inoperative.
- ② To turn on the device, slide the power switch to the “**ON**” position, enabling all button functions.

DISC PLAYBACK

1. Place a CD or MP3 format disc (Note: Discs in other formats, including data format MP3 discs, are not supported) into the disc compartment and secure it.
2. Slide the power switch to the ON position. The device will automatically start playing the disc content, and the built-in speaker will emit the sound from the disc.
3. To switch tracks, simply press the Previous Track or Next Track button.

TF CARD PLAYBACK

1. Insert a TF Card with music files into the TF Card slot (only FAT32 format is supported, and music files must be in WMA, MP3, APE, or FLAC formats).
2. Press and hold the Mode button for more than 2 seconds to switch to TF Card playback mode.

AUX CONNECTION

1. Locate the AUX input jack on your home or car audio system. Insert the included 3.5mm cable into the AUX input jack, then switch the audio system to the AUX channel. Insert the other end of the cable into either headphone jack on the device.
2. Set the device volume to the lowest level, then gradually increase it to a normal listening level (Note: High volume levels may cause hearing damage).

TROUBLE SHORTING

Problem Description	Troubleshooting
Unable to Power On	Check if the device can charge properly, if not, check the circuit or adapter
	Check if the power switch is in the ON position. The power switch must be turned on for it to operate. If not, check the circuit or adapter
	Press the play button lightly to see if it can turn on. In standby mode, pressing the play button can turn on the device. The power switch must be turned on for it to operate. If not, check the circuit or adapter
Unable to read disc	Ensure the disc is loaded correctly; it won't play properly if it's loaded upside down or not in place
	Ensure the disc format is CD or MP3 music format disc; DVD or Blu-ray discs, and data discs will also not play
	Check if the disc surface is dirty, and if there are too many scratches. Clean the dirt and try playing again; if it's damaged or scratched, it cannot be played
Unable to charge	Ensure the cable connection is secure and check if the adapter or charging cable is properly installed
	Check if the charging device is damaged; try replacing it with another set of the same specifications.
No sound from	Ensure the headphones are plugged in properly; there should be no gap between the headphone plug and the device.
	If headphones are properly installed, adjust the volume to at least 2 levels or higher.
No sound from AUX cable connection	Please ensure that the volume on both input and output devices is turned on.
	Please check if the cables are damaged; if so, please replace them.
Button has no effect	Please check if KEYhold is in the OFF position; if not, please switch it to the OFF position.

► 取り扱い説明書について

安全上の注意事項	01
電源のオン/オフ	03
デバイスの充電	03
デバイスのオン	03
デバイスのオフ	03
ディスクのロード	04
トレイの開け方	04
ディスクの装着	04
トレイの閉め方	04
ディスクの取り出し	04
トレイの開け方	04
ディスクの取り出し	05
TFカード (Micro SD) カードの取り付け	05
TFカードの取り付け	05
TFカードの取り外	05
ヘッドホンの接続	06
ヘッドホンの挿入	06
ボタン機能の紹介	06
ディスク再生	09
TFカード再生	09
AUX接続	09
一般的なトラブルシューティング方法	11

取り扱い説明書について

ご使用になる前にこの取り扱い説明書をよくお読みください。お読みになったあと、いつでも見られるところに必ず保管してください。

安全上の注意事項

使用注意点

火事と人体事故に起る防ぐためにご使用前に取扱説明書をご覧下さい。

- プレーヤーのレンズ部分を触れないでください。レンズ表面に汚れなど付着しないように、使用しないときはトライドアを閉じてください。
- ディスを認識できない場合、市販の洗剤でレーザー部品をクリーニングしてください。ほかの方法なら、レーザー部品を損傷する恐れがあります。
- 濡れた布で本体を拭いてください。いかなる洗剤を使わないでください。
- プレーヤーが稼働しない場合、すぐに当社のアフターサービスセンターに問い合わせてください。プロの技術者がより詳しく回答いたします。
- プレーヤーは湿気が多い環境でのご使用、ご保管を避けてください。雨、霧など、液体、蒸気から離れてください。
- ピンやコーヒーカップなど、液体や金属製のものをプレーヤーの上に置かないでください。
- 直射日光の当たる場所、ヒーターの熱が直接当たる場所から離れてください。プレーヤーを高温環境に置かないでください。
- 豊富な電子知識とメンテナンス経験を持つすべての専門技術者は本体を解体し、修理することが可能ですが、部品交換も必ず電子回路設計規格通りに行ってください。
- 鋭利なもので突き刺したり、プレーヤーにぶつけたりしないでください。
- 本製品に発光ダイオードがあるので、視力に損害を与えないように、直視しないでください。
- 12歳未満のお子様は一人で本製品を使用しないでください。
- 充電の際、電源と充電電圧がDC 5V/1 Aであることを確認してください。過度の電圧入力は、本体が過負荷による損傷を引き起こす可能性があります。

バッテリー

ご購入したプレーヤーにバッテリーが含まれている場合は、回路の故障を避けるためプレーヤーを分解したり、本 製品の電気規格に適合しないアダプターを使用したりしないでください。安全のために、以下の手順に従って、内蔵の大容量ポリマーリチウム電池を扱ってください。

- バッテリーパックは取り外さないでください。
- 本製品を倒したり、ぶつけたりしないでください。
- バッテリーをショートさせたり、穴を開けたりしないでください。
- バッテリーを140°F (60°C)以上の高温の場所に置かないでください。
- バッテリーを火の中に投入しないでください。
- バッテリーが破損した場合は、専門技術者に同じ仕様のバッテリーに交換してもらってください。あるいは、当社アフターサービスセンターに問い合わせてください。

聴力保護

中音量で聴力保護:

音量を適切なレベルに調整してください。音量が大きすぎると、聴力を損ね、永久的な障害になる恐れがありますので、低音量に設定してください。

音量を低レベルに設定する:

ゆっくりと音量を増やして、快適で綺麗な音が聞こえます。

合理的な時間にプレーヤーを利用する

適切な音量でも長時間続けて聞くと、聴力に悪い影響を与える恐れがあります。本製品を適切に使用し、適時に休憩してください。


環境保護

環境と人の健康を守るために、現地の法規に基づき、パッケージ、電子製品、バッテリーを捨ててください。本製品を生ごみ一緒に捨てないでください。

電源のオン/オフ


デバイスの充電

1. 同梱されている充電ケーブルのUSB端子を電源アダプタ（本製品には電源アダプタは含まれていませんが、全てのUSBインターフェースアダプタに対応）に差し込み、もう一方の端子をCDプレーヤーの充電ポートに差し込みます。
2. バッテリーアイコンが満充電状態であることを確認します。

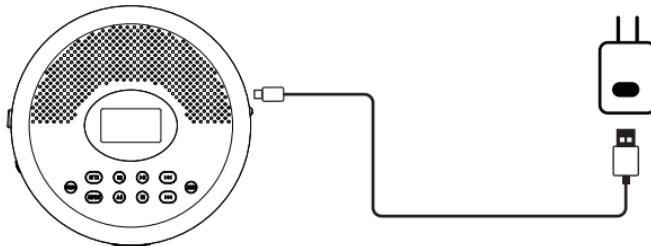

デバイスのオン

1. スイッチをON位置にします。

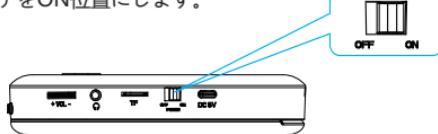

2. 再生/一時停止 ▶|| ボタンを押して電源を入れます。


デバイスのオフ

1. 停止■ボタンを素早く2回押し、画面が消えるまで待ちます。
2. 電源スイッチをOFF位置にします。

ディスクのロード

トレイの開け方

1. 左手でデバイスを支え、デバイスの正面を自分に向けます。
2. 側面の**OPEN**キーを見つけ、右手の親指で右にスライドさせてトレイカバーを開けます。

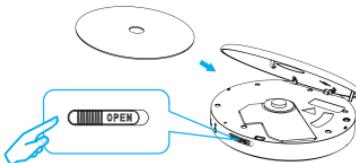

ディスクの装着

1. 右手でディスクを持ち、トレイに軽く置きます。
2. ディスクを軽く押してカチッと音がするまで押し込み、ディスクが正しく装着されていることを確認します。

トレイの閉め方

1. 両手でトレイカバーを閉め、カチッと音がするまで押し込みます。


ディスクの取り出し

トレイの開け方

1. 左手でデバイスを支え、デバイスの正面を自分に向けます。
2. 側面の**OPEN**キーを見つけ、右手の親指で右にスライドさせてトレイカバーを開けます。

ディスクの取り出し

右手の親指で内側の凹み部分を押し、指で中央の軸を押さえ、親指でディスクを持ち上げて取り出します。トレイカバーを閉めるとカチッと音がするまで押し込みます。

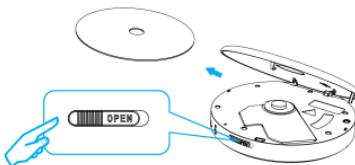


TFカード（Micro SD）カードの取り付け

（注意：TFカードはFAT32フォーマットのみサポートし、容量は64GB以下、ファイル形式はWMA, MP3, APE, FLACのみに対応）

TFカードの取り付け

左手でデバイスを支え、背面のTFカードスロットを見つけ、用意したTFカードをカチッと音がするまで軽く押し込みます。



TFカードの取り外


TFカードスロットを見つけ、TFカードを軽く押すとカチッと音がして自動的にカードが取り出されます。



ヘッドホンの接続

ヘッドホンの挿入

デバイスの右側には2つのヘッドホンジャックがあり、 $\varphi 3.5\text{mm}$ サイズのプラグのみ対応しています。AndroidおよびAppleの3.5mmヘッドホンに対応しています（注意:type-cおよびLightningインターフェースのヘッドホンはサポートしていません）。

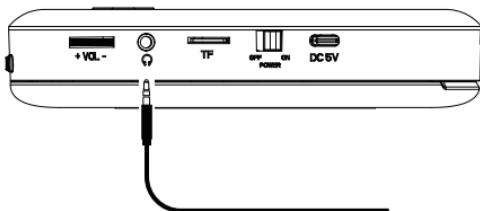

ボタン機能の紹介

MODEボタンを押すと、CD/SD/BTの3つのモードを切り替えられます。

- ・CDモード: CDディスクを再生します。
- ・SDモード: SDカード内のMP3ファイルを再生します。
- ・BTモード(Bluetooth受信機能):

スマートフォンのBluetoothで「CD528」を検索して接続してください。

接続成功後、CDプレーヤーから確認音が鳴ります。

この機能により、スマホの音楽をCDプレーヤーで再生でき、Bluetoothスピーカーとして使用できます。

2. PROG: プログラム再生

PROG プログラム再生モード: 停止状態で **PROG** ボタンを押してプログラム再生モードに入り、上下の曲ボタンで好きな曲を選び、再度プログラム **PROG** ボタンを押して選択した曲を保存します。複数の曲を選びたい場合は、この手順を繰り返します。プログラムが完了したら再生 **▶|▶** ボタンを押して、設定した順番で曲を再生します。

3. EQ: サウンドイコライザー

EQ サウンドイコライザーカタログ: 通常の再生モードで **EQ** ボタンを押すたびに、サウンドイコライザーモードが7つのモードで循環切り替わります。ユーザーは好みに応じて異なるイコライザーモードを選択できます。

4. |◀◀ 前の曲

- ① 通常再生モードでこのボタンを一度押すと、前の曲に戻ります。
- ② メニューモードでは上の選択として機能します。

5. ■ 停止ボタン

- ① 通常再生モードでこのボタンを一度押すと、再生が停止します。
- ② 任意の状態でこのボタンを素早く2回押すと、デバイスがオフになります。

6. ▶▶|次の曲

- ① 通常再生モードでこのボタンを一度押すと、次の曲に進みます。
- ② メニューモードでは下の選択として機能します。

7. 再生/一時停止ボタン

- ① 電源オン: 電源スイッチをON位置にした待機状態で再生/一時停止ボタンを軽く押すと、デバイスの電源がオンになります。
- ② CDまたはTFカードにメディアファイルがある場合は、再生ボタンを軽く押すと音楽が再生されます。
- ③ 通常再生状態で再生/一時停止ボタンを軽く押すと、一時停止状態になります。再度押すと一時停止が解除されます。

8. A-B ボタンです

押すと、ディスプレイに「A-」と表示されます。もう一度押すと、ディスプレイに「A-B」と表示されます。つまり、A-B間で繰り返し再生されます。A-Bをキャンセルするには、もう一度A-Bボタンを押すと、ディスプレイに「AB OFF」と表示されます。

9. REPEAT ボタンです

REPEATボタンを押して曲のリピートモードを選択します。

REP1:一曲リピート

DIR: フォルダ内リピート (フォルダ分けされたMP3ディスクのみ対応)

ALL:全曲リピート

SHUF:シャッフル再生

INTRO:プレビューモード(各曲の最初10秒のみ再生)

10. BT TX ボタンです

BTXボタンを押すとBluetooth送信機能が作動します。画面にBluetoothアイコンが表示されます(接続済みは点灯、未接続は点滅)。CD再生中、この機能を使ってBluetoothヘッドホン/スピーカーに接続できます。

注:Bluetooth送信は自動接続です。接続するBluetoothデバイスがペアリングモードになっていることを確認してください。そうでないと接続できません。

11.音量調節ボタン

① 音量調節ボタンはスライド式です。通常再生状態で音量ボタンをデバイスのVOL+方向に押すと、音量が一段階上がります。長押しすると連続して音量が上がります。音量を下げたい場合は、VOL-方向に押します。一段階下がります。長押しすると連続して音量が下がります。

12.電源スイッチ

- ① 電源スイッチをOFF位置にすると、デバイスの電源が完全に切れ、どのボタンも機能しません。
- ② デバイスをオンにするには、電源スイッチをON位置にします。このときデバイスの電源が入り、すべてのボタンが正常に動作します。

ディスク再生

- 1.CDまたはMP3形式のディスクをディスクトレイに入れ、しっかりと装着します(注意:その他の形式のディスクやデータ形式のMP3ディスクはサポートしていません)。
- 2.電源スイッチをON位置にすると、デバイスは自動的にディスクの内容を再生します。このときデバイス内蔵のスピーカーから音が出ます。
- 3.曲を切り替えたい場合は、前の曲または次の曲ボタンを軽く押すだけで切り替えります。再生を停止したい場合は、停止ボタンを軽く押すだけで停止します(注意:長時間操作しない場合、デバイスは一定時間後に自動的に待機状態になります。デバイスを再起動するには、再生/一時停止ボタンを軽く押すだけです)。

TFカード再生

- 1.音楽ファイルが入ったTFカードをTFカードスロットに挿入します(FAT32形式のみ対応、音楽ファイル形式はWMA, MP3, APE, FLACのみ対応)。
2. Modeボタンを2秒以上長押しして、TFカード再生モードに切り替えます。

AUX接続

- 1.家庭用オーディオやカーオーディオのAUX入力ジャックを見つけ、同梱されている3.5MM接続ケーブルを差し込みます。入力デバイスのチャネルをAUXチャネルに切り替え、もう一方での端子にヘッドホンを差し込みます。
2. デバイスの音量を最低に調整し、徐々に適切な音量に上げます(注意:過大な音量は聴力を損なう可能性があります)。

一般的なトラブルシューティング方法

問題の説明	トラブルシューティング
電源を入れることができません	デバイスが正しく充電できるかどうかを確認してください。できない場合は、回路またはアダプターを確認してください
	電源スイッチがONの位置にあるか確認してください。動作させるには電源スイッチをオンにする必要があります。できない場合は、回路またはアダプターを確認してください
	再生ボタンを軽く押して、電源が入るか確認してください。スタンバイモードでは、再生ボタンを押すことでデバイスがオンになることがあります。動作させるには電源スイッチをオンにする必要があります。できない場合は、回路またはアダプターを確認してください
ディスクを読み込めません	ディスクが正しく装着されていることを確認してください。逆さまに装着されているか、正しい位置にない場合は正常に再生されません
	ディスクの形式がCDまたはMP3音楽形式のディスクであることを確認してください。DVDやブルーレイディスク、データディスクも再生されません
	ディスクの表面が汚れているか、傷が多いすぎるかを確認してください。汚れをきれいにして再生してみてください。破損または傷がある場合は再生できません
充電できません	ケーブルの接続が正常であることを確認し、アダプターまたは充電ケーブルが正しく取り付けられているかを確認してください
	充電装置が壊れていないか確認し、同じ仕様の別のセットに交換してみてください

一般的なトラブルシューティング方法

イヤホンから音が出ない	イヤホンがきちんと挿さっていることを確認してください。イヤホンプラグとデバイスの間に隙間がないようにしてください。
	イヤホンが正しく取り付けられている場合、音量を少なくとも2つ以上に調整してください。
ボタンが機能しません	KEYholdがOFFの位置にあるかどうかを確認してください。もし違う場合は、OFFの位置にしてください。
AUXケーブル接続で音が出ない	受信端と出力端のプラグが正しく取り付けられているか確認してください。
	入力および出力デバイスの音量がオンになっていることを確認してください
	ケーブルが壊れていないか確認してください。もしそうであれば交換してください。

► INHALTSVERZEICHNIS

Wichtige Sicherheitshinweise	01
Gerät Ein-/Ausschalten	03
Gerät aufladen	03
Gerät einschalten	03
Gerät ausschalten	03
Laden einer CD	04
Öffnen des CD-Fachs	04
Einlegen der CD	04
Schließen des CD-Fachs	04
Entfernen einer CD	04
Öffnen des CD-Fachs	04
Entfernen der CD	05
Installieren der TF-Karte (Micro SD)	05
Einlegen der TF-Karte	05
Entfernen der TF-Karte	05
Anschließen der Kopfhörer	06
Einsticken der Kopfhörer	06
Tastenfunktionen	06
CD-Wiedergabe	10
TF-Karten-Wiedergabe	10
AUX-Anschluss	10
Häufige Fehlerbehebungsmethoden	11