DISPOSAL OF THE PRODUCT:
Because this product contains a battery and electronics, which are made of substances that are potentially dangerous to the environment and to human health, you should not dispose of this product with regular wastes.
Always dispose of used electronics containing a battery in accordance with the prevailing community regulations that apply. If there are no local regulations concerning battery/electronics disposal, please dispose of said items in a waste bin for electronics. Many electronics retailers now recycle batteries and other electronic components at no charge. Please check to see which ones are in your area to do so.
This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

WARRANTY AND LIMITED LIABILITY
Tenergy warrants its product to be free from defects in materials and workmanship under normal conditions and use for a Limited Warranty Period of six (6) months from the date of original purchase. This warranty is not applicable to cases other than defects in material and workmanship. This warranty is only valid upon presentation of the proof of purchase, which include the original invoice or sales receipt indicating the date of purchase, store name, model number, or UPC of the product. In no case shall Tenergy Corporation's liability be greater than the actual purchase price of this product. This limited warranty does not cover normal wear and tear, water damage, or other alleged defect or nonconformity that is a result of abuse, misuse, neglect, tampering, unauthorized or improper use, installation, disassembly, repair, alteration, or accident by Purchaser.

Please make all warranty claims to the original place of purchase.

DISCLAIMER OF WARRANTY
Manufacturer shall not be liable for any special, incidental, or consequential damages. Even if informed of the possibility thereof in advance, except for the express warranty set forth herein, Tenergy makes no other warranties or guarantees regarding the product, whether express, oral, implied, statutory, arising by operation of law, or as a result of usage of trade, course of dealing, or course of performance.
Tenergy hereby expressly disclaims all implied warranties or warranties otherwise arising by operation of law, including the implied warranties of title, merchantability, fitness for a particular purpose, and non-infringement of third-party rights. Notwithstanding the foregoing, if any product covered by this order is designated for developmental or experimental use, no warranty whatsoever shall be applicable thereto, and Buyer shall indemnify Tenergy for any and all claims or liability asserted against Tenergy in connection with such developmental or experimental products.
In no event shall Tenergy, its suppliers, agents, officers, directors, insurers, successors and assigns, or employees be liable to Purchaser or any third party for damage to any property whatsoever arising from or relating to the manufacture, sale, delivery, installation, operation, or use of the products, Tenergy's negligence, or the alleged breach of any contract or warranty; for loss of profits, loss of use, or any incidental, consequential, indirect, special or other damages or expenses of any nature whatsoever and howsoever arising, even if Tenergy has been advised of the possibility of such damages. Unless otherwise contrary to law, Tenergy's liability hereunder shall not exceed the purchase price for the product. This limitation of damages shall not be affected by any failure of Purchaser's remedies under the warranty provisions set forth herein. Purchaser agrees to indemnify, defend, and hold Tenergy harmless from any damage or injury to any person whatsoever arising from or related to the sale, delivery, installation, operation, or use of the products or Purchaser's negligence.

TENERGY®
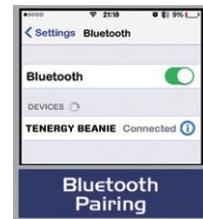
www.Tenergy.com

Back

TENERGY®

Bluetooth BEANIE
Built-in wireless headphones for your music and calls

INSTRUCTIONS

Pairing to your device
To pair to your phone or device for the first time, hold down the play button located on the control panel for 5 seconds until you see a red and blue flashing light.
Open your Bluetooth setting on your phone or device. You will see the name "TENERGY BEANIE" appear in the list.
Select "TENERGY BEANIE", you will now be connected.
If a password is requested, please use the default: 0000.
The next time you switch on your beanie & Bluetooth is enabled on your phone or device, it will automatically connect.

Taking Calls
To take an incoming call, press the Play/Pause button. If you are listening to music, it will automatically stop. To end a call, press the Play/Pause button. Pressing the Play/Pause button will automatically re-dial the last number.
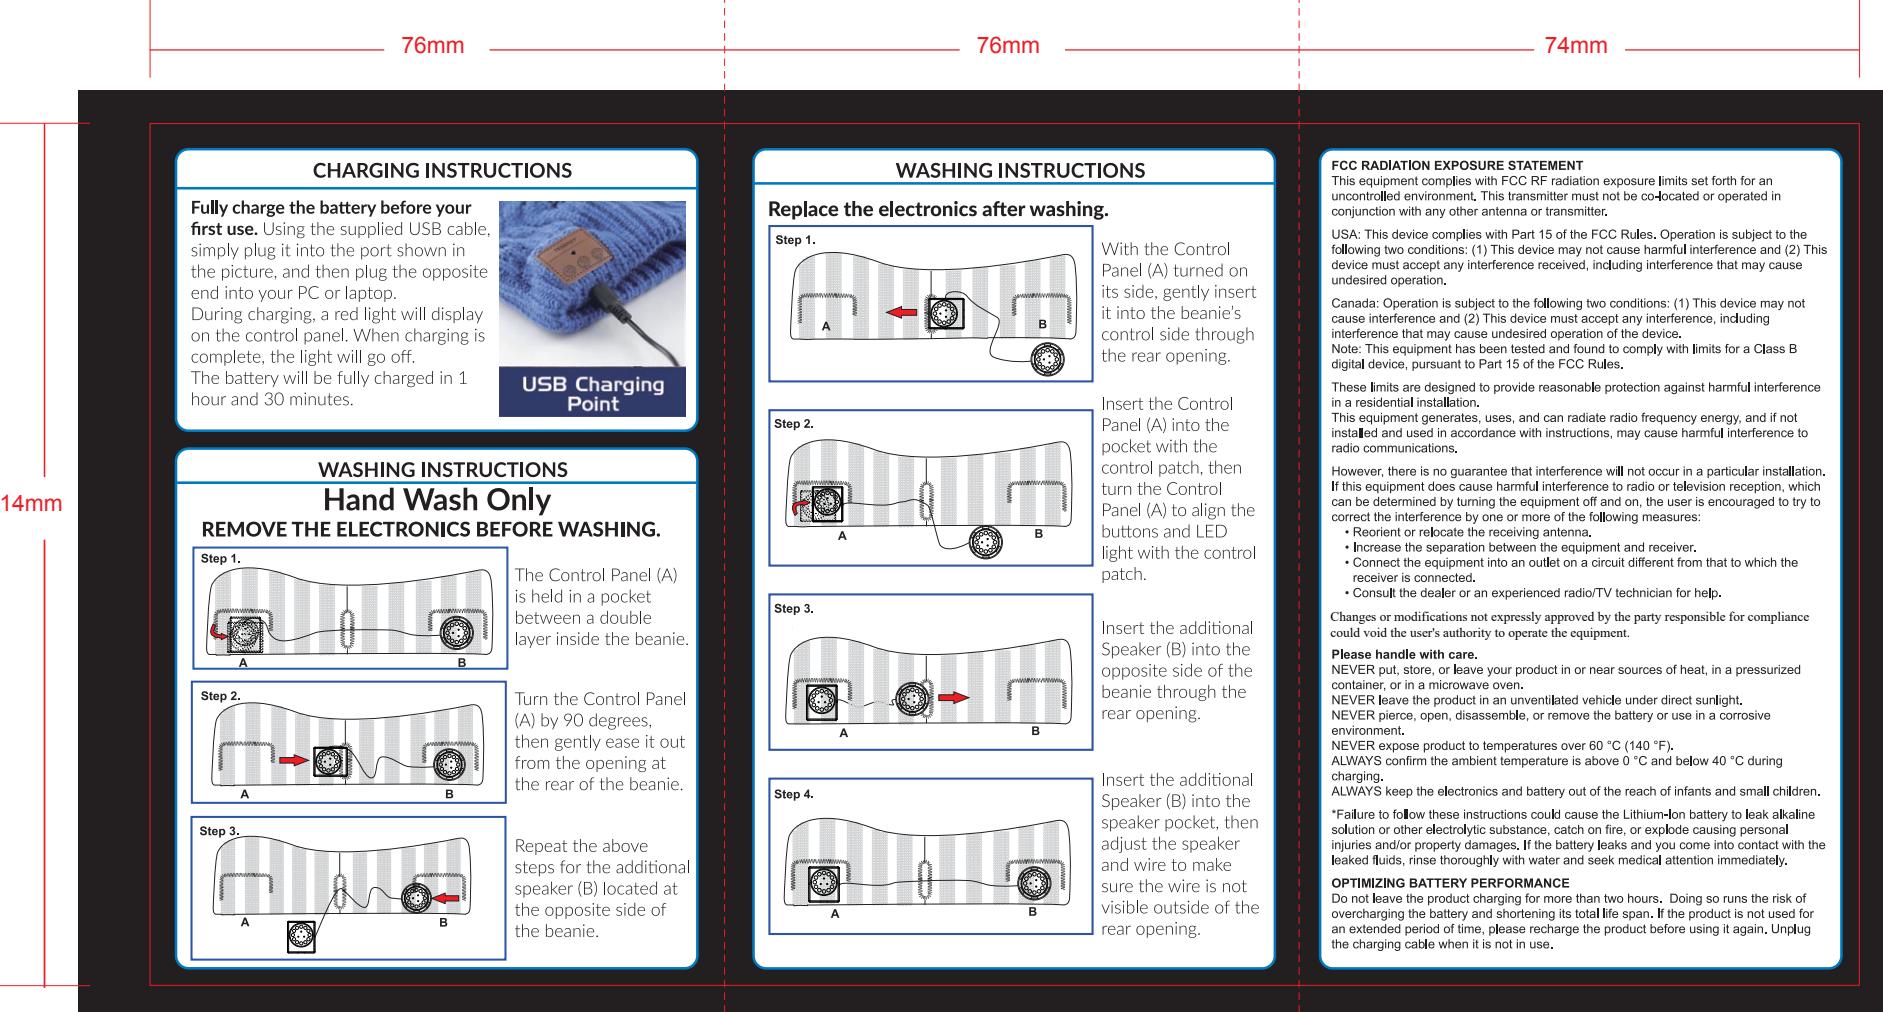
Playing Music
Select your music as normal from your phone or device. Use the buttons on your control panel to Play, Pause, or Skip tracks.

Power Down
Simply hold down the Play/Pause button for 3 seconds to turn off your Bluetooth BEANIE.

Front

CHARGING INSTRUCTIONS

Fully charge the battery before your first use. Using the supplied USB cable, simply plug it into the port shown in the picture, and then plug the opposite end into your PC or laptop.
During charging, a red light will display on the control panel. When charging is complete, the light will go off.
The battery will be fully charged in 1 hour and 30 minutes.

USB Charging Point

WASHING INSTRUCTIONS
Hand Wash Only
REMOVE THE ELECTRONICS BEFORE WASHING.

Step 1.

A — B
The Control Panel (A) is held in a pocket between a double layer inside the beanie.

Step 2.
A — B
Turn the Control Panel (A) by 90 degrees, then gently ease it out from the opening at the rear of the beanie.

Step 3.
A — B
Repeat the above steps for the additional speaker (B) located at the opposite side of the beanie.

WASHING INSTRUCTIONS

Replace the electronics after washing.

Step 1.
A — B
With the Control Panel (A) turned on its side, gently insert it into the beanie's control side through the rear opening.

Step 2.
A — B
Insert the Control Panel (A) into the pocket with the control patch, then turn the Control Panel (A) to align the buttons and LED light with the control patch.

Step 3.
A — B
Insert the additional Speaker (B) into the opposite side of the beanie through the rear opening.

Step 4.
A — B
Insert the additional Speaker (B) into the speaker pocket, then adjust the speaker and wire to make sure the wire is not visible outside of the rear opening.

FCC RADIATION EXPOSURE STATEMENT
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

USA: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

Canada: Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
Note: This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 • Reorient or relocate the receiving antenna.
 • Increase the separation between the equipment and receiver.
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 • Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please handle with care.
NEVER put, store, or leave your product in or near sources of heat, in a pressurized container, or in a microwave oven.
NEVER leave the product in an unventilated vehicle under direct sunlight.
NEVER pierce, open, disassemble, or remove the battery or use in a corrosive environment.
NEVER expose product to temperatures over 60 °C (140 °F).
ALWAYS confirm the ambient temperature is above 0 °C and below 40 °C during charging.
ALWAYS keep the electronics and battery out of the reach of infants and small children.

*Failure to follow these instructions could cause the Lithium-Ion battery to leak alkaline solution or other electrolytic substance, catch on fire, or explode causing personal injuries and/or property damages. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately.

OPTIMIZING BATTERY PERFORMANCE
Do not leave the product charging for more than two hours. Doing so runs the risk of overcharging the battery and shortening its total life span. If the product is not used for an extended period of time, please recharge the product before using it again. Unplug the charging cable when it is not in use.

Inside - Left

Inside - Center

Inside - Right

Card size: 76mm x 114mm folded