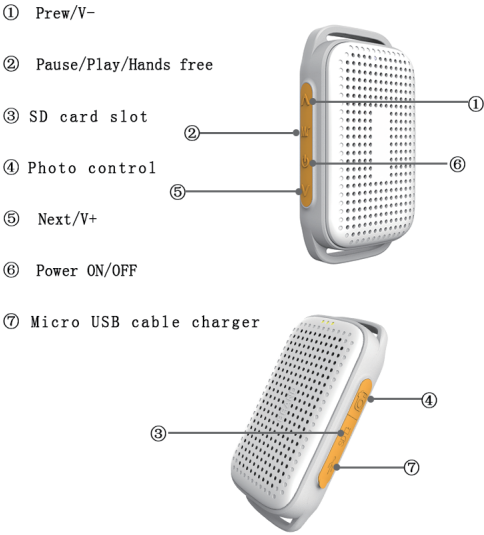# PRODUCT INSTRUCTION

The speaker uses 2.1 Bluetooth, combined with high-tech. Support wireless connecting iPhone, iPad, smart phone, laptop, Bluetooth mobile phone ECT… It's a new portable speaker for playing stereo music and games.

Function

Linking the stereo Bluetooth wireless audio

Hands free calling through Bluetooth speaker

External input function

SWITCH/CONNECTING PORT FUNCTION

① Prew/V-

② Pause/Play/Hands free

③ SD card slot

④ Photo control

⑤ Next/V+

⑥ Power ON/OFF

⑦ Micro USB cable charger

SPECIFICATION

1 Bluetooth: Bluetooth 2.1

2. Output:3W

3. Battery capacity:400mAh 3.7V

4. Charge current: 200mA

5. Output frequency: 150Hz-20KHz

6. Size:94X56X24mm

7. Playtime: more than 2.5h

8. Holding time: more than 4.5h

9. Standby time: more than 20h

KINDLY REMINDER

1. Please don't use it under the high humidity and temperature environment for long time.

2. Please turn off if long time not to use.

HOW TO USE

1. Power-on and power-off: On the Stand-By mode, long press "⑥Power on/Power off/Play/Pause/Call" key 3 seconds to open and the blue light turns on; On the play state, long press"⑥Power on/Power off/Play/Pause/Call" key 3 seconds to turn off.

2. Connecting Bluetooth match: Searching the Bluetooth device "SP19" on your cell phone after speaker power on. When you turn on the speaker and the blue LED light shines quickly, it means the Bluetooth speaker waiting for connection; When the speaker connected successfully, voice commands"the Bluetooth connected successfully"

3. Music mode:

(1)When playing music, click "⑥Power on/Power off/Play/Pause/Call" key into Play/Pause state.

(2)When playing music, click "④Next/V+" key to choose the music.

(3)When playing music, long press "④Next/V+" or "①Prew/V-" key to control the volume.

4. Hands free Bluetooth phone call: Under the mode of Bluetooth connecting, when the calling in, click " ③Power on/Power off/Play/Pause/Call"

⑥Power on/Power off/Play/Pause/Call" key to hang up.

5. Mode Switch(Bluetooth-Photograph): On the play state, put the TF card into the TF card port, the default is TF card mode. Without TF card, the default is Bluetooth mode. Long press "④ Mode Switch/Photograph" key, change the Photograph mode.

6. Photograph: Under the mode of Bluetooth connecting with the device which has photograph function, long press "④Mode Switch/Photograph" key to change the Photograph mode. Click "④Mode Switch/Photograph" key to take a photo.

7. Charging: Connect the micro USB with speaker and 5V charger, when the red light opens, that means speaker charging; when the red light goes out, that means full recharge.

8. Reset:

If the speaker crashes, please charging it and turn off. When you open again, it can use normal.

FCC Statement