

名称：	TP5-35137说明书 三國語言
材質：	100g書寫紙
尺寸：	展开尺寸：450x150mm 成品尺寸：75x150mm
颜色：	单黑双面印刷，风琴折
设计师：	陈健彬 2024. 11. 06
版本号：	KC TP5-35137 2411 V2

User Manual

Product No. TP5-35137


Version Number: A.1

WIRELESS GAME CONTROLLER

1 Product overview:

This product is a game controller suitable for the P-5 console, compatible with certain PC systems, and supports any game version on the P-5 console.

2 Product Diagram:

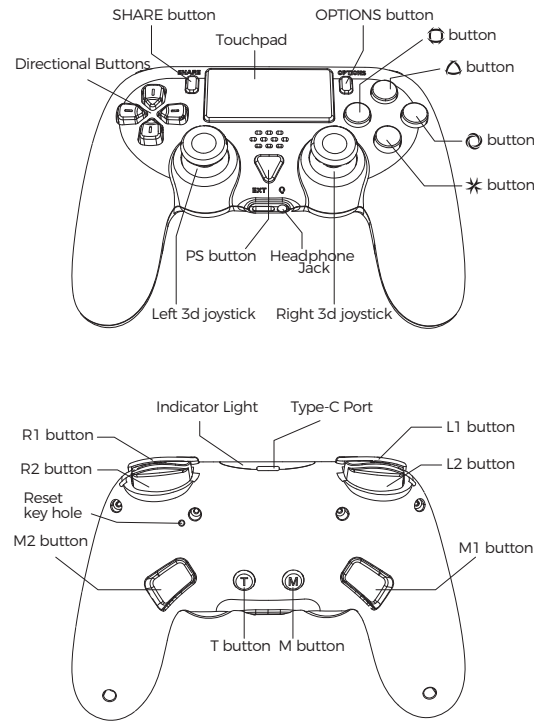

3 Product features:

- 1.Supports Asymmetric Dual Motor Vibration: Provides enhanced tactile feedback for a more immersive gaming experience.
- 2.Connection Options: Supports wireless/wired connections for P-5 console and PC systems
- 3.Built-in Speaker and 3.5mm Headphone Jack: The built-in speaker accurately reproduces various sounds from the game environment. The 3.5mm headphone jack allows for online chatting with friends (Note: The speaker and headphone/microphone only work in wired mode with a headset that has a microphone function).
- 4.Programmable Functions: Users can map frequently used action buttons or combinations to the back buttons, enhancing control during gameplay.
- 5.Ergonomic Design: The controller's structure is designed for comfort, providing a pleasant feel during use.

4 Functionality Chart:

Feature Name	Available	Notes
USB wired connection	Supported	
Wireless Connection	Supported	
Built-in Speaker	Yes	Only supports wired mode
Six-Axis Motion Sensing	Yes	
Touch Function	Yes	
Headphone Jack	Yes	Only supports wired mode
Touchpad Press Function	Yes	
Action Buttons (△, ○, X, □)	Yes	
Directional Pad (Up, Down, Left, Right)	Yes	
OPTIONS Button, SHARE Button, L1 Button, R1 Button, L2 Button, R2 Button, T Button, M Button, M1 Button, M2 Button	Yes	
PS button (HOME button)	Yes	
Screenshot function	Yes	
Screen recording function	Yes	
Left and Right 3D Stick Function	Yes	
L3 Button (Left Stick Press)	Yes	
R3 Button (Right Stick Press)	Yes	
Connection Indicator Light	Yes	
TURBO Function	Yes	

5 User Instructions:

- (I) Connecting to P-5**
- 1.Wired Connection: Turn on the console and enter the normal standby interface. To avoid connection errors, set the communication method as follows: "Settings" → "Accessories" → "Controllers (General)" → "Connection Method" → "Use USB Cable." Connect the controller's USB cable to the console and press the PS button (HOME button) on the controller to connect to the PS5. The blue light will stay on when connected successfully.
 - 2.Wireless Connection: For the first connection, use a data cable to assist with the connection. Once connected successfully, you can unplug the data cable. To reconnect when the controller is in sleep mode, simply press the PS button.
 - 3.The light bar on the front of the controller will illuminate, and pressing any function button on the controller will allow you to control the console, indicating a successful connection.
 - 4.During normal gameplay, the controller will vibrate according to game rules, utilizing dual motors.
 - 5.Video Recording Function: Double-click the Share button to start screen recording; double-click again to stop.
 - 6.Screenshot Function: Long press the SHARE button to take a screenshot of the current screen.
 - 7.Headset Microphone Function: This feature only supports wired mode. If you need to use two controllers simultaneously, please connect them to different USB ports (front and back) on the console using both in either front or back USB ports may cause one controller's headset function to malfunction.
 - 8.To use the microphone function in-game, wear a headset with a microphone and plug it into the 3.5mm headphone jack on the controller.
 - 9.The built-in speaker/headset/microphone functions are not supported in wireless mode.
- (II) Connecting to PC**
- Wired Connection: When connecting to a PC, simply plug it in and it will work as a plug-and-play device. You can play games compatible with this controller on PC/Steam.
 - Wireless Connection: To connect wirelessly to a PC, put the controller into pairing mode while it is in sleep state by holding down the SHARE button and then pressing the PS button for 3 seconds until the connection indicator light flashes quickly. Enable Bluetooth on your PC and search for "DualSense Wireless Controller" in Bluetooth settings; select it to connect. You can play games compatible with this controller on PC/Steam. To reconnect when in sleep mode, press the PS button.

取扱説明書


製品番号: TP5-35137

バージョン: V1.0

1 製品概要:

この製品はP-5本体に対応したゲームコントローラーで、PCシステムの一部に対応したゲームでも使用可能です。P-5本体のすべてのゲームバージョンをサポートしています。

2 製品図解:

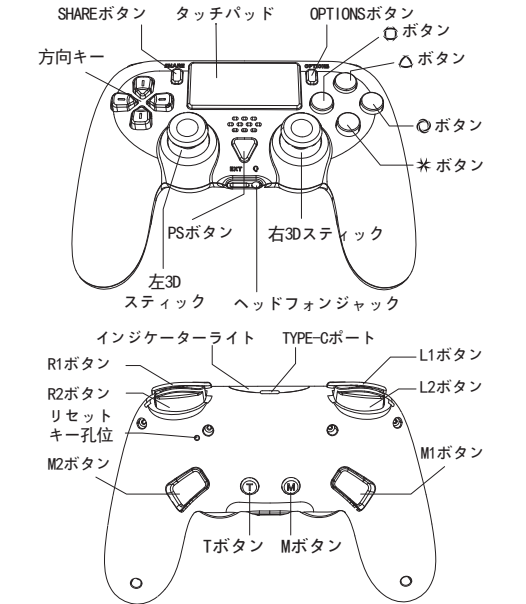

3 製品の特徴:

1. 非対称デュアルモーター振動機能をサポート。
2. P-5本体の無線/有線接続、PCシステムの無線/有線接続をサポート。
3. 外部スピーカーと3.5mmヘッドフォンジャックを搭載。外部スピーカーはゲーム音のさまざまな音を明確に再現し、3.5mmヘッドフォンジャックにヘッドフォンを接続することで友達とオンラインチャットが可能（注：外部スピーカーとヘッドフォン/マイクは、有線モードでマイク機能付きの3.5mmプラグのヘッドフォンのみ使用可能）。

6 Macro Definition Functionality:

1. Setting M1 and M2 Keys: Press the M key + M1, then release to enter macro definition mode; the connection indicator light will turn orange. Sequentially press the keys you want to define for the macro (↑, ↓, ←, →, △, ○, □, X, L1, R1, L2, R2, L3, R3). (Note: In macro definition mode, you can define up to 14 key values to a single back button.) After pressing the designated programming key, press M1 to complete the setting. Both back buttons M1 and M2 can be programmed with single or multiple key mappings. The controller supports programming operations for a total of 14 key values: A / B / X / Y / L1 / R1 / L2 / R2 / L3 / R3 / Up / Down / Left / Right. The setting for the M2 key follows the same procedure.
2. Macro definition key function clear: Press the M key and the corresponding macro definition key (M1/M2), the connection indicator will turn orange, then press (M1/M2) again to clear.

7 TURBO Function Settings:

1. Semi-Automatic TURBO Function Setup: Press and hold the T button, then press the desired function key.
 2. Keys That Can Have TURBO Function Set: The following keys can be assigned the TURBO function: △, ○, □, X, L1, R1, L2, R2.
 3. Clearing Set TURBO Function Keys: press and hold the T button + the key that has the TURBO function assigned.
- 8 Product Maintenance and Precautions:**
1. Read the Manual: Please read this specification document thoroughly before use!
 2. Cleaning: If the product gets dusty or dirty, wipe it clean with a damp cloth. Do not use chemical solvents for cleaning!
 3. Storage Conditions: Do not store the product in areas with high humidity, extreme temperatures, or direct sunlight.
 4. Avoid Dust and Pressure: When using or storing the product, try to keep it away from dust and heavy pressure to prolong its lifespan.
 5. Stop Using if Damaged: If the product is submerged in water, damaged, or experiences electrical performance issues due to improper use, please stop using it immediately.
 6. Do Not Use External Heating Devices: Do not attempt to dry the product using external heating devices like microwaves.
 7. Repair Services: If damaged, please send it to a repair department for servicing; do not attempt to disassemble it yourself.
 8. Parental Guidance for Children: Child users should use this product responsibly under parental guidance and should not become overly obsessed with gaming.

説明書


產品編號: TP5-35137

版本: A / 1

1 產品概述:

本產品是一款適用於P-5主機的遊戲手柄，相容PC系統部分遊戲手柄的遊戲使用。支持P-5主機上的任何遊戲版本。

2 產品圖解:

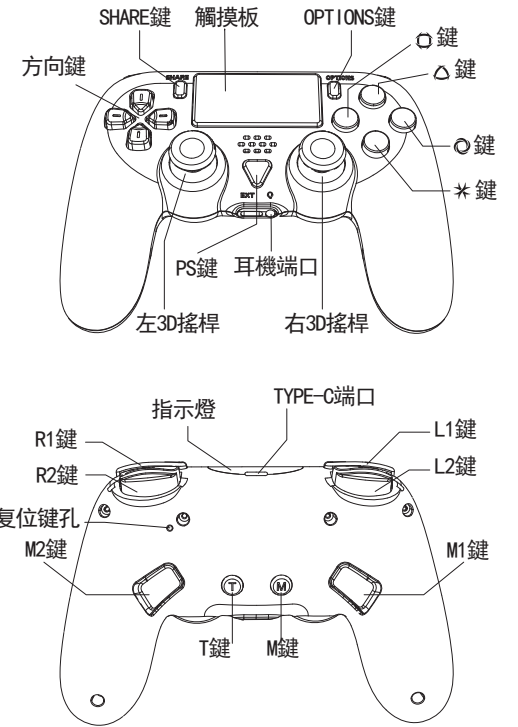

3 產品特點:

- 1、支持非對稱雙馬達振動功能。
- 2、支持P-5主機無線/有線、PC系統無線/有線連接。
- 3、配置了外音喇叭和3.5mm耳機插孔，外音喇叭可以清晰的還原遊戲場景裏的各種聲音，3.5mm耳機插孔插入耳機可與好友線上聊天（注：外音喇叭和耳機/麥克風僅支持在有線模式下並佩戴有麥克風功能的3.5mm插頭耳機使用）
- 4、支持編程功能，可對經常使用的動作鍵或組合鍵連映射及編程到背部按鍵，提高遊戲操控體驗感。
- 5、手柄設計結構符合人體工程學，使用時手感舒適。

4 功能圖表:

功能名稱	功能	備註
USB有線連接	支持	
無線連接	支持	
外音喇叭	有	僅支持有線模式使用
六軸重力感應	有	
觸摸功能	有	
耳機端口	有	僅支持有線模式使用
觸摸板下壓鍵	有	
功能按鍵（三角鍵、圓鍵、叉鍵、正方鍵）	有	
方向鍵（上、下、左、右）	有	
OPTIONS鍵、SHARE鍵、L1鍵、R1鍵、L2鍵、R2鍵、T鍵、M鍵、背鍵M1、背鍵M2	有	
PS鍵（HOME 鍵）	有	
截屏功能	有	
螢幕錄製功能	有	
左、右3D搖杆功能	有	
L3鍵（左3D搖杆下壓按鍵功能）	有	
R3鍵（右3D搖杆下壓按鍵功能）	有	

連接指示燈	有
TURBO功能	有
自定義、宏定義功能	有
振動功能	有

5 使用說明:

(I) 連接P-5

- 1、有線連接：接通主機電源，開啟主機，進入正常待機界面；請依下列方式設定通訊方法，避免設定錯誤造成手柄斷連：“設置”→“配件”→“控制器（通用）”→“連接方法”→“使用USB連接線”；將手柄的USB線插到主機上，按手柄上的PS鍵（HOME 鍵）連接PS5主機。連接成功後藍燈常亮。
- 2、無線連接：第一次連接時請使用數據線輔助連接，連接成功後拔掉數據線即可；手柄睡眠時按下PS鍵即可回連。
- 3、手柄前端的光條亮起，按手柄上的功能鍵可操控遊戲主機，表示手柄連接成功。
- 4、在正常遊戲操作中，手柄會根據遊戲規則產生震動，手柄採用雙馬達。

- 5、視頻錄製功能：雙擊Share鍵可以開啟錄屏功能，再雙擊Share鍵停止。
- 6、截屏功能：長按SHARE鍵可以截屏當前界面。
- 7、耳機麥克風功能：只支持在有線模式使用，如需同時使用2個手柄，請分別使用主機前置、後置USB PORT 上，如同時使用在前置或後置 USB PORT上，會出現其中一個手柄的耳機功能異常；
- 8、在遊戲中如需使用到麥克風功能，需佩戴帶有麥克風的耳機插入到手柄的3.5mm耳機插孔。
- 9、無線模式不支持外音喇叭/耳機/麥克風功能。

(II) 連接PC

有線連接：連接PC電腦時，即插即用。可以玩與該手柄適配的PC/Steam上的遊戲。

無線連接：連接PC電腦時，無線配對模式，在手柄休眠狀態下，先按住 SHARE 鍵再按住 PS鍵 3秒後，連接指示燈閃隔快閃即進入無線配對模式，PC端打開藍牙連接，搜索藍牙名稱“DualSense Wireless Controller”，連接即可；可以玩與該手柄適配的PC/Steam上的遊戲。手柄睡眠時按下PS鍵即可回連。

6 宏定義功能:

1、M1、M2鍵設置:

按下 M鍵+ M1 再放開後進入宏定義設置模式，連接指示燈

為橙色。然後依次按下要宏定義的組合鍵值（↑、↓、←、→、△、○、□、X、L1、R1、L2、R2、L3、R3），（注意宏定義模式下可以定義最多14個鍵值到單個背鍵上），然後按下設定編程的按鍵後，再按下 M1 完成設定動作。背鍵M1、M2均可以設置單個和多個按鍵編程，手柄A/B/X/Y/L/R/ZL/ZR/L3/R3/上/下/左/右共14個鍵值均支持編程操作。M2鍵設置同理；

- 2、宏定義鍵功能清除：按M鍵和對應的宏定義按鍵（“M1 / M2”），連接指示燈為橙色，再按（“M1/M2”）即可清除。

7 TURBO 功能設置:

- 1、半自動TURBO 功能設置：按住T鍵，再按功能鍵。
- 2、可設置TURBO功能的按鍵：△、○、□、X、L1、R1、L2、R2。
- 3、清除已設置TURBO功能按鍵：按住T鍵+已設置TURBO功能的功能鍵。

8 產品的保養與注意事項:

- 1、使用前請詳細閱讀本規格書！
- 2、當本產品有灰塵或污垢時，請使用濕布擦拭乾淨即可，禁止使用化學溶劑擦拭！
- 3、請勿將本產品存放在潮氣極重、高溫或者太陽直射的地方。
- 4、本產品在使用或存放時，應儘量避開灰塵、重壓，以免影響使用壽命。
- 5、本產品因使用不當而造成浸水、撞壞或摔壞，出現電氣性能問題，請停止使用。
- 6、不要用微波爐等外部加熱設備對其進行乾燥處理。
- 7、如有損壞請及時送維修部門處理，切勿自行拆卸。
- 8、兒童用戶請在家長指導下合理使用本產品，請勿癡迷遊戲。

4. プログラミング機能をサポートし、よく使うアクションボタンやコンボボタンをマッピングおよびプログラミングして背面ボタンに割り当てすることで、ゲーム操作体験を向上。
5. コントローラーのデザイン構造は人間工学に基づいており、使用時に快適な感触を提供。

4 機能表:

機能名	機能	備考
USB有線接続	支持	
無線接続	支持	
外部スピーカー	有	有線モードでのみ使用可能
六軸重力センサー	有	
タッチ機能	有	
ヘッドフォンジャック	有	僅支持有線模式使用
タッチパッド押下ボタン	有	
機能ボタン（△ボタン、○ボタン、Xボタン、□ボタン）	有	
方向キー（上、下、左、右）	有	
OPTIONSキー、SHAREキー、L1キー、R1キー、L2キー、R2キー、Tキー、Mキー、背面ボタンM1、背面ボタンM2	有	
PSキー（HOMEキー）	有	
スクリーンショット機能	有	
スクリーン録画機能	有	
左右3Dスティック機能	有	
L3キー（左3Dスティック押下機能）	有	
R3キー（右3Dスティック押下機能）	有	
接続インジケータ	有	
TURBO機能	有	
カスタマイズ・マクロ定義機能	有	
振動機能	有	

5 使用説明:

(I) P-5への接続

1、有線接続：本体の電源を入れ、通常の待機画面に入ります。以下の手順で通信方法を設定し、設定ミスによるコントローラーの切断を避けてください。「設定」→「周辺機器」→「コントローラー（一般）」→「接続方法」→「USB接続を使用」。コントローラーのUSBケーブルを本体に

接続し、コントローラーのPSボタン（HOMEボタン）を押してP-5本体に接続します。接続成功後、青いランプが常に点灯します。

2. 無線接続：初回接続時はデータケーブルを使用して接続し、接続成功後はデータケーブルを抜いてください。コントローラーがスリープ状態の時はPSボタンを押すことで再接続できます。
3. コントローラー前面の光条が点灯し、コントローラー上の機能ボタンを押すことでゲーム機を操作でき、コントローラーの接続成功を示します。
4. 通常のゲーム操作中、コントローラーはゲームルールに応じて振動します。コントローラーはデュアルモーター方式です。
5. 動画録画機能：Shareボタンを二度押すことで録画機能が開始され、再度二度押すことで停止します。
6. スクリーンショット機能：SHAREボタンを長押しすると現在の画面をスクリーンショットとして保存します。
7. ヘッドフォン・マイク機能：有線モードでのみサポートされています。同時に2つのコントローラーを使用する場合は、本体前面と背面のUSBポートにそれぞれ接続してください。同じポートで使用する、一方のコントローラーのヘッドフォン機能に異常が発生する可能性があります
8. ゲーム中にマイク機能を使用する場合は、マイク付きヘッドフォンをコントローラーの3.5mmヘッドフォンジャックに挿入する必要があります。
9. 無線モードでは外部スピーカー/ヘッドフォン/マイク機能はサポートされていません。

(II) PCへの接続

有線接続：PCに接続する際は、プラグアンドプレイで使用可能です。対応するPC/Steam上のゲームでプレイできます

無線接続：PCに無線ペアリングモードで接続する際、コントローラーがスリープ状態の場合は、SHAREボタンを押しながらPSボタンを3秒間押し続けます。接続インジケータが早く点滅し始めたなら無線ペアリングモードに入ります

PC間でBluetooth接続を開き、「DualSense Wireless Controller」を検索して接続します。対応するPC/Steam上のゲームでプレイ可能です。コントローラーがスリープ状態の場合はPSボタンを押すことで再接続できます。

6 マクロ定義機能:

1. M1、M2キーの設定: Mキー + M1を押して放すと、マクロ定義設定モードに入ります。接続インジケータはオレンジ色になります。その後、マクロ定義したいキーの組み合わせ（↑、↓、←、→、△、○、□、X、L1、R1、L2、R2、L3、R3）を順に押します（注意：マクロ定義モードでは最大14個のキーを1つの背面ボタンに定義できます）。設定したいプログラミングボタンを押した後、M1を押すことで設定が完了します。背面ボタンM1とM2は、それぞれ単独または複数のボタンをプログラミングすることができ、コントローラーのA/B/X/Y/L1/R1/L2/R2/L3/R3/上/下/左/右の合計14個のキー

がプログラミング操作に対応しています。

M2キーの設定も同様です。

2. マクロ定義キー機能のクリア: Mキーと対応するマクロ定義キー（“M1/M2”）を押し続けると接続インジケータがオレンジ色になります。その後、“M1”または“M2”を再度押すことでクリアできます。

7 TURBO機能設定:

1. 半自動TURBO機能設定: Tキーを押し続けたまま、機能ボタンを押します。
2. TURBO機能を設定できるボタン: △、○、□、X、L1、R1、L2、R2。
3. 設定済みのTURBO機能ボタンのクリア: TURBO機能をクリアするには、Tキーを押し続けたまま、設定済みのTURBO機能ボタンを押します。

8 製品の保養と注意事項:

1. 使用前に本仕様書をよくお読みください！
2. 本製品にはこりや汚れがある場合は、湿った布で拭き取るだけで大丈夫です。化学溶剤を使用して拭くことは禁止されています！
3. 本製品は湿気が多い場所、高温、または直射日光の当たる場所に保管しないでください。
4. 本製品を使用または保管する際は、できるだけこりや重圧を避けて、使用寿命に影響を与えないようにしてください。
5. 使用不当により浸水、衝撃、または落下によって電気性能に問題が生じた場合は、使用を中止してください。
6. 電子レンジなどの外部加熱装置で乾燥処理を行わないでください。
7. 破損がある場合は、速やかに修理部門に持ち込んでください。自己分解は絶対にしないでください。
8. 子供のユーザーは保護者の指導の下で本製品を適切に使用してください。ゲームに夢中にならないようにしましょう。

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.