


ONE PAGE FOLDED, Black and White Copy

MANUAL (ENGLISH)

Operating the Bluetooth® Audio Transmitter

1. Using included Micro USB Cable and a USB wall charger (*not included*), fully charge your new Xtreme Home Theater Bluetooth® Audio Transmitter for a minimum of 3 hours. The LED charging indicator will illuminate red when charging. It will illuminate green when fully charged.
2. Connect the Transmitter to an audio source such as a TV or home stereo using the 3.5mm jack & included 3.5mm Aux Cable. (For audio devices with RCA output, the RCA to 3.5mm Adapter may be used).
3. Locate your Bluetooth® headphones or speaker that you would like to stream audio to. Be sure to power them on and activate pairing mode.
4. Turn on the Transmitter by switching the power switch (on the side) to the "ON" position. The Bluetooth LED indicator will illuminate solid blue.
5. Bluetooth® Transmitter begins searching for nearby Bluetooth® devices (Allow up to 20 sec for the Transmitter to pair).
6. Once the Transmitter and Bluetooth audio device are paired successfully the LED indicator will begin to flash blue slowly, indicating that the Transmitter is connected and ready to use.

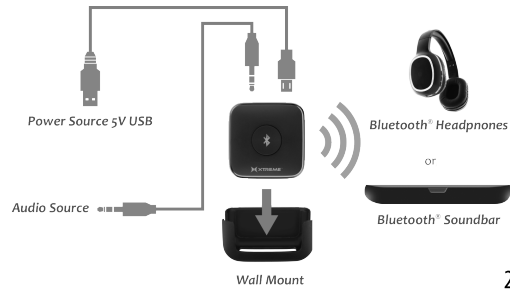

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RADIO FREQUENCY EXPOSURE STATEMENT

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed or mobile condition. The minimum separation distance is 20 cm.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this occurs, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult an experienced radio/TV technician for help or contact the customer service number below.

SAFETY AND CARE INSTRUCTIONS:

Please read and understand all instructions before using this product.

- Be sure to keep these instructions.
- Do not attempt to disassemble the unit. Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user at risk and void warranty.
- Do not expose this product to dripping or splashing of drinks or liquids of any kind.
- Avoid long exposure to direct sunlight, which may cause damage.
- Do not use the product in a strong magnetic field.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- Do not puncture or harm the exterior surface of the product in any way. This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit.
- In order to prolong battery life, turn off when not in use.

WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty or authority to operate the equipment.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

**Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.*

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product,
please contact Customer Service at
customerservice@xtremecables.com



Contenu du Colis:

1. Transmetteur Audio Bluetooth®
2. Montage mural
3. Câble Micro USB
4. Câble de 3.5 mm
5. Adaptateur 3.5mm vers RCA

Manuel

855-999-8041 | www.xtremecables.com

ATTENTION

- ATTENTION**
- Les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler la garantie de l'utilisateur ou son autorisation à utiliser l'équipement.
- N'utilisez pas cet appareil à des fins autres que celles prévues pour l'utilisateur. Cela pourrait endommager l'appareil et annuler la garantie.
 - Ne perforez pas et n'endommagez en aucun cas la surface extérieure du produit. Le produit n'est pas un jouet. Tenir hors de portée des enfants.
 - N'exposez pas les piles ou le bloc-piles à une chaleur excessive ou à une flamme nue.
 - N'exposez pas l'appareil à des températures extrêmement élevées ou basses car cela raccourcirait la durée de vie de l'appareil, détruirait la batterie et / ou déformerait certaines pièces.
 - N'utilisez pas de solvants de nettoyage abrasifs pour nettoyer l'appareil.
 - Pour prolonger la durée de vie de la batterie, éteignez-la lorsqu'elle n'est pas utilisée.

REMARQUE

DÉCLARATION DE LA FCC SUR L'EXPOSITION AUX BESOINS RADIO

DÉCLARATION DE LA FCC SUR L'EXPOSITION AUX BESOINS RADIO

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF. L'appareil peut être utilisé à l'état fixe ou mobile. La distance de séparation minimale est de 20 cm.

(1) Cet appareil ne doit pas causer d'interférences nuisibles, et la fonctionnement est soumis aux deux conditions suivantes:

(2) Cet appareil doit accepter toutes les interférences reçues, y compris celles pouvant entraîner un fonctionnement indésirable.

CONSIGNES DE SÉCURITÉ ET D'ENTRETIEN:

Xtreme garantit ses produits pour une année contre les défauts de fabrication sous l'usage régulier du consommateur avec la réception originale de l'achat au détail.

Nous remercions nos produits et nous voulons vous fournir un remplacement, si nécessaire, mais nous devons connaître le problème avant que le produit se présente encore sous garantie. Si vous découvrez un défaut couvert par cette garantie, contactez-nous pour recevoir un remplacement. Pour utiliser la garantie des produits, le client doit fournir la preuve du reçu des détaillants.


La garantie de Xtreme est limitée à nos produits uniquement. Notre garantie ne couvre pas le coût de remplacement ou de réparation d'un accessoire tiers, d'un appareil électronique ou d'un bien personnel.

pour votre produit, veuillez contacter le service à la clientèle au
customerservice@xtremecables.com

customer.service@xtremecables.com

GARANTEE UN AN

STREAM TV AUDIO TO **BLUETOOTH®** HEADPHONES OR SOUNDBARS

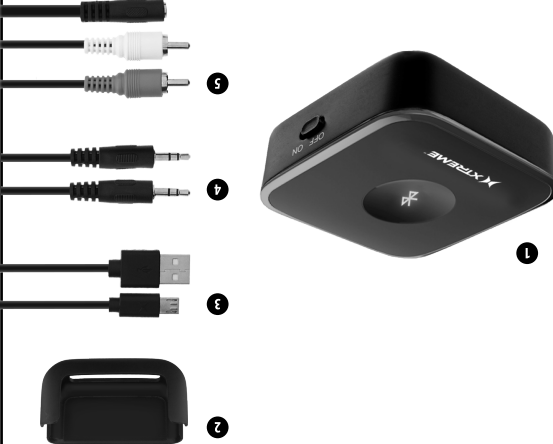

Package Contents:

1. Bluetooth® Audio Transmitter
2. Wall Mount
3. Micro USB Cable
4. 3.5mm Cable
5. 3.5mm to RCA Adapter

Manual

855-999-8041 | www.xtremecables.com

MANUEL (FRANÇAIS)

1. En utilisant le câble Micro USB inclus et un chargeur mural USB (*non inclus*), chargez complètement votre nouvel émetteur audio Bluetooth®. Xtrème Home Theater pendant au moins 3 heures. Il voyant de charge à LED 5 s'allumera en rouge lors de la charge. Il s'allumera en vert une fois complètement chargé.
2. Connectez l'émetteur à une source audio telle qu'un téléviseur ou une chaîne stéréo à l'aide de la prise jack 3,5 mm et du câble auxiliaire 3,5 mm fourni. (Pour les périphériques audio avec sortie RCA, vous pouvez utiliser l'adaptateur RCA à 3,5 mm).
3. Localisez le casque ou le haut-parleur Bluetooth® vers lequel vous le souhaitez diffuser l'audio. Assurez-vous de les allumer et d'activer le mode d'appairement.
4. Allumez l'émetteur en plaçant l'interrupteur d'alimentation (sur le côté) en position "ON". Le voyant Bluetooth s'allume en bleu.
5. L'émetteur Bluetooth® commence à rechercher les appareils Bluetooth® à proximité (attendez au moins 20 secondes entre l'émetteur et le coupleur).
6. Une fois que l'émetteur et le périphérique audio Bluetooth ont été associés avec succès, le voyant commence à clignoter lentement en bleu, indiquant que l'émetteur est connecté et prêt à être utilisé.