User Manual
BSSK8086

(Fold Inward) – – – – ▶   **(Back Cover)**   **(Front Cover)**

Compliance Information

Warranty Information

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Instruction Manual
SONIC SPLASH
Wireless Rugged LED Speaker
XY-AU073

Before You Begin...
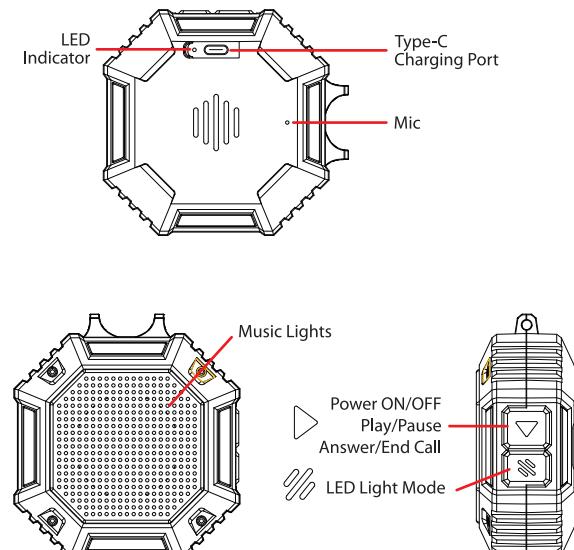
READ CAREFULLY AND KEEP THIS MANUAL

⚠ **Caution**
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
• **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
• Do not disassemble, modify, or repair the device.
• Do not expose to extreme temperatures (heat or cold), or open flames.
• **Do not submerge in water.**
• Low power may cause poor Bluetooth connection or sound distortion.
• Do not overcharge battery.
• If using with a USB adapter, make sure the adapter is not damaged.
• Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
• The included batteries should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of batteries.

In the Box
• BSSK8086 - **Wireless Speaker** (x1)
• USB Charging Cable (x1)
• User Manual (x1)

Location of Controls

LED Indicator
Type-C Charging Port
Mic
Music Lights
Power ON/OFF Play/Pause Answer/End Call
LED Light Mode

Getting Started

Charging the Speaker
Charge speaker fully before first use.
Plug the small connector of the supplied USB charging cable into the charging port on the speaker. Plug the large connector into a USB power source, such as the USB port on a computer or a 5V USB adapter *(not included)* and plug into a wall outlet.

The LED Indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard, indicating that it needs to be recharged.

Powering ON/OFF
• **Press+Hold** the ▷ button to power the speaker ON/OFF
• When powered on, a tone will be heard, and the speaker will enter Bluetooth pairing mode. It may automatically re-pair to a previously-paired device in range.

Note: The speaker will automatically power OFF after 5 minutes without a Bluetooth connection.

Bluetooth Pairing
1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The Music Lights will FLASH RGB colors.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **ISBW104** from the list of found devices.
3. After a successful pairing, a tone will be heard and the Music Lights will turn SOLID PURPLE.

Media Playback
• **Press** the ▷ button to PAUSE/RESUME playback

Phone Calls
• **Press** the ▷ button to ANSWER/END a phone call
• **Press+Hold** the ▷ button to REJECT an incoming phone call
• **2xPress** the ▷ button to REDIAL the last outgoing phone number

Music Lights
• **Press** the ※ button to toggle between 4 RGB light modes
• **Press+Hold** the ※ button to turn the Music Lights OFF