


EARISE

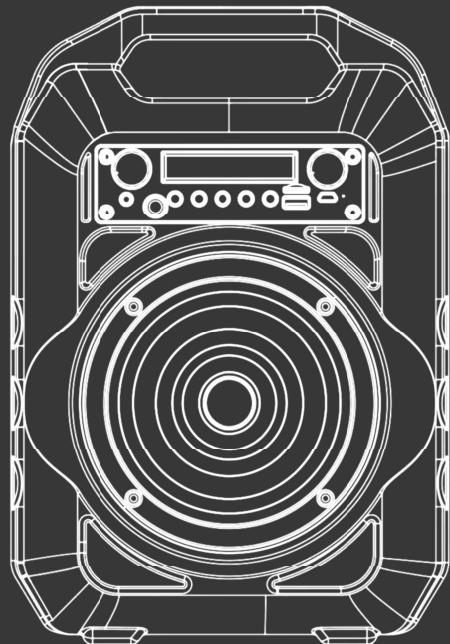


T35 |   
Portable PA system

# GENERAL DESCRIPTION

This Compact & Portable Bluetooth PA Speaker by EARISE provides wireless entertainment and gives you easy access to your music. It has a Bluetooth system so you can easily stream music from your iPhones, Androids, iPad, Tablets, PCs, & so on.

# FUNCTIONAL DESCRIPTION

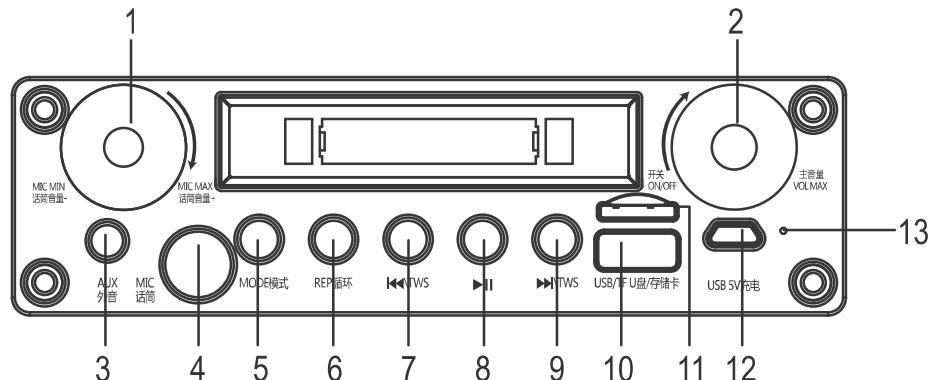

①	Microphone Volume	⑥	Rep	⑪	TF card Slot
②	ON/OFF/ Master Volume	⑦	Previous song/Tws	⑫	USB 5V input port
③	Aux in port	⑧	Play /Pause	⑬	Charging indicator
④	Mic in	⑨	Next song/Tws		
⑤	Mode	⑩	USB Flash slot		

## A. Front Control Panel Description

1. Microphone Volume: Turning clockwise or counterclockwise to adjust mic volume when the mic is plugged/connected.
2. ON/OFF/Master Volume: Turning counterclockwise to its end, the speaker will shut down. From shut down state, turning clockwise will turn on the speaker. To adjust the master volume, turning clockwise or counterclockwise to adjust volume up and down.
3. AUX: AUX-IN port
4. MIC: Wire microphone port
5. Mode: short press to switch mode: Aux in-USB-BT-FM (Note: USB Mode can only be activated when the USB drive is inserted.)
6. Rep: Short press to adjust the repeat mode.
7. Previous Song/TWS: Short press for the previous song.
8. Play/Pause: Short press to play or pause the sound.
9. Next Song/TWS: Short press for the next song.
10. USB: USB drive slot.
11. TF: TF card slot.
12. USB 5V: Speaker charging port (use provided 5V charging cable)
13. Charging Indicator Light: Please see Section F. for more detail.

## B. Screen Description



1. **▶||** : Under 'USB/TF Card' mode, this symbol indicates speaker in 'Pause'; Under 'Line in' and 'FM' mode, this symbol indicates speaker in 'Mute'.
2. **U/TF** : Under 'USB/TF Card' mode, this symbol is ON.
3. **MIC** : When wired or wireless microphone is connected, this symbol is ON.
4. **88:88** : Under 'Line in' mode, it will display 'LINE IN'; under 'FM' mode, it will display current radio channel; under 'USB/TF Card' mode, it will display song playing time.
5. **■** : When the battery is low, this symbol is ON. Please insert USB 5V cable to charge the speaker. When the battery is low, speaker volume will drop to 70%. After recharging, the volume will be resume to 100%.

## C. MP3 Function Description

1. **USB:** Insert USB drive will automatically play songs from the USB drive (MP3/WMA format are supported).
2. **TF:** Insert TF Card will automatically play songs from the TF Card (MP3/WMA format are supported).
3. **Play/Pause:** Short press to play or pause the sound.
4. **Previous Song:** Short press to select the previous song.
5. **Next Song:** Short press to select the next song.

## D. Bluetooth Connection

1. Press mode button to switch it to Bluetooth mode, turn on Bluetooth on your Bluetooth devices (cellphone, computer, etc.), search for Bluetooth device 'EARISE.T35' then click it to pair, there will be a tone sound from the speaker after the device has been successfully paired.
2. Play/Pause: Short press to play or pause the sound.
3. Previous Song/Next Song: Short press for previous/next song.
4. Clear paired device/Re-pair device: In Bluetooth connected mode, hold the "Mode" button will clear

## E. Radio Function Description

1. Press mode button to switch it to Radio mode, hold 'Play/Pause' button to search radio stations automatically. Please search radio station when first use this function.
2. Play/Pause: Hold to search radio station automatically, short press to play or pause the sound.
3. Previous Song/Next Song: Short press for previous/next stored radio station.

## F. Charging Indication and battery capacity indication

1. Battery Indicator Light: When the battery indicator light is flashing, the speaker has low battery and need to be charged. While the light is flashing, the speaker voice will reduce to 70% of the max volume.
2. Please use the Charing cable come with the product. Otherwise, there will be a risk of fire or unexpected danger.
3. While charging, the battery indicator light will turn RED. When the product is fully charged, the RED light will turn off.

## Note:

- \* For the first time of use, please charge the product for up to 8 hours to reach its optimal performance.
- \* Please re-charge the speaker once for a while if it is not in use for a long time.
- \* Stored the speaker at 40% charge in a cool place when not in use.

## G. REMOTE CONTROLLER FUNCTION DESCRIPTION

1. Mute: Press once to mute, press again to unmute.
2. Mode: Short press to switch Aux in-USB-BT-FM.
3. Play/Pause: Under Bluetooth Mode, USB drive Mode, short press to play/pause; Under AUX IN mode, single press to mute.
4. Previous song: Under Bluetooth Mode, USB drive Mode, short press for the previous song function; Under USB drive mode, Press and hold to rewind.
5. Next song: Under Bluetooth Mode, USB drive Mode, short press for the previous track function; Under USB drive mode, Press and hold to fast forward.
6. Volume +/-: Single press the decrease button, the volume will decrease, hold the volume to continue to decrease; press the increase button, the volume will increase, hold the volume to continue to increase.
7. Sound effect/EQ: Not Supported for this T35 Model.
8. REP: When playing with a USB flash drive, single press switches between the current song single loop playback and all song playback.
9. 0-9 number buttons: When using the USB flash drive playback status, you can quickly select the desired track. For example, if you need to select the 258th song to play, press the number buttons “2”, “5” and “8” in order. After waiting for 1 second, it will automatically switch to the 258th song for playback.

## IMPORTANT NOTES

1. The product shall not be placed in the environment of high temperature, damp of the system,
2. The product shall not expose to water droplets, splashes of water, or rain.
3. To avoid injury or electric shock, do not open the back panel.
4. For technical difficulty, please contact our dedicated customer support at [support@earise.com](mailto:support@earise.com)
5. To prevent the explosion of the battery and other hazards, the product shall not be placed in high temperature, location of the fire, etc.
6. This product is designed to protect its battery: When the battery is low, speaker volume will drop to 70%. After recharging, the volume will be resume to 100%.

## WHAT IN THE BOX

Main unit	1	Remote control	1
User manual	1	Wireless microphone	1
USB Charging Cable	1		

## TECHNICAL SPECIFICATIONS

RMS Power : 12W

Sound System : 5.25" Speaker

R.Frequency : 90Hz-20kHz

S/N Ratio : >60dB

Rechargeable Battery : 3600mAh, 3.7V Lithium

Battery Operated remote controller : Require 2 AAA Batteries, AAA Battery NOT included

Battery Operated Microphone : Requires (2) x 'AA' Batteries, AA Battery NOT included

Digital Audio File Compatibility : MP3, WMA, ACC

Maximum USB/Micro SD Support Size : 32 GB

Power Input : 5V USB Charing Cable

Speaker Dimensions (L x W x H) : 8.86 x 5.51 x 13.39 -inches



# ONLINE PRODUCT REGISTRATION

## CLAIM YOUR EXTENDED 1YEAR WARRANTY FOR FREE!

Thank you for purchasing a EARISE product.

Who does not want a free extended warrant? Come over and fill out the information on our website to claim your extended 1 year warranty for free.

### STEP 1.

Email us your purchase proof ( ORDER # from amazon.com ) to the following email address:

[support@earise.com](mailto:support@earise.com)

### STEP 2.

We will confirm your warranty request email within 24 hours. All done!

Customer Care




Please scan this bar code to visit our customer care page.

OR send us email at [support@earise.com](mailto:support@earise.com)

# DESCRIPCIÓN GENERAL

Este altavoz PA Bluetooth compacto y portátil de EARISE ofrece entretenimiento inalámbrico y le brinda un fácil acceso a su música. Tiene un sistema Bluetooth para que pueda transmitir música fácilmente desde sus iPhones, androides, iPad, tabletas, PC, etc.

## Panel de control

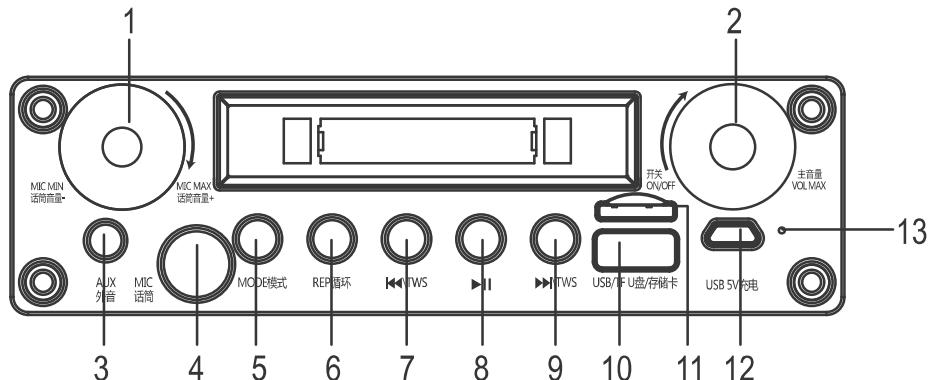

①	Volumen del micrófono	⑥	Representante	⑪	TF
②	ON / OFF / Volumen maestro	⑦	Canción anterior / TWS	⑫	USB 5V
③	AUX	⑧	Reproducir / Pausa	⑬	Luz indicadora de carga
④	MIC	⑨	Siguiente canción / TWS		
⑤	Modo	⑩	USB		

## A. Descripción del panel de control frontal

1. Volumen del micrófono: girando en sentido horario o antihorario para ajustar el volumen del micrófono cuando el micrófono está enchufado / conectado.
2. ON / OFF / Master Volume: girando en sentido antihorario hasta el final, el altavoz se apagará. Desde el estado de apagado, al girar en sentido horario se encenderá el altavoz. Para ajustar el volumen maestro, gire en sentido horario o antihorario para subir y bajar el volumen.
3. AUX: puerto AUX-IN
4. MIC: puerto de micrófono de alambre
5. Modo: presione brevemente para cambiar el modo: Aux in-USB-BT-FM (Nota: el modo USB solo se puede activar cuando se inserta la unidad USB).
6. Rep: presione brevemente para ajustar el modo de repetición.
7. Canción anterior / TWS: presione brevemente la canción anterior.
8. Reproducir / Pausa: presione brevemente para reproducir o pausar el sonido.
9. Nest Song / TWS: presione brevemente para la siguiente canción.
10. USB: ranura para unidad USB.
11. TF: ranura para tarjeta TF.
12. USB 5V: puerto de carga del altavoz (use el cable de carga de 5V proporcionado)
13. Indicador luminoso de carga: consulte la Sección F. para obtener más detalles.

## B. Descripción de la pantalla



1. ►|| En el modo "Tarjeta USB / TF", este símbolo indica el altavoz en "Pausa"; En el modo "Línea en" y "FM", este símbolo indica el altavoz en "Silencio".
2. U/TF En el modo "Tarjeta USB / TF", este símbolo está activado.
3. MIC Cuando se conecta un micrófono con cable o inalámbrico, este símbolo está ENCENDIDO.
4. 88:88 En el modo "Línea en", se mostrará "LINE IN"; en modo "FM", mostrará el canal de radio actual; en el modo "Tarjeta USB / TF", mostrará el tiempo de reproducción de la canción.
5.  Cuando la batería está baja, este símbolo está encendido. Inserte un cable USB de 5V para cargar el altavoz. Cuando la batería está baja, el volumen del altavoz caerá al 70%. Despues de recargar, el volumen se reanudará al 100%.

## C. Descripción de la función MP3

1. USB: Insertar unidad USB reproducirá automáticamente canciones desde la unidad USB (se admiten formatos MP3 / WMA).
2. TF: Insertar tarjeta TF reproducirá automáticamente canciones de la tarjeta TF (se admiten formatos MP3 / WMA).
3. Reproducir / Pausa: presione brevemente para reproducir o pausar el sonido.
4. Canción anterior: presione brevemente para seleccionar la canción anterior.
5. Siguiente canción: presione brevemente para seleccionar la siguiente canción.

## D. Conexión Bluetooth

1. Presione el botón de modo para cambiarlo al modo Bluetooth, active Bluetooth en sus dispositivos Bluetooth (teléfono celular, computadora, etc.), busque el dispositivo Bluetooth 'EARISE.T35' y luego haga clic para emparejarlo, se escuchará un sonido de tono el altavoz después de que el dispositivo se haya emparejado con éxito.
2. Reproducir / Pausa: presione brevemente para reproducir o pausar el sonido.
3. Canción anterior / Canción siguiente: presione brevemente para la canción anterior / siguiente.
4. Borrar el dispositivo emparejado / Vuelva a emparejar el dispositivo: en el modo conectado por Bluetooth, mantenga presionado el botón "Modo" para borrar el dispositivo emparejado y pasar al estado de espera de emparejamiento.

## E. Descripción de la función de radio

1. Presione el botón de modo para cambiarlo al modo Radio, mantenga presionado el botón "Reproducir / Pausa" para buscar estaciones de radio automáticamente. Busque la estación de radio cuando use esta función por primera vez.
2. Reproducir / Pausa: mantenga presionado para buscar emisoras de radio automáticamente, presione brevemente para reproducir o pausar el sonido.
3. Canción anterior / Canción siguiente: presione brevemente para la estación de radio almacenada anterior / siguiente.

## F. Indicación de carga e indicación de capacidad de batería

1. Luz indicadora de la batería: cuando la luz indicadora de la batería parpadea, el altavoz tiene poca batería y debe cargarse. Mientras la luz parpadea, la voz del altavoz se reducirá al 70% del volumen máximo.
2. Utilice el cable de carga que viene con el producto. De lo contrario, habrá riesgo de incendio o peligro inesperado.
3. Mientras se carga, la luz indicadora de la batería se pondrá ROJA. Cuando el producto está completamente cargado, la luz ROJA se apagará.

## Nota:

- \* Por primera vez de uso, cargue el producto por hasta 8 horas para alcanzar su rendimiento óptimo.
- \* Vuelva a cargar el altavoz una vez por un tiempo si no lo usa durante mucho tiempo.
- \* Almacenado el altavoz al 40% de carga en un lugar fresco cuando no está en uso.

## G. Descripción de la función del control remoto

1. Silenciar: presione una vez para silenciar, presione nuevamente para desactivar el silencio.
2. Modo: presione brevemente para cambiar Aux in-USB-BT-FM.
3. Reproducir / Pausa: en modo Bluetooth, modo de unidad USB, presione brevemente para reproducir / pausar; En modo AUX IN, presione una vez para silenciar.
4. Canción anterior: en modo Bluetooth, modo de unidad USB, presione brevemente la función de canción anterior; En modo de unidad USB, mantenga presionado para rebobinar.
5. Siguiente canción: en modo Bluetooth, modo de unidad USB, presione brevemente para la función de pista anterior; En el modo de unidad USB, mantenga presionado para avanzar rápidamente.
6. Volumen +/-: presione una vez el botón de disminución, el volumen disminuirá, mantenga presionado el volumen para continuar disminuyendo; presione el botón de aumento, el volumen aumentará, mantenga presionado el volumen para continuar aumentando.
7. Efecto de sonido / EQ: no compatible con este modelo T35.
8. REP: cuando se reproduce con una unidad flash USB, una sola pulsación cambia entre la reproducción de bucle único de la canción actual y toda la reproducción de la canción.
9. Botones numéricos 0-9: cuando utilice el estado de reproducción de la unidad flash USB, puede seleccionar rápidamente la pista deseada. Por ejemplo, si necesita seleccionar la canción número 258 para reproducir, presione los botones numéricos "2", "5" y "8" en orden. Después de esperar 1 segundo, cambiará automáticamente a la canción 258 para reproducción.

## NOTAS IMPORTANTES

1. El producto no debe colocarse en el entorno de alta temperatura, humedad del sistema,
2. El producto no debe exponerse a gotas de agua, salpicaduras de agua o lluvia.
3. Para evitar lesiones o descargas eléctricas, no abra el panel posterior.
4. Por dificultades técnicas, póngase en contacto con nuestro servicio de atención al cliente dedicado en [support@earise.com](mailto:support@earise.com)
5. Para evitar la explosión de la batería y otros peligros, el producto no debe colocarse a alta temperatura, ubicación del incendio, etc.
6. Este producto está diseñado para proteger su batería: cuando la batería está baja, el volumen del altavoz se reducirá al 70%. Despues de recargar, el volumen se reanudará al 100%.

## QUE EN LA CAJA

Unidad principal	1	Mando a distancia	1
Manual de usuario	1	Micrófono inalámbrico	1
Cable de carga USB	1		

## ESPECIFICACIONES TÉCNICAS

Potencia RMS : 12W  
Sistema de sonido : altavoz de 5.25 "  
R. Frecuencia : 90Hz-20kHz  
Relación señal / ruido : > 60dB  
Batería recargable : 3600 mAh, 3.7 V de litio  
Mando a distancia con pilas : requiere 2 pilas AAA, pila AAA NO incluida  
Micrófono con pilas : Requiere (2) x pilas "AA", pila AA NO incluida  
Compatibilidad de archivos de audio digital : MP3, WMA, ACC  
Tamaño máximo de soporte USB / Micro SD : 32 GB  
Entrada de energía : cable de carga USB de 5V  
Dimensiones del altavoz (L x W x H) : 8.86 x 5.51 x 13.39 pulgadas

## REGISTRO DE PRODUCTO EN LÍNEA

**¡SOLICITE SU GARANTÍA EXTENDIDA DE 1 AÑO GRATIS!**

Gracias por comprar un producto EARISE.

¿Quién no quiere una orden extendida gratuita? Ven y completa la información en nuestro sitio web para reclamar tu garantía extendida de 1 año gratis.

### PASO 1.

Envíenos un correo electrónico con su comprobante de compra (PEDIDO # de amazon.com) a la siguiente dirección de correo electrónico:

[support@earise.com](mailto:support@earise.com)

### PASO 2.

Le confirmaremos su solicitud de garantía por correo electrónico dentro de las 24 horas. ¡Todo listo!

### Atención Al Cliente



Escanee este código de barras para visitar nuestra página web de atención al cliente.

O envíenos un correo electrónico a  
[support@earise.com](mailto:support@earise.com)

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



---

**[www.earise.com](http://www.earise.com)**  
**[support@earise.com](mailto:support@earise.com)**