

说明书尺寸: 540 x 80mm

2024.03.04增加FCC ID:2ANVR-A12

MINISO

WE BARE BEARS COLLECTION SEASIDE MUSIC FESTIVAL WIRELESS SPEAKER
COLLECTION OURS POUR UN ET UN
POUR TOUS HAUT-PARLEUR SANS FIL
مجموعة ديد ثلاثة موزان موسيقى ساحل مسعاسات الاسكيتا
ESCANALOSOS COLECCIÓN FESTIVAL DE MÚSICA ALTAVOZ INALÁMBRICO
咱們裸熊海邊音樂節系列藍牙音箱

MODEL: A12

USER MANUAL

使用說明書

Dear customer

Thank you for using Miniso Wireless Speaker, Please read this manual carefully before use. Using it properly for best product performance. MINISO Wireless Speaker has stylish appearance, true-to-life sound and multiple functions. The whole series have the patent of appearance design. The system adopting the industry-leading technology enables you to enjoy the excellent sound effects anytime at home, outdoors, during a trip or during work. It provides perfect experience when you play music on your laptops, digital music players and other audio-visual players, leading you to a better life with beautiful music!

Cautions

1. Store and use at room temperature.
2. Do not expose to rain or moisture.
3. Do not throw the product to avoid damage caused by dropping.
4. Do not disassemble, modify or repair the product yourself.
5. This product is equipped with an irreplaceable built-in lithium battery. Do not discard or toss in fire to avoid danger.
6. To prevent performance from being interfered, keep away from strong magnetic objects.
7. If you are not going to use for a long time, charge the speaker once every 3 months to extend the lifespan of battery.

Product Overview



① Power/Pause/Play ② Type-C Charging Port

Functions

Function	Instructions
Power	Long press ① to turn on/off
Play/Pause	Short press ① to pause/play
Indicator Light	After turning on the blue light blinks slowly, turns constantly on after Bluetooth being connected. Red light is constantly on when charging, and turns off when fully charged
Type-C	Type-C charging port

Accessories

User Manual*1, Speaker*1, Type-C Cable*1

Troubleshooting

1. The wireless speaker is unable to be paired with the cell phone.
Solution: Confirm if the wireless speaker is in pairing mode, and if the Bluetooth on your phone is toggled on. Then delete the product in the list, pair it with your phone again according to the User Manual.
2. The wireless speaker is unable to be turned on.
Solution: Confirm the battery level. Charge the speaker if it is needed.
3. Can the battery of the wireless speaker be replaced?
Solution: No, this is lithium polymer battery, which is irreplaceable.
4. Can I use the wireless speaker at a high volume for a long time?
Solution: To extend the lifespan of the wireless speaker, it is not recommended to play it at a high volume for a long time.
5. The link between the wireless speaker and the cell phone has been disconnected within 10 meters.
Solution: Bluetooth is wireless so that it is very sensitive to objects between the speaker and the connected device. Check if there are any metal or other objects that may affect connection within the effective distance.
6. Cannot hear audio playing when the speaker is connected to the computer or phone.
Solution: Check whether the computer's audio output is already connected to wireless device and whether the Bluetooth in the computer supports AZDP protocol. Make sure the volume is up on your phone or computer.
7. Can I operate the Apps of my phone through the speaker after pairing the wireless speaker with the phone?
Answer: Some apps may not support being operated through the speaker due to their settings.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorienting the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected.—Consult the dealer or an experienced radio/TV technician for help.

Cher client

Nous vous remercions d'avoir utilisé le haut-parleur sans fil Miniso. Veuillez lire attentivement ce manuel avant utilisation. Utilisez-le correctement pour obtenir les meilleures performances du produit. Le haut-parleur sans fil MINISO ont un apparence élégante, un son fidèle et des fonctions multiples. La série entière a le brevet de la conception de l'apparence. Le système adoptant la technologie de pointe de l'industrie vous permet de profiter d'excellents effets sonores à tout moment, à la maison, à l'extérieur, en voyage ou au travail. Le produit offre une expérience parfaite lorsque vous jouez de la musique sur vos ordinateurs portables, vos lecteurs de musique numérique et autres lecteurs audiovisuels, vous conduisant à une vie meilleure avec de la belle musique !


Précautions à prendre

1. Conservez-le et utilisez-le à température ambiante.
2. Évitez de l'exposer à la pluie ou à un environnement humide.
3. Ne pas jeter le produit pour éviter les dommages causés par une chute.
4. Ne pas démonter, modifier ou réparer le produit soi-même.
5. Ce produit est livré avec une batterie au lithium intégrée et irremplaçable. Ne pas jeter le produit et ne pas le jeter dans le feu pour éviter tout danger.
6. Pour éviter que ses performances ne soient perturbées, maintenir éloigné des objets magnétiques puissants.
7. Lorsque vous n'utilisez pas le haut-parleur pendant une longue période, chargez-le tous les 3 mois pour prolonger la durée de vie de la batterie.

Paramètres du produit

Bluetooth: V5.0	Batterie: 3.7V/700mAh
Nom d'Appareil: MINISO-A12	Port de Chargement: Type-C
Entrée de Chargement: DC 5V~500mA	Durée de Lecture de la Musique: Environ 4H (70% Volume)
	Temps de Chargement: Environ 2H

Aperçu du Produit

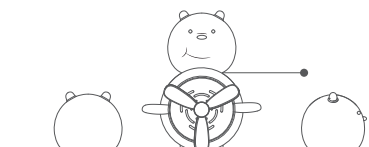

① Puissance/Pause/Lecture ② Port de Chargement Type-C

Fonctions

Fonction	Instructions
Alimentation	Appuyez longuement sur ① pour allumer/éteindre l'appareil
Lecture/Pause	Appuyez brièvement sur ① pour mettre en pause/lancer
Voyant Lumineux	Après avoir été allumé, la lumière bleue clignote lentement, puis s'allume en permanence une fois la connexion Bluetooth établie. La lumière rouge se constamment allumée pendant le chargement et s'éteint lorsque l'appareil est complètement chargé.
Type C	Port de chargement de Type-C

Accessoires

Manuel d'Utilisation*1, Haut-Parleur*1, Câble Type-C*1

Résolution des problèmes

Le haut-parleur sans fil ne parvient pas à s'apparier avec le mobile.
Solution : Confirmez si l'enceinte sans fil est en mode d'appariage, et si le Bluetooth de votre téléphone est activé. Supprimez ensuite le produit de la liste, puis apparaissez à nouveau avec votre téléphone en suivant les instructions du manuel d'utilisation.

Impossible d'allumer le haut-parleur sans fil.
Solution : Confirmez le niveau de la batterie. Chargez le haut-parleur si nécessaire.

La batterie du haut-parleur sans fil peut-elle être remplacée ?
Solution : Non, il s'agit d'une pile au lithium polymère, qui est irremplaçable.

Puis-je utiliser le haut-parleur sans fil à un volume élevé pendant une longue période ?
Solution : Pour prolonger la durée de vie du haut-parleur sans fil, n'est pas recommandé d'utiliser à un volume élevé pendant une longue période.

Lien entre le haut-parleur sans fil et le mobile a été déconnectée dans un rayon de 10 mètres.
Solution : La technologie Bluetooth est sans fil. Elle est donc très sensible aux objets situés entre le haut-parleur et l'appareil connecté. Vérifiez s'il y a des objets métalliques ou autres qui peuvent affecter la connexion dans la distance effective.

Impossible d'entendre la lecture audio lorsque le haut-parleur est connecté à l'ordinateur ou au téléphone.
Solution : Vérifiez si la sortie audio de l'ordinateur est déjà connectée à un périphérique sans fil et si le Bluetooth de l'ordinateur prend en charge le protocole AZDP. Assurez-vous que le volume est élevé sur votre téléphone ou votre ordinateur.

Puis-je utiliser les applications de mon téléphone via le haut-parleur après avoir appareillé le haut-parleur sans fil avec le téléphone ?
Réponse : Il se peut que certaines applications ne puissent pas être utilisées par le haut-parleur en raison de leurs paramètres.

عزري المستخدم

شكرًا لتأجيرك السماعات اللاسلكية من مينيسو، يرجى قراءة دليل المستخدم بعناية قبل استخدامه. باستخدامه بشكل صحيح للحصول على أفضل أداء للسماعات اللاسلكية سنقدم لك أفضل صوت ونفيس وظائف متعددة التصميم الجمال لديها براءة اختراع التصميم المظهر، نغمة الصوت الحقيقية ووظائف متعددة. السلسلة بأكملها تمتلك براءة الاختراع لظهور التصميم. النظام الذي يتبع التكنولوجيا رائدة في الصناعة الاستماع بالمشهد الصوتية المميزة في أي وقت في المنزل أو في الهواء الطلق أو خلال الرحلات أو أثناء العمل. إنه يوفر تجربة رائعة مع الموسيقى على أجهزة الكمبيوتر المحمولة وسنالك. الموسيى الرائعة وتفرحنا من المتعلقات الصوتية والمرئية، مما يقود إلى حياة أفضل عند الاستماع إلى الموسيقى الجميلة

تحذير

[illegible]