

Honeywell

LED INDOOR MOTION SENSOR LIGHTS

MODEL: A04HF013H-06 ASSEMBLY AND INSTALLATION INSTRUCTIONS

5 YEAR LIMITED WARRANTY

You should read all of the instructions before attempting to use this product.

International Development Company (IDC) warrants this product against defects in material or workmanship for a period of five (5) years from the date of original purchase. IDC agrees to either repair the product or replace it, at the sole discretion of IDC. Only the original purchaser of this product is extended this warranty. No warranty work will be provided under this warranty without purchaser's receipt or other proof of the date of original purchase acceptable to IDC. Proof of the date of purchase must be provided to IDC if the product is returned. Purchasing this product from a third party vendor negates all warranties (expressed or implied) in this warranty.

The warranty does not apply to the following terms/conditions:

- 1.) Acts of God.
 - 2.) Products that have been subjected to unauthorized repair, opened, disassembled, and/or otherwise modified.
 - 3.) Products used not in accordance with directions.
 - 4.) Damages exceeding the total cost of product.
 - 5.) Plastic or plastic shades.
 - 6.) The finish of any portion of the product (i.e. surface scratches, weathering, corrosion, discoloration of brass components, as this is considered normal wear and tear).
 - 7.) Damages caused by shipping, improper handling, accident, misuse or abuse. IDC is not responsible for damage of merchandise in transit. Repaired or replaced products shall be subject to the terms of this warranty and are inspected prior to return shipment. Damages that are incurred during transit should be reported at once to the carrier and a claim should be filed with them.
 - 8.) warranty does not cover replacement of Alkaline batteries included with this product.
- IDC SHALL NOT BE LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL IMPLIED WARRANTIES, IF ANY, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. No other warranty, written or verbal, will be honored for this product. This warranty grants you specific legal rights, you may also have other rights which vary from state to state. There are no other warranties except those stated above.

Thank You

We appreciate your purchase of this IDC product.

IDC has made every effort to supply a quality product that insures long, trouble free service. In the event that you have any type of problems with this product and require a return address or for any other assistance please call our

Toll Free Number 1-877-723-0723

8:00 A.M. - 5:00 P.M. Central Time, Monday - Friday

Email us at: customerservice@idctexas.com

You will need the following information:

Model/Item Number of Product, Receipt, and Date of Purchase

All drawings and text are © copyright of IDC • Printed in China

International Development Company

899 Henrietta Creek Rd.

Roanoke, TX 76262 USA

Toll-free: 1-877-723-0723

© 2019 IDC, all rights reserved.

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured for International Development Company.

INSTRUCTIONS

Tools Required



Pencil



Screwdriver



Electric drill
drill bit size:
ø2.0mm or ø6.0mm

Hardware Included




AA: Screw (6)




BB: Wall Anchor (6)



CC: AA Battery (9)




DD: Mounting Plate (3)

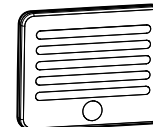


EE: Light (3)

Marking the Hole Location and Attaching the Mounting Plate (Figure 1)


- STEP 1
1. Find the location where you want to mount the light.
2. Mark the location where you want to mount the light by ensuring the mounting plate is level and then making two marks in the open holes on the mounting plate. The distance between the two holes is 2.48in.(63mm).
- NOTE:** If attaching to drywall or plaster surface proceed to step 2, if attaching to wood proceed to step 4.
- STEP 2
Remove mounting plate and drill two 0.24in. (6mm) holes in the marked locations.
- STEP 3
Insert wall anchors (BB) into previously drilled holes, place mounting plate over hole locations and attach screws with screwdriver or drill.
- STEP 4
Pre-drill 0.08in. (2mm) holes. Place mounting plate over holes and attach screws with screwdriver or drill.
- NOTE:** Be careful not to over-tighten.




step 1



step 2



step 3



step 4

Each light requires 3 AA batteries (included)

1. To install the batteries (CC) pull down the battery cover (FF). (Figure 2)
2. Install 3 AA batteries (included) ensuring the polarity +/- is correct.
3. Put the battery cover back into the corresponding position of the card slot to complete the installation.

NOTE: Follow these steps for recurring battery installation.

Mounting the Light

1. Mount the light on the mounting plate (DD) by aligning the slots on the back of the light to the slots on the front of the mounting plate. (Figure 3)
2. Slide and lock into place.

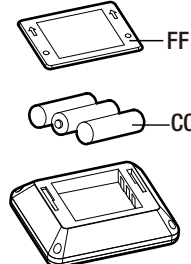


Figure 2

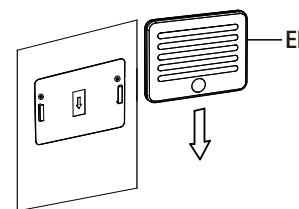


Figure 3

CAUTIONS

Caution Statement

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types or brands.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.
- For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

OPERATING INSTRUCTIONS

Each light has two buttons: 1) Timer Button 2) Power / Link Button (Figure 4).

The lights can be operated independently or linked together (maximum of 3 lights).

Lights set up independently will sense motion 1 by 1 and not trigger other lights.


Lights set up linked will sense motion on 1 light and turn on any other linked lights.

1. To operate lights independently, press the power/link button to turn on the light. Use the sliding timer to set period of time light should remain on when motion is sensed (15, 30 or 45 second intervals). Slide to desired time setting.

NOTE: After turning on the light, the motion sensor will activate and operate after 15s.

2. To operate lights with linking function, press the power/link button two times on each light to be linked. You will see a red light which indicates all lights have been linked successfully.

NOTE: When lights enter linking mode, the red light will light for 15s and then change to flashing every 6s to reduce power consumption.

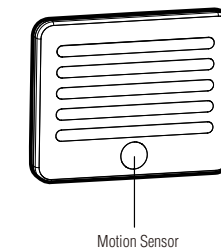

Motion Sensor

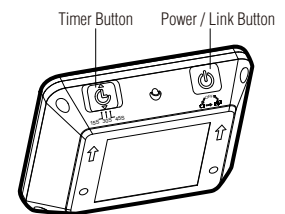


Figure 4

NOTE: The detection distance of the light is 13-12-19-68 feet (4-6m) and the detection angle is 90 degrees. Lights should not be placed more than 49.2 feet (15m) apart otherwise linking function will not work properly.

SAFETY INFORMATION

WARNING

1. This product is not a toy and contains small parts. Close supervision is necessary when this unit is used near children.

2. To reduce the risk of electrical shock, do not put the unit in water or other liquid. For cleaning, use a soft dry cloth. Do not place or store appliance where it can fall or be pulled into a tub or sink.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF EXPOSURE: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Honeywell

LÁMPARAS LED PARA SENSOR DE MOVIMIENTO DE INTERIORES

MODELO: A04HF013H-06 INSTRUCCIONES DE ENSAMBLAJE E INSTALACIÓN

GARANTÍA LIMITADA POR 5 AÑOS

Lea todas las instrucciones antes de tratar de usar este producto.

International Development Company (IDC) garantiza este producto contra defectos de materiales o mano de obra por un período de cinco (5) años a partir de la fecha de la compra original. IDC acuerda reparar o reemplazar el producto a su sola discreción. La presente garantía se extiende solamente al comprador original de este producto. No se efectuará ningún trabajo de garantía sin que el comprador presente el recibo de compra u otro comprobante de la fecha de la compra original que sea aceptable para IDC. En caso de devolución del producto, deberá proporcionar a IDC un comprobante de la fecha de compra. La compra de este producto a un tercero invalida todas las disposiciones/expresas o implícitas de esta garantía. La garantía no se aplica a las siguientes cláusulas o condiciones:

- 1.) Causas de fuerza mayor.
 - 2.) Productos que se hayan sometido a reparaciones sin autorización, que se hayan abierto, desarmado o modificado de otra forma.
 - 3.) Productos que se hayan usado sin seguir las instrucciones.
 - 4.) Daños que excedan el costo total del producto.
 - 5.) Plástico o pantalla de plástico.
 - 6.) Acabado de cualquier parte del producto (es decir, rayones en la superficie, daños por la intemperie, corrosión o decoloración de los componentes de bronce (ya que esto se considera desgaste normal).
 - 7.) Daños causados por el envío, manejo inadecuado, accidentes, uso erróneo o abuso. IDC no se hace responsable por daños a la mercancía en tránsito. Los productos reparados o reemplazados quedan sujetos a las condiciones de esta garantía y se inspeccionan antes de su devolución. Los daños sufridos durante el tránsito deberán reportarse de inmediato al transportista y se deberá presentar una reclamación ante dicho transportista.
 - 8.) La garantía no cubre el reemplazo de las baterías alcalinas incluidas en este producto. IDC NO SE HACE RESPONSABLE DE DAÑOS INCIDENTALES, ESPECIALES O QUE RESULTEN COMO CONSECUENCIA DEL USO DEL PRODUCTO, NI QUE SURJAN COMO RESULTADO DE CUALQUIER VIOLACIÓN A ESTA GARANTÍA. TODAS LAS GARANTÍAS IMPLÍCITAS, DE HABERLAS, INCLUYENDO LAS GARANTÍAS IMPLÍCITAS DE COMERCIALIZACIÓN Y ADECUACIÓN PARA FINES ESPECÍFICOS TIENEN UNA DURACIÓN LIMITADA AL TÉRMINO DE ESTA GARANTÍA EXPRESA.
- Algunos estados no permiten la exclusión o limitación de daños incidentales o resultantes, ni limitaciones a la duración de una garantía implícita, por lo tanto, es posible que las excepciones o limitaciones anteriores no se apliquen a usted. Ninguna otra garantía, escrita o verbal, será válida para este producto. Esta garantía le otorga derechos legales específicos; es posible que también tenga otros derechos que varían de un estado a otro. No existe ninguna otra garantía, excepto la anteriormente especificada.

Gracias

Agradecemos su compra de este producto IDC.

IDC se ha esmerado en proporcionar le un producto de calidad que le asegure un servicio duradero y sin problemas. En caso de que tenga algún tipo de problema con este producto, para obtener nuestra dirección o cualquier ayuda que requiera.

llame a nuestro número gratuito: 1-877-723-0723

de lunes a viernes de las 8:00 A.M. a las 5:00 P.M. CST
(horario del centro de los EE. UU.).

Envíenos un correo electrónico a: customerservice@idctexas.com

Necesitará la siguiente información: Número de modelo y artículo del producto, recibo y fecha de compra.

Todos los dibujos y textos son © copyright de IDC • Impreso en China

International Development Company

899 Henrietta Creek Rd.

Roanoke, TX 76262 USA

Toll-free: 1-877-723-0723

© 2019 IDC, todos los derechos reservados.

La marca Honeywell se usa con licencia de Honeywell International Inc.

Honeywell International Inc. no ofrece ninguna Este producto es fabricado para International Development Company.

INSTRUCCIONES

Herramientas Necesarias



Lápiz



Destornillador Philips



Taladro eléctrico
tamaño de la broca de
taladro: ø2.0 mm o ø6.0 mm

Hardware Included




AA: Tornillo (6)




BB: Anclaje de pared (6)



CC: AA Batería (9)



DD: Base (3)



EE: Lámpara (3)

Marcado de la ubicación del orificio y colocación de la placa de montaje (Figura 1)

PASO 1

1. Decida la ubicación donde usted desea colocar la lámpara.

2. Identifique la ubicación donde desea colocar la lámpara, asegurándose primero de que la base quede nivelada y luego de realizar dos marcas en los dos huecos de la base. La distancia entre los dos huecos es de 2.48in. (63 mm).

NOTA: Si planifica colocar la lámpara en una superficie de yeso o enlucido, continúe en el paso 2; si la va a colocar en madera, siga en el paso 4.

PASO 2

Retire la placa de montaje y taladre dos orificios de 0.24in. (6.0 mm) en las ubicaciones marcadas.

PASO 3

Inserte anclajes de pared (BB) en los huecos previamente taladrados, ubique la base sobre dichos huecos y fije con tornillos valiéndose de destornillador o taladro.

PASO 4

Taladrar previamente agujeros de 0.08in. (2 mm). Ubique la base sobre los huecos y fije con tornillos valiéndose de destornillador o taladro.

NOTA: Tenga cuidado de no apretar demasiado.

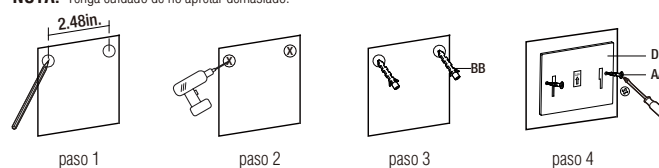


Figura 1

Cada lámpara requiere de 3 pilas AA (incluidas).

1. Para instalar las pilas (CC) deslice hacia abajo la tapa de las pilas (FF). (Figura 2)

2. Instale 3 pilas AA (incluidas) asegurando la correcta polaridad +/-.

3. Coloque de nuevo la tapa de las pilas en su posición correspondiente de la ranura de la tarjeta para completar la instalación.

NOTA: Siga estos pasos cada vez que vaya a colocar pilas.

Montaje de la lámpara

1. Monte la lámpara sobre la base (DD) alineando las ranuras del lado posterior de la lámpara con las ranuras del frente de la base. (Figura 3)

2. Deslice y fije en su lugar.

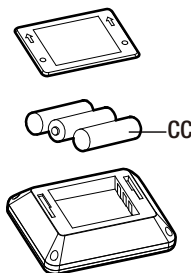


Figura 2

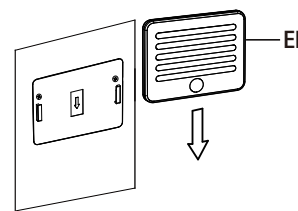


Figura 3

PRECAUCIONES

Advertencias

- Asegúrese de comprar siempre pilas del tamaño y grado correcto y más adecuado para su uso.
- Siempre que reemplace pilas, cámbielas todas, prestando atención de no mezclar las nuevas y las usadas, ni utilizar pilas de diferentes tipos o marcas.
- Limpie los contactos de las pilas y los correspondientes en el dispositivo antes de colocar las pilas.
- Asegúrese de que las pilas queden colocadas correctamente en lo que refiere a su polaridad (+ y -).
- Si no va a usar el equipo por un período prolongado, quite las pilas del mismo.
- Una vez las baterías estén gastadas, quítelas de inmediato.
- A fin de reciclar y disponer de las baterías de una manera que no afecte el medioambiente, le rogamos que busque en Internet o en su guía telefónica local hasta hallar centros locales de reciclaje y / o que siga las disposiciones establecidas por su gobierno local en lo que respecta a ello.

INSTRUCCIONES DE OPERACIÓN

Cada luz tiene dos botones: 1) Botón temporizador 2) Botón de Encendido / Emparejamiento (Figura 4).

Las luces pueden operarse de forma independiente o emparejarse entre sí (máximo de 3 luces).

Las luces configuradas de forma independiente detectarán el movimiento 1 a 1 y no activan otras luces. Las luces emparejadas detectarán el movimiento en 1 luz y encenderá cualquiera de las luces emparejadas.

1. Para operar las luces de forma independiente, pulse el botón de encendido / emparejamiento 1 vez para encender la luz, deslice el botón del temporizador a la izquierda, la luz se encenderá 15 segundos, deslice el botón del temporizador al medio y la luz se encenderá 30 segundos, deslice el botón del temporizador a la derecha y la luz se encenderá 45 segundos.

NOTA: Tras encender la luz, el sensor de movimiento estará activo tras 15 segundos.

2. Para operar luces emparejadas, pulse el botón de encendido / emparejamiento dos veces en cada luz que quiera emparejar. Podrá ver una luz roja que indicará que todas las luces han sido emparejadas con éxito. Y pulse una vez más para apagar las luces.

NOTA: Cuando las luces entran en modo de emparejamiento, la luz roja se encenderá durante 15s y luego comenzará a parpadear cada 6s para reducir el consumo de batería.

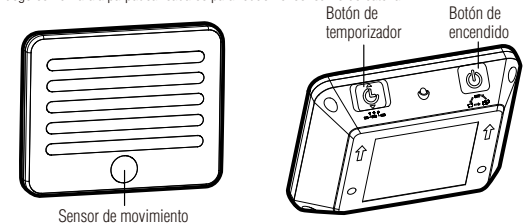


Figura 4

NOTA: La distancia de detección de la luz es de 13.12-19.68 pies (4-6m) y el ángulo de detección es de 90 grados. Las luces no deben colocarse a una distancia superior a 49.2 pies (15m), de lo contrario, la función de enlace no funcionará correctamente.

INFORMACION DE SEGURIDAD

ADVERTENCIA

1. Este producto no es un juguete y contiene piezas pequeñas. Se requiere una supervisión cuidadosa al usar esta unidad cerca de niños.

2. Para reducir el riesgo de descarga eléctrica, no coloque a unidad en agua u otros líquidos. Utilice un paño suave y seco para limpiarla. No coloque ni almacene el aparato en lugares donde se pueda caer o jalar hacia una bañera o lavabo.

NOTA:

Este equipo fue probado y se determinó que cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 del Reglamento de la FCC. Estos límites se diseñaron para proporcionar una protección razonable contra la interferencia dañina en instalaciones residenciales. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y si no se instala y utiliza adecuadamente al instructivo, puede causar interferencia dañina en las radiocomunicaciones. Sin embargo, no se garantiza que no ocurra interferencia en una instalación en particular. Si este equipo causa interferencia dañina en la recepción de las señales de radio o televisión, lo cual puede determinarse al encender y apagar el equipo, se insta al usuario a tratar de corregir la interferencia por medio de una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.
- Conectar el equipo en un tomacorriente dentro de un circuito diferente al cual esté conecado el receptor.
- Consultar al distribuidor o a un técnico experimentado en radio/televisión.

Este equipo cumple con la Parte 15 de los reglamentos de la FCC. Su operación está sujeta a las siguientes dos condiciones:

- 1) Este dispositivo no puede causar interferencia dañina, y
- 2) Este dispositivo debe aceptar cualquier interferencia que recita, incluida la interferencia que pueda causar un funcionamiento indeseable.

ADVERTENCIA: Los cambios o modificaciones a esta unidad que no estén expresamente aprobados por los responsables de su cumplimiento podrían invalidar la autoridad del usuario para operar el equipo.

RF EXPOSURE: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.