

ATEEZ OFFICIAL LIGHT STICK USER MANUAL

배터리 삽입 및 교체 방법

- 제품 손잡이 하단의 캡을 둘러 내부에 있는 배터리 헤우징을 끼어주세요.
- 그리고 같이 AAA배터리 3개를 헤우징에 결합해주세요.
- (배터리 결합 시 +, -극을 잘 확인하여 주세요. 하우징에 스프링이 있는 부분이 배터리의 +극, 스프링이 없는 부분이 +극입니다.)
- 배터리를 결합한 배터리 헤우징을 제품의 손잡이에 표시된 화살표 방향으로 넣고 하단 캡을 닫아주세요.
- (배터리 헤우징을 가꾸로 넣으면 제품이 작동하지 않습니다.)

제품 기능 및 사용 방법

1. ATEEZ 공식 응원봉은 무선 컨트롤 기능을 가지고 있는 제품입니다.
2. 전원 설정
응원봉 손잡이에 있는 버튼을 눌러 작동 시킬 수 있습니다.
3. LED 모드 설정
화이트 ON → 화이트 Blink → 화이트 Flicker → 레드 오로라 모드 → 그린 오로라 모드 → OFF

제품 시양서

- 제품명 : ATEEZ OFFICIAL LIGHT STICK
- 모델명 : ATEEZ-light01
- 크기 : 100 * 113 * 256 (mm)
- 무게 : 약 180g
- 재질 : PC, ABS, Rubber
- 구성품 : 응원봉, 스트랩, 사용 설명서
- 배터리 : 미포함 (알카인 AAA 배터리(3개) 사용)
- 사용전압 : 4.5V ■■■
- 무선 주파수 : 2.4 GHz
- 작동시간 : 5시간
- 인증기관인증 : R-R-cdi-ATEEZ-light01
FCC ID : 2AP7NATEEZ-LIGHT01
- 기획 및 판매 : KQ ENTERTAINMENT / PLAY COMPANY
- 제조처 : COMPACTD
- 제조일자 : 2020. 01
- 제조국가 : Made in China

취급 시 주의사항

1. 고온 다amp;#25744;한 곳을 피하고 보관 시에는 상온에서 유지하여 주세요.
2. LED 불빛 가까운 곳에서 직접 보는 것을 피해 주세요.
3. 일의 분위 및 조밀, 강한 충격이나 뜨는 화기 근처에서 사용하는 경우 제품 고장의 원인이 됩니다.
4. 전동 알카인 AAA 배터리를 사용해 주세요. 전동 배터리를 사용하지 않으면 제품에 손상을 줄 수 있습니다.
5. 배터리 교체 시 모든 배터리를 교체하십시오.
6. 제품을 보관할 때에는 배터리를 포함한 제품 손상을 막기 위하여 배터리를 분리하여 보관하십시오.
7. 배터리는 영(영)우의 손이 닿지 않도록 보관하여 주세요. 수명이 다 된 배터리는 정기적인 폐기장소에 폐기하십시오.
8. 반드시 배터리의 +/-극을 잘 확인한 후 절연본으로 배터리端子를 점착해 주세요.
9. 절연본은 정착한 제품 고장의 원인이 되며 화재와 화상의 위험에 있습니다.
10. 배터리 부위가 깨지거나 뜨거워지는 경우 바로 제작해 주고 A/S 문의 바랍니다.
11. 환경 공연 관람 전 새 배터리를 교체합니다.
12. 본 제품은 무선운용 중 전파 혼선 가능성이 있습니다.

A/S 규정

1. 보증기간(구매일로부터 3개월) 이내에 정상적으로 사용한 제품에 대해서는 제품 수리 및 교환 서비스를 무상으로 받을 수 있습니다.
2. 수리를 의뢰하실 때에는 반드시 이 보증서를 제시하시기 바랍니다.
3. 보증하는 대상은 국내구내 내수제품입니다.
4. 보증기간은 구매일로부터 3개월 이내입니다.
5. 다음의 경우는 보증기간 이내에도 무상수리를 받을 수 없습니다.

■ 노동·인구수·인력으로부터 3개월이 경과한 경우

■ 사용상의 고장, 부주의로 인해 고장, 파손이 발생한 경우

■ 충수·화재·진동 등 천재지변으로 인해 고장이 발생한 경우


■ 사용 중 발생한 인한 고장으로 카드·교체를 원하는 경우

■ 정식 A/S센터 외 다른 A/S센터를 이용하거나 제품을 일의 분해, 수리 또는 개조한 경우

A/S 신청 접수처

PLAY COMPANY Corp. (TEL: 02-323-0882)

품질보증기간 : 구매일로부터 3개월 (영수증 보관 및 인증 필요)

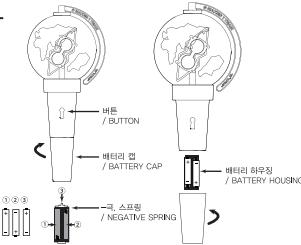


ATEEZ OFFICIAL LIGHT STICK USER MANUAL

How to Insert Battery and Replace it

1. Rotate the battery cap on the bottom of the product to remove the battery housing inside.
2. Insert 3 alkaline AAA batteries to the housing as shown below. (Please check the + - polarity when inserting the battery. The part of the battery housing with the spring is the negative pole of the battery, and the part without the spring is the positive pole.)
3. Insert the battery housing with the battery in the direction of the arrow on the light stick and close the battery cap. (The product will not work if the battery housing is turned upside down.)

Product Features and Usage Instructions

1. ATEEZ OFFICIAL LIGHT STICK is a product with wireless control function.
2. Power Setting
Press the push button in the middle of the light stick.
3. LED Mode Setting
When you press the push button, LED mode will change sequentially as below. White ON → White Blink → White Flicker → Red Aurora mode → Green Aurora mode → OFF

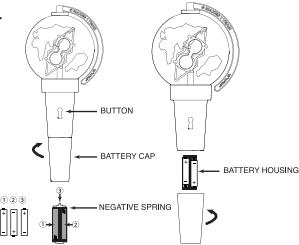

Product Specification

- Product Name : ATEEZ OFFICIAL LIGHT STICK
- Model : ATEEZ-light01
- Size : 100 * 113 * 256 (mm)
- Weight : Approximately 180g
- Materials : PC, ABS, Rubber
- Components : Light Stick, Strap, User Manual
- Battery : Not Included (3x AAA Alkaline batteries)
- Rated Voltage : 4.5V ■■■
- Radio Frequency : 2.4 GHz
- Operating Time : 5 Hours
- Certification(KC) : R-R-cdi-ATEEZ-light01
FCC ID : 2AP7NATEEZ-LIGHT01
- Planning and Sales : KQ ENTERTAINMENT / PLAY COMPANY
- Manufacturer : COMPACTD. (Tel: +82 (0)2 6053 0244 / Address: 2F, 703, Eonju-ro, Gangnam-gu, Seoul, 06041, Republic of Korea)
- Date of Manufacture : Jan 2020
- Country of Origin : Made in China

Precautions

1. Avoid high temperature or humidity, and store at room temperature.
2. Do not allow the LED light to shine directly in the eyes.
3. Arbitrary disassembly and assembly, strong shock or use near water or fire may cause product malfunction.
4. Please use genuine alkaline AAA batteries. Failure to use genuine batteries may damage the product.
5. Replace all batteries (3ea) when replacing batteries.
6. When storing the product, remove the batteries to prevent damaging the product due to the battery fluid.
7. Keep the batteries out of the reach of children/infants. Dispose of used batteries at the designated disposal site.
8. Be sure to check the polarity of the batteries before inserting the batteries in the correct polarity direction. Incorrect inserting may cause product malfunction, and may cause fire and burns.
9. If the battery suddenly becomes hot, remove the battery immediately and contact the customer service center.
10. Please replace with new batteries before each show.
11. If the light stick suddenly does not work at the show or red lights come in, please replace with new batteries.
12. This product may be interrupted during wireless operation.

Customer Service Rule

1. You can get product repair and exchange service free of charge for normally used products within the warranty period (3 months from date of purchase).
2. Be sure to present the warranty when requesting the repair.
3. Warranty is valid only in Korea.
4. The warranty period is three months from the date of purchases.
5. In any of the following cases, you cannot get free repair even within the warranty period.

■ If the warranty period (3 months from date of purchase) has expired

■ Failure or damage caused by negligence or negligence in use

■ Failure due to natural disasters such as flood, fire or earthquake

■ If you want to replace the case due to scratches during use

■ Any use of customer center other than the official customer center, or any disassembly, repair or modification of the product

Application for Customer Service

PLAY COMPANY Corp. (TEL: 02-323-0882)

Warranty period : 3 months from date of purchase (Receipt verify required)