



# EIRWALLET USER MANUAL

使用手冊 | 取扱説明書







**ENGLISH**

P 4

**繁體中文**

P 12

**简体中文**

P 20

**日本語**

P 28





ENGLISH



Thank you for purchasing this EIRTOUCH product.  
Before using the product, please read through the  
Operation Guide, Disclaimer and Caution Guide to ensure  
that you use the product correctly.



# SPECIFICATION


|                      |                                                         |
|----------------------|---------------------------------------------------------|
| Product name         | EIRWALLET                                               |
| Product code         | WSB62                                                   |
| Battery              | Rechargeable Lithium-Ion battery<br>3.7V 2100mAh, 7.0Wh |
| Charging time        | 2 hours                                                 |
| Power input          | (USB Type-C) 5V 1A                                      |
| Power output         | (USB Type-C) 5V 1A<br>(Wireless Charger) 5V 1A          |
| Weight               | 165g (without card)                                     |
| Dimensions (mm)      | 76 (W) x 22 (D) x 114 (H)                               |
| Capacity             | 5 Cards (Standard credit card size)                     |
| Material             | ABS, T-ABS, POM                                         |
| Communication system | Bluetooth version 4.2                                   |
| Accessories          | 18 cm USB-A to Type-C Cable,<br>Hex Key, User Manual    |

# FEATURES

- ▶ RFID Prove
- ▶ Foldable phone stand
- ▶ Wireless power bank
- ▶ Selfie shutter
- ▶ Bluetooth anti-lost tracker



# PART NAMES

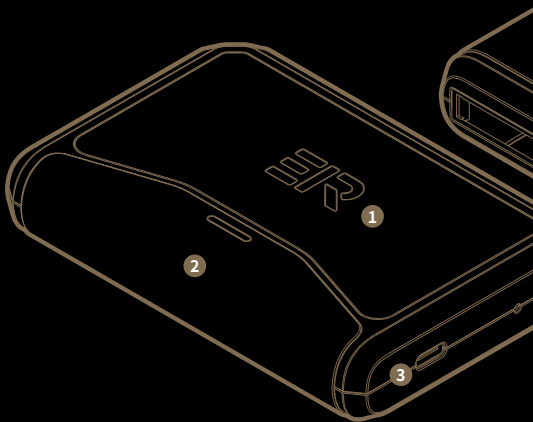

- 1 Wireless charging plane
- 2 Silicon phone holder
- 3 Type C in/out
- 4 RFID Prove Card holder
- 5 Foldable phone stand
- 6 Removeable money clip
- 7 Function button and indication light
- 8 Eject slider

6





# EIRTOUCH APP



Please download the EIRTOUCH app on App Store or Play Store for a complete experience of EIRWALLET.





# OPERATION GUIDE

## Charging

- ▶ Fully charge the battery for 3 hours before first use.
- ▶ To charge, connect a Type-C USB cable to the charging port.
- ▶ A white breathing light indicates the battery is currently charging.
- ▶ A white solid light indicates the battery is fully charged.
- ▶ When the EIRWALLET is powered on, A white light indicates battery status at above 20%, while a red light indicates battery status at 20% or below.
- ▶ The white or red light will stay on for 30 seconds then shift to blinking once per 3 seconds for power saving. Press the button once to show the current power status for 30 seconds.

## Operation


- ▶ To switch on the EIRWALLET, hold the button for 3 seconds until the light on the button lights up.
- ▶ The EIRWALLET will start Bluetooth pairing automatically for 80 seconds after switching on. A flashing blue light indicates the EIRWALLET is ready for pairing.
- ▶ To pair your smartphone with the EIRWALLET, go to the Bluetooth setting in your device and choose "EIRWALLET". You may rename your EIRWALLET after the first pairing.







- ▶ A blue light will stay on for 30 seconds to indicate a successful pair then shift to blinking once per 3 seconds for power saving. Press the button once to show the connection status for 30 seconds.
- ▶ You may use the “EIRTOUCH” app for more advanced features. For more detailed instructions, please refer to the EIRTOUCH app.
- ▶ To charge another device with the EIRWALLET, connect your device to EIRWALLET with a cable when the EIRWALLET is switched on. If your device is compatible with wireless charging, place your device on the front side of the EIRWALLET with an “EIR” indented.
- ▶ The EIRWALLET will turn off automatically after 80 seconds if no device is paired or connected for charging.
- ▶ To take out the cards from the card holder, push the eject slider towards the function button.
- ▶ To use the foldable phone stand, please follow the steps below:

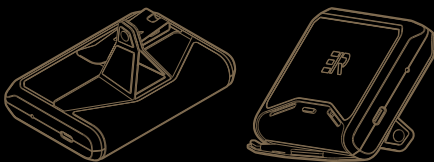

### **Product Care & Storage**

- ▶ Use a slightly damp towel to clean the device and dry with a soft cloth.
- ▶ Store the product in a cool and dry place.
- ▶ Do not use alcohol, paint thinners, or other solvents for cleaning purposes.
- ▶ Do not insert more than 5 cards into the EIRWALLET.





# DISCLAIMER AND CAUTION GUIDE

## Cautions for rechargeable battery

The product is equipped with a rechargeable battery (Lithium-Ion battery).

- ▶ If battery fluid gets into the eyes, do not rub them. Rinse thoroughly with clean water such as tap water and consult a doctor immediately.
- ▶ If battery fluid leaks, do not touch fluid with bare hands. If fluid remains inside the product, it may cause malfunction.
- ▶ If fluid gets in your mouth, gargle thoroughly with clean water such as tap water and consult a doctor immediately.
- ▶ If your skin or clothing comes in contact with fluid, immediately wash the affected skin or clothing with water. If you experience skin irritation, consult a doctor immediately.
- ▶ To avoid leakage, generation of heat or explosion:
  - ▶ Never heat, disassemble or modify the battery, nor dispose of it in a fire.
  - ▶ Do not attempt to damage the battery.
  - ▶ Do not drop the product or subject it to a strong impact.
  - ▶ Do not allow the battery to contact any liquid.





- ▶ Do not use, leave or store the battery in the following places:
  - ▶ Area exposed to direct sunlight or high temperatures and humidity.
  - ▶ Inside of a car under the blazing sun.
  - ▶ Near heat sources such as heat registers.
- ▶ The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the usage time becomes significantly shorter even after the battery has been fully charged. If this is the case, the battery needs to be repaired. Contact the EIRTOUCH customer service for repair details.
- ▶ When the product is disposed of, the built-in rechargeable battery needs to be discarded properly. Contact the EIRTOUCH customer service to learn how to properly dispose of the battery.

### **Safety Instructions**

- ▶ Do not immerse the product in water. Keep away from liquids or heat sources.
- ▶ Please follow airline instructions when using the product in aircraft.
- ▶ Do not disassemble, modify or attempt to repair the product to avoid electric shock, malfunction or fire.
- ▶ Do not subject the product to strong impact to avoid electric shock, malfunction or fire.
- ▶ Do not handle the product with wet hands to avoid electric shock or injury.
- ▶ Do not charge with devices that have quick-charge functionality (with a voltage of 5 V or more). Doing so may cause the product to malfunction.





繁體中文



多謝購買此EIRTOUCH產品。

於使用此產品前，請先閱讀使用指引、  
免責聲明及注意事項，以正確使用產品。





# 規格

|         |                                     |
|---------|-------------------------------------|
| 產品名稱    | EIRWALLET                           |
| 產品編號    | WSB62                               |
| 電池      | 可充電鋰離子電池 3.7V 2100mAh 7.0Wh         |
| 充電時間    | 2小時                                 |
| 電源輸入    | (USB Type-C) 5V 1A                  |
| 電源輸出    | (USB Type-C) 5V 1A<br>(無線充電器) 5V 1A |
| 重量      | 165克 (信用卡除外)                        |
| 尺寸 (毫米) | 76 (闊) x 22 (長) x 114 (高)           |
| 容量      | 可放置最多5張標準尺寸的信用卡                     |
| 材質      | ABS, T-ABS. POM                     |
| 通訊系統    | 藍牙版4.2                              |
| 配件      | 18厘米 USB-A至Type-C電線、<br>六角匙、說明書     |


# 產品特色

- ▶ RFID 防盜
- ▶ 可摺式手提電話架
- ▶ 無線充電器
- ▶ 自拍快門
- ▶ 藍牙追蹤器





# 配件名稱

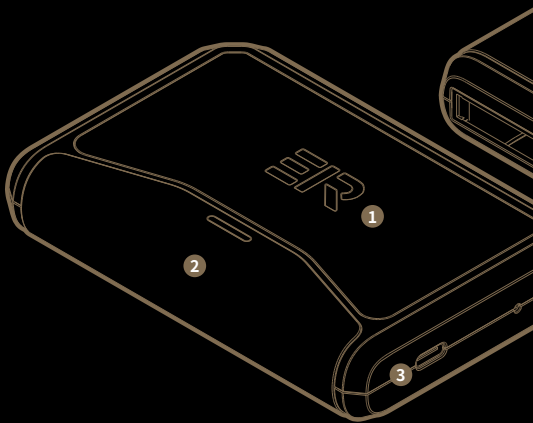

- 1 無線充電平面
- 2 矽膠電話外殼
- 3 Type-C 輸入/輸出位
- 4 RFID防盜信用卡套
- 5 可摺式手提電話架
- 6 可拆卸錢夾
- 7 功能按鈕及指示燈
- 8 彈出滑塊





# EIRTOUCH 應用程式



 Download on the  
App Store

 GET IT ON  
Google Play

請於App Store或Play Store下載EIRTOUCH應用程式，以完美體驗EIRWALLET。





# 使用指引

## 充電

- ▶ 首次使用前，請完全充電3小時。
- ▶ 若需充電，把Type-C USB電線連接到充電端口。
- ▶ 白色指示燈閃亮時，代表產品正處於充電狀態。
- ▶ 白色指示燈長亮時，代表充電完成。
- ▶ 當EIRWALLET開機，白色指示燈亮起時，代表電量多於百分之二十，紅色指示燈亮起時，則代表電量處於或少於百分之二十。
- ▶ 白色指示燈或紅色指示燈將持續亮起30秒，然後切換為每3秒閃爍一次以轉為省電模式。按一次按鈕並維持30秒，以顯示當前電源狀態。

## 操作


- ▶ 若需開啟EIRWALLET，按開啟按鈕3秒，直至按鈕上的指示燈亮起。
- ▶ EIRWALLET在開啟後80秒，會自動開啟藍牙功能。當藍色閃燈亮起時，則代表藍牙功能已開啟。
- ▶ 若需把EIRWALLET連接到您的手提電話，開啟手提電話中的藍牙設置，並選擇“EIRWALLET”。您可以在第一次配對後重命名您的EIRWALLET。







- ▶ 藍色指示燈將持續亮起30秒以表示配對成功，然後切換為每3秒閃爍一次以轉為省電模式。按一次按鈕並維持30秒，以顯示連接狀態。
- ▶ 您可以使用“EIRTOUCH”應用程式獲取更多進階功能。有關詳細說明，請參閱EIRTOUCH應用程式。
- ▶ 若要使用EIRWALLET為另一台設備充電，請在EIRWALLET開啟時，使用電線把您的設備連接到EIRWALLET。如果您的設備兼容無線充電，請把您的設備放在EIRWALLET印有“EIR”縮寫的一面。
- ▶ 如果沒有配對或連接設備進行充電，EIRWALLET將在80秒後自動關閉。
- ▶ 若要從卡夾中取出信用卡，請將彈出滑塊推向功能按鈕。
- ▶ 若要使用可摺式手提電話架，請按照以下步驟操作：

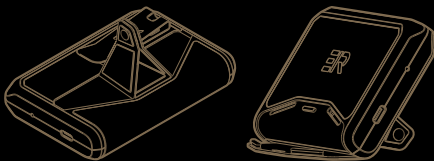

### 產品保養和儲存

- ▶ 使用微濕的毛巾清潔設備並用軟布擦乾。
- ▶ 把產品存放在陰涼乾燥的地方。
- ▶ 請勿使用酒精、油漆稀釋劑或其他溶劑進行清潔。
- ▶ 不要存放超過5張信用卡。





# 免責聲明及 注意事項

## 充電電池注意事項

本產品配備可充電電池（鋰離子電池）。

- ▶ 如果電池液進入眼睛，請勿揉搓。請用自來水等清水徹底沖洗乾淨，並立即求醫。
- ▶ 如果電池滲漏電池液，請勿用手接觸液體。如果液體殘留在產品內部，可能會導致產品故障。
- ▶ 如果有電池液進入您的口內，請用自來水等清潔水徹底漱口，並立即求醫。
- ▶ 如果您的皮膚或衣服接觸到電池液，請立即用水清洗受影響的皮膚或衣服。如果您感到皮膚刺痛或任何不適，請立即求醫。
- ▶ 為避免洩漏、發熱或爆炸：
  - ▶ 請勿加熱、拆開或改裝電池，亦切勿將其投入火中。
  - ▶ 請勿試圖損壞電池。
  - ▶ 請勿擲碎本產品或使其受到強烈撞擊。
  - ▶ 請勿讓電池接觸任何液體。



- ▶ 請勿在以下地方使用、放置或存放電池：
  - ▶ 暴露在陽光直接照射或高溫和濕度高的區域。
  - ▶ 烈日下的車廂內。
  - ▶ 靠近熱源，例如熱存器。
- ▶ 使用者切勿更換本產品的內部充電電池。如果電池充滿電後使用時間明顯縮短，代表電池可能已達到使用壽命，則需要修理電池。有關維修詳情，請聯繫 EIRTOUCH 客戶服務。
- ▶ 棄置本產品時，需要妥善棄置內置充電電池。若需瞭解如何正確處理電池，請聯繫 EIRTOUCH 客戶服務。

### 安全指引

- ▶ 請勿將產品浸入水中。遠離液體或熱源。
- ▶ 在飛機上使用本產品時，請遵循航空公司的安全指引。
- ▶ 請勿拆開、改裝或嘗試修理產品，以免觸電、故障或引起火災。
- ▶ 請勿使產品受到強烈撞擊，以免觸電、故障或引起火災。
- ▶ 請勿用濕手操作本產品，以免觸電或受傷。
- ▶ 請勿使用具有快速充電功能（電壓為5V或更高）的設備充電，否則可能會導致產品故障。





简体中文



多谢购买此EIRTOUCH产品。

于使用此产品前，请先阅读使用指引、  
免责声明及注意事项，以正确使用产品。





# 规格


|         |                                     |
|---------|-------------------------------------|
| 产品名称    | EIRWALLET                           |
| 产品编号    | WSB62                               |
| 电池      | 可充电锂离子电池 3.7V 2100mAh, 7.0Wh        |
| 充电时间    | 2小时                                 |
| 电源输入    | (USB Type-C) 5V 1A                  |
| 电源输出    | (USB Type-C) 5V 1A<br>(无线充电器) 5V 1A |
| 重量      | 165克 (信用卡除外)                        |
| 尺寸 (毫米) | 76 (阔) x 22 (长) x 114 (高)           |
| 容量      | 可放置最多5张标准尺寸的信用卡                     |
| 材质      | ABS, T-ABS. POM                     |
| 通讯系统    | 蓝牙版4.2                              |
| 配件      | 18厘米 USB-A至Type-C电线、<br>六角匙、说明书     |

# 产品特点

- ▶ RFID 防盗
- ▶ 可折式手提电话架
- ▶ 无线充电器
- ▶ 自拍快门
- ▶ 蓝牙追踪器



# 配件名称

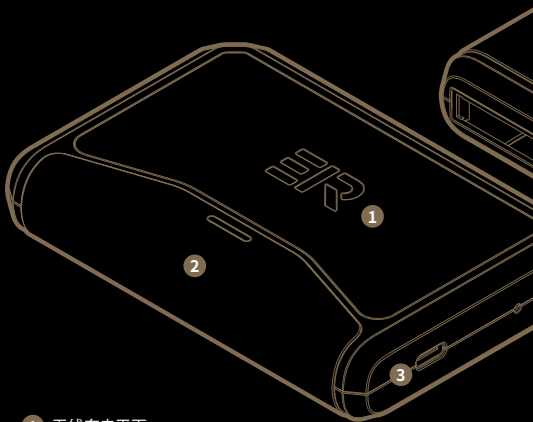

1 无线充电平面

2 硅胶电话外壳

3 Type-C 输入/输出位

4 RFID防盗信用卡套

5 可折式手提电话架

6 可拆卸钱夹

7 功能按钮及指示灯

8 弹出滑块





# EIRTOUCH 应用程序



请于App Store或Play Store下载EIRTOUCH应用程序，  
以完美体验EIRWALLET。





# 使用指引

## 充电

- ▶ 首次使用前，请完全充电3小时。
- ▶ 若需充电，把Type-C USB电线连接到充电端口。
- ▶ 白色指示灯闪亮时，代表产品正处于充电状态。
- ▶ 白色指示灯长亮时，代表充电完成。
- ▶ 当EIRWALLET开机，白色指示灯亮起时，代表电量多于百分之二十，红色指示灯亮起时，则代表电量处于或少于百分之二十。
- ▶ 白色指示灯或红色指示灯将持续亮起30秒，然后切换为每3秒闪烁一次以转为省电模式。按一次按钮并维持30秒，以显示当前电源状态。

## 操作


- ▶ 若需开启EIRWALLET，按开启按钮3秒，直至按钮上的指示灯亮起。
- ▶ EIRWALLET在开启后80秒，会自动开启蓝牙功能。当蓝色闪灯亮起时，则代表蓝牙功能已开启。
- ▶ 若需把EIRWALLET连接到您的手提电话，开启手提电话中的蓝牙设置，并选择“EIRWALLET”。您可以在第一次配对后重命名您的EIRWALLET。







- ▶ 蓝色指示灯将持续亮起30秒以表示配对成功，然后切换为每3秒闪烁一次以转为省电模式。按一次按钮并维持30秒，以显示连接状态。
- ▶ 您可以使用“EIRTOUCH”应用程序获取更多进阶功能。有关详细说明，请参阅EIRTOUCH应用程序。
- ▶ 若要使用EIRWALLET为另一台设备充电，请在EIRWALLET开启时，使用电线把您的设备连接到EIRWALLET。如果您的设备兼容无线充电，请把您的设备放在EIRWALLET印有“EIR”缩写的一面。
- ▶ 如果没有配对或连接设备进行充电，EIRWALLET将在80秒后自动关闭。
- ▶ 若要从卡夹中取出信用卡，请将弹出滑块推向功能按钮。
- ▶ 若要使用可折式手提电话架，请按照以下步骤操作：

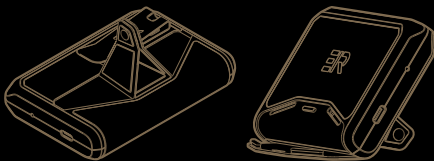

### 产品保养和储存

- ▶ 使用微湿的毛巾清洁设备并用软布擦干。
- ▶ 把产品存放在阴凉干燥的地方。
- ▶ 请勿使用酒精、油漆稀释剂或其他溶剂进行清洁。
- ▶ 不要存放超过5张信用卡。





# 免责声明及 注意事项

## 充电电池注意事项

本产品配备可充电电池（锂离子电池）。

- ▶ 如果电池液进入眼睛，请勿揉搓。请用自来水等清水彻底冲洗干净，并立即求医。
- ▶ 如果电池渗漏电池液，请勿用手接触液体。如果液体残留在产品内部，可能会导致产品故障。
- ▶ 如果有电池液进入您的口内，请用自来水等清洁水彻底漱口，并立即求医。
- ▶ 如果您的皮肤或衣服接触到电池液，请立即用水清洗受影响的身体或衣服。如果您感到皮肤刺痛或任何不适，请立即求医。
- ▶ 为避免泄漏、发热或爆炸：
  - ▶ 请勿加热、拆开或改装电池，亦切勿将其投入火中。
  - ▶ 请勿试图损坏电池。
  - ▶ 请勿掷碎本产品或使其受到强烈撞击。
  - ▶ 请勿让电池接触任何液体。



- ▶ 请勿在以下地方使用、放置或存放电池：
  - ▶ 暴露在阳光直接照射或高温和湿度高的区域。
  - ▶ 烈日下的车厢内。
  - ▶ 靠近热源，例如热存储器。
- ▶ 用户切勿更换本产品的内部充电电池。如果电池充满电后使用时间明显缩短，代表电池可能已达到使用寿命，则需要修理电池。有关维修详情，请联系EIRTOUCH客户服务。
- ▶ 弃置本产品时，需要妥善弃置内置充电电池。若需了解如何正确处理电池，请联系EIRTOUCH客户服务。

### 安全指引

- ▶ 请勿将产品浸入水中。远离液体或热源。
- ▶ 在飞机上使用本产品时，请遵循航空公司的安全指引。
- ▶ 请勿拆开、改装或尝试修理产品，以免触电、故障或引起火灾。
- ▶ 请勿使产品受到强烈撞击，以免触电、故障或引起火灾。
- ▶ 请勿用湿手操作本产品，以免触电或受伤。
- ▶ 请勿使用具有快速充电功能（电压为5V或更高）的设备充电，否则可能会导致产品故障。





日本語



EIRTOUCHの本製品をご購入いただきありがとうございます。  
ございます。

本製品のご使用前に、操作の手引き、免責事項、  
安全上の注意をよくお読みいただき、本製品を  
正しくご使用ください。





# 仕様


|         |                                                |
|---------|------------------------------------------------|
| 製品名     | EIRWALLET                                      |
| 製品コード   | WSB62                                          |
| バッテリー   | 充電式リチウムイオン電池3.7V<br>2100mAh 7.0Wh              |
| 充電時間    | 2時間                                            |
| 入力電圧    | (USB Type-C) 5V 1A                             |
| 出力電圧    | (USB Type-C) 5V 1A<br>(ワイヤレスチャージャー) 5V 1A      |
| 重量      | 165g (カードを含まない)                                |
| 寸法 (mm) | 76 (W) x 22 (D) x 114 (H)                      |
| 容量      | 5 カード (標準なクレジットカードサイズ)                         |
| 素材      | ABS, T-ABS. POM                                |
| 伝達システム  | Bluetooth バージョン4.2                             |
| 付属品     | 18 cm USB-A to Type-Cケーブル、<br>ヘックスキー、ユーザーマニュアル |

# 特長

- ▶ RFIDブロック搭載
- ▶ 折りたたみ式携帯スタンド
- ▶ ワイヤレス充電器
- ▶ 自撮り用シャッター
- ▶ Bluetooth紛失防止追跡機能



# 部品名

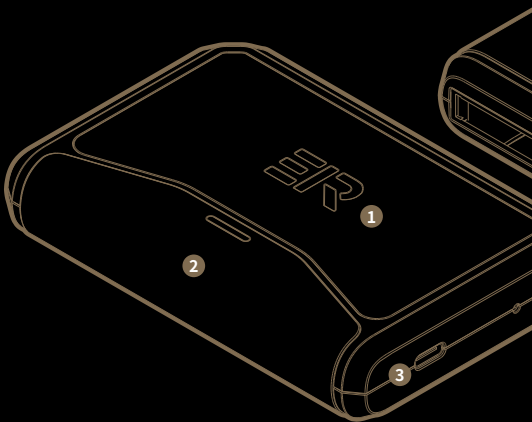

- 1 ワイヤレス充電プレート
- 2 シリコン携帯ホルダー
- 3 Type C入出力
- 4 RFIDブロック搭載カードホルダー
- 5 折りたたみ式携帯スタンド
- 6 取り外し可能なマネークリップ
- 7 ファンクションボタン・表示ランプ
- 8 イジェクトスライダー



# EIRTOUCHアプリ



EIRWALLETの全機能をお使いいただくには、EIRTOUCHアプリをApp StoreまたはPlay Storeでダウンロードしてください。





# 操作の手引き

## 充電

- ▶ 初めて使用する際はあらかじめ3時間フル充電してください。
- ▶ 充電するには、充電ポートにType-C USBケーブルを接続してください。
- ▶ 充電中は白色のランプが点滅します。
- ▶ フル充電時には白色の単色ランプが点灯します。
- ▶ EIRWALLETの電源をオンにした時点で、バッテリー残量が20%以上の場合は白色のランプ、20%以下の場合は赤色のランプが点灯します。
- ▶ 白色・赤色のランプは30秒間点灯した後、省電力のために3秒間ごとに点滅します。ボタンを押すと、充電ステータスが30秒間表示されます。


## 操作

- ▶ EIRWALLETの電源を入れるには、ボタン上のランプが点灯するまで3秒間ボタンを長押ししてください。
- ▶ 電源が入るとEIRWALLETはBluetoothと80秒間自動的に同期を開始します。青いランプが点滅すると、EIRWALLETの同期準備が完了します。
- ▶ お使いのスマートフォンとEIRWALLETを同期させるには、お使いのデバイスのBluetooth設定で“EIRWALLET”を選択してください。初回の同期以降では、EIRWALLETの名称を変更できます。
- ▶ 同期が完了すると、青いランプが30秒間点灯し、省電力のために3秒間ごとに点滅します。ボタンを押すと、接続ステータスが30秒間表示されます。





- ▶ “EIRTOUCH”アプリではさらに高度な機能を使用することができます。詳しい利用方法については、EIRTOUCHアプリを参照してください。
- ▶ EIRWALLETで他のデバイスを充電するには、EIRWALLET起動時にケーブルでデバイスをEIRWALLETに接続してください。お使いのデバイスがワイヤレス充電に対応している場合は、“EIR”の印が入ったEIRWALLETの前方にデバイスを置いてください。
- ▶ 充電時にデバイスが同期または接続されていない場合、EIRWALLETは80秒後に自動的に電源が切れます。
- ▶ カードホルダーからカードを取り出すには、イジェクトスライダーをファンクションボタンに向かって押してください。
- ▶ 折りたたみ式携帯スタンドの使用時には、下記の手順に従ってください：

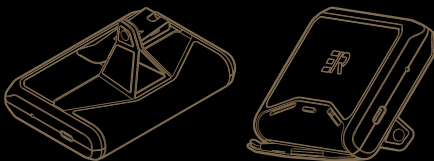

#### 製品の手入れとストレージ容量

- ▶ 少し濡らしたタオルを使って清潔にし、柔らかい布で拭いてください。
- ▶ 本製品を涼しく乾燥した場所に保管してください。
- ▶ 清潔にする目的で、アルコール、塗料シンナー、その他の溶液を使用しないでください。
- ▶ EIRWALLETに5枚以上のカードを挿入しないでください。





# 免責事項・ 注意事項

## 充電式バッテリーに関する注意事項

本製品には充電式バッテリーが搭載されています(リチウムイオン電池)。

- ▶ バッテリー液が目に入った場合は、こすらないでください。水道水等の清潔な水でよく洗い流し、ただちに医師に相談してください。
- ▶ バッテリー液が漏出した場合、素手で液体に触れないでください。製品内に液体が残っている場合は、故障の原因となる場合があります。
- ▶ 液が口内に入った場合は、水道等の清潔な水でよくすすぎ、ただちに医師に相談してください。
- ▶ 肌または衣服に液が付着した場合は、ただちに付着した肌または衣服を水で洗ってください。肌に炎症が生じた場合は、ただちに医師に相談してください。
- ▶ 漏出、発熱や爆発を防ぐために:
  - ▶ バッテリーの加熱、分解、改造、焼却による破棄を行わないでください。
  - ▶ バッテリーを破損しないでください。
  - ▶ 本製品を落としたり、強い衝撃にさらしたりしないでください。
  - ▶ バッテリーを液体に接触させないでください。



- ▶ 以下の場所でバッテリーを使用したり、そのままにしたり、保管したりしないでください:
  - ▶ 直射日光や高温、多湿にさらされたエリア
  - ▶ 強い日差しの当たる車内
  - ▶ ヒーターレジスター等の熱源の近く
- ▶ 本製品の内部充電式バッテリーのユーザーによる交換は禁止されています。バッテリーがフル充電された場合でも使用時間が著しく短い場合は、バッテリー寿命に達した可能性があります。この場合は、バッテリーを交換する必要があります。修理の詳細については、EIRTOUCHカスタマーサービスにお問い合わせください。
- ▶ 本製品の廃棄時には、組み込み式の充電式バッテリーを適切に破棄する必要があります。バッテリーの破棄方法について詳しくはEIRTOUCHカスタマーサポートにお問い合わせください。

### 安全上の注意

- ▶ 本製品を水に浸さないでください。水または熱に近づけないでください。
- ▶ 機内での使用時には航空会社の指示に従ってください。
- ▶ 感電、故障、発火を防ぐため、本製品を分解、改造または修理を行わないでください。
- ▶ 感電、故障、発火を防ぐため、本製品に強い衝撃をささないでください。
- ▶ 感電または怪我を防ぐために濡れた手で本製品を扱わないでください。
- ▶ 高速充電機能(電圧5V以上)が搭載された機器と充電しないでください。これにより、本製品の故障の原因となる場合があります。







### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.







™ and © 2021. EIRTOUCH. All Rights Reserved. Made in China

**Applicant:** Wise Box Alliance Ltd.  
Flat D, 14/F, Mai On Ind. Bldg, 17-21 Kung Yip St.,  
Kwai Chung, N.T., Hong Kong SAR

**Manufacturer:** DONG GUAN JUNNENG PLASTIC TOYS CO., LTD.  
Global e-commerce Park, No.30 Xingwang Road,  
Xiwang Industrial Zone Tiantangwei Village,  
Fenggang Town Dongguan City Guangdong Province, China

