

55mm

PROSCAN

BLUETOOTH SPEAKER
MODEL NO: PSP1212
INSTRUCTION MANUAL



This pictures is only provided for reference
Please refer to the actual unit!
PROSCAN, and the PROSCAN logo are
rademarks used under license by CURTIS
INTERNATIONAL LTD. – www.proscan-brand.com.

Safety Instructions


- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- This product is not a toy
- Do not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc
- Never immerse the unit in water or any other liquid for cleaning purposes

1

Content

Bluetooth Speaker
USB TYPE-C Charging Cable
AUX in Audio Cable
Instruction Manual

Instruction

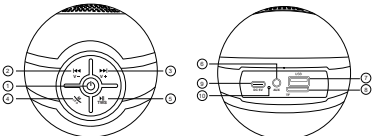

- 1.On/off button
- 2.Short press: To Play Previous Song
- 3.Short press: To Decreasing Volume
- 4.Mode Button (Bluetooth/FM Radio Mode/LED changing mode)
- 5.Play/Pause button, while music is playing TWS mode button
- 6.AUX IN Port
- 7.USB Flash Drive input
- 8.TF card slot
- 9.USB Charging Port
- 10.LED indicator

2

Instructions (How to use the wireless mode)

- Turn on the speaker by pressing and hold the on/off button (1), the bluetooth mode will be on automatically
- Press and hold the "M" button (4) to browse through the mode options
- Stop pressing the "M" button when hearing the command "bluetooth mode"
- The indicator light (10) now flashes blue
- Turn on the Bluetooth menu on your wireless device (phone, tablet,laptop, i.e.) and select " **Pro PSP1212**"
- Pair the device
- Play music

Instructions (How to use the TF-card mode)

- Turn on the speaker by pressing and hold the on/off button (1)
- Insert the TF-card into the TF card slot (8)and the music will start playing automatically
- Instructions (How to use the USB flash drive)**
- Turn on the speaker by pressing and hold the on/off button (1)
- Insert the USB flash drive into the USB flash drive slot (9) and the music will start playing automatically
- Instructions (How to use the AUX IN mode)**
- Turn on the speaker by pressing and hold the on/off button(1)
- Insert one of the 3.5mm jack into the 3.5mm Aux in slot (6) and insert another one into your device.
- Play music

3

Instructions (How to change the LED mode)

- Turn on the speaker by pressing and hold the on/off button (1)
- Short press the M button to change any LED mode you want

Instructions (How to use the FM Radio mode)

- Turn on the speaker by pressing the on/off button (1)
- Insert the 3.5mm Aux cable into the 3.5mm Aux in slot (6) to work as an antenna.
- Press and hold the "M" button (4) to browse through the mode options, Stop pressing the "M" button when hearing the command "FM mode"
- Press the Play/Pause button (5) to scan the FM channels.The speaker will now search for channels, this might take few minutes. When the search is finished the speaker will stay on a channel. Short press the button (3)and button (2) to change the channel.
- Remark: The LED light will be off under FM mode.

Instructions (How to use the TWS Pairing)

- Make sure both speakers are "ON" and not paired with any Bluetooth device.
- Double press the Play / Pause button(5) on any one speaker, an indication tone would be heard. After few seconds, another indication tone would be heard if they pair together automatically.

4

- The LED indicator on one speaker will flash blue rapidly, and the LED indicator on the other speaker will stay blue.
- Turn on the Bluetooth menu on your wireless device (phone, tablet,laptop, i.e.) and select " **Pro PSP1212**"
- Pair the device
- Play music

Note: On any one of the speaker, double press play/pause button (5) and this would unpair the speakers from TWS.

Instructions (How to charge the speaker)

- Insert the USB TYPE-C cable into the USB C charging port (9)
- Insert the USB-A side into a 5V USB charger or other power source
- During the charging process, a red indicator light will remain on, and the light will be off when fully charged

Specifications:

Bluetooth version	5.0
Bluetooth range	10 meter(max)
Max output power	10W
Frequency response	100Hz-18KHz
Battery type	Rechargeable Li-Ion battery
Battery capacity	1800 mAh
Charging time	About 4 hours
Working time	About 4-5 hours

5

Attention/ Danger !

- Too avoid hearing damage, limit the time you use this sound source at high volume and set the volume to a safe level. Prolonged exposure to high volumes can cause hearing damage.

Precautions:

- Only charge the speaker with a 5V/1A charger.
- Handle with care and avoid falling on the ground.
- Don't place heavy objects on the item.
- Children should be supervised while operating the item.
- Working temperature is between 0 C - 45° C .
- Don't use the speakers with wet hands

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

6

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

7

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

9

For service assistance and product information please call: 1-800-968-9853.

Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15,
MISSISSAUGA, ON, L5S 2A3
www.curtisint.com

FCC Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Caution: To this device not explicitly approved by manufacturer could Cause: -Any changes or individual your authority to operate this equipment.-R Exposure information -The device has been evaluated to meet general RF exposure requirement. -The device can be used in portable exposure condition without restriction.

10

PROSCAN

ENCEINTE BLUETOOTH
N° DE MODELE : PSP1212
MANUEL D'INSTRUCTIONS



Ces images ne sont fournies qu'à titre de référence
Veuillez vous référer à l'unité réelle !
PROSCAN et le logo PROSCAN sont des marques de
commerce utilisées sous licence par CURTIS
INTERNATIONAL LTD. – www.proscan-brand.com.

Consignes de sécurité


- Gardez l'appareil à l'écart des sources de chaleur, de la lumière directe du soleil, de l'humidité, de l'eau et de tout autre liquide
- N'utilisez pas l'appareil s'il est tombé ou a été endommagé de quelque façon que ce soit.
- Les réparations de l'équipement électrique ne doivent être effectuées que par un électricien qualifié. Des réparations incorrectes peuvent mettre l'utilisateur en danger.
- Ne placez aucun objet dans les ouvertures. Gardez l'appareil à l'abri de la poussière, des peluches, etc.
- N'utilisez pas cet appareil pour autre chose que l'usage auquel il est destiné.
- Gardez l'appareil hors de portée des enfants
- Ce produit n'est pas un jouet
- N'utilisez pas de solvants abrasifs pour nettoyer
- Pour minimiser le risque d'incendie ou de choc électrique, évitez d'utiliser dans des conditions humides telles que la pluie ou l'humidité
- Ne pas utiliser près de l'eau (par exemple, salle de bain, piscine, etc.)
- Ne pas exposer à une chaleur excessive comme le soleil, le feu, etc.
- Ne plongez jamais l'appareil dans l'eau ou tout autre liquide à des fins de nettoyage

1

Contenu

Haut-parleur Bluetooth
Câble de charge USB Type-C
AUX dans le câble audio
Manuel d'instructions

Instruction

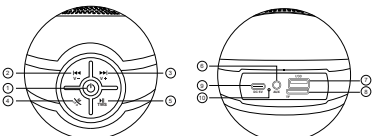

1. Bouton ON / OFF
2. Court presse: jouer la chanson précédente
- Longue presse: pour diminuer le volume
3. Court presse: pour jouer la chanson suivante
- Longue presse: pour augmenter le volume
4. Bouton de mode (mode Bluetooth / FM Radio / Mode LED)
5. Bouton Play / Pause, pendant que la musique joue
- Bouton de mode TWS
6. Aux dans le port
7. Entrée du lecteur flash USB
8. Fente pour carte TF
9. Port de charge USB
10. Indicateur LED

2

Instructions (comment utiliser le mode sans fil)

- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1), le mode Bluetooth sera automatiquement
- Appuyez et maintenez le bouton "M" (4) pour parcourir les options de mode
- Arrêtez d'appuyer sur le bouton "M" lorsque vous entendez la commande "Mode Bluetooth"
- La lumière de l'indicateur (10) clignote maintenant en bleu
- Allumez le menu Bluetooth sur votre appareil sans fil (téléphone, tablette, ordinateur portable, c'est-à-dire) et sélectionnez "Pro PSP1212"
- Associez l'appareil
- Jouer de la musique

Instructions (comment utiliser le mode TF-carte)

- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1)
- Insérez la carte TF dans la fente de la carte TF (8) et la musique commencera à jouer automatiquement
- Instructions (comment utiliser le lecteur flash USB)**
- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1)
- Insérez le lecteur flash USB dans la fente de lecteur flash USB (9) et la musique commencera à jouer automatiquement

3

Instructions (comment utiliser le mode AUX)

- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1)
- Insérez l'une des prise de 3,5 mm dans les AUX 3,5 mm dans la fente (6) et insérez un autre dans votre appareil.
- Jouer de la musique

Instructions (comment modifier le mode LED)

- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1)
- Appuyez sur le bouton M pour modifier le mode LED que vous souhaitez

Instructions (comment utiliser le mode radio FM)

- Allumez l'enceinte en appuyant longuement sur le bouton marche/arrêt (1)
- Insérez le câble AUX 3,5 mm dans l'AUX 3,5 mm dans la fente (6) pour fonctionner comme une antenne.
- Appuyez longtemps sur le bouton "M" (4) pour parcourir le mode
- Options, arrêtez d'appuyer sur le bouton "M" lorsque vous entendez la commande "FM mode"
- Appuyez sur le bouton Play / Pause (5) pour scanner les canaux FM. Le haut-parleur recherchera désormais les canaux, cela pourrait prendre quelques minutes. Une fois la recherche terminée, le haut-parleur restera sur un canal. Appuyez à court sur le bouton (3) et le bouton (2) pour modifier le canal.
- Remarque: La lumière LED sera éteinte en mode FM.

4

Instructions (comment utiliser le jumelage TWS)

- Assurez-vous que les deux haut-parleurs sont «allumés» et non jumelés avec un appareil Bluetooth.
- Double Appuyez sur le bouton Play / Pause (5) sur un seul haut-parleur, une tonalité d'indication serait entendue. Après quelques secondes, une autre tonalité d'indication serait entendue si elles s'associent automatiquement.
- Le indicateur LED sur un haut-parleur clignote rapidement en bleu et l'indicateur LED sur l'autre haut-parleur restera bleu.
- Allumez le menu Bluetooth sur votre appareil sans fil (téléphone, tablette, ordinateur portable, c'est-à-dire) et sélectionnez "Pro PSP1212"
- Associez l'appareil
- Jouer de la musique

Remarque: Sur l'un des haut-parleurs, le bouton Play Play / Pause (5) à double appuyez sur Double, et cela perturberait les haut-parleurs de TWS.

Instructions (comment charger l'orateur)

- Insérez le câble USB Type-C dans le port USB C-charge (9)
- Insérez le côté USB-A dans un chargeur USB 5V ou une autre source d'alimentation
- Pendant le processus de charge, un voyant rouge restera allumé et la lumière sera éteinte lorsqu'elle sera complètement chargée.

5

Specifications:

Version Bluetooth	5.0
Gamme Bluetooth	10 mètres (max)
Puissance de sortie maximale	10W
Fréquence de réponse	100Hz-18 KHz
Type de batterie	Batterie Li-Ion rechargeable
Capacité de la batterie	1800 mAh
Temps de charge	Environ 4 heures
Temps de travail	Environ 4-5 heures

Attention / danger !:

- Évitez trop d'entendre les dégâts, limitez le temps que vous utilisez cette source sonore à un volume élevé et définissez le volume à un niveau sûr. Une exposition prolongée à des volumes élevés peut causer des dommages auditifs.

Précautions:

- Chargez uniquement le haut-parleur avec un chargeur 5V / 1A- Patriage avec soin et évitez de tomber sur le sol.
- Ne placez pas des objets lourds sur l'article.
- Les enfants doivent être supervisés lors du fonctionnement de l'élément. - La température de travail se situe entre 0 C -45° C .
- N'utilisez pas les haut-parleurs avec des mains humides

6

REMARQUE : cet équipement a été testé et déclaré conforme aux limites des appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère des utilisations et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement cause des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes : - Réorientez ou déplacez l'antenne de réception. - Augmenter la distance entre l'équipement et le récepteur.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Caution: To this device not explicitly approved by manufacturer could Cause: -Any changes or individual your authority to operate this equipment.-R Exposure information -The device has been evaluated to meet general RF exposure requirement. -The device can be used in portable exposure condition without restriction.

7

Pour faire une réclamation de garantie, veuillez envoyer un email à support2@curtiscs.com ou appeler le 1-800-968-9853.

90 joursdegarantie

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jugé défectueux, à notre choix; Cependant, vous êtes responsable de tous les coûts associés au retour du produit. Si le produit ou le composant n'est plus disponible, nous le remplacerons par un produit similaire de valeur égale ou supérieure. Avant l'envoi d'un produit de remplacement, le produit doit être rendu inutilisable ou nous être renvoyé. Cette garantie ne couvre pas le verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une

preuve d'achat est nécessaire pour faire une réclamation de garantie.

Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz). Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisent pas les limitations de garanties implicites ou de dommages

preuve d'achat est nécessaire pour faire une réclamation de garantie.

Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz). Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisent pas les limitations de garanties implicites ou de dommages

9

spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner. Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

JOIGNEZ VOTRE PREUVE D'ACHAT ICI, UNE PREUVE D'ACHAT EST NECESSAIRE POUR OBTENIR UN SERVICE DE GARANTIE.

Veuillez avoir l'information suivantes lorsque vous contactez l'équipe d'assistance:

- Nom, adresse et numéro de téléphone.
- Numéro de modèle et numéro de série.
- Une description claire et détaillée du problème.
- Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.

Pour obtenir assistance et information appelez: 1-800-968-9853.
Curtis International Ltd.
www.curtisint.com
7045 BECKETT DRIVE, UNIT 15,
MISSISSAUGA, ON, L5S 2A3

10