

# 双面印刷

75MM

95MM



BLUETOOTH SPEAKER  
MODEL NO: CSP054-B\_PDQ  
INSTRUCTION MANUAL



For service assistance and product information,  
please call: 1-800-968-9853.

Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

This picture is only provided for reference.  
Please refer to the actual unit!

CURTIS™ IS A REGISTERED TRADEMARK OF  
CURTIS INTERNATIONAL LTD



ENCEINTE BLUETOOTH  
N° DE MODÈLE : CSP054-B\_PDQ  
MANUEL D'INSTRUCTIONS



Pour obtenir assistance et information  
appelez: 1-800-968-9853.

Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

Ces images ne sont fournies qu'à titre de référence.  
Veuillez vous référer à l'unité réelle !

CURTIS™ EST UNE MARQUE DÉPOSÉE DE  
CURTIS INTERNATIONAL LTD

## Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children
- This product is not a toy
- Do not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc
- Never immerse the unit in water or any other liquid for cleaning purposes


## Content:

Bluetooth Speaker

Micro Charging Cable

Instruction Manual

## Instruction:

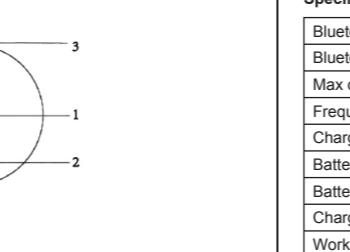

## Instructions (How to use the wireless mode)

- Turn on the speaker by pressing the on/off switch (1) for 3 seconds, the bluetooth mode will be automatically. The indicator light (3) will flash in blue
- Open the Bluetooth menu on your wireless device (phone, tablet, laptop, i.e.) and select "Curtis CSP054"
- If required, enter the password '0000' to confirm to pairing.

-Once paired successfully, you will hear a Beep tone indicating pairing successful and the blue LED flash slowly.

- Pair the device

- Play music

## Instructions (How to charge the speaker)

- Insert the Micro USB cable into the micro charging port (2)
- Insert the USB-A side into a 5V USB charger or other power source
- During the charging process, a red indicator light will remain on, and the light will be off when fully charged.

## Specifications:

Bluetooth version	5.0
Bluetooth range	10 meter(max)
Max output power	1x 3W (Speaker)
Frequency response	100Hz-18KHz
Charging input voltage	DC 5V 1A
Battery type	Rechargeable Li-on battery
Battery capacity	400 mAh
Charging time	About 2 hours
Working time	About 1.5 hours
Product size	7 x 7 x 8 CM

## Note: Battery life & charging time may vary based on usage & types of devices used

## Attention/ Danger !:

- Too avoid hearing damage, limit the time you use this sound source at high volume and set the volume to a safe level. Prolonged exposure to high volumes can cause hearing damage.

## Precautions:

- Only charge the speaker with a 5V/1A charger.- Handle with care and avoid falling on the ground.- Don't place heavy objects on the item.
- Children should be supervised while operating the item.- Working temperature is between 0°C -25°C .
- Don't use the speakers with wet hands

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

JOIGNEZ VOTRE PREUVE D'ACHAT ICI, UNE PREUVE D'ACHAT EST NÉCESSAIRE POUR OBTENIR UN SERVICE DE GARANTIE. Veuillez avoir 'information suivantes lorsque vous contactez l'équipe d'assistance:

- Nom, adresse et numéro de téléphone.
- Numéro de modèle et numéro de série.
- Une description claire et détaillée du problème.
- Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.

Cette garantie ne couvre pas le verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).

Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisent pas les limitations de garanties implicites ou de dommages spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner.

Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.



BLUETOOTH SPEAKER  
MODEL NO: CSP054-B\_PDQ  
INSTRUCTION MANUAL



For service assistance and product information,  
please call: 1-800-968-9853.

Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

This picture is only provided for reference.  
Please refer to the actual unit!

CURTIS™ IS A REGISTERED TRADEMARK OF  
CURTIS INTERNATIONAL LTD



ENCEINTE BLUETOOTH  
N° DE MODÈLE : CSP054-B\_PDQ  
MANUEL D'INSTRUCTIONS



Pour obtenir assistance et information  
appelez: 1-800-968-9853.

Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3  
[www.curtsint.com](http://www.curtsint.com)

Ces images ne sont fournies qu'à titre de référence.  
Veuillez vous référer à l'unité réelle !

CURTIS™ EST UNE MARQUE DÉPOSÉE DE  
CURTIS INTERNATIONAL LTD



## Consignes de sécurité

- Gardez l'appareil à l'écart des sources de chaleur, de la lumière directe du soleil, de l'humidité, de l'eau et de tout autre liquide
- N'utilisez pas l'appareil s'il est tombé ou a été endommagé de quelque façon que ce soit.
- Les réparations de l'équipement électrique ne doivent être effectuées que par un électricien qualifié. Des réparations incorrectes peuvent mettre l'utilisateur en danger.
- Ne placez aucun objet dans les ouvertures. Gardez l'appareil à l'abri de la poussière, des peluches, etc.
- N'utilisez pas cet appareil pour autre chose que l'usage auquel il est destiné.
- Gardez l'appareil hors de portée des enfants
- Ce produit n'est pas un jouet
- N'utilisez pas de solvants abrasifs pour nettoyer
- Pour minimiser le risque d'incendie ou de choc électrique, évitez d'utiliser dans des conditions humides telles que la pluie ou l'humidité
- Ne pas utiliser près de l'eau (par exemple, salle de bain, piscine, etc.)
- Ne pas exposer à une chaleur excessive comme le soleil, le feu, etc.
- Ne plongez jamais l'appareil dans l'eau ou tout autre liquide à des fins de nettoyage

## Contenu:

Haut-parleur Bluetooth

Micro-câble de charge

Manuel d'instructions

## Schéma du produit:



## Instructions (Comment utiliser le mode sans fil)

- Allumez l'enceinte en appuyant sur l'interrupteur marche/arrêt (1) pendant 3 secondes, le mode Bluetooth s'activera automatiquement. Le voyant (3) clignotera en bleu
- Ouvrez le menu Bluetooth sur votre appareil sans fil (téléphone, tablette, ordinateur portable, c'est-à-dire) et sélectionnez « Curtis CSP054 »
- Si nécessaire, entrez le mot de passe '0000' pour confirmer l'appairage.
- Une fois l'appairage réussi, vous entendrez un bip indiquant que l'appairage est réussi et la LED bleue clignote lentement.
- Associez l'appareil
- Jouer de la musique

## Instructions (Comment charger le haut-parleur)

- Insérez le câble Micro USB dans le port de charge micro (2)
- Insérez le côté USB-A dans un chargeur USB 5V ou une autre source d'alimentation
- Pendant le processus de charge, un voyant rouge reste allumé et le voyant s'éteint lorsqu'il est complètement chargé.

## Caractéristiques:

Version Bluetooth	5.0
Port Bluetooth	10 mètres (max)
Sortie du haut-parleur	1x 3W (Speaker)
Gamme de fréquences	100Hz-18KHz
Tension d'entrée de charge	DC 5V 1A
Type de batterie	Rechargeable Li-on battery
Capacité de la batterie	400 mAh
Temps de charge	About 2 hours
Temps de travail	About 1.5 hours
Taille du produit	7 x 7 x 8 CM

REMARQUE : cet équipement a été testé et déclaré conforme aux limites des appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère des utilisations et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produisent pas dans une installation particulière. Si cet équipement cause des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'équipement et le récepteur.
- Connectez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consultez le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide

Les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.