





Ding

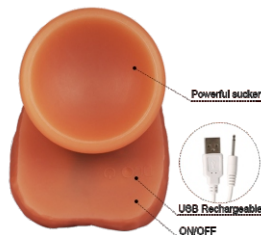

DONG 001 Function:

1. Off/ON: Long press 3 seconds to start , then it will enter the first gear, short press to modulate frequency once , total 7 frequencies ,the lights is always on when working condition. Long press 3 seconds to shutdown.
2. Charging: charge with 5.0v power, Red light flashes when charging , Red light always on when full, it doesn't work when charging .
3. Low battery prompt : The product will enter the safe state when 3.0V ,the light will flashes 4 times before the protection , then will shutdown.

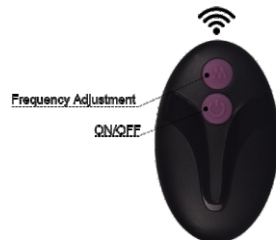


DONG 001 Remote Control:

1. The "W" button is the FM button; each time the light is flashed once.
2. "The key is the switch button, the remote control will operate when the product start to work, long press for 1 seconds to turn on or turn off.
3. Each button has a light on each side, the lighting are require brighter (astigmatism)
4. The remote control distance exceed 10 meter , and it will enter the dormant state after ten minutes without operating the remote control.

Tips:

- 1.Charge it before first use.
- 2.Wash the dildo well before using it.
- 3.The dildo have multiple speed settings. Always start on a low setting and work your way up. If the dildo feels too strong at first you can put a towel between you and the dildo, or just press it lightly against your body.
- 4.Start slowly with penetration and get yourself aroused by using the dildo externally first.
- 5.It's recommended to put a condom over a dildo if you're using it for penetration. You should also use a water-based lubricant when using a dildo for penetration.
- 6.Wash the dildo after use, although the vibe is water-proof, but don't submerge it in water for long time.

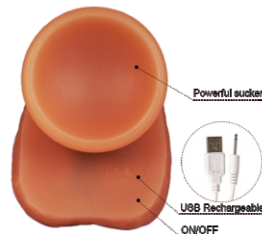

DONG 001 Funktion:

1. AN/AUS: Drücken Sie 3 Sekunden lang um das Gerät zu starten. Ein weiterer kurzer Druck auf den Knopf verstellt die Frequenz, insgesamt gibt es 7 verschiedene Frequenzen. Die LEDs leuchten während des Betriebes ununterbrochen. Zum Ausschalten muss der Knopf wieder 3 Sekunden gedrückt werden.
2. Laden: Das Gerät wird mit einem 5.0v. Anschluss geladen. Die rote LED blinkt während des Ladevorganges. Sobald die LED dauerhaft rot leuchtet, ist das Gerät vollständig geladen. Das Gerät ist während des Ladevorganges nicht nutzbar.
3. Kritischer Ladezustand: Bei geringer Batterieladung schaltet das Gerät in den 3.0V Modus, die LED blinkt 4 mal, dann schaltet sich das Gerät ab.
4. Das Gerät hat im Betrieb eine Spannung von 5.0V.
5. Batteriekapazität: 1300mah, Ladezeit 3.5-4 Stunden.



DONG 001 Fernbedienung:

1. Der "W" Knopf ist der FM Knopf. Jedes mal blinkt die LED einmal.
2. Der " " Knopf auf der Fernbedienung ist der Wechselknopf. Drücke sie den Knopf für eine Sekunde um das Gerät an- oder abzuschalten.

3. Jeder Knopf hat ein Licht an jeder Seite, die Beleuchtung ist heller (Astigmatismus).
4. Die Fernbedienung hat eine Reichweite von 10 Metern und und schaltet sich nach 10 Minuten ohne Bedienung von alleine ab.

Tipps:

1. Nach dem Gebrauch hat das "Spielzeug" eine große Menge von Sekreten und Restflüssigkeit von dem Schmiermittel. Wenn es für eine lange Zeit nicht gereinigt wird, wird es leicht Bakterien züchten. Also bitte reinigen Sie Ihr "Spielzeug" so bald wie möglich nach dem Gebrauch .
2. Es ist am besten, mit einem trockenen Baumwolltuch nach dem Waschen zu wischen. Oder ein hochwertiges Papiertuch ist auch eine gute Wahl. Nach dem Wischen lässt es sich natürlich trocknen und die Sonne zu meiden!
3. Letzlich können Sie eine spezielle Reinigungslösung oder verdünnten Alkohol (75%) zur Desinfektion verwenden oder Sie können es bevor Sammeln mit ein bisschen Pulver bestreuen.

All products of our company is certified safe quality products.
customers_smile@tracysdog.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.