


Greetings from realme Mobile

This guide will show you how to use the phone and its important functions. You may also visit realme official website to get more information about the phone.

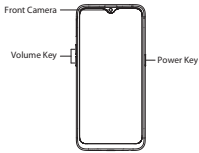

Warning:

- Do not place the phone or battery near or inside the heating equipments, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C~35°C.

- Back cover can't be removed.

How to reboot the phone:

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to transfer contents from an old phone to a new phone

You can quickly transfer contents such as photos, videos, music, contacts, messages, and apps from an old phone to a new phone via realme Clone Phone. 1 Scan the QR code below using the old phone to install "Clone Phone"; on the new phone, launch "Clone Phone" directly.



2 Follow the prompts on the screen to complete the data transfer.

Standard accessories

You are provided with the following standard accessories:

1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool.

Specification

Product	RMX2020/RMX2021/RMX2022	
Main screen parameter	16.5cm(6.5")	
Dimension	164.4×75.4×8.9(mm)	
Battery	4880mAh/18.88Wh(Min) 5000mAh/19.35Wh(Typ)	
Camera	5Megapixels Front 12Megapixels+2Megapixels +2Megapixels Rear	
Operating temperature	0°C-35°C	
SAR Values	CE SAR	< 2.0W/kg(Head) < 2.0W/kg(Body)

Radio Waves Specifications		
Radio		Frequency
GSM		850MHz
		900MHz
		1800MHz
		1900MHz
WCDMA		Bands 1/2/4
		Bands 5/8
LTE FDD		Bands 1/2/3/4
		Bands 5/8/20/28
		Band 7
LTE TDD		Bands 38/40/41
Bluetooth		2.4-2.4835GHz
2.4G Wi-Fi		2.4-2.4835GHz
NFC		13.56MHz

عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتهوية جيدة. يوصى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل وزر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيفية نقل المحتويات من هاتف قديم إلى هاتف جديد

يمكنك نقل محتويات مثل الصور والفيديوهات والموسيقى وجهات الاتصال والرسائل والتطبيقات من هاتف قديم إلى هاتف جديد بسرعة عبر تطبيق نسخ الهاتف من realme.

١ امسح رمز QR أدناه باستخدام الهاتف القديم لتشغيل "نسخ الهاتف"; وعلى الهاتف الجديد، افتح "نسخ الهاتف" مباشرة.




٢ اتبع التعليمات الموجودة على الشاشة لإكمال نقل البيانات.

الملحقات القياسية

سيتم تزويدك بالملحقات القياسية التالية:

١ هاتف، ١ شاحن، ١ أداة لإدخال وإخراج بطاقة SIM
١ كابل بيانات USB، ١ كابل أمان، ١ دليل سريع.

خالص التحيات من الهاتف المحمول realme
يسطهر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضًا زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.

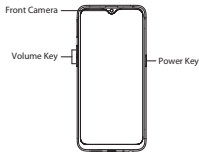

تحذير:

لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالغاز والفنن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك). وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.

يُنصح باستخدام الشاحن والبطارية وكرّيل البيانات الأصليين. فقد تتسبب الشواحن أو كابات البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.

الغطاء الخلفي لا يمكن نزع.

المواصفات الفنية

طراز المنتج	RMX2020/RMX2021/RMX2022	
خصائص شاشة العرض الرئيسية	6.5 بوصة	
الأبعاد	164.4×75.4×8.9 (مليمتر)	
البطارية	4880mAh/18.88Wh(min) 5000mAh/19.35Wh(Typ)	
الكاميرا	5 ميجابكسل أمامية 12 ميجابكسل + 2 ميجابكسل خلفية	
درجة حرارة التشغيل	0°C — 35°C	
قيم SAR	CE SAR	(رأس) < 2.0W/kg (جسم) < 2.0W/kg

مواصفات الموجات اللاسلكية	لاسلكي
التردد	
850MHz	GSM
900MHz	
1800MHz	
1900MHz	
Bands 1/2/4	WCDMA
Bands 5/8	
Bands 1/2/3/4	LTE FDD
Bands 5/8/20/28	
Band 7	
Bands 38/40/41	LTE TDD
2.4-2.4835GHz	Bluetooth
2.4-2.4835GHz	2.4G Wi-Fi
13.56MHz	NFC

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2AUYFRMX2020.

For this device, the highest reported SAR value for usage against the head is 1.19 W/kg, for usage near the body is 0.75 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

realme

Quick Guide

RMX2020
RMX2021
RMX2022

realme

