


MIRIC

Miric Record player

User Manual

Modell M6-RP01

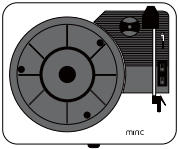

Shenzhen Adeltech Technology Co., Ltd
Room 201, Building A, No. 5, Shennan 1st Road,
Shenzhen Hong Kong Cooperation Zone,
Shenzhen, Guangdong 518111, CH

Miric Tech GmbH
Ruhrallee 185, 45136 Essen

CE **RoHS**


Model:M6-RP01

Contents

English ----- 01-04

Deutsch ----- 05-08

Phonogra

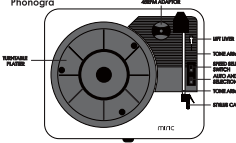

Main Technical Parameter:

Model No.	M6-RP01
Product material	ACF
Weight	1.2KG
Product size	300*250*110mm
Material of Stylus	Stylus Stylus
Tone arm length	22.5mm
Bluetooth transmission distance	>10m
Safety protection	SVT1A

OPERATION INSTRUCTIONS:

➤ **Power supply**
Before playing a record, plug the power cord into a power outlet (DC5V POWER SUPPLY).
NOTE: This player is normally powered by DC5V/2A. If the power supply of other specification will damage the record player, this is not covered by the warranty.

➤ **Bluetooth play mode**
1. When the power is connected, the machine automatically defaults to Bluetooth function. The Bluetooth function of the machine is turned on. The Bluetooth name is Miric.
2. Turn on the Bluetooth function of the mobile phone, search for the Bluetooth of the record player, and select a good machine Bluetooth for connection matching after matching you will hear connected and you can play the songs in the mobile phone through the record player.
When you turn off Bluetooth on your phone, the record player will stop Bluetooth connection with your phone. You will hear: Ready for pairing. At this point, the record player is in Bluetooth mode and continue to wait for a Bluetooth connection.
NOTE: The transmission distance of Bluetooth device is about 10 meters, and the transmission effect is different in different environments.

➤ **Record player mode**
1. Place the record on the TURNABLE PLATTER, push the record SPEED SELECTION SWITCH, and select the speed (33/45/78) of the record you played.
NOTE: When playing a 45 rpm record, use the TONE/ARM CLIP AND ADAPTOR located in the bottom of near the tone arm.
2. Turn on the UFT LEVER and move the tone arm close to the edge of the record. At this time, the turntable starts to rotate, push down the UFT LEVER, the tone arm begins to slowly descend and the stylus carriage descends onto the record.
The record player automatically switches to record player mode and starts playing songs on vinyl records.
When pushing the UFT LEVER UP, the tone arm will stop and stop playing, move the tone arm return to its original position and pushing the UFT LEVER again, the record player will switch back to Bluetooth mode.
3. If the AUTO AND MANUAL SELECTION SWITCH is turned ON, the record will stop automatically when finished. If the switch is OFF, the record will NOT stop automatically when finish.
NOTE: The general recommendation that the AUTO AND MANUAL SELECTION SWITCH is turned ON.

➤ **Input connection**
Connect the external device with an audio cable (plug the 3.5mm plug (Audio cable) attached into the audio output of the machine, through input connection, songs from the external device can be played by record player.

➤ **Output connection**
Connect to external HiFi speaker or amplifier with an audio cable.
1. Plug the 3.5mm plug (Audio cable) into the audio output of the machine.
2. Attach the SPEAKER and lock the TONE ARM CLIP (when attaching the carriage protective cover, please do not touch the stylus).
3. Turn off the power.
4. Please do not turn the TURNABLE PLATTER off, this will cause damage to the TONE ARM and the STYLUS of the player.


Please note after using
1. After the playing is finished, use the UFT LEVER (2) to lift the TONE ARM and move it back to the TONE ARM CLIP position.
2. Attach the SPEAKER and lock the TONE ARM CLIP (when attaching the carriage protective cover, please do not touch the stylus).
3. Turn off the power.
4. Please do not turn the TURNABLE PLATTER off, this will cause damage to the TONE ARM and the STYLUS of the player.

CAUTION:
!!! RISK OF ELECTRIC SHOCK: The lightning bolt with an arrow in this symbol indicates that there is a non-insulated dangerous voltage in the outer casing of the product that is sufficient to cause electric shock.
The exclamation point in this equilateral triangle is a warning to the user that there is an important operation and maintenance instruction in the product Manual.

➤ **Important safety instructions**
(1) Please read the instructions carefully.
(2) To avoid fire or vibration, please do not extend the power cord or use other cables. Be sure to insert the plug correctly completely into the jack. Do not pull the plug out of the socket.
(3) To avoid electric shock, do not move the components inside the cover or disassemble it. If you need repair, please ask a professional.
(4) Please follow the instructions in this manual.
(5) Please do not put the speaker near water or wet place.
(6) Place the unit in a cool, ventilated place and follow the manufacturer's instructions for ventilation.
(7) Please do not place the whole machine near the heat source, such as radiator, stove, etc.

(8) Please do not move the power cord casually, do not squeeze the plug.
(9) Please use the accessories provided by the manufacturer.
(10) Unplug the power plug after lightning strikes or when it is not used for a long time.
(11) If you need to repair, you must ask a professional.
(12) Do not place the unit near or contact it with liquid or dripping water.
(13) Please use the power supply as required.
(14) Please do not use chemical reagents to clean the surface of the wooden box, this will cause damage to the surface of the wooden box. Please use a clean and wet cloth.
(15) Before starting the machine, please confirm whether the plug is plugged in.
(16) Unplug the power plug before moving the speaker.

Plattenspieler

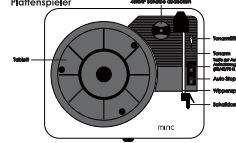

Technische hauptachscharakter:

Modell No.	M6-RP01
Material des Produkts	ACF
Gewicht	1.2KG
Größe des Produkts	300*250*110mm
Material des Stylus	Stylus Stylus
Länge des Tonarms	22.5mm
Bluetooth-Übertragungsreichweite	>10m
Eingangsspannung / Strom	SVT1A

BEDENUNGSANLEITUNGEN:

➤ **Stromversorgung**
Vor dem Einschalten des Geräts ist eine Steckdose, bevor Sie eine Aufnahme abspielen (DC5V/2A POWER SUPPLY).
HINWEIS: Dieser Player wird normalerweise mit DC100-240V betrieben. Wenn das Netzteil mit anderen Spezifikationen am Plattenspieler beschädigt ist, ist dies nicht unter der Garantie.

➤ **Bluetooth Wiedergabe**
1. Nach dem Einschalten des Geräts wird automatisch die Bluetooth-Funktion aktiviert. Nach einigen Sekunden wird ein Pop-up. Die Bluetooth-Funktion des Geräts ist aktiviert. Der Name von Bluetooth ist Miric.
2. Schalten Sie die Bluetooth-Funktion des Mobiltelefons ein, suchen Sie das Bluetooth des Zubehörs und wählen Sie das Bluetooth des Geräts für die Verbindung mit der Klangqualität. Nach dem pairing werden ein Pop-up, und Sie können das Gerät mit dem Bluetooth-Gerät verbinden. Die Übertragungsreichweite des Bluetooth-Geräts beträgt ungefähr 10 Meter und die Übertragungsleistung ist in verschiedenen Umgebungen unterschiedlich.

➤ **Plattenspieler Wiedergabe**
1. Legen Sie die Schallplatte auf den Tonarm, stellen Sie den Tonarm für Auswahl der Aufnahmengeschwindigkeit und wählen Sie die Geschwindigkeit (33/45/78) der ersten angegebenen Schallplatte.
HINWEIS: Verwenden Sie zum Abspielen einer 45U / min-Aufnahme den abgetrennten 45U / min-Adapter, der sich in der Nähe des Tonarms befindet.
2. Nehmen Sie die weiße Nadelschutzabdeckung des Plattenspielers ab und entriegeln Sie die Wippen des Plattenspielers.
3. Drücken Sie den UFT-Hebel und bewegen Sie den Tonarm nahe an den Rand der Schallplatte und das Hochheben des Tonarms. Drücken Sie den Tonarm-Hebel nach unten. Der Tonarm beginnt langsam abzusinken, die Nadelspitze beginnt die Schallplatte zu berühren und die Wiedergabe beginnt.
4. Wenn der Auto-Stop-Schalter auf die OFF-Position der Aufzeichnungswiedergabe nach unten gedrückt wird, wenn der Auto-Stop-Schalter.
5. In der Position OFF stoppt die Aufnahme nicht, nachdem sie beendet wurde. Hinweis: Es wird empfohlen, diesen Schalter auf ON zu stellen.

4. Wenn der AUTOMATISCHE UND MANUELLE WAHLSCHALTER (BINGSCHALTER) ist, stoppt die Aufnahme automatisch, wenn sie beendet ist. Wenn dieser Schalter auf OFF steht, stoppt die Aufnahme NICHT automatisch, wenn sie fertig ist.
HINWEIS: Im empfohlenen Fall, den AUTO AND MANUAL SELECTION SWITCH einschalten.

➤ **Eingangsverbindung**
Verbinden Sie das externe Gerät mit einem Audiokabel.
Der Schalter wird von der Audio-Kabel des Geräts angeschlossen.

➤ **Ausgangsverbindung**
Schließen Sie ein Audiokabel an einen externen Lautsprecher oder Verstärker an.
1. Drücken Sie den UFT-Hebel und bewegen Sie den Tonarm nahe an den Rand der Schallplatte und das Hochheben des Tonarms. Drücken Sie den Tonarm-Hebel nach unten. Der Tonarm beginnt langsam abzusinken, die Nadelspitze beginnt die Schallplatte zu berühren und die Wiedergabe beginnt.
2. Wenn der Auto-Stop-Schalter auf die OFF-Position der Aufzeichnungswiedergabe nach unten gedrückt wird, wenn der Auto-Stop-Schalter.
3. In der Position OFF stoppt die Aufnahme nicht, nachdem sie beendet wurde. Hinweis: Es wird empfohlen, diesen Schalter auf ON zu stellen.

Bitte beachten Sie nach der Verwendung:
1. Wenn die Aufnahme beendet ist, heben Sie den Stimmhebel mit dem UFT-Hebel (2) an und bringen Sie ihn in die UFT-Position des Stimmhebels.
2. Biegen Sie die Phono-Abdeckung an und betätigen Sie die Verriegelung des Tonarms.
3. Schließen Sie den Strom ab.
4. Drehen Sie den Plattenspieler nicht plötzlich, da dies den Tonarm und den Stift des Tonarms beschädigt.

VORSICHT:
!!! STROMSCHLAGGEFÄHR: Der Blitz mit einem Pfeil in diesem Dreieckssymbol zeigt an, dass das Produkt eine gefährliche Spannung vorhanden ist, die verursacht, einen Stromschlag zu verursachen.
Das Ausdrücken in diesem gleichschenkeligen Dreieck weist den Benutzer darauf hin, dass das Produkt ein wichtiges Betriebs- und Wartungsanweisung enthält.

➤ **Wichtige Sicherheitshinweise**
(1) Bitte lesen Sie die Anweisungen sorgfältig durch.
(2) Beachten Sie die Stromversorgung.
(3) Beachten Sie die Stromversorgung.
(4) Bitte lesen Sie die Anweisungen im Handbuch.
(5) Stellen Sie den Lautsprecher nicht in der Nähe von Wasser oder Feuchtigkeit auf.

(6) Stellen Sie das Gerät an einem kühlen und belüfteten Ort auf und verwenden Sie es gemäß den Anweisungen des Herstellers.
(7) Bitte stellen Sie nicht die gesamte Maschine auf das Zubehör der Wärmequelle, wie z. B. Heizkörper, Heiz usw.
(8) Bewegen Sie den Plattenspieler nicht nach Belieben und lassen Sie den Stecker nicht einfrieren.
(9) Verwenden Sie das vom Hersteller bereitgestellte Zubehör.
(10) Drehen Sie den Netzschalter, wenn der Blitz beginnt, ist nicht benutzt wird.
(11) Wenn eine Wartung erforderlich ist, muss der Plattenspieler eingedreht werden.
(12) Stellen Sie das Gerät nicht in der Nähe von mit Flüssigkeit gefüllten Behältern oder an einem Ort auf, an dem Wasser tropft.
(13) Verwenden Sie das Netzteil wie empfohlen.
(14) Verwenden Sie keine chemischen Reagenzien zum Reinigen der Oberfläche der Halbleiter. Das Reinigen der Oberfläche der Halbleiter. Verwenden Sie ein sauberes und feuchtes Tuch.
(15) Drehen Sie den Netzschalter, bevor Sie den Lautsprecher bewegen.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.