

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.




BABY MONITOR
QUICK START GUIDE



BABY MONITOR QUICK START GUIDE

Warning: Strangulation Hazard

Keep cord out of the reach of children (more than 3ft / 0.9m away) in case of STRANGULATION.

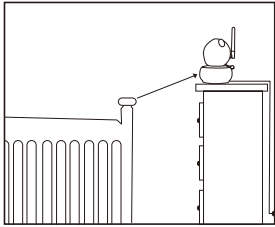


- NEVER place the camera or cord in or near a crib or playpen.
- NEVER mount the camera directly above a crib or playpen to avoid the risk of injury.
- Only use the AC adapters provided.

Caution

- NOT toys. Do not allow children to play with them.
- This product is NOT intended to replace the proper supervision of children. You MUST check your children's activity regularly.


Charging & Powering Baby Monitor

- 1) Connect the monitor adapter to the monitor and to a power outlet.
- 2) Unplug the unit when its power indicator turns off, indicating a full charge.
- 3) Press and hold the power button on the monitor for 3 seconds, the monitor is turned on, and the power indicator's blue light is on.

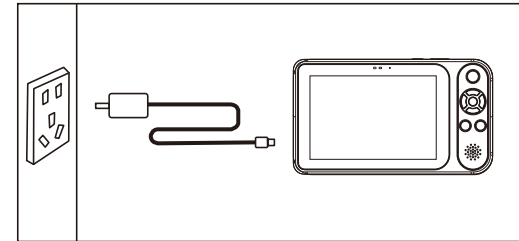

Powering Camera

- 1) Connect the camera to the power source via the Micro-USB cable and camera adapter.
- 2) Slide the power switch on the camera to turn on the power, and the blue power indicator will stay on. If the camera battery is low, the blue indicator light will flash. If the power of the camera is not full, the camera will automatically charge, and the indicator light flashes red and blue.

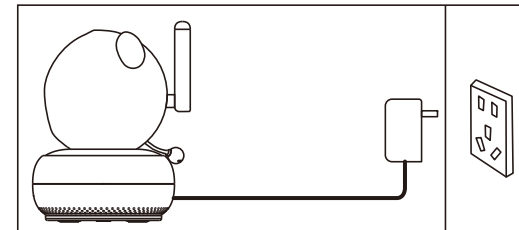

Pairing the baby Monitor& the Camera

By default, one camera has been paired with the monitor when manufactured. When you power on the monitor and camera, they will automatically pair.


To add more cameras, press the Pair Button at the top of the lens, select through ->->, and then the monitor will pair automatically with the camera.




- Only use the power adapters included in the package.
- Do not place the camera and power cord within the reach of you baby.

Placing the Camera

Place the camera 1.5-2m / 4.9-6.6ft away from your baby for safety reasons and for a better view when in night vision mode.

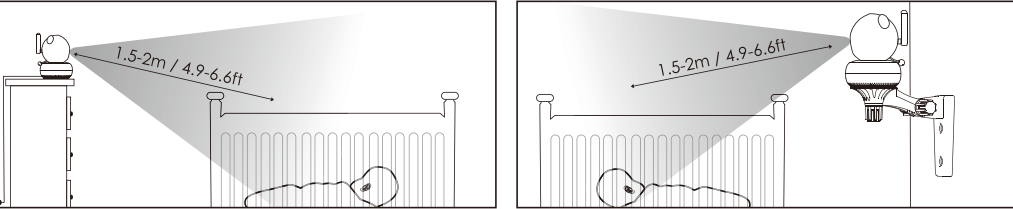


Camera details

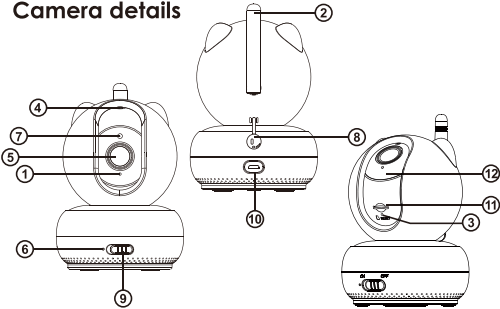

① MIC	⑦ Photosensitive sensor
② Antenna	⑧ Temperature Sensor
③ Reset button	⑨ Switch
④ Code button	⑩ Micro charging port
⑤ Lens	⑪ Memory card socket
⑥ Power Indicator	⑫ 6 IR LEDs

Monitor details

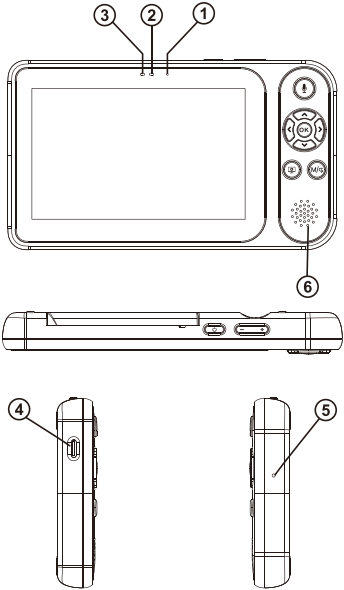


① Pickup	② Power Indicator
③ charging indicator	④ Type-C power interface
⑤ Reset hole	⑥ Speaker

	ON / OFF button	Long press for 3s to turn on or turn off.
	UP / DOWN buttons	Press to tilt the camera upward or downward. Press to adjust menu settings.
	LEFT / RIGHT buttons	Press to pan the camera left or right. Press to access different menu options.
	Back / Menu button	Press to open menu options or exit the menu.
	OK button	Press to confirm a selection.
	VIDEO button	Press to turn the LCD screen ON / OFF.
	TALK button	Press and hold to talk to your baby.
	"Volume Down" button	Press the "-" key to lower the volume.
	"Volume up" button	Press the "+" key to increase the volume.
	RESET button	Use a small pin to press the reset device.

FUNCTIONS & OPERATIONS

Monitor Interface OverView

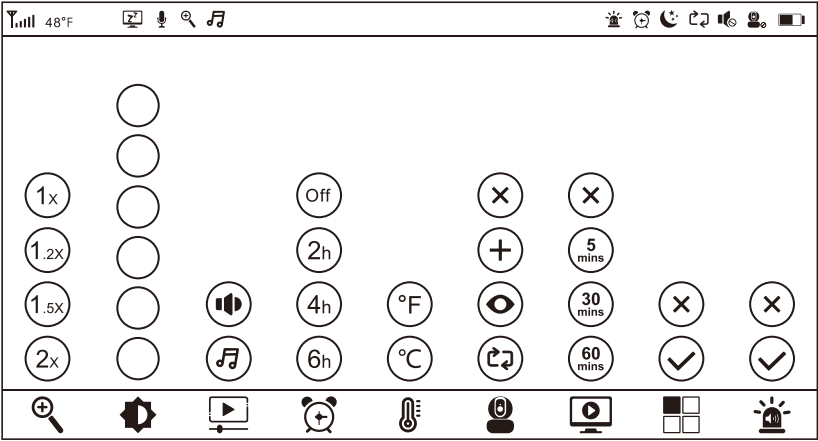

Icon indication

	Signal	5 levels
	Current Temperature	°C / °F
	Rest screen	5 / 30 / 60 Mins
	Talk-back	—
	Zoom	1 / 1.2 / 1.5 / 2X
	Music	Play/OFF
	Audible alarm	ON/OFF
	Night vision	—
	Circulating	ON/OFF
	Mute	—
	No camera	—
	Battery power	—
	Brightness	7 levels
	Music menu	Song volume / Song selection
	Alarm menu	OFF / 2 / 4 / 6hours
	Temperature unit selection	°C / °F
	Camera menu	Delete / add camera; Select camera; Circulating
	Rest screen settings	5 / 30 / 60mins
	Split Screen	ON / OFF

1.Menu Settings

Press “ M/S ” Button, “ ◀ ” and “ ▶ ” Buttons, and then press “OK” Button to set the monitor.

2.Digital Zoom

Press Zoom Button to zoom in to 1X / 1.2X / 1.5X / 2X when viewing the camera.

3.Circulating

Press “ ⌚ ” Button to start auto circulating, press OK again to stop.

4.Add / View / Delete a Camera

- 1) Press Menu button, select through > to add a camera.
- 2) Select through > to view a camera.
- 3) Select through > to delete a camera.



- You can switch viewing different cameras; the current camera number will be shown with the  Camera icon on the monitor.
- You can only select one camera to view at one time.

5.Pan-and-Tilt

When viewing the camera, press  /  /  /  Down Button to view at different angles,90 degrees vertically and 355 degrees horizontally.

Night Vision

The night vision is automatically activated in a dim environment. The camera has 6 high-intensity infrared LEDs for picking up clear images in the dark.

Talk-back

Press and hold Talk Button to talk to your baby, release it to exit the talking mode.




- When you enter the talking mode, the " " icon will be shown on the monitor.
- When it's mute or the speaker volume is too low, you may not be able to hear the baby.
- When you' re pressing the Talk Button, the camera will not transmit the sound to the monitor. Please release the button to listen to your baby.

Specifications


Monitor

CPU	ARM926EJ 800MHz
Screen Size	5 inches
Resolution	HD IPS
Video Input	Up to 4 channels
Audio	Built-in Mic
Power Supply	5V 2A
Interface	Type-C
Battery	1500mAh
Size	158*91*18 (mm)
Weight	210g
Operation Temperature	-10°C ~ +55°C
Operation Humidity	15%~85%

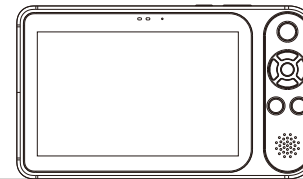

Camera

Image Sensor	1/2.9 Inch 2MP CMOS
Camera Resolution	1920 X 1080
Field of viewing angle	87°
IR Range	5m
Audio Transmission	Two-way voice intercom (Half Duplex)
Sound Sensitivity	-32dBm
Alarm	Audible alarm / offline alarm
Wireless Transmission Way	2.4GHz FHSS
Transmission Range	1200feet
Interface	Type-C
Storage	Support local storage (Up to 64G)
Battery	1000mAh
Power Supply	5V 2A
Size	121*91*91 (mm)
Weight	250g

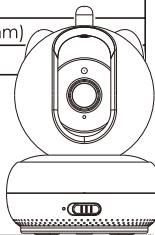

Product not powering on?	● Check that the camera and monitor are turned on. ● Check whether the camera is properly connected to the power source. Whether the power indicator of the camera is on. ● Check that the monitor is of enough battery (it'll auto shut off when battery level icon red is on the monitor).
Baby monitor can't connect with the camera?	● Check whether the monitor is of low battery. ● Charge it in time to restore good connection. ● Check whether the camera is well connected to power. ● Check whether there are any large metallic objects including metallic doors, refrigerators, mirrors, etc., placed between the camera and monitor thus blocking the radio signals. ● Check whether there's any other 2.4GHz product is used nearby like WiFi routers, microwave ovens, which may interfere the connection.
Nothing shown when I view a camera?	● If nothing above is involved, please retry to pair. ● Check all connections to the camera (power cable plugging and pairing). ● Check whether the screen is in sleep mode. Press any button to awake it. ● Check whether the camera is within range of the monitor. ● Adjust the monitor antenna to vertical position for better signal transfer.
No sound from the monitor?	● Check whether the system sound volume is set High or Low. Check if it is set to mute.
Black and white pictures?	● Night vision LED may be ON.Please turn on room lights to force it out of the night mode.


Choppy videos?	● Check whether the camera is near the monitor and that there're no obstacles between them. ● Adjust the monitor antenna to vertical position for better signal transfer.
Too much noise?	● Volume may be set too high. ● The camera and monitor may be put too close;keep them at least 1.5m / 4.9ft apart. ● The camera may be too out of range.Please keep it within 10m / 32.8ft to the monitor.

Deutsch

Schnellanleitung und Einführung

⚠ Vorsicht: Modell für Anschluss der Eltern Einheit und dessen Kabel

Bitte stellen Sie sowohl die Eltern Einheit, als auch das Netzkabel mit Kind Einheit in einem sicheren Abstand unerreichbar (mindestens 3ft / 0.9m) für Ihr Kleinkind auf. Damit können Sie Schaden am Gerät und am Kleinkind vermeiden.

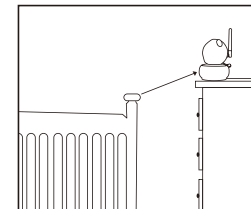


- Bitte stellen Sie die Kind Einheit und das Kabel auf dem Bett auf keienn Fall an einem für das Kleinkind gut erreichbarem Ort auf.
- Bitte auf keinen Fall die Kind Einheit auf dem Bett oder über dem Bett des Kleinkind installieren. Es besteht Verletzungsgefahr.
- Bitte nutzen Sie nur das originale Zubehör und Netzteil mit diesem Gerät.

Sicherheitshinweise

- Das hier vorgestellte Produkt ist kein n Spielzeug, bitte halten Sie Ihr Kleinkind fern vom Gerät.
- Das vorliegende Produkt befreit Sie nicht gänzlich vom Sorgerecht. Bitte beobachten Sie die Aktivitäten Ihres Säuglings daher.


Anschließen des Netzteils an der Eltern Einheit Monitor

- 1) Verbinden Sie den Ladeadapter mit der Anzeige des Eltern Einheit Monitor.
- 2) Sobald das Lämpchen am Gerät leuchtet, heißt das der Ladevorgang ist abgeschlossen. Bitte stecken Sie das Ladekabel von der Steckdose aus.
- 3) Drücken Sie die Einschaltknopf drei Sekunden lang, um die Anzeige einzuschalten. Das Ladelämpchen wird danach in blauer Farbe leuchten.

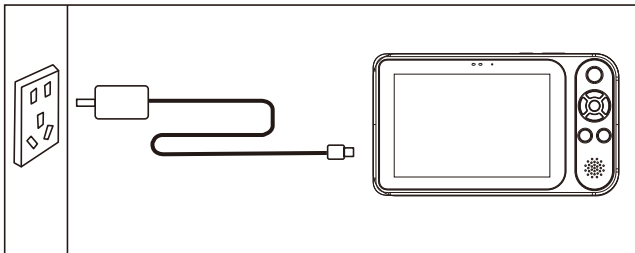

Netzteil der Kleinkind Einheit

- 1) Verbinden Sie den Ladeadapter mit der Anzeige der Kleinkind Einheit.
- 2) Schieben Sie den Ein / Aus Schalter der Kleinkind Einheit nach oben, um diese einzuschalten. Danach leuchtet die Kontrolllampe ordnungsgemäß in blauer Farbe. Falls die Aufladung der Einheit niedrig sein sollte, blinkt die Kontrolllampe in blauer Farbe. Sie brauchen sich keine Sorgen zu um ein nicht vollständiges Aufladung zu machen. Ihre Kleinkind Einheit lädt sich automatisch auf. Dabei blinkt die Kontrollleuchte rot-blau.

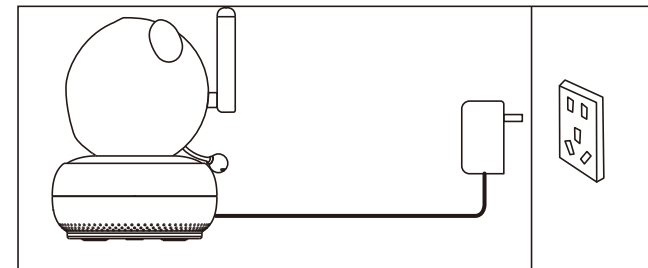

- Bitte nutzen Sie das beigelegte Netzteil und Anschlusskabel.
- Bitte auf keinen Fall die Kind Einheit auf dem Bett oder über dem Bett des Kleinkinds installieren. Es besteht Verletzungsgefahr.


Die Eltern Einheit und die Kleinkind Einheit abstimmen

Bitte beachten Sie, dass die Kleinkind Einheit ab Werk mit der Eltern Einheit abgestimmt wurde. Sobald Sie die Eltern Einheit einschalten, sollten dieser und die Kleinkind Einheit automatisch abgestimmt sein.


Falls Sie wünschen noch eine weitere Kleinkind Einheit hinzuzufügen, bitte drücken Sie den Eltern Einheit Knopf und wählen Sie -> -> durch Ihre Auswahl sollten sich die Kind Einheiten automatisch aufeinander abstimmen.

Kleinkind Einheit installieren

Ausgehend von den empfohlenen Sicherheitshinweisen und einem geeigneten nächtlichem Sichtfeld empfehlen wir die Kleinkind Einheit 1.5m-2m / 4.9-6.6ft vom Ort des Kleinkindes entfernt aufzustellen.

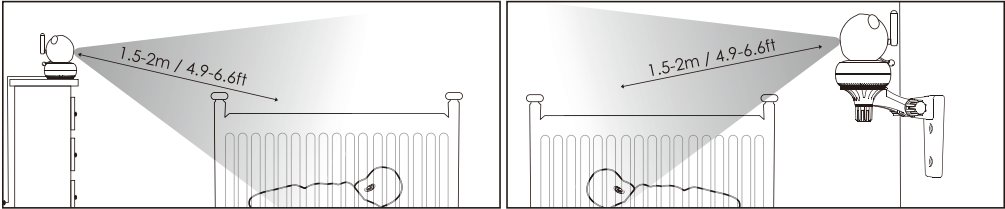


Kleinkind Einheit Überblick

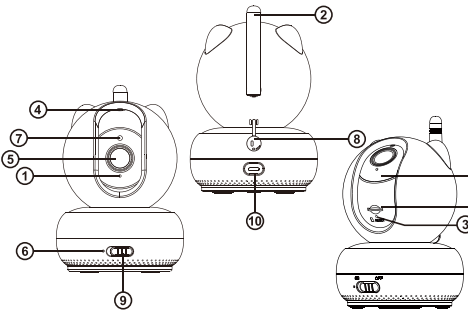

1 Tonabnehmer	7 Lichtsensor
2 Antenne	8 Temperatursensor
3 Resetloch	9 Netzschalter
4 Kopplungsknopf	10 Ladebuchse
5 Eltern Einheit	11 TF Kartenleser
6 Ladelampe	12 6 Infrarot Licht


Bildschirm Übersicht

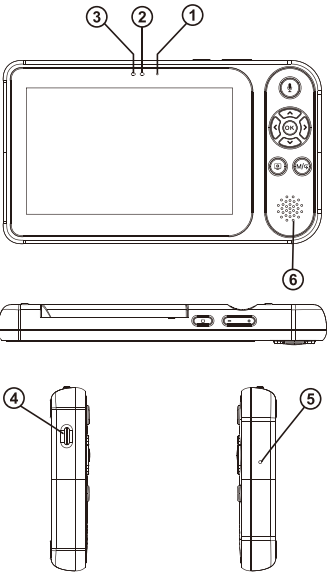

1 Tonabnehmer	2 Netzteil Lämpchen
3 Ladeanzeige	4 Typ-C Ladebuchse
5 Resetloch	6 Lautsprecher

	Netzschalter	Bitte 3s lang gedrückt halten um einzuschalten oder lang drücken um auszuschalten.
	Oben / Unten	Anzeige in Echtzeit, bestätigen durch Knopfdruck, Statifkopf regulieren und nach oben / unten drehen. Menüanzeige, bestätigen durch Knopfdruck, Markierung beim Menüpunkt nach oben / unten bewegen.
	Links / Rechts	Anzeige in Echtzeit, bestätigen durch Knopfdruck, Statifkopf regulieren und nach oben / unten drehen. Menüanzeige, bestätigen durch Knopfdruck, Markierung beim Menüpunkt nach links / rechts bewegen.
	Zurück / Menü	Diesen Knopf drücken, um ins Menü zu gelangen. Wieder diesen Knopf drücken, um aus dem Menü herauszugehen.
	Bestätigen	Menüanzeige, bestätigen durch Knopfdruck, Funktion bestätigen.
	Wach- / Schlafanzeige	Wach – oder Schallanzeige.
	Gegensprechen	Anzeige in Echtzeit, bestätigen durch Knopfdruck. Diesen Knopf drücken, um eine Rückantwort zu geben. Diesen Knopf loslassen, um die Funktion der Rückantwort zu beenden.
	"Lautstärke herunter"	Durch Drücken von "-" kann die Lautstärke herunter gedreht werden.
	"Lautstärke herauf"	Durch Drücken von "+" kann die Lautstärke herauf gedreht werden.
	Resetloch	Benutzen Sie einen kleinen spitzen Gegenstand wie eine Nadel, um das Gerät zurückzusetzen.

Ansicht des Hauptmenüs Überblick

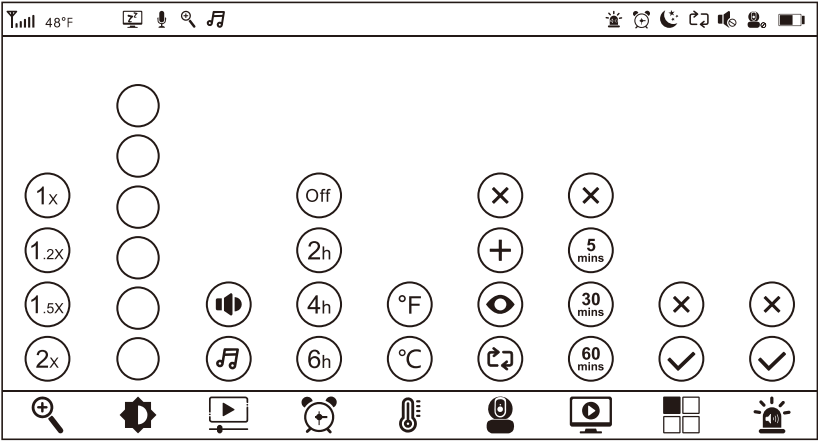

Bilderklärung

	Signalstärke	5 Stufen
	Derzeitige Temperatur	°C / °F
	Schlafzeit	5 / 30 / 60 Minuten
	Gegensprechen	—
	Vergrößern	1 / 1.2 / 1.5 / 2 Mal
	Schlaflied	Übertragen / Abbrechen
	Akustischer Alarm	Aktivieren / Deaktivieren
	Nachtsicht	—
	Schlaflieder nacheinander abspielen	Aktivieren / Deaktivieren
	Rotieren	—
	Kleinkind Einheit aus	—
	Anzeige der verbleibenden Ladung	—
	Helligkeit	7 Stufen
	Schlaflieder einspielen	Lautstärke des Schlafliedes / Auswahl des Schlafliedes
	Wecker Einstellung	Aktivieren / 2 / 4 / 6 Stunden
	Auswahl der Temperatur der Einheit	°C / °F
	Kleinkind Einheit Menü	Löschen / Kleinkind Einheit hinzufügen, Kleinkind Einheit auswählen, Kleinkind Einheit rotieren
	Den Bildschirm ausblenden	5 / 30 / 60 Minuten
	Multifunktionsanzeige	Aktivieren / Deaktivieren

1.Einstellung des Bildschirms

Drücken Sie auf die Menütaste "M/☞", drücken Sie "links ◀" und "rechts ▶", danach bestätigen Sie mit OK um die Einstellungen des Bildschirms fertigzustellen.

2.Vergrößerungseinstellung

Schauen Sie die Eltern Einheit Zeit nach, drücken Sie "☞" und wählen Sie dadurch die Vergrößerungsstufe 1 / 1.2 / 1.5 / 2 Mal.

3.Schlaflieder nacheinander abspielen

Drücken Sie "☞" und starten Sie den Vorgang um Schlaflieder nacheinander abzuspielen. Falls Sie wiederholt auf OK drücken verlassen Sie diesen Modus.