


MangoKit

CD-X Portable CD Player

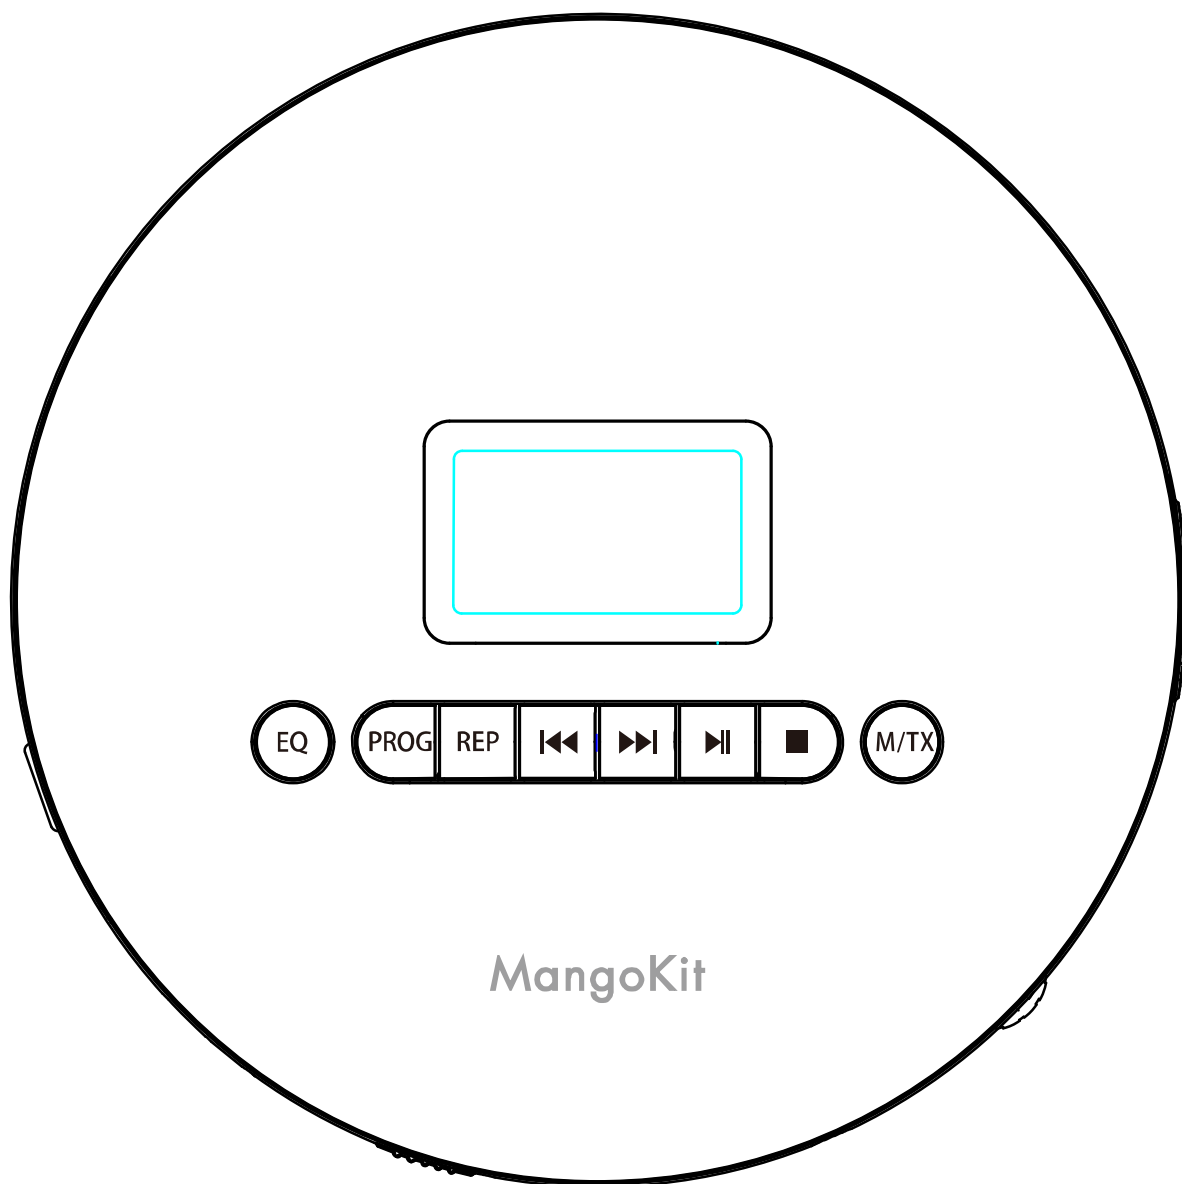


User Manual

What's In The Box

- 1 x MangoKit CD-X Player
- 1 x Earphone
- 3 x Earphone buds S / M / L
- 1 x USB charging cable
- 1 x 3.5 to 3.5mm AUX cable
- 1 x Owner's manual

The Player Controls and Connectors

Item	Function	Item	Function
1	TF Card / Micro SD port	10	Repeat
2	DC 5V charge port	11	Previous track/FM tune-
3	Charging indicator light	12	Next track/FM tune+
4	Power ON / OFF	13	Play/Pause/FM Scan
5	Headphone jack	14	CD Stop
6	Volume +/-	15	Short press for CD/TF/FM mode Long press for Bluetooth Connect
7	Display	16	Lid open switch
8	EQ settings: BBS (Bass Boost), POP, JAZZ, ROCK, and CLASSIC	17	Hold ON/OFF
9	Programme your disc to play in a selected order		

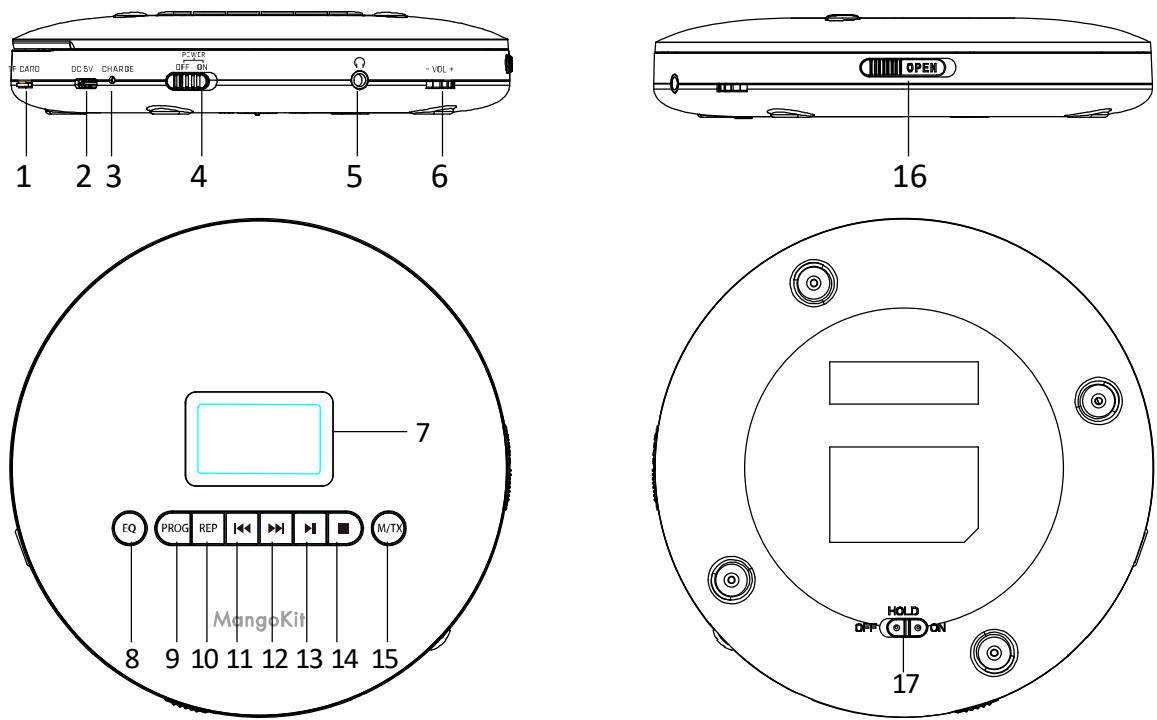

Basic Operations

Power on/off

To power on or power off, switch the On/Off switch(Ref.4) to the 'On' or 'Off' position. If the player will not be used for an extended period of time, ensure that it is switched off.

Hold Function (pause buttons)

While the player is in use, you can switch the On/Off/Hold button to the 'HOLD' position (Ref.17). This will place the unit in 'Hold' mode. In 'Hold' mode, the buttons will be inactive. If any button is pressed while the unit is in 'Hold' mode, the screen will display 'HOLD'.

Charging

To charge the CD player, connect the USB charging cable (included) from any standard USB Type-C connection (such as a laptop or mains USB adapter) to the charging port on the device (Ref.2). The device will take approximately 3-4 hours to fully charge. While charging, the charge indicator (Ref.3) will light up red, and when fully charged, the light will turn green. When the screen (Ref.7) displays a low battery icon, the device needs to be charged. When the device is fully charged, the battery life will last for approximately 10 hours when reading standard CDs, and approximately 12 hours when reading MP3 CDs.

Inserting a Disc

Slide the 'OPEN' switch (Ref.16) to the 'OPEN' position to open the device door.

Insert the disc into the CD player, pressing it gently into place.

Close the disc door gently. Ensure that the disc door is completely closed, otherwise the player will not read the disc. Compatible disc formats: CD, CDR, HD CD, CD-MP3, CD-WMA.

Using headphones or external speakers

Listen to your audio CD through headphones by inserting wired headphones (with a standard 3.5mm connector) into the headphone socket of the player (Ref.5). Ensure that the headphone connector is fully inserted into the device. Alternatively, use Bluetooth out mode to connect to wireless headphones – see below section 'Connecting to Bluetooth'

To listen to your audio CD through external speakers, connect a standard 3.5mm AUX cable from the CD player to your external speakers or output device. Control the playback using the controls on the CD player. You will now be able to hear audio through your external speakers or other output device. Alternatively, use Bluetooth out mode to connect to wireless speaker – see below section 'Connecting to Bluetooth'

My CD Player displays “ASP” on the screen. What does this mean?

ASP stands for ‘Anti-Shock Protection’. When you see this on the display, it indicates that the ASP is functioning. Flashing ‘ASP’ means the device is saving all track information from the CD for uninterrupted playback, a static display ‘ASP’ means the device has saved all full tracks information required.

Connecting to Bluetooth

To connect to an external Bluetooth device, wireless headphones or speaker, follow the steps below. NOTE – Bluetooth function is not possible on FM mode.

Switch the device on and change mode to CD or TF/SD.

Press and hold the ‘Mode’ button (Ref.15) until the Bluetooth logo displays. While Unconnected and searching for device, the Bluetooth logo will flash on the screen (Ref.7).

Follow the instructions for your external device to connect to the CD player. For headphones and speakers they should pair automatically after 20s.

When connected, the Bluetooth logo on the display screen will stop flashing. You should now be able to hear audio through your external device.

Press and hold the Mode button (Ref.7) to turn Bluetooth mode off.

Note – Bluetooth can remain connected between CD and SD modes, however will disconnect automatically when changed to FM mode.

Connecting to Car using AUX

The CD-X Pro all modes can be played through your car audio system if there is AUX connection available.

Use the supplied 3.5mm AUX cable, insert one end to the headphone jack on CD-X, and insert the second end into your car AUX port.

Follow instructions to activate AUX mode as your car audio playback.

The CD-X all modes, CD, SD or FM, can be played.

Dual Bluetooth and AUX mode

The CD player can be connected to both Bluetooth and AUX at the same time. For instance, Bluetooth could be used with one speaker, and AUX on another. For best sound results, use either Bluetooth or AUX mode.

FM Operation

Note – FM mode requires the supplied 3.5mm earphones to be connected, since they contain the FM antenna to locate FM radio signal. FM function cannot operate with different earphones or headphones used.

- 1.Short press the mode button(Ref.15) to switch to FM mode.
- 2.Short press the previous((Ref.11) to go 0.05hz back; Long press to run full scan backwards.
- 3.Short press the next(Ref.12) to go 0.05hz next; Long press to run full scan forwards
- 4.Short press the PLAY/PAUSE(Ref.13) to run full scan of available radio stations.

EQ Button - Sound Settings

In any playback mode, press the EQ button (Ref.8) to switch the sound mode between BBS (Bass Boost), POP, JAZZ, ROCK, and CLASSIC mode.

PROG Button - CD playback programming

In CD Mode only, follow the steps below to program your CD to play tracks in a specific order other

than the default order. To do this, it may help to refer to the album cover or track list.

Ensure the CD is stopped.

Press PROG to enter program mode (Ref.9).

Use the 'Previous' and 'Next' buttons (Ref.11)/(Ref.12) to select the first song you would like the disc to play (the display will show P01, p02, etc. on the right hand side, to refer to each consecutive track slot).

Press PROG again (Ref.9) to confirm. Repeat the above steps until you have programmed each track slot. Press Play (Ref.13) to begin playing the selected track order.

REP Button – CD Repeat playback options

Press the REP button (Ref.10) to switch the playback mode between REP1 (repeat one track), ALL (repeat all tracks), SHUF (play tracks in a random order), INTRO (play the first 10 seconds of each track) and repeat off (display will show blank in top right corner).

Screen Auto-Switch off

After 10 seconds of inactivity the screen and backlit buttons will automatically turn off. Press any button to turn the screen and button backlight back on again.

Trouble shooting

Problems	Potential Cause/Solution
Cannot read discs	Make sure the label side of the disc is facing up. Ensure the disc is fully secured in place. Make sure the disc is not heavily scratched or damaged. Wipe the disc gently from the center out to the edge with a clean, dry, soft cloth. Try another new disc to check if the disc is faulty. Ensure the format of the disc is CD, CDR, MP3, or HDCD.
No sound	Check volume is turned up. Check earphone jack is inserted fully into the headphone port.
Cannot be turned on	Ensure that the OFF/ON switch is turned on. Recharge the player.
Cannot charge battery	Check that the power outlet is working. Ensure that both ends of the charging cable are connected properly. Try charging the device with another charging cable of matching specification (USB Type-C).

Technical Specification

Model: CD-X Portable Player

Power Supply: 5V DC

Battery: 3.7V, 2000mAh, 7.4Wh

Dimension(mm): 140 D x 28 H

Weight:223G

Specifications subject to change without notice.

If you have any questions or suggestions, Please contact with us freely.

info@mangokitaudio.com

SAFETY INSTRUCTIONS & WARNINGS

Please read this manual carefully before using the player and retain it for future reference.

To reduce the risk of fire, electric shock, or personal injury, please observe the following safety precautions:

Do not touch the lens of the device. Always keep the disc compartment closed to prevent dust accumulation.

If the player is unable to read discs properly, clean the laser lens using a standard commercially available lens cleaner. Do not use other methods, as they may damage the optics.

Clean the exterior of the device with a clean, slightly damp leather or microfibre cloth. Do not use chemical cleaning agents.

If the player is not functioning correctly, please contact our after-sales support. Our technical team will assist you with professional guidance.

Do not use or store the player in damp or humid environments. Keep it away from liquids, steam, or moisture, such as raindrops or mist.

Do not place any liquids or metal objects on top of the player, such as cups or pins.

Do not expose the player to direct sunlight, open flames, or heat sources. Avoid placing it in areas with high temperatures.

Only qualified technicians with suitable electronic repair experience should disassemble the player. Any replacement parts must meet the specifications of the original circuit design.

Avoid striking, scratching, or inserting sharp objects into the player.

This device contains light-emitting diodes (LEDs). Avoid staring directly into them to prevent possible eye damage.

Children under the age of 12 should not use the player unsupervised.

When charging, ensure the power source provides DC 5V/2A. Using a power supply outside of this specification may cause damage.

Battery Safety

Do not disassemble the player or use an incompatible power adapter, as this may cause a malfunction or circuit damage.

Do not attempt to remove the battery.

Avoid dropping, striking, or subjecting the player to physical impact.

Do not short-circuit or puncture the battery.

Do not expose the player to high temperatures (above 60°C / 140°F).

Never dispose of the battery in fire or incinerate it.

Hearing Protection

To prevent hearing damage

Set the volume to a low level before starting playback. Gradually increase the volume to a comfortable level.

Avoid listening at high volumes, as this can cause permanent hearing loss.

Limit listening duration, even at moderate volume levels. Take regular breaks to protect your hearing.

Environmental Protection

To help protect the environment and human health:

Please dispose of packaging, electronic products, and batteries in accordance with local recycling and waste disposal regulations.





Do not dispose of this product with general household waste.

Inhalt der Box

- 1 x MangoKit CD-X Spieler
- 1 x Kopfhörer
- 3 x Kopfhörerknospen S / M / L
- 1 x USB-Ladekabel
- 1 x 3.5 auf 3.5mm AUX-Kabel
- 1 x Benutzerhandbuch

Bedienelemente und Anschlüsse des Players

Artikel	Funktion	Funktion	Funktion
1	TF-Karten-/Micro-SD-Anschluss	10	Wiederholung
2	DC 5V Ladeanschluss	11	Vorheriger Titel/FM-Sender
3	Ladekontrollleuchte	12	Nächster Titel/FM-Sender+
4	Strom ein/aus	13	Wiedergabe/Pause/FM-Scan
5	Kopfhörerbuchse	14	CD-Stop
6	Lautstärke +/-	15	Kurzer Druck für CD/TF/FM-Modus Langer Druck für Bluetooth-Verbindung
7	Anzeige	16	Schalter zum Öffnen des Deckels
8	EQ-Einstellungen: BBS (Bass Boost), POP, JAZZ, ROCK und CLASSIC	17	Halten ON/OFF
9	Programmieren Sie Ihre Disc für die Wiedergabe in einer ausgewählten Reihenfolge		

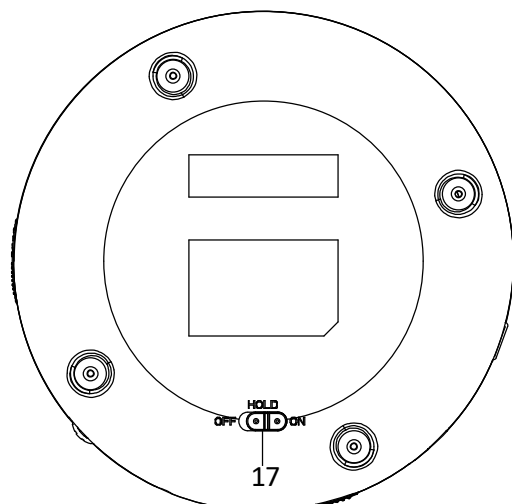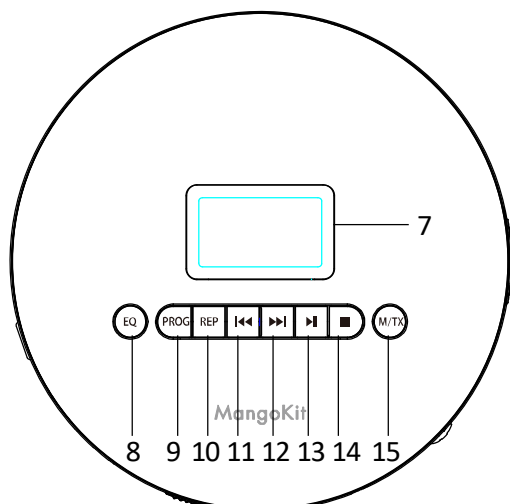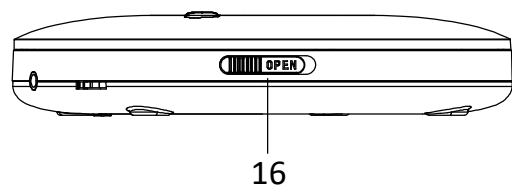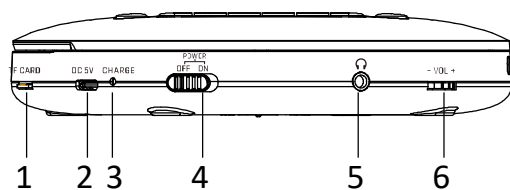

Grundlegende Funktionen

Einschalten/Ausschalten

Um das Gerät ein- oder auszuschalten, schalten Sie den Ein/Aus-Schalter (Ref. 4) in die Position "Ein" oder "Aus". Wenn Sie den Player über einen längeren Zeitraum nicht benutzen, schalten Sie ihn aus.

Haltefunktion (Pausentasten)

Während der Player in Betrieb ist, können Sie die Ein-/Aus-/Haltetaste in die Position "HOLD" schalten (Ref.17). Dadurch wird das Gerät in den 'Hold'-Modus versetzt. Im 'Hold'-Modus sind die Tasten inaktiv. Wenn eine Taste gedrückt wird, während sich das Gerät im "Hold"-Modus befindet, wird auf dem Bildschirm "HOLD" angezeigt.

Aufladen

Um den CD-Player aufzuladen, schließen Sie das USB-Ladekabel (im Lieferumfang enthalten) an einen Standard-USB-Typ-C-Anschluss (z. B. einen Laptop oder einen USB-Netzadapter) an den Ladeanschluss des Geräts an (Ref.2).

Es dauert etwa 3-4 Stunden, bis das Gerät vollständig aufgeladen ist. Während des Ladevorgangs leuchtet die Ladeanzeige (Ref.3) rot, und wenn das Gerät vollständig geladen ist, leuchtet sie grün. Wenn auf dem Bildschirm (Ref.7) ein Symbol für einen niedrigen Batteriestand angezeigt wird, muss das Gerät aufgeladen werden. Wenn das Gerät vollständig aufgeladen ist, hält der Akku beim Lesen von Standard-CDs etwa 10 Stunden und beim Lesen von MP3-CDs etwa 12 Stunden.

Einlegen einer Disc

Schieben Sie den Schalter "OPEN" (Ref.16) in die Position "OPEN", um die Gerätetür zu öffnen.

Legen Sie die CD in den CD-Spieler ein und drücken Sie sie vorsichtig ein.

Schließen Sie die Disc-Klappe vorsichtig. Achten Sie darauf, dass die Klappe vollständig geschlossen ist, da der Player die Disc sonst nicht lesen kann. Kompatible Disc-Formate: CD, CDR, HD CD, CD-MP3, CD-WMA.

Verwendung von Kopfhörern oder externen Lautsprechern

Hören Sie sich Ihre Audio-CD über Kopfhörer an, indem Sie einen kabelgebundenen Kopfhörer (mit einem 3,5-mm-Standardstecker) in die Kopfhörerbuchse des Players einstecken (Ref.5).

Achten Sie darauf, dass der Kopfhöreranschluss vollständig in das Gerät eingesteckt ist. Alternativ können Sie auch den Bluetooth-Ausgangsmodus verwenden, um eine Verbindung zu drahtlosen Kopfhörern herzustellen - siehe Abschnitt "Verbindung mit Bluetooth" weiter unten.

Um Ihre Audio-CD über externe Lautsprecher zu hören, schließen Sie ein standardmäßiges 3,5-mm-AUX-Kabel vom CD-Player an Ihre externen Lautsprecher oder Ihr Ausgabegerät an. Steuern Sie die Wiedergabe mit den Bedienelementen des CD-Players. Sie können nun den Ton über Ihre externen Lautsprecher oder ein anderes Ausgabegerät hören. Alternativ können Sie auch den Bluetooth-Ausgangsmodus verwenden, um eine Verbindung zu einem kabellosen Lautsprecher herzustellen - siehe Abschnitt "Verbindung mit Bluetooth" weiter unten.

Mein CD-Player zeigt "ASP" auf dem Bildschirm an. Was bedeutet dies?

ASP steht für "Anti-Schock-Schutz". Wenn Sie diese Anzeige auf dem Display sehen, bedeutet dies, dass der ASP funktioniert. Ein blinkendes "ASP" bedeutet, dass das Gerät alle Titelinformationen der CD für eine unterbrechungsfreie Wiedergabe speichert, eine statische Anzeige "ASP" bedeutet, dass das Gerät alle erforderlichen Titelinformationen gespeichert hat.

Verbinden mit Bluetooth

Gehen Sie wie folgt vor, um eine Verbindung zu einem externen Bluetooth-Gerät, einem drahtlosen Kopfhörer oder einem Lautsprecher herzustellen. HINWEIS - Die Bluetooth-Funktion ist im FM-Modus nicht möglich.

Schalten Sie das Gerät ein und wechseln Sie in den Modus CD oder TF/SD.

Halten Sie die Taste "Mode" (Ref.15) gedrückt, bis das Bluetooth-Logo angezeigt wird. Während nicht verbunden ist und nach einem Gerät sucht, blinkt das Bluetooth-Logo auf dem Bildschirm (Ref. 7).

Befolgen Sie die Anweisungen für Ihr externes Gerät, um es mit dem CD-Player zu verbinden. Bei Kopfhörern und Lautsprechern sollte die Verbindung nach 20 Sekunden automatisch hergestellt werden.

Wenn die Verbindung hergestellt ist, hört das Bluetooth-Logo auf dem Bildschirm auf zu blinken.

Sie sollten nun in der Lage sein, Audio über Ihr externes Gerät zu hören.

Halten Sie die Modustaste (Ref.7) gedrückt, um den Bluetooth-Modus auszuschalten.

Hinweis: Die Bluetooth-Verbindung kann zwischen den Modi CD und SD bestehen bleiben, wird jedoch automatisch getrennt, wenn in den FM-Modus gewechselt wird.

Anschließen an das Auto über AUX

Drücken Sie zur Bestätigung erneut PROG (Ref.9). Wiederholen Sie die obigen Schritte, bis Sie jeden Titelplatz programmiert haben. Drücken Sie Play (Ref.13), um die Wiedergabe der gewählten Titelreihenfolge zu starten.

REP-Taste - Optionen für die CD-Wiederholungswiedergabe

Drücken Sie die REP-Taste (Ref.10), um den Wiedergabemodus zwischen REP1 (Wiederholung eines Titels), ALL

(Wiederholung aller Titel), SHUF (Wiedergabe der Titel in zufälliger Reihenfolge), INTRO

(Wiedergabe der ersten 10

(Wiedergabe der ersten 10 Sekunden jedes Titels) und "Repeat off" (Display zeigt in der rechten oberen Ecke ein Leerzeichen an).

Automatische Bildschirmabschaltung

Nach 10 Sekunden Inaktivität schalten sich der Bildschirm und die hintergrundbeleuchteten Tasten automatisch aus. Drücken Sie eine beliebige Taste, um den Bildschirm und die Hintergrundbeleuchtung der Tasten wieder einzuschalten.

Fehlersuche

Probleme	Mögliche Ursache/Lösung
Discs können nicht gelesen werden	Stellen Sie sicher, dass die beschriftete Seite der Disc nach oben zeigt. Vergewissern Sie sich, dass die Disc vollständig befestigt ist. Stellen Sie sicher, dass die Disc nicht stark zerkratzt oder beschädigt ist. Wischen Sie die Disc vorsichtig mit einem sauberen, trockenen, weichen Tuch von der Mitte mit einem sauberen, trockenen, weichen Tuch ab. Probieren Sie eine andere neue Disc aus, um zu prüfen, ob die Disc defekt ist. Vergewissern Sie sich, dass der Datenträger das Format CD, CDR, MP3 oder HDCD hat.
Kein Ton	Prüfen Sie, ob die Lautstärke richtig eingestellt ist. Prüfen Sie, ob der Kopfhöreranschluss vollständig in den Kopfhöreranschluss eingesteckt ist.
Das Gerät lässt sich nicht einschalten	Stellen Sie sicher, dass der OFF/ON-Schalter eingeschaltet ist. Laden Sie den Player neu auf.
Kann nicht geladen werden Akku	Prüfen Sie, ob die Steckdose funktioniert. Stellen Sie sicher, dass beide Enden des Ladekabels richtig angeschlossen sind. Versuchen Sie, das Gerät mit einem anderen Ladekabel mit der gleichen Spezifikation (USB Typ-C) zu laden.

Technische Spezifikation

Modell: CD-X Tragbarer Player

Stromversorgung: 5V DC

Batterie: 3.7V, 2000mAh, 7.4Wh

Abmessungen (mm): 140 D x 28 H

Gewicht: 223G

Die Spezifikationen können ohne vorherige Ankündigung geändert werden.

Wenn Sie irgendwelche Fragen oder Vorschläge haben, kontaktieren Sie uns bitte einfach.

info@mangokitaudio.com

SICHERHEITSANWEISUNGEN UND WARNHINWEISE

Bitte lesen Sie dieses Handbuch vor der Verwendung des Players sorgfältig durch und bewahren

Sie es zum späteren Nachschlagen auf.

Um das Risiko eines Brandes, eines elektrischen Schlages oder von Verletzungen zu verringern,

beachten Sie bitte die folgenden Sicherheitsvorkehrungen:

Berühren Sie nicht die Linse des Geräts. Halten Sie das Disc-Fach immer geschlossen, um

Staubansammlungen zu vermeiden.

Wenn der Player Discs nicht richtig lesen kann, reinigen Sie die Laserlinse mit einem

handelsüblichen Linsenreiniger. Verwenden Sie keine anderen Methoden, da sie die Optik

beschädigen können.

Reinigen Sie das Äußere des Geräts mit einem sauberen, leicht feuchten Leder- oder Mikrofasertuch. Verwenden Sie keine chemischen Reinigungsmittel.

Sollte der Player nicht richtig funktionieren, wenden Sie sich bitte an unseren Kundendienst. Unser technisches Team wird Ihnen mit professioneller Beratung zur Seite stehen.

Verwenden oder lagern Sie den Player nicht in feuchten oder nassen Umgebungen. Halten Sie ihn von Flüssigkeiten, Dampf oder Feuchtigkeit, wie z. B. Regentropfen oder Nebel, fern.

Stellen Sie keine Flüssigkeiten oder Metallgegenstände auf den Player, wie z. B. Tassen oder Stifte.

Setzen Sie den Player nicht direktem Sonnenlicht, offenen Flammen oder Wärmequellen aus.

Vermeiden Sie die Aufstellung in Bereichen mit hohen Temperaturen.

Nur qualifizierte Techniker mit entsprechender Erfahrung in der Reparatur von elektronischen Geräten sollten den Player zerlegen. Alle Ersatzteile müssen den Spezifikationen der Originalschaltung entsprechen.

Vermeiden Sie Stöße, Kratzer oder das Einführen von scharfen Gegenständen in das Gerät.

Dieses Gerät enthält lichtemittierende Dioden (LEDs). Vermeiden Sie es, direkt in diese zu blicken, um mögliche Augenschäden zu vermeiden.

Kinder unter 12 Jahren sollten das Gerät nicht unbeaufsichtigt benutzen.

Achten Sie beim Aufladen darauf, dass die Stromquelle DC 5V/2A liefert. Die Verwendung eines Netzteils außerhalb dieser Spezifikation kann zu Schäden führen.

Sicherheit der Batterie

Zerlegen Sie den Player nicht und verwenden Sie kein inkompatibles Netzteil, da dies zu Fehlfunktionen oder Schaltkreisschäden führen kann.

Versuchen Sie nicht, die Batterie zu entfernen.

Lassen Sie den Player nicht fallen, schlagen Sie ihn nicht und setzen Sie ihn keinen physischen Stößen aus.

Schließen Sie den Akku nicht kurz und durchstechen Sie ihn nicht.

Setzen Sie den Player keinen hohen Temperaturen aus (über 60°C / 140°F).

Werfen Sie die Batterie niemals ins Feuer oder verbrennen Sie sie.

Gehörschutz

Um Gehörschäden zu vermeiden

Stellen Sie die Lautstärke vor Beginn der Wiedergabe auf einen niedrigen Pegel ein. Erhöhen Sie die Lautstärke allmählich auf einen angenehmen Pegel.

Vermeiden Sie hohe Lautstärken, da dies zu dauerhaftem Hörverlust führen kann.

Begrenzen Sie die Hördauer, auch bei moderater Lautstärke. Machen Sie regelmäßig Pausen, um Ihr Gehör zu schützen.

Schutz der Umwelt

Um die Umwelt und die menschliche Gesundheit zu schützen:

Bitte entsorgen Sie Verpackungen, elektronische Produkte und Batterien gemäß den örtlichen Recycling- und Abfallentsorgungsvorschriften.

Entsorgen Sie dieses Produkt nicht mit dem allgemeinen Hausmüll.

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.