



PS500

USER MANUAL

The digital user manual is available in **English, German, Spanish, Italian and French** on our website
oakcastle.co.uk/user-manuals/




What's In the Box?	3
Controls And Functions	6
Instructions Guide	
Microphones	7
Tripod Stand	8
Basic Operation	9
Bluetooth	10
USB Playback Mode	10
Micro SD Card Mode	10
FM Radio Mode	11
Aux-In Mode	11
Troubleshooting & Support	12
Specification	13
Warranty	13
Safety Information	14

3 year
Warranty

Register your product online for a FREE 3 year
extended warranty at: www.oakcastle.co.uk


What's in the Box?

- | | | | |
|----|-------------------------------|----|---------------------------|
| A. | Oakcastle PS500 Party Speaker | E. | Remote Control |
| B. | Wired Microphone | F. | USB Type-C Charging Cable |
| C. | Wireless Microphone | G. | User Manual |
| D. | Tripod Stand | | |

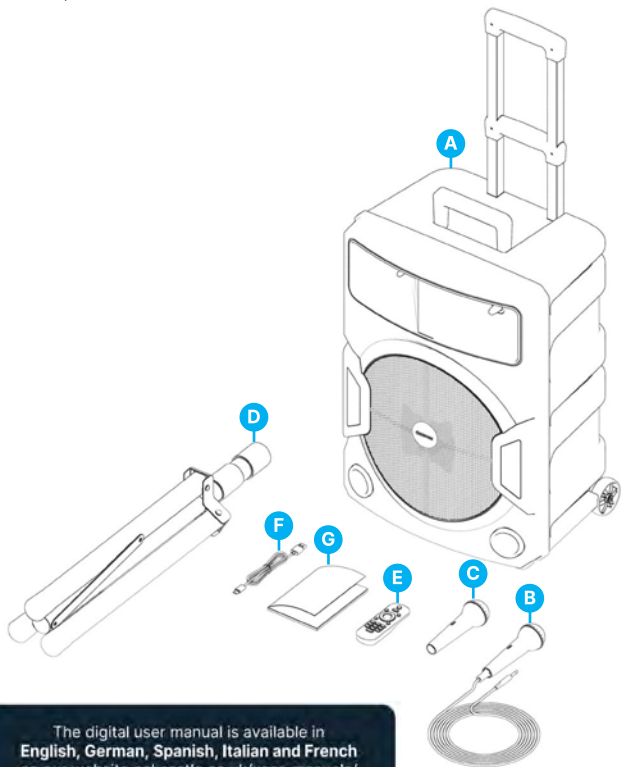

The digital user manual is available in
English, German, Spanish, Italian and French
on our website oakcastle.co.uk/user-manuals/

Front View

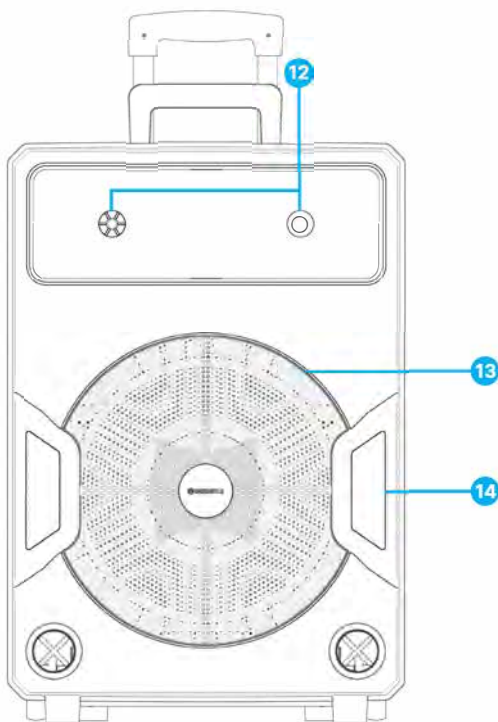


12. Active Tweeters

14. LED Lighting

13. Speaker

Back View & Control Panel

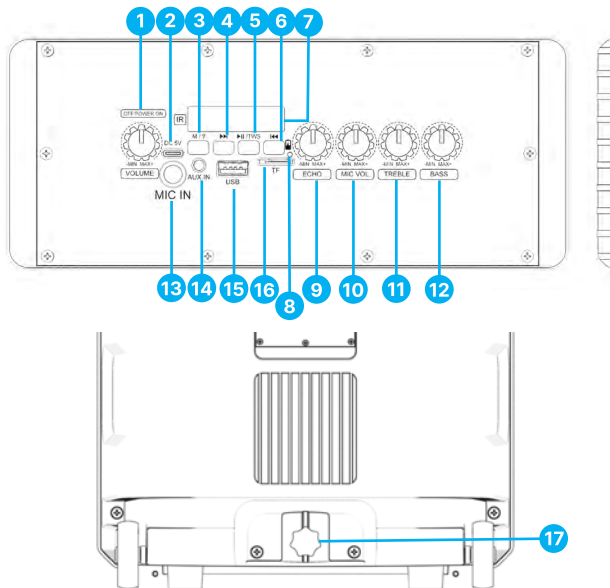


- | | |
|------------------------------------|---------------------------------|
| 1. Power ON/OFF, Volume +/- | 12. Bass +/- |
| 2. USB Type-C Charging Port (DC5V) | 13. Wired Microphone Port |
| 3. Mode & Lighting Modes | 14. AUX-In Port |
| 4. Next /Forward | 15. USB Playback Port |
| 5. Play, Pause/TWS | 16. SD (TF) Card Slot |
| 6. Previous | 17. Tripod Stand hole and screw |
| 7. LCD Display Screen | |
| 8. Charging LED Light | |
| 9. Echo +/- | |
| 10. Microphone Volume +/- | |
| 11. Treble +/-* | |

Please note: To change the lighting modes, you must press and hold for 2-3 seconds the Mode/ Lightning button (Ref.3).


Remote Control

17. Standby: Press the 'Standby' button to put your speaker in Sleeping Mode. Press again to turn on the speaker.
18. Stop: Press the 'Stop' button once to stop playing.
19. Volume +: Increase the volume.
20. Previous: Press to skip and play the previous song or to the previous FM station in FM Mode.
21. Repeat: Repeat one track or repeat all tracks (only available under USB/Micro SD Mode).
22. Numerical Keys: Directly access your MP3 tracks.
23. Mode: Long press the 'Mode' button to change the speaker modes to: Bluetooth®/FM/AUX/USB/SD Card.
24. Mute: Press the 'Mute' button to turn the sound on or off.
25. Next: Press to skip and play the next song or skip to the to the next FM station in FM Mode.
26. Play/Pause: Press to play or pause audio.
27. Volume -: Decrease the volume.
28. EQ: Press the 'EQ' button repeatedly to select sound styles. There are 6 equaliser presets modes which you can use as per your preferences: NORMAL, POP, ROCK, JAZZ, CLASSIC, COUNTRY

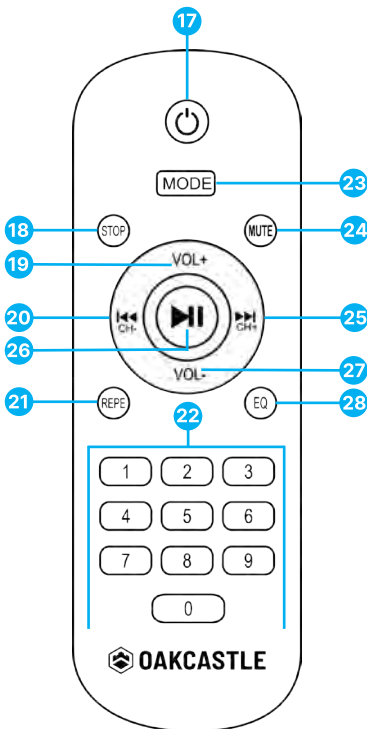

The microphones can be used in any mode such as : BT, AUX IN, USB, SD CARD, FM.

Wireless Microphone



- 29. Volume +/-
- 30. Magic Voice- Change the voice when talking on a microphone - male voice, female voice, baby voice and normal voice.)
- 31. Power ON/OFF

Power on the Oakcastle PS500 speaker, and then press the 'Power On/Off' button on the microphone **(Ref.31)**. The wireless microphone will then automatically connect with the party speaker.

Wired Microphone



- 32. Power ON/OFF

Insert the wired cable end into the MIC In port at the back of the speaker **(Ref.13)**. Power on the Oakcastle PS500 speaker, and then press the 'Power On/Off' button on the microphone **(Ref.32)**.

Please note: The wired and the wireless microphones can be used both at the same time or just one at a time.

The Tripod Stand

At lowest extension, the Oakcastle PS500's tripod is 43.5cm high and at maximum extension is 76cm high.

- Once removed from the box, unfold the bottom three legs. Keep it stable and the tripod won't wobble easily.
- Loosen the fixing screws and adjust the tripod to the appropriate height.
- Tighten the fixing screws. Once secured position your speaker and affix on the tripod stand.

Step 1


Secure the tripod stand.

Step 2

Prepare your speaker
(Ref.17).

Step 3

Affix the party speaker on the tripod with the screw on the speaker.

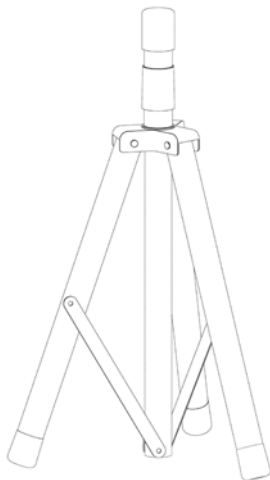

Please note that the instructions within this user manual will refer to the button number on the party speaker or the microphones (Ref 'number'), and the buttons on the remote control (Rem 'number'), in accordance with the diagrams from pages 4-8.

Charging Time

Insert the USB Type-C cable at the back of the unit **(Ref.11)**, and then connect with a plug (DC5V) to the mains for charging.

The charging LED screen will light up red **(Ref.8)**. It takes up to 6 hours to process a full charge course of the internal battery. Once fully charged, the red LED light will switch off. Disconnect the party speaker from mains and take advantages of its portability.

Please Note: It would be recommended to process a full charge course when not in use for longer battery life.

Playback

The Oakcastle PS500 has an internal rechargeable battery. Once fully charged, the speaker can be used on battery power for up to 6 hours.

Please Note: The playtime may vary based on the volume level and lighting modes usage while playing on battery power.

Power ON/OFF

Rotate the 'Power ON/OFF' knob **(Ref.1)** to the right to switch the power on and increase the volume as per your preferences. Rotate the 'Power ON/OFF' **(Ref.1)** to the left to decrease the volume and switch off the party speaker.

TWS

The 'TWS' function can only be used when using two Oakcastle PS500 Party Speakers which you can connect and use as twin Bluetooth party speakers.

Please note: each package only contains one Oakcastle PS500 Bluetooth Party Speaker.

To connect two Oakcastle PS500's, you should first ensure that both speakers are powered on and not paired individually with other devices via Bluetooth. Press the 'TWS' button **(Ref.3)** twice on one of these speakers and both will wirelessly connect with each other.

Once both Oakcastle PS500 are paired, switch on Bluetooth connectivity on your phone, and then search for 'Oakcastle PS500'. Select and pair with the speakers. You can now play audio on both party speakers.

To disconnect, the 'TWS' button **(Ref.3)** twice on one of the party speakers.



Bluetooth, USB & Micro SD Card Mode

Bluetooth Mode

The Oakcastle PS500 can be paired via Bluetooth with a phone or a tablet to play audio from your device via your party speaker.

Press the 'MODE' button on the unit **(Ref.3)** or on the remote control **(Ref.23)** repeatedly to change the speaker mode in Bluetooth. The text 'BT' will be displayed on the PS500 screen indicating the mode.

Once in Bluetooth Mode, the speaker is ready to pair. Activate Bluetooth on your device and search for 'Oakcastle PS500'. Select the speaker and pair with your device.

Once connected you can now start playing audio from your device via your party speaker.

Please Note: The Oakcastle PS500 cannot be paired with Bluetooth earbuds or earphones.

USB Mode

Press the 'Mode' button **(Rem.23)** on the remote control repeatedly to change into USB Mode. The party speaker display screen will show 'USB'.

The USB stick should be of up to 32GB and must be formatted in FAT32 before adding on your stick the audio files in supported formats MP3 or WAV.

Insert the USB stick into the USB Playback port **(Ref.15)** and the Oakcastle P500 will automatically start playing audio from your stick.

Please note: The Oakcastle PS500 USB port cannot be used as a connection port with other devices as this is just for Playback.

Micro SD card (TF) Playback Mode

Press the 'Mode' button **(Rem.23)** on the remote control or the one on the unit **(Ref.3)** repeatedly to change the speaker mode in 'TF'. The text 'TF' will be displayed on the party speaker display.

The TF Card (Micro-SD Card) you can use should be of up to 32GB, which must be formatted in FAT32 before adding the audio files in supported formats MP3 or WAV .

Insert the Micro SD Card into its port **(Ref.16)** at the back of the speaker.

The Oakcastle PS500 will then start playing audio from your Micro-SD Card.

FM Radio

Press the 'MODE' button (**Ref.3**) on the unit or the one on the remote control (**Rem.23**) repeatedly to change the speaker mode to 'FM Radio'. The text 'FM' will be displayed on the LCD screen of the speaker.

Press and hold the 'Play/Pause/TWS' Button on the unit (**Ref.5**) or the Play/Pause button on the remote control (**Rem.26**) for 2-3 seconds to start processing an automatic scan for the FM radio stations available at your location.

Once the search has been completed, the Oakcastle PS500 will automatically save all FM radio stations available at your location. The party speaker will then start playing the first radio station found.

Press the 'PREVIOUS' or 'NEXT' buttons to play the next or the previously stored FM radio station.

AUX-In Mode

The Oakcastle PS500 can be connected with an MP3 player, CD player, phone, tablet or any other similar device, using an AUX audio cable of 3.5mm (not included).

Insert one end of the audio cable of 3.5mm into the AUX-In port of the party speaker (**Ref.14**), and the other end into your audio source device's AUX output port.

Once connected, power on the party speaker, and change the Mode to AUX-In Mode by pressing repeatedly the 'Mode' button on the unit (**Ref.3**) or the one on the remote control (**Rem.23**), until the speaker's LCD screen displays 'AUX'.

You can now start playing audio from your device via the Oakcastle PS500 speaker.

Observation	Potential Cause/Solution
No power/function	Ensure the speaker battery is fully charged. If there is no sign of life, try a full charge without the speaker being used. Check if the charging LED lights up and disconnect the speaker when the LED light goes off. Power the party speaker on right after.
No sound	Increase the volume using the rotary knob on the speaker. If there is no sound when connected with other device, increase the volume level from your device also on the speaker.
Bluetooth not connecting	Ensure the Oakcastle PS500 is not paired with other devices and is set to Bluetooth Mode. Ensure your device has Bluetooth activated and search for 'Oakcastle PS500'. When you find the party speaker, connect to pair the devices. You will now be able to play audio via your party speaker.

Support

If you require assistance with your new Oakcastle PS500, please contact our tech Support team by completing the form on our Oakcastle website:
www.oakcastle.co.uk/support.

Specification

Power Supply	DC5V (150W)
Bluetooth Version	V 5.0
Bluetooth Operating Distance	10 Metres
Supported audio formats (TF,USB)	MP3, WAV.
FM Frequency Range	FM 87.5-108MHZ
Micro SD card	Use a Micro SD Card of up to 32GB
USB Playback Stick	Use a USB stick size of up to 32 GB
Weight	8.1 Kg
Dimensions	41.3×31.9×60.3 CM

Warranty

All products come with a standard 12-month warranty. All items must be registered within 30 days of purchase on www.oakcastle.co.uk for the warranty to be valid. Once on our website, use the menu to find 'Register Your Product'. You will also be given the chance to extend your warranty for an additional 24 months, free of charge.



The digital user manual is available in
English, German, Spanish, Italian and French
on our website oakcastle.co.uk/user-manuals/

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.majority.co.uk.
3. Heed all warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel.
13. No naked flame sources, such as a lit candle should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping, splashing or objects filled with water.

The main plug is used to disconnect the device. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock. Do not open.



Read all instructions carefully before use and keep for future reference.



When servicing, use only identical replacement parts.



ATTENTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION

RISQUE D'ELECTROCUTION NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference







PS500

BENUTZERHANDBUCH

Das digitale Benutzerhandbuch ist in **Englisch, Deutsch, Spanisch, Italienisch und Französisch** auf unserer Website oakcastle.co.uk/user-manuals/ verfügbar.




Was ist in der Box?.....	3
Steuerelemente und Funktionen.....	6
Anleitung Leitfaden.....	
Mikrofone.....	7
Dreibein-Stativ.....	8
Grundlegende Bedienung.....	9
Bluetooth.....	10
USB-Wiedergabemodus.....	10
Micro-SD-Karten-Modus.....	10
FM-Radio-Modus.....	11
Aux-In Modus.....	11
Fehlersuche & Unterstützung.....	12
Spezifikation.....	13
Garantie.....	13
Informationen zur Sicherheit.....	14

3 Jahres-
Garantie

Registrieren Sie Ihr Produkt online für eine KOSTEN-
LOSE 3-jährige Garantieverlängerung unter:
www.oakcastle.co.uk


Was ist in der Box?

- | | | | |
|----|--|----|---------------------|
| A. | Oakcastle PS500 Party-
Lautsprecher | D. | Stativ-Ständer |
| B. | Kabelgebundenes Mikrofon | E. | Fernbedienung |
| C. | Drahtloses Mikrofon | F. | USB-Typ-C-Ladekabel |
| | | G. | Benutzerhandbuch |

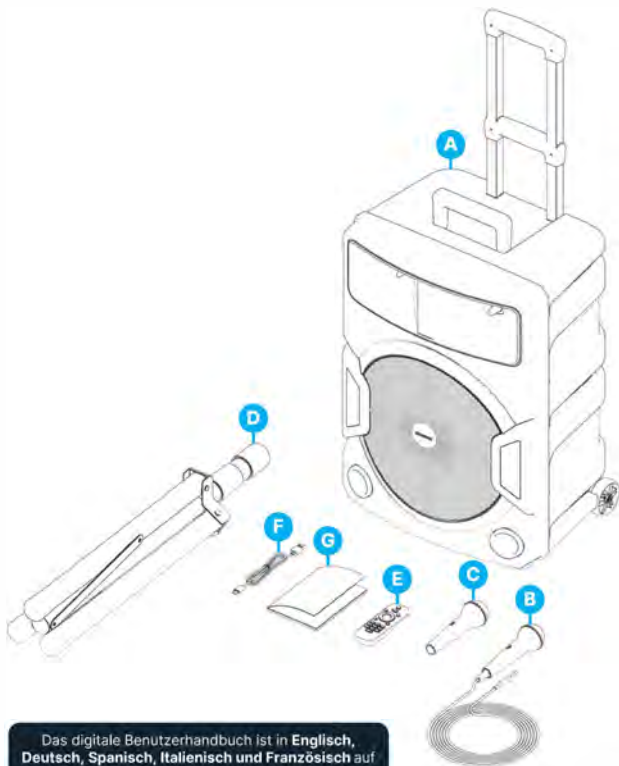

Das digitale Benutzerhandbuch ist in **Englisch, Deutsch, Spanisch, Italienisch und Französisch** auf unserer Website oakcastle.co.uk/user-manuals/ verfügbar.

Vorderansicht

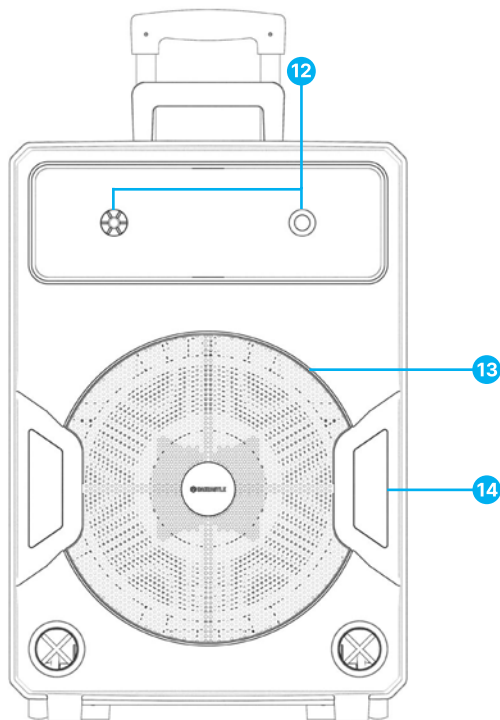


12. Aktive Hochtöner

14. LED-Beleuchtung

13. Lautsprecher

Rückansicht & Bedienfeld

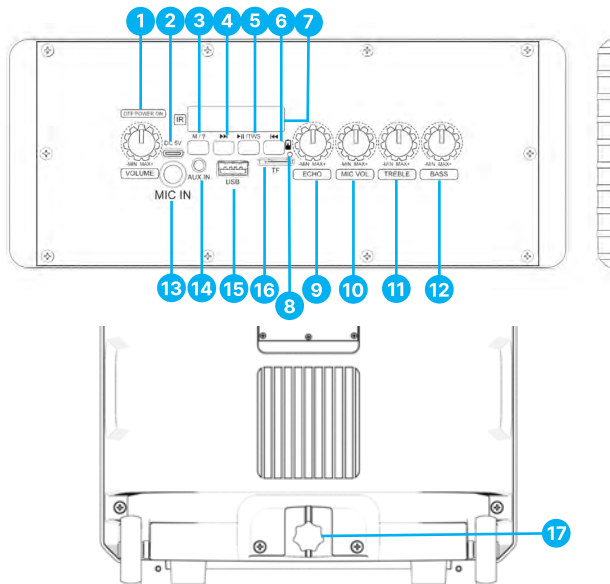


- | | |
|-----------------------------------|--|
| 1. Strom ein/aus, Lautstärke +/- | 12. Bässe +/- |
| 2. USB-Typ-C-Ladeanschluss (DC5V) | 13. Anschluss für kabelgebundenes Mikrofon |
| 3. Modus & Beleuchtungsmodi | 14. AUX-In-Anschluss |
| 4. Weiter/Vorwärts | 15. USB-Wiedergabeanschluss |
| 5. Wiedergabe, Pause/TWS | 16. SD (TF)-Kartensteckplatz |
| 6. Zurück | 17. Stativgewinde und Schraube |
| 7. LCD-Display | |
| 8. LED-Licht zum Laden | |
| 9. Echo +/- | |
| 10. Mikrofon Lautstärke +/- | |
| 11. Höhen +/-* | |

*Bitte beachten Sie: Um die Beleuchtungsmodi zu ändern, müssen Sie die Taste **Mode/Lightning (Ref.3)** 2-3 Sekunden lang gedrückt halten.*


Fernsteuerung

17. Standby: Drücken Sie die Taste 'Standby', um den Lautsprecher in den Ruhemodus zu versetzen. Drücken Sie erneut, um den Lautsprecher einzuschalten.
18. Stop: Drücken Sie die Taste 'Stop' einmal, um die Wiedergabe zu beenden.
19. Lautstärke +: Erhöht die Lautstärke.
20. Zurück: Drücken Sie diese Taste, um den vorherigen Titel zu überspringen und abzuspielen oder im FM-Modus zum vorherigen FM-Sender zu wechseln.
21. Wiederholen: Einen Titel wiederholen oder alle Titel wiederholen (nur im USB/Micro SD-Modus verfügbar).
22. Zifferntasten: Direkter Zugriff auf Ihre MP3-Titel.
23. Modus: Drücken Sie lange auf die Taste 'Modus', um die Lautsprechermodi zu ändern: Bluetooth®/FM/AUX/USB/SD-Karte.
24. Stummschalten: Drücken Sie die Taste 'Stumm', um den Ton ein- oder auszuschalten.
25. Weiter: Drücken Sie diese Taste, um den nächsten Titel zu überspringen und abzuspielen oder um im FM-Modus zum nächsten FM-Sender zu springen.
26. Wiedergabe/Pause: Drücken Sie diese Taste, um den Ton abzuspielen oder zu unterbrechen.
27. Lautstärke -: Zum Verringern der Lautstärke.
28. EQ: Drücken Sie die Taste 'EQ' wiederholt, um Klangstile auszuwählen. Es gibt 6 voreingestellte Equalizer-Modi, die Sie je nach Ihren Vorlieben verwenden können: NORMAL, POP, ROCK, JAZZ, KLASSIK, COUNTRY

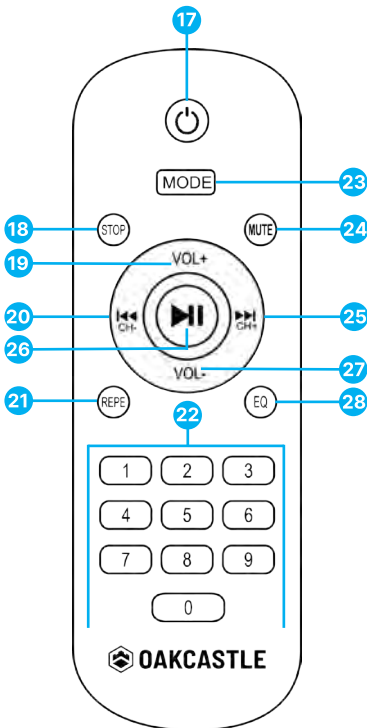

Die Mikrofone können in jedem Modus verwendet werden, wie z.B.: BT, AUX IN, USB, SD-KARTE, FM.

Drahtloses Mikrofon



- 29. Lautstärke +/-
- 30. Magic Voice - Ändern Sie die Stimme, wenn Sie über ein Mikrofon sprechen - männliche Stimme, weibliche Stimme, Babystimme und normale Stimme).
- 31. Einschalten/Ausschalten

Schalten Sie den Oakcastle PS500-Lautsprecher ein und drücken Sie dann die Taste 'Power On/Off' am Mikrofon (**Ref.31**). Das drahtlose Mikrofon wird dann automatisch mit dem Party-Lautsprecher verbunden.

Kabelgebundenes Mikrofon



- 32. Strom EIN/AUS

Stecken Sie das kabelgebundene Kabelende in den MIC-Eingang auf der Rückseite des Lautsprechers (**Ref.13**). Schalten Sie den Oakcastle PS500-Lautsprecher ein und drücken Sie dann die Taste 'Power On/Off' am Mikrofon (**Ref.32**).

Bitte beachten Sie: Das kabelgebundene und das drahtlose Mikrofon können beide gleichzeitig oder nur eines davon verwendet werden.

Das Dreibein-Stativ

Beim niedrigsten Auszug ist das Stativ des Oakcastle PS500 43,5 cm hoch und bei maximalem Auszug 76 cm hoch.

- Nach der Entnahme aus dem Karton klappen Sie die unteren drei Beine aus. Halten Sie es stabil und das Stativ wackelt nicht so leicht.
- Lösen Sie die Befestigungsschrauben und stellen Sie das Stativ auf die richtige Höhe ein.
- Ziehen Sie die Befestigungsschrauben fest. Sobald das Stativ gesichert ist, positionieren Sie Ihren Lautsprecher und befestigen Sie ihn auf dem Stativständer.

Schritt 1


Sichern Sie das Stativstativ

Schritt 2

Bereiten Sie Ihren Lautsprecher vor (Ref.17).

Schritt 3

Befestigen Sie den Partylautsprecher mit der Schraube am Lautsprecher auf dem Stativ.

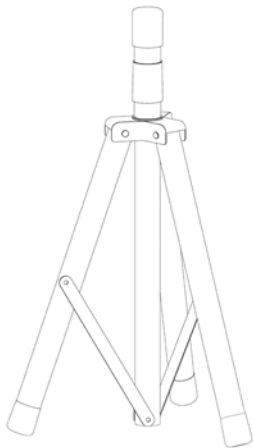

Bitte beachten Sie, dass sich die Anweisungen in diesem Benutzerhandbuch auf die Tastennummer auf dem Partylautsprecher oder den Mikrofonen (Ref. 'Nummer') und die Tasten auf der Fernbedienung (Rem. 'Nummer') beziehen, entsprechend den Diagrammen auf den Seiten 4-8.

Aufladezeit

Stecken Sie das USB-Typ-C-Kabel an der Rückseite des Geräts ein (**Ref.11**) und schließen Sie es dann zum Aufladen mit einem Stecker (DC5V) an das Stromnetz an.

Die LED-Ladeanzeige leuchtet rot auf (**Ref.8**). Es dauert bis zu 6 Stunden, bis der interne Akku vollständig aufgeladen ist. Sobald der Akku vollständig aufgeladen ist, erlischt die rote LED-Anzeige. Trennen Sie den Party-Lautsprecher vom Stromnetz und nutzen Sie die Vorteile seiner Tragbarkeit.

Hinweis: Um die Lebensdauer des Akkus zu verlängern, empfiehlt es sich, den Akku vollständig aufzuladen, wenn er nicht benutzt wird.

Wiedergabe

Der Oakcastle PS500 verfügt über einen internen, wiederaufladbaren Akku. Nach einer vollständigen Aufladung kann der Lautsprecher bis zu 6 Stunden lang im Akkubetrieb verwendet werden.

Bitte beachten Sie: Die Spielzeit kann je nach Lautstärke und Beleuchtungsmodi variieren, wenn der Lautsprecher mit Akkustrom betrieben wird.

Einschalten/Ausschalten

Drehen Sie den 'Power ON/OFF'-Knopf (**Ref.1**) nach rechts, um das Gerät einzuschalten und die Lautstärke nach Ihren Wünschen zu erhöhen. Drehen Sie den Regler 'Power ON/OFF' (**Ref.1**) nach links, um die Lautstärke zu verringern und den Partylautsprecher auszuschalten.

TWS

Die 'TWS'-Funktion kann nur bei Verwendung von zwei Oakcastle PS500 Party-Lautsprechern genutzt werden, die Sie als Bluetooth-Party-Lautsprecher verbinden und verwenden können.

Bitte beachten Sie: Jede Packung enthält nur einen Oakcastle PS500 Bluetooth-Party-Lautsprecher.

Um zwei Oakcastle PS500 zu verbinden, sollten Sie zunächst sicherstellen, dass beide Lautsprecher eingeschaltet sind und nicht einzeln mit anderen Geräten über Bluetooth gekoppelt sind. Drücken Sie die 'TWS'-Taste (**Ref.3**) zweimal an einem der Lautsprecher und beide werden drahtlos miteinander verbunden.

Sobald beide Oakcastle PS500 gekoppelt sind, schalten Sie die Bluetooth-Verbindung auf Ihrem Telefon ein und suchen Sie nach 'Oakcastle PS500'. Wählen Sie die Lautsprecher aus und verbinden Sie sich mit ihnen. Sie können nun Audio auf beiden Lautsprechern abspielen.

Um die Verbindung zu trennen, drücken Sie zweimal die 'TWS'-Taste (**Ref.3**) auf einem der Teilnehmerlautsprecher.

Bluetooth-Modus

Das Oakcastle PS500 kann über Bluetooth mit einem Telefon oder einem Tablet gekoppelt werden, um Audiosignale von Ihrem Gerät über Ihren Party-Lautsprecher wiederzugeben.

Drücken Sie wiederholt die Taste 'MODE' am Gerät (**Ref.3**) oder auf der Fernbedienung (**Ref.23**), um den Lautsprechermodus in Bluetooth zu ändern. Der Text 'BT' wird auf dem PS500-Bildschirm angezeigt, um den Modus zu kennzeichnen.

Sobald sich der Lautsprecher im Bluetooth-Modus befindet, kann er gekoppelt werden. Aktivieren Sie Bluetooth auf Ihrem Gerät und suchen Sie nach 'Oakcastle PS500'. Wählen Sie den Lautsprecher aus und koppeln Sie ihn mit Ihrem Gerät.

Sobald die Verbindung hergestellt ist, können Sie die Wiedergabe von Ihrem Gerät über Ihren Party-Lautsprecher starten.

Bitte beachten Sie: Der Oakcastle PS500 kann nicht mit Bluetooth-Earbuds oder -Kopfhörern gekoppelt werden.

USB-Modus

Drücken Sie wiederholt die Taste 'Mode' (**Rem.23**) auf der Fernbedienung, um in den USB-Modus zu wechseln. Auf dem Bildschirm des Partylautsprechers wird 'USB' angezeigt.

Der USB-Stick sollte bis zu 32 GB groß sein und muss im Format FAT32 formatiert werden, bevor Sie die Audiodateien in den unterstützten Formaten MP3 oder WAV auf den Stick laden.

Stecken Sie den USB-Stick in den USB-Wiedergabeanschluss (**Ref.15**) und das Oakcastle P500 beginnt automatisch mit der Wiedergabe der Audiodateien von Ihrem Stick.

Bitte beachten Sie: Der USB-Anschluss des Oakcastle PS500 kann nicht als Anschluss für andere Geräte verwendet werden, da er nur zur Wiedergabe dient.

Micro SD-Karte (TF) Wiedergabemodus

Drücken Sie wiederholt die 'Mode'-Taste (**Rem.23**) auf der Fernbedienung oder die Taste am Gerät (**Ref.3**), um den Lautsprechermodus in 'TF' zu ändern. Der Text 'TF' wird auf dem Display des Partylautsprechers angezeigt.

Die TF-Karte (Micro-SD-Karte), die Sie verwenden können, sollte bis zu 32 GB groß sein und muss mit FAT32 formatiert werden, bevor Sie die Audiodateien in den unterstützten Formaten MP3 oder WAV hinzufügen.

Stecken Sie die Micro-SD-Karte in den entsprechenden Anschluss (**Ref.16**) auf der Rückseite des Lautsprechers.

Das Oakcastle PS500 beginnt dann mit der Wiedergabe von Audiodateien von Ihrer Micro-SD-Karte.

FM Radio

Drücken Sie wiederholt die Taste 'MODE' (**Ref.3**) am Gerät oder die Taste auf der Fernbedienung (**Rem.23**), um den Lautsprechermodus auf 'FM Radio' umzustellen. Auf dem LCD-Bildschirm des Lautsprechers wird der Text 'FM' angezeigt.

Halten Sie die Taste 'Play/Pause/TWS' am Gerät (**Ref.5**) oder die Taste 'Play/Pause' auf der Fernbedienung (**Rem.26**) 2-3 Sekunden lang gedrückt, um einen automatischen Suchlauf nach den an Ihrem Standort verfügbaren FM-Radiosendern zu starten.

Sobald der Suchlauf abgeschlossen ist, speichert das Oakcastle PS500 automatisch alle an Ihrem Standort verfügbaren FM-Radiosender. Der Party-Lautsprecher beginnt dann mit der Wiedergabe des ersten gefundenen Radiosenders.

Drücken Sie die Tasten 'PREVIOUS' oder 'NEXT', um den nächsten oder den zuvor gespeicherten FM-Radiosender abzuspielen.

AUX-In-Modus

Das Oakcastle PS500 kann mit einem 3,5-mm-AUX-Audiokabel (nicht im Lieferumfang enthalten) mit einem MP3-Player, CD-Player, Telefon, Tablet oder einem anderen ähnlichen Gerät verbunden werden.

Stecken Sie ein Ende des 3,5-mm-Audiokabels in den AUX-In-Anschluss des Party-Lautsprechers (**Ref.14**) und das andere Ende in den AUX-Ausgang Ihres Audio-Quellgeräts.

Schalten Sie den Party-Lautsprecher ein und wechseln Sie in den AUX-In-Modus, indem Sie wiederholt die 'Mode'-Taste am Gerät (**Ref.3**) oder die Taste auf der Fernbedienung (**Rem.23**) drücken, bis auf dem LCD-Bildschirm des Lautsprechers 'AUX' angezeigt wird.

Sie können nun mit der Audiowiedergabe von Ihrem Gerät über den Oakcastle PS500-Lautsprecher beginnen.

Beobachtung	Mögliche Ursache/Lösung
Keine Leistung/Funktion	<p>Vergewissern Sie sich, dass der Akku des Lautsprechers vollständig aufgeladen ist.</p> <p>Wenn kein Lebenszeichen vorhanden ist, versuchen Sie, den Akku vollständig aufzuladen, ohne den Lautsprecher zu benutzen. Prüfen Sie, ob die Lade-LED aufleuchtet, und trennen Sie den Lautsprecher vom Netz, wenn die LED erlischt. Schalten Sie den Party-Lautsprecher danach sofort wieder ein.</p>
Kein Ton	<p>Erhöhen Sie die Lautstärke mit dem Drehknopf am Lautsprecher.</p> <p>Wenn bei der Verbindung mit einem anderen Gerät kein Ton zu hören ist, erhöhen Sie die Lautstärke Ihres Geräts auch über den Lautsprecher.</p>
Bluetooth verbindet sich nicht	<p>Vergewissern Sie sich, dass das Oakcastle PS500 nicht mit anderen Geräten gekoppelt ist und auf Bluetooth-Modus eingestellt ist.</p> <p>Stellen Sie sicher, dass Ihr Gerät Bluetooth aktiviert hat und suchen Sie nach 'Oakcastle PS500'. Wenn Sie den Party-Lautsprecher gefunden haben, stellen Sie eine Verbindung her, um die Geräte zu koppeln. Sie können nun Audio über Ihren Partylautsprecher wiedergeben.</p>

Unterstützung

Wenn Sie Hilfe mit Ihrem neuen Oakcastle PS500 benötigen, wenden Sie sich bitte an unser technisches Support-Team, indem Sie das Formular auf unserer Oakcastle-Website ausfüllen: www.oakcastle.co.uk/support.

Spezifikation

Stromversorgung	DC5V (150W)
Bluetooth-Version	V 5.0
Bluetooth-Entfernung	10 Meter
Unterstützte Audioformate (TF, USB)	MP3, WAV.
FM Frequenzbereich	FM 87.5-108MHZ
Micro SD-Karte	Verwenden Sie eine Micro SD-Karte mit bis zu 32 GB
USB-Wiedergabestick	Verwenden Sie einen USB-Stick mit einer Größe von bis zu 32 GB
Gewicht	8.1 Kg
Abmessungen	41.3×31.9×60.3 CM

Garantie

Auf alle Produkte gewähren wir standardmäßig eine 12-monatige Garantie. Alle Artikel müssen innerhalb von 30 Tagen nach dem Kauf auf www.oakcastle.co.uk registriert werden, damit die Garantie gültig ist. Wenn Sie auf unserer Website sind, wählen Sie im Menü den Punkt 'Registrieren Sie Ihr Produkt'. Sie haben auch die Möglichkeit, Ihre Garantie kostenlos um weitere 24 Monate zu verlängern.



Das digitale Benutzerhandbuch ist in **Englisch, Deutsch, Spanisch, Italienisch und Französisch** auf unserer Website oakcastle.co.uk/user-manuals/ verfügbar.

1. Lesen Sie diese Anleitung.
2. Bewahren Sie diese Anleitung auf. Die Anleitung kann auch unter www.majority.co.uk heruntergeladen werden.
3. Beachten Sie alle Warnungen.
4. Befolgen Sie alle Anweisungen.
5. Reinigen Sie das Gerät nicht in der Nähe von oder mit Wasser.
6. Blockieren Sie keine Lüftungsöffnungen. Installieren Sie das Gerät in Übereinstimmung mit den Anweisungen des Herstellers.
7. Blockieren Sie keine Lüftungsöffnungen. Installieren Sie das Gerät in Übereinstimmung mit den Anweisungen des Herstellers.
8. Installieren Sie das Gerät nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Geräten, die Wärme erzeugen.
9. Schützen Sie das Netzkabel, insbesondere an Steckern, Steckdosen und an der Stelle, an der es aus dem Gerät austritt, davor, dass darauf getreten oder es eingeklemmt wird.
10. Verwenden Sie nur das vom Hersteller angegebene Zubehör.
11. Ziehen Sie den Netzstecker bei Gewitter oder wenn Sie das Gerät längere Zeit nicht benutzen.
12. Überlassen Sie alle Wartungsarbeiten qualifiziertem Servicepersonal.
13. Stellen Sie keine offenen Flammen, wie z. B. eine brennende Kerze, auf das Gerät.
14. Entsorgen Sie verbrauchte Elektrogeräte und Batterien sicher und entsprechend den örtlichen Behörden und Vorschriften.

ZUSÄTZLICHE WARNHINWEISE

Das Gerät darf nicht tropfenden, spritzenden oder mit Wasser gefüllten Gegenständen ausgesetzt werden.

Der Netzstecker dient zum Trennen des Geräts vom Stromnetz. Um das Gerät vollständig vom Stromnetz zu trennen, sollte der Netzstecker vollständig aus der Steckdose gezogen werden.

Die Batterie darf keiner übermäßigen Hitze ausgesetzt werden.

RECYCLING VON ELEKTROGERÄTEN

Recyceln Sie jetzt Ihre Elektroaltgeräte und helfen Sie so der Umwelt.



Dieses Symbol bedeutet, dass ein elektrisches Produkt nicht mit dem normalen Hausmüll entsorgt werden darf. Bitte stellen Sie sicher, dass es zur Entsorgung zu einer geeigneten Einrichtung gebracht wird. Entsorgung gebracht wird.

WICHTIG: Bitte lesen Sie alle Anweisungen vor dem Gebrauch sorgfältig durch und bewahren Sie sie zum späteren Nachschlagen auf.



Gefahr eines Stromschlags. Nicht öffnen.



Lesen Sie alle Anweisungen vor dem Gebrauch sorgfältig durch und bewahren Sie sie zum späteren Nachschlagen auf.



Verwenden Sie im Servicefall nur identische Ersatzteile.



ACHTUNG

GEFAHR EINES ELEKTRISCHEN SCHLAGES NICHT ÖFFNEN



VORSICHT

RISQUE D'ELECTROCUTION NE PAS OUVRIR



WICHTIG: Bitte lesen Sie alle Anweisungen vor dem Gebrauch sorgfältig durch und bewahren Sie sie zum späteren Nachschlagen auf.

EU Declaration of Conformity



I hereby declare that the product:

Product Name: PS500 Party Speaker

Model: 1000002981

Brand Name: Oakcastle

Satisfies all the technical regulations applicable to the product within the scope of Council Directives 2014/35/EU and 2014/30/EU, 2009/125/EC, 2012/19/EU, 2014/53/EU, 2011/65/EU, 1907/2006.

2014/35/EU (LVD Directive)

EN62368-1:2014+A11:2017

2014/30/EU (EMC Directive)

EN55032:2015+A11:2020, Class B, EN IEC 61000-3-2: 2019, EN61000-3-3: 2013+A1:2019, EN55035: 2017, EN 301 489-1 V2.2.3 (2019-11), EN 301 489-17 V3.2.2 (2019-12)

2009/125/EC (ERP Directive)

EN50564: 2011, EN62311: 2008

2012/19/EU (WEEE Directive)

2014/53/EU (RED Directive)

EN55032:2015+A11:2020, Class B, EN IEC 61000-3-2: 2019, EN61000-3-3: 2013+A1:2019, EN55035: 2017, EN 301 489-1 V2.2.3 (2019-11), EN 301 489-17 V3.2.2 (2019-12), EN 303 345-1 V1.1.1 (2019-06), EN 303 345-3 V1.1.0 (2019-11), EN 303 345-4 V1.1.0 (2019-11), ETSI EN 300 328 V2.2.2 (2019-07), EN62368-1:2014+A11:2017, EN 62479: 2010, EN 50663:2017

2011/65/EU & 2015/863/EU (RoHS Directive)

1907/2006 (REACH Directive)

All essential test suites have been carried out.

This declaration is issued under the sole responsibility of iZilla Ltd.

Point of Contact: Eddie Latham | Founder

Signed: 

Date: Nov 2023

UK: iZilla Ltd, 49 Viking Way, Cambridge, CB23 8EL, UK

EU RP: AR Experts, P.O. Box 5047, 3620 AA Breukelen, The Netherlands

US: iZilla Ltd, C/O A.N. Deringer, Inc., 19520 Wilmington Ave, Rancho Dominguez, CA, 90220

Oakcastle is owned and operated by iZilla Ltd. Registered in England with Company No: 08520738



WWW.OAKCASTLE.CO.UK

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Microphone :

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For Speaker:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.