

artfone® c1+4G

English P1-11 Español P12-22

1.Receiver 2.LCD 3.Left soft key -To enter main menu when standby mode The phone menu confirms the selection and -activates the selected function (OK) 4.Right soft key: -In standby mode, assigned with "Contacts"

-Exit menu or exit current operation -Other assignments depending on the context 5.Up/down button: -Navigation in software menu

-"Up "to Messages shortcut, "down" to speed dial/ FM radio/Alarm/Calendar/Bluetooth,etc. 6.Green button: Answer/make a call 7.Red button : -End a call

-Long pressing for "Power on or off,Restart, Flight mode" 8.Numeric keypad

9.Numeric 0 button 1) To input 0 2) Long pressing 0 button to switch to "Vibration mode" or "Silence mode".

Default is normal mode. 10.3.5mm audio jack(iPhone style)

11.USB-C socket 12.Flashlight LED 13.Keypad locked 14.Keypad unlocked 15.Side button to turn on/off flashlight 16.Side button--Volume + / -

How to open back cover?

How to insert Nano SIM card?

How to insert Micro SD card?

How to place the battery? artfone®

Icon description Show actual signal How to use flashlight?

Silent mode Normal mode

Headphone plugged-in When alarm set up

Bluetooth enabled Battery status

Settings-Phone settings-Language settings-Display language-English/Español/Français/ Português/Nederlands/简体中文

How to power on? Press red button for 2.5 seconds.

How to power off? Make sure keypad is unlocked.

Long pressing red button for 2.5 seconds to "Power off"/ "Restart"/"Flight mode",choose "Power off "or other mode.

Just long pressing No.15 button on the side to turn on or turn off flashlight.

How to use SOS function? Enter SOS settings

> no more than 5 telephone numbers here, when press SOS button, the phone will dial the numbers settled one by one automaticly. 3.Send SOS message on/off: You can turn message

1.SOS Status: Set on or off here

on or off. 4.SOS message edit: You can edit message here. 5.Warning tone on/off.

2.SOS numbers: This is very important, you can set

Make a call

1.Input telephone number and press left green 2.Find a contact in phonebook and press left green

3.SOS special dial:press SOS and the phone will dial settled SOS number automaticly

4.Speed dial: "Down button" to "Shortcuts" Speed dial→\* # 2 3 4 5 6 7 8 9→choose one or some to set from phonebook or input new

Volume/Voice settings

1.Press side button + - to adjust the volume. 2.How to change ringtone/message tone/ volume/voice,etc? **Settings**→**Customize** 

Settings-Phone settings-Restore factory settings  $\rightarrow$  Password is 1234 Common questions

1. How to switch normal mode and silent mode? -Long pressing 0 button when standby.

2.How to enter speed dial/ FM radio/Alarm/ Calendar/Bluetooth,etc.? -Just press navigation key---Down

3. What network does this phone work?

-Yes, it works for 4G,3G and 2G. 4. Is the phonoe unlocked?

-Yes,all artfone phones are unlocked.

5.Does the packaging include earphone? -No, but this phone has 3.5mm audio jack,and it

earphone in the market easily.

or more of the following measures: Reorient or relocate the receiving antenna.

is APPLE/SAMSUNG sytle, you can buy one

Sartfone Innovation: Long pressing side

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

equipment generates, uses and can radiate radio requency energy and, if not installed and used in accordance with the instructions, may

narmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one

Connect the equipment into an outlet on a circuit different from that to which the receiver

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following use conditions.

) this device may not cause harmful interference, and (2) this device must accept any

RF Exposure Information: FCC RF Exposure requirements: The highest SAR value reported under this standard

uring product certification for use next to the head with the minimum separation stance of 0mm and next to the Body with the minimum separation distance of 10mm

nis transmitter must not be collocated or operating in conjunction with any other ntenna or transmitter.

antenna or transmitter.
This product is compliance to FCC RF Exposure requirements and refers to FCC website https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm search for FCC ID:

nterference received, including interference that may cause undesired operation

cause harmful interference to radio communications. However, there is no guarantee hat interference will not occur in a particular installation. If this equipment does cause

button + to report current time.

Consult the dealer or an experienced radio/TV technician for help.

1.Receptor 2.LCD

3.Tecla de función izquierda

-Para acceder al menú principal en modo de espera -El menú del teléfono confirma la selección y -activa la función seleccionada (OK)

4.Tecla de función derecha:

-En modo de espera, asignado con la función "Contactos".

-Salir del menú o de la operación actual -Otras tareas en función del contexto

5. Botón arriba/abajo: -Navegación en el menú del software -"Arriba" al acceso directo Mensajes, "abajo" a la

marcación rápida/radio FM/Alarma/Calendario/ Bluetooth,etc. 6.Botón verde: Contestar/realizar una llamada

7.Botón rojo: -Finalizar una Ilamada -Pulsación larga para "Encendido o apagado,

Reinicio, Modo vuelo" 8.Teclado numérico 9.Botón numérico 0, 1)A la entrada 0


 Mantenga presionado el botón 0 para cambiar a "Modo de vibración" o "Modo de silencio". 10.Toma de audio de 3,5 mm (estilo iPhone)




11.Toma USB-C 12.Linterna LED 13.Teclado bloqueado


14.Teclado desbloqueado 15.Botón lateral para encender y apagar la linterna 16.Botón lateral--Volumen + / -


> Pulsación larga del botón lateral+ par ormar de la hora actual.

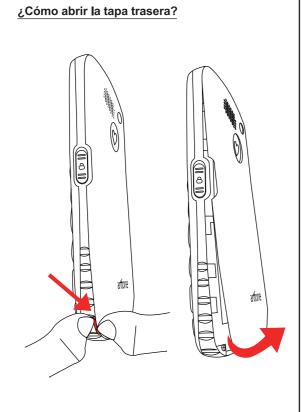

¿Cómo insertar la tarjeta Nano SIM?

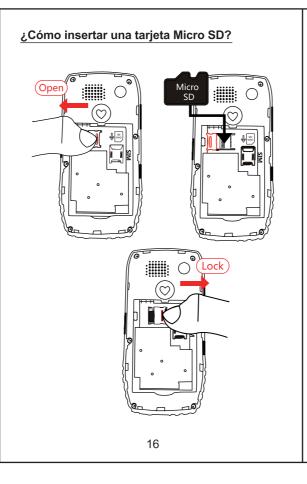

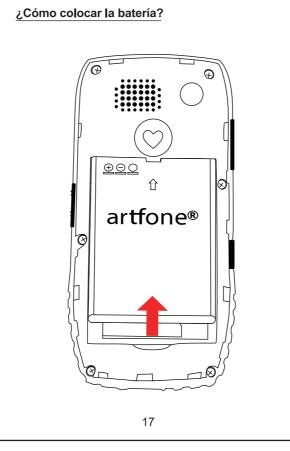

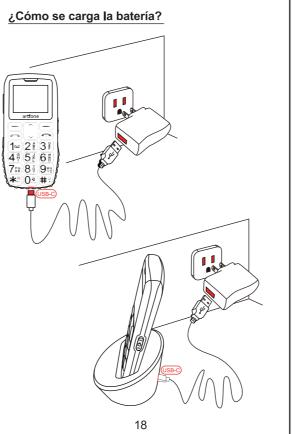

Descripción del icono Mostrar señal real Mensaje no leído Modo silencioso Modo normal Auriculares conectados Cuando se configura la alarma **Bluetooth activado** Estado de la batería Settings-Phone settings-Language settings-Display language-English/Español/Français/ Português/Nederlands/简体中文

Pulse el botón rojo durante 2,5 segundos. ¿Cómo se apaga?

¿Cómo se enciende?

Asegúrese de que el teclado está desbloqueado

Pulsación prolongada del botón rojo durante 2,5 segundos para "Apagar"/"Reiniciar"/"Modo vuelo", elegir "Apagar "u otro modo.

¿Cómo se utiliza una linterna? Para encender o apagar la linterna, basta con

mantener pulsado el botón nº 15 del lateral. ¿Cómo utilizar la función SOS?

Introducir ajustes SOS 1.Estado SOS: Activar o desactivar aquí 2 Lista de Números de SOS:Esto es muy importante, usted puede fijar no más de 5

volumen/voz,etc? números de teléfono aquí, cuando presione el **Ajustes**→**Personalizado** botón de SOS, el teléfono marcará los números establecidos uno por uno automáticamente.. 3. Enviar SMS de SOS: Puedes activar o desactivar Ajustes-Ajustes teléfono-

los mensajes. 4. Edición de mensajes sos: Puede editar el mensaje aquí.

5. Estado del tono de advertencia. Hacer una Ilamada

1.Introduzca el número de teléfono y pulse el botón verde de la izquierda. 2.Busca un contacto en la agenda y pulsa el botón verde izquierdo.

3.Marcación especial SOS: pulsa SOS y el teléfono marcará automáticamente el número SOS establecido.

4.Marcación rápida: "Botón Abajo" a "Atajos" Marcación rápida→\* # 2 3 4 5 6 7 8 9elija uno o varios números de la agenda o introduzca

números nuevos. 4.¿Está desbloqueado el teléfono? -Sí, todos los teléfonos artfone están Ajustes de volumen/voz

Restablecer configuración de fábrica→

1.¿Cómo pasar del modo normal al modo

2. ¿Cómo introducir marcación rápida/radio FM/

-Pulsación larga del botón 0 en espera.

Alarma/Calendario/Bluetooth,etc.?

La contraseña es 1234

Preguntas frecuentes

silencioso?

desbloqueados. 1.Pulsa el botón lateral + - para ajustar el volumen. 5. ¿El embalaje incluye auriculares? 2.¿Cómo cambiar el tono de llamada/mensaje/

-No, pero este teléfono tiene conector de audio de 3,5 mm, y es APPLE / Samsung sytle, usted puede comprar un auricular en el mercado fácilmente.

> S.Innovación artfone: Pulsación larga del botón lateral+ para informar de la hora actual.

> -Sólo tienes que pulsar la tecla de navegación---

3.¿Con qué red funciona este teléfono?

-Sí, funciona para 4G,3G y 2G.

artfone®

www.artfone.com.cn

info@artfone.com.cn