

**32 inch 2.1 Channel Soundbar  
KM-HSB003 User Guide**



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,  
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE



## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## WARNINGS



This symbol on the product means there is uninsulated, dangerous voltage within the product enclosure that may present a risk of electrical shock.



This symbol on the product means there are important operating and maintenance instructions in this guide.



Do not ingest battery, chemical burn hazard. To avoid the risk of explosion, fire or chemical burn, use caution in replacing the battery and replace only with an agency approved (e.g., UL) battery. Properly and promptly dispose of used batteries. Do not recharge, disassemble, heat above 212° F (100° C), or incinerate.



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

## CAUTIONS

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, fireplaces, radiators, heat registers or other apparatus (including amplifiers) that produce heat.
- Do NOT make unauthorized alterations to this product.
- Do NOT use a power inverter with this product.
- The speaker wires and interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Due to ventilation requirements, KMOUK does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.

## **Battery caution and disposal information**


- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not use rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire or water.
- Recycle or dispose of batteries as per state and local guidelines.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- When the remote control is not to be used for a long time (more than a month), remove the battery from the remote control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Keep away the batteries from heat or moisture.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

## **Installation location**

- This product is designed to sit on a firm, flat surface. Do not place the product on built-in installation such as a bookcase or rack because the ventilation slots around the product will be blocked, resulting in reduced lifetime from overheating. To assure adequate ventilation for this product, maintain a spacing of 7.8 inches (20cm) or more around the product.
- Make sure the product on the furniture is of adequate size and strength to prevent it from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage to the product.
- Installation of wall mount must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the product and wall mount brackets.

## 01 Package Contents

Confirm that the following parts are included:

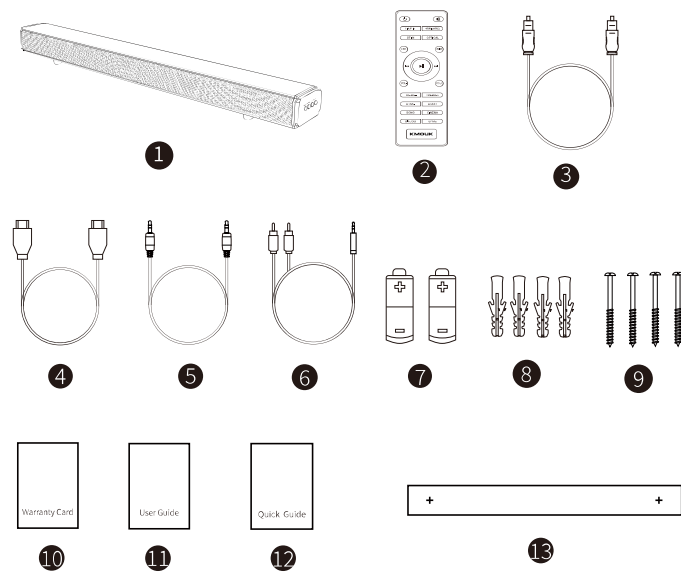


- |                                     |                         |
|-------------------------------------|-------------------------|
| 1. KOMUK soundbar                   | 8. Wall anchor X 4      |
| 2. Remote control                   | 9. Wall screw X 4       |
| 3. OPTICAL cable(4.92ft, 1500mm)    | 10. Warranty Card       |
| 4. HDMI cable(4.92ft, 1500mm)       | 11. User Guide          |
| 5. 3.5mm AUX Cable(3.28ft, 1000mm)  | 12. Quick Guide         |
| 6. AUX to RCA Cable(3.28ft, 1000mm) | 13. Wall Mount Template |
| 7. AAA battery X 2                  |                         |


**Note:** If any part of the product is missing or damaged, don't use it. Contact your authorized KMOUK dealer or KMOUK customer service.

## 02 Overview of the Soundbar Main Unit


### Front Panel

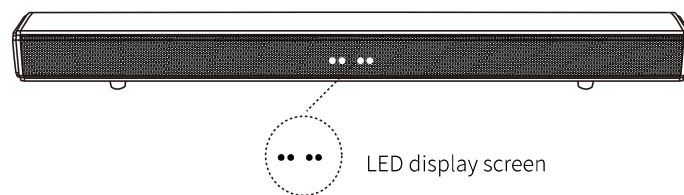

### Rear Panel

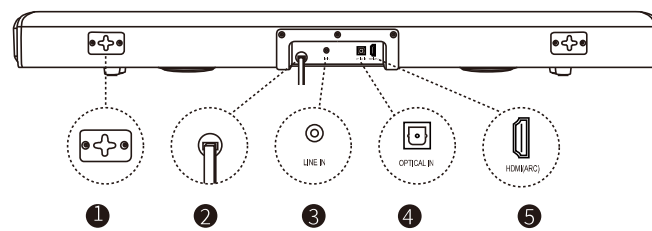


### Right Panel (Control Panel)

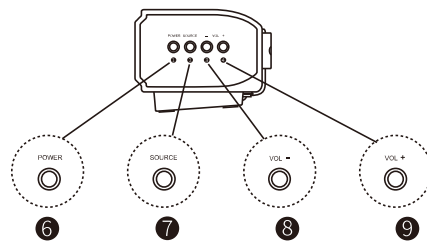

1. Location hole
2. Built-in AC input
3. 3.5mm LINE input
4. OPTICAL input
5. HDMI input
6. **POWER**: Press to switch the unit on/off
7. **SOURCE**: Press to switch the audio source among LINE IN / BT IN / HDMI(ARC) / OPTICAL modes
- 8/9. **Volume +/-**: Press to adjust the volume up or down

### 03 Overview of the Remote Control

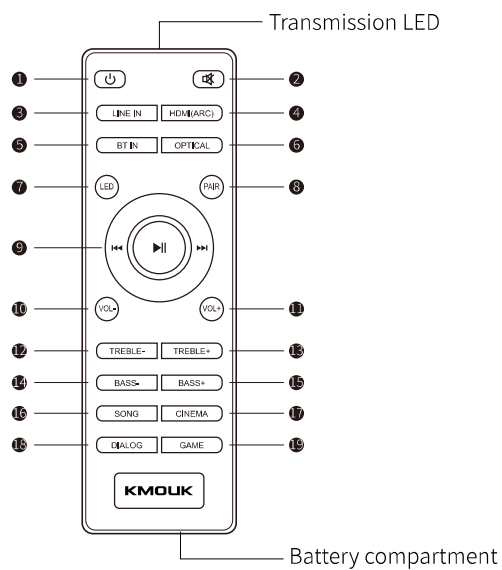


|   | Button                                                                            | Operation                                                                                                                                                                                                       |
|---|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① |  | Press to switch the unit on/off                                                                                                                                                                                 |
| ② |  | Press to mute/unmute the volume                                                                                                                                                                                 |
| ③ | LINE IN                                                                           | Press to switch LINE IN mode                                                                                                                                                                                    |
| ④ | HDMI(ARC)                                                                         | Press to switch HDMI mode                                                                                                                                                                                       |
| ⑤ | BT IN                                                                             | Press to switch Bluetooth mode or connect to the last paired device, no paired record, the “bt” on the LED screen flashes.<br>Long press the button, it will disconnect and enter pairing mode                  |
| ⑥ | OPTICAL                                                                           | Press to switch OPTICAL mode                                                                                                                                                                                    |
| ⑦ | LED                                                                               | Press to close the LED display                                                                                                                                                                                  |
| ⑧ | PAIR                                                                              | Press more than 2 seconds to disconnect the audio device and to enter the pairing mode                                                                                                                          |
| ⑨ | VOL- VOL+                                                                         | Press to increase/decrease the volume (Maximum volume:32, Minimum: 0) (With an iPhone, the volume can be synced)                                                                                                |
| ⑩ | TREBLE- TREBLE+                                                                   | Press to adjust the treble up or down (Press <b>TREBLE-</b> to adjust from 0 to -4, press <b>TREBLE+</b> to adjust from -4 to 4, with memory function, return to default “0” after restoring factory settings.) |
| ⑪ | BASS- BASS+                                                                       | Press to adjust the bass up or down (Press <b>BASS-</b> to adjust from 0 to -4, press <b>BASS+</b> to adjust from -4 to 4, with memory function, return to default “0” after restoring factory settings.)       |

|    |                                                                                   |                                                                                                                |
|----|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| 12 | SONG                                                                              | Press to switch to the EQ optimized for song                                                                   |
| 13 | CINEMA                                                                            | Press to switch the EQ optimized for cinema sound                                                              |
| 14 | DIALOG                                                                            | Press to switch the EQ optimized for news                                                                      |
| 15 | GAME                                                                              | Press to switch the EQ optimized for game                                                                      |
| 16 |  | In Bluetooth mode<br>Skip: press to skip forward or back a track<br>Play/Pause: press to play or pause a track |

04 Place Your Soundbar

You can choose to place your soundbar main unit below the center of your TV or mount it on the wall.

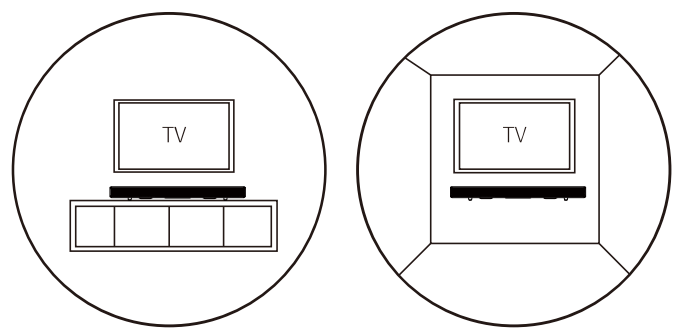



## Wall installation precautions

1. Make sure you read all the safety information before you mount the soundbar main unit on the wall.
2. KMOUK bears no responsibility for accidents or damage caused by improper wall mounting and screws installation or insufficient wall strength, etc.
3. Install on a vertical wall only.
4. Do not install in a place with high temperature or humidity.
5. Verify whether the wall is strong enough to support the product's weight. If not, reinforce the wall or choose another installation point.
6. Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
  - Connect cables from the unit to external devices before you install the Soundbar on the wall.
  - Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

## Mount your soundbar on the wall

1. Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches (5cm) below the center of the TV.
2. Use a level to make sure the soundbar is positioned accurately.
3. Use the tape to stick the wall mount template firmly on the wall.

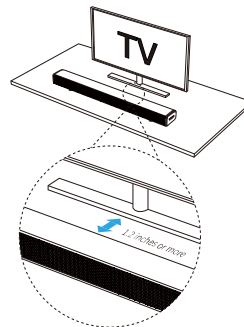

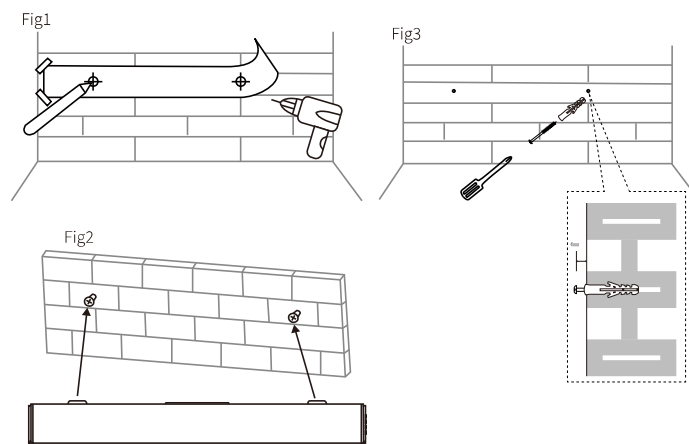


4. Mark on the wall using each marking on the template through the mounting holes (Fig.1).
5. Take away the wall mount template.
6. Drill a screw hole at each marking on the wall.
7. Insert the supplied wall anchors into 2 screw holes on the wall (Fig. 1).
8. Insert the supplied screws into the wall anchors. Leave 4mm between the screw heads and the wall (Fig. 2).
9. Fix and tighten the screws on the wall (Fig. 3).
10. Hang the Soundbar main unit on the screws (Fig. 3).

## 05 Install/Replace the Remote Battery

When the soundbar does not respond by operating with the remote control, replace two batteries with new batteries. And use AAA batteries for replacement.

1. Open the battery compartment.
2. Insert 2 pieces of AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends as indicated.
3. Close the battery compartment accordingly.

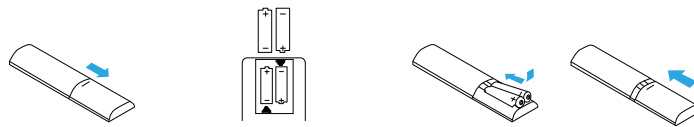


### Notes:

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not mix old and new batteries.

## 06 Connect Your Soundbar

After you have fixed the position of the soundbar main unit, you can choose the supplied HDMI, OPTICAL, or 3.5 mm AUX cable to connect the soundbar to your TV or other devices, or you can connect with Bluetooth.


### Connect with the supplied HDMI Cable

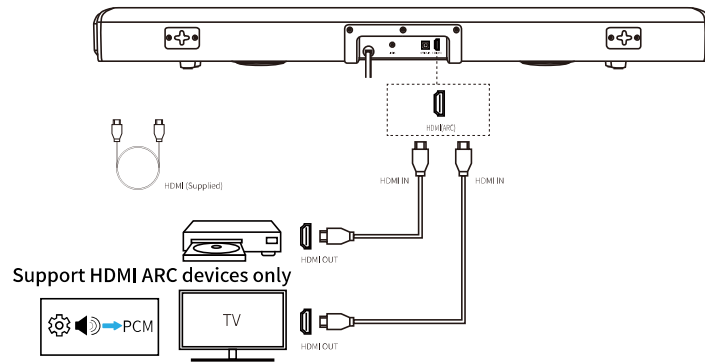

1. Connect one end of the HDMI cable to the HDMI input connector on your soundbar main unit and another end to the HDMI output connector of your TV or device.
2. Switch on the soundbar with the **POWER** button.
3. By pressing the **HDMI(ARC)** button on your remote control or one touch the **SOURCE** button on the unit repeatedly to enter HDMI(ARC) mode, select the HDMI input.
4. The screen will display “Hd” turn on the TV or your audio device and play. When you first establish a connection, it may take a few seconds to output sound from the bar speakers.

**Notes:**

1. Make sure your TV or device supports the HDMI ARC feature and you have muted the audio of your TV or device. For information, check the user manual of your TV or device.
2. If you use the HDMI(ARC) connection, the soundbar is usually switched on and off via the remote control of the connected device. The connected device must support the CEC (Consumer Electronic Control) protocol.
3. The audio transmission via the HDMI(ARC) socket can only work if all components are ARC-enabled. If the transmission is unsuccessful, please check if the digital audio output of your TV is activated. Select audio output PCM2.0 (PCM stereo). If the audio output PCM2.0 (PCM stereo) is not set on the TV, the soundbar will automatically turn off.

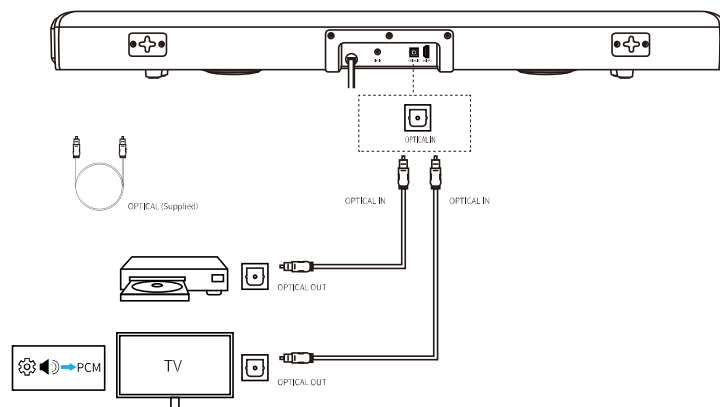
**Connect with the supplied OPTICAL Cable**

1. Connect the supplied OPTICAL cable to the OPTICAL output on the TV or other device and to the OPTICAL IN on the soundbar.
2. Press the **OPTICAL** button on your remote control to switch to OPTICAL Mode or one touch **SOURCE** button on the main unit repeatedly to select the OPTICAL mode.
3. Using the native controls on your connected device, make sure the audio settings are set to OPTICAL Audio and are turned on.
4. Audio from the connected audio source will be played through the speakers.

**Note:**

Confirm to set your TV or other device audio settings to support “external speakers” and disable the built-in TV speakers.


**Connect with the supplied AUX cable (3.5mm jack cable)**

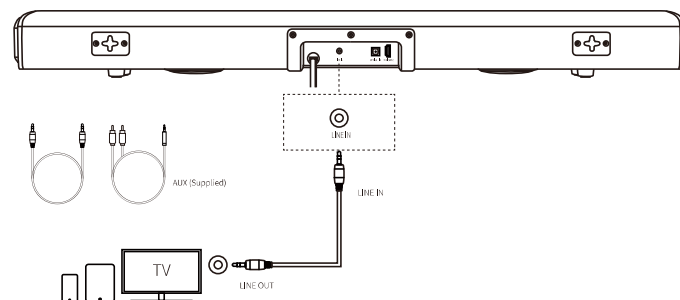

1. Plug one end of a 3.5 mm audio input cable into the LINE IN on the soundbar. Plug the other end of the cable into the audio output/head-phone output on an MP3 player or other audio source.
2. Press the **LINE IN** button on your remote control directly to enter LINE IN mode or one touch the **SOURCE** button on the unit repeatedly to enter LINE IN mode.
3. Audio played through the connected device will be heard through the speakers.

## Connect your soundbar to power supply

After you have connected the HDMI, OPTICAL, or 3.5 mm AUX cable with your soundbar properly, then you can use the built-in AC power cord to plug in the power cord socket to switch it on.

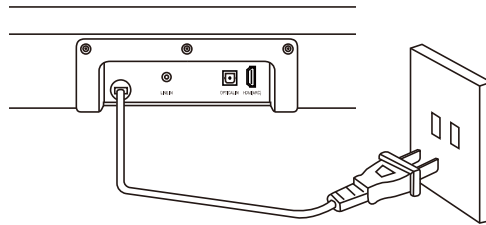


### Notes:

1. Make sure the power supply voltage complies with your country's safety standards
2. Connect the AC power cord on your soundbar to the power cord socket. The first time plugged in, the soundbar will start up automatically.

## Connect with your Bluetooth device

### The first connection

1. Press the **BT IN** button on the remote control to enter the Bluetooth pairing mode. Or one to press the **SOURCE** button on the control panel and then select "**BT**". LED display shows "**bt**" flashing rapidly.
2. Switch on the Bluetooth audio device (e.g., smartphone) and start the Bluetooth connection.
3. The Bluetooth device will now receive the device identification as "**KMOUK KM-HSB003**".
4. When connected, there will be a prompt sound "Dong Dong Du" and on the white LED screen, "**bt**" will keep on.

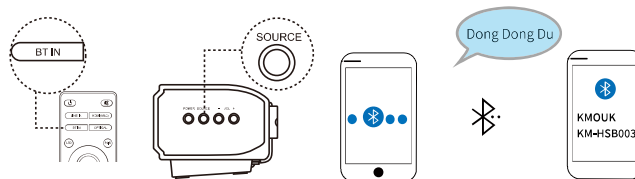

#### Notes:

1. Make sure your device supports the Bluetooth function.
2. The operational range between the soundbar main unit and your Bluetooth device is approximately 50ft (15 meters) (without any obstacle between the Bluetooth device and soundbar main unit).
3. Only one Bluetooth device can be paired at a time.
4. There is NO password required.

#### If not the first connection

1. Power on, the soundbar will connect back to the last paired device automatically and restore the previous settings.
2. After the successful pairing, there will be a prompt sound “Dong Dong Du” and on the white LED screen, “BT” will keep on.

#### Disconnect the soundbar from your device

If you don't want to use Bluetooth, you can press and hold the **PAIR** button on the remote control for more than 2 seconds to disconnect the soundbar from your device.

#### Notes:

1. Disconnecting takes time because the device must receive a response from the soundbar. (The time required may differ, depending on the device)
2. In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the soundbar and the Bluetooth device exceeds 50ft (15 meters).

3. The soundbar may not perform Bluetooth search or connection correctly under the following circumstances:

- There is a strong electrical field around the soundbar.
- There are two or more Bluetooth devices simultaneously paired with the soundbar.
- The Bluetooth device is turned off, not in place, or malfunctions.

4. Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the soundbar main unit, e.g., microwaves, wireless LAN devices, etc.

## 07 Use Your Soundbar System

You can use your soundbar with the control panel or remote control and adjust the sound effect or select the audio source.

### Operation of the control panel

| Button | Operation            | Operation Description                                         | LED Screen Display                                                                | Voice Prompt   |
|--------|----------------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------|
| Power  | Long press           | In power on mode, press and hold for 1.5 seconds to power off | Indicates channels and sound modes                                                | Goodbye, Kmouk |
|        | Short press          | In power off mode, press to power on                          |                                                                                   | Hi, Kmouk      |
| Source | Click                | Click to switch audio source                                  | The correspondent LED light to the audio source is on                             | /              |
| VOL+   | Short press/<br>hold | Press or hold to add volume                                   | The LED light flashes once for each increase in volume, 3 times at maximum volume | /              |
| VOL-   | Short press/<br>hold | Press or hold to reduce volume                                | The LED light flashes once for each decrease in volume, 3 times at minimum volume | /              |

### Notes:

1. Press the **POWER** button to shut down and start up again, keeping the settings before the last shutdown.

2. After power on, the volume of each mode has memory function, and cannot interfere with each other.
3. After power outage and reboot, the volume will return to the default value of 65% and other settings will remain the state before shutdown.

### Operations of the remote control

| Button     | Operation                                 | Operation Description                                                                                                    | LED Display Screen                                                                             | Voice Prompt |
|------------|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|--------------|
| Power      | Short press or long press for 1.5 seconds | Power on/off                                                                                                             |                                                                                                |              |
| Mute       | Short press                               | Mute/unmute                                                                                                              | When press: the LED indicator will flash slowly; 1 second on, 1 second off                     |              |
| LINE IN    | Short press                               | Switch to LINE IN mode                                                                                                   | White LED LINE keeps on                                                                        | /            |
| HDMI (ARC) | Short press                               | Switch to HDMI (ARC) mode                                                                                                | White LED Hd keeps on                                                                          | /            |
| BT IN      | Short press                               | Switch to Bluetooth mode or connect to the last paired device, no paired record, the BT light on the LED screen flashes. | Connected: white LED bt keeps on<br>Pairing mode: white LED bt flashes                         | Dong Dong DU |
|            | Long press for 2 seconds                  | Disconnect and enter pairing mode                                                                                        | White LED bt flashes                                                                           | Dong Dong DU |
| OPTICAL    | Short press                               | Switch to OPTICAL mode                                                                                                   | White LED OPT keeps on                                                                         | /            |
| VOL+/VOL-  | Short press                               | Switch to increase/decrease the volume                                                                                   | The LED light flashes 1 time the volume increases/decreases, 3 times at maximum/minimum volume |              |
| SONG       | Short press                               | Switch to the EQ optimized for song                                                                                      | LED displays SONG for 2 seconds and returns to current mode                                    | /            |
| DIALOG     | Short press                               | Switch to the EQ optimized for TV news                                                                                   | LED displays dIALOG for 2 seconds and returns to the current mode                              | /            |
| CINEMA     | Short press                               | Switch to the EQ optimized for movie                                                                                     | LED displays CINE for 2 second and returns to current mode                                     | /            |
| GAME       | Short press                               | Switch to the EQ optimized for game                                                                                      | LED displays GAME for 2 second and returns to the current mode                                 | /            |

**Adjust the sound effect**

|              |                        |         |
|--------------|------------------------|---------|
| Tone quality | Remote control buttons | Display |
| Music        | SONG                   | SONG    |
| Movie        | CINEMA                 | CINE    |
| TV           | DIALOG                 | DIAL    |
| Game         | GAME                   | GAME    |

**Notes:**

- 1. Use the **TREBLE +/-** buttons, you can adjust the treble sounds.
- 2. Use the **BASS +/-** buttons, you can adjust the bass sounds.

**Select the audio source**

| Input     | Use                                                                  | Remote Control Button | Display |
|-----------|----------------------------------------------------------------------|-----------------------|---------|
| HDMI(ARC) | Connection with HDMI(ARC) cable, e.g., television set, DVD player    | HDMI(ARC)             | HD      |
| Bluetooth | Radio connection, e.g., smartphone                                   | BT IN                 | BT      |
| LINE IN   | Connection with 3.5mm stereo jack cable, e.g., MP3 player, telephone | LINE IN               | LINE    |
| OPTICAL   | Connection with OPTICAL cable, e.g., digital receiver, DVD player    | OPTICAL               | OPTI    |

**Notes:**

1. The audio source switching order is: Bluetooth- HDMI- LINE (LINE IN)-OPTICAL, and it will memory the current mode.
2. When powered on, the volume of each mode has a memory function and it does not interfere with each other.
3. When the audio source switches to other mode (not **BT**), the soundbar will disconnect the current connection, when switch back to **BT**, it will connect back to the last paired device.

**Restore factory setting**

When you cannot connect your soundbar with Bluetooth or you want to clear the current settings, you can restore factory setting.

1. Turn the soundbar on and enter Bluetooth mode
2. Switch to power off and press the **POWER** button for 10 seconds simultaneously
3. Then the soundbar will restore the default volume and sound effects and return to the Bluetooth pairing mode.

## Troubleshooting

Refer to the table below if this product does not function properly. If the problem you are experiencing is not listed below or if the instructions below do not help, turn off the product, disconnect the power cord, and contact KMOUK customer service or mail us at [support@kmouk.com](mailto:support@kmouk.com).

### 1. The unit will not turn on.

- Make sure there is power supply.
- Check if the power cord firmly plugged into the outlet and the soundbar
- Disconnect the AC power cord (mains lead) from the wall outlet (mains), and then reconnect after several minutes.

### 2. There is no sound.

- Check if the audio cable is connected to the soundbar and your device and if the volume of your device is adequate.
- Make sure you have selected the correct source.
- Check if the soundbar is muted, press the mute button to unmute it or **Volume +** to increase the volume level.

### 3. There is distorted sound.

- Make sure all cables are properly connected.
- Check if you have selected the correct source.
- Make sure your Bluetooth device and the soundbar connection is not out of range.

### 4. The remote control does not work.

- Check if you have selected the correct source and switch to the right source.
- Make sure the distance of remote control and the soundbar main unit is within operational range.
- Check if the batteries are drained and replace with new batteries.

### 5. A device cannot connect the Bluetooth of this soundbar.

- Make sure the Bluetooth function is activated on your Bluetooth device.
- Check if the soundbar has paired with your Bluetooth device.

## Specification

|                      |                                              |
|----------------------|----------------------------------------------|
| Model Name           | KM-HSB003                                    |
| Net Weight           | 6.4lbs (2.4kg)                               |
| Dimensions           | 32.08*3.17*3.94inches                        |
| Support Inputs       | LINE in, Bluetooth, HDMI(ARC) in, OPTICAL in |
| Bluetooth version    | V5.0                                         |
| Connect Range        | Up to 50ft                                   |
| Remote Control Range | 26.2ft                                       |
| Remote Battery       | 2 X AAA size battery                         |
| Frequency Range      | 2400 MHz–2483.5MHz                           |
| Power Consumption    | Rated: 100W, Peak: 120W                      |
| Power Supply         | INPUT: 100-240V~50/60Hz                      |

## Compliance Notice

### FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution:

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

**Class B FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment to an outlet that is on a different circuit than the radio or TV.
- Consulting the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

**Care & maintenance****Power off the soundbar**

- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc.)
- Avoid leaving the battery fitted the remote control if you leave the unit unattended for long periods. It may leak and damage the remote control.

### Care & Cleaning

- All care and cleaning operations should be carried out with the unit unplugged from the mains power.
- Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

### Customer Service

#### 12-month warranty period

Within one year from the date of purchase, we will repair or replace the product for free if it does not work properly due to the quality of the product itself.

#### Contact Us

Mail: [support@kmouk.com](mailto:support@kmouk.com)

### Manufacturer


Name: Shenzhen YaFex E-Commerce Co., Ltd  
Address: Floor 13A, Building11, Tianan Yungu phase 2, 2018 xuegang Road, Bantian street, Shenzhen, China

Made in China



205-200063



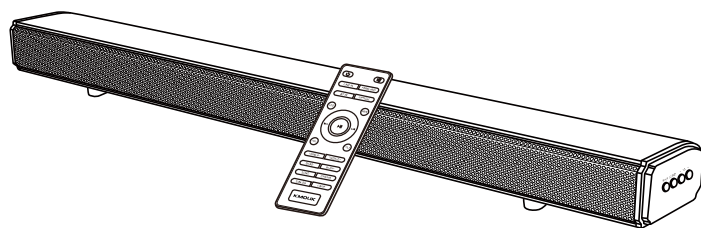

**32 inch 2.1 Channel Soundbar  
KM-HSB003 取扱説明書**



**ご注意**  
関電の危険性  
開いていません



**ご注意:**

感電の危険を減らすために、カバー（または背面）を外さないでください。内部にユーザーが修理できる部品はありません。修理については、専門のサービス担当者にお問い合わせください。



内に矢じりのシンボルが付いた稲妻正三角形は、製品内部に電圧の高い危険な部分があり、感電の原因となる可能性があることをお客様に注意喚起するものです。



正三角形内の感嘆符は取扱説明書の中に製品の取り扱いとメンテナンスに関する重要な項目が記載されていることを注意喚起するものです。

**警告:**

火災や感電を避けるため、雨の当たる場所や湿度の高い場所で製品を使用しないでください。



## 重要な安全上の注意

1. 本書をよくお読みください。
2. これらの指示を守ってください。
3. すべての注意と警告に留意してください。
4. すべての指示に従ってください。
5. この製品を水の近くで使用しないでください。
6. お手入れは乾いた布を使用して行ってください。
7. 通気孔は塞がないでください。製造元の指示に従って設置してください。
8. ラジエーター、暖房送風口、ストーブ、その他の熱を発する装置(アンプを含む)の近くには設置しないでください。
9. 必ず指定された付属品、あるいはアクセサリのみをご使用ください。
10. メーカーが指定する、または製品と一緒に購入されたカート、スタンド、三脚、ブラケット、または台のみをご使用ください。カートを使用する場合、製品の載ったカートを移動する際には転倒による負傷が起きないように十分注意してください。
11. 雷雨時や長期間使用しない場合は、電源プラグを抜いてください。
12. 修理が必要な際には、カスタマーサービスにお問い合わせください。製品に何らかの損傷が生じた場合、たとえば電源コードやプラグの損傷、液体や物の内部への侵入、雨や湿気などによる水濡れ、動作の異常、製品本体の落下などの際には、ただちに電源プラグを抜き、修理をご依頼ください。



## 警告



この表示は、製品内部に電圧の高い危険な部分があり、感電の原因となる可能性があることをお客様に注意喚起するものです。



この表示は、この取扱説明書の中に製品の取り扱いとメンテナンスに関する重要な項目が記載されていることを注意喚起するものです。



化学火傷の危険性があるので、バッテリーを摂取しないでください。爆発、火災、化学物質による火傷の危険性を避けるため、バッテリーの交換には注意し、機関が承認した (UL など) CR2032 または DL2032 3 ボルトのリチウムバッテリーとのみ交換してください。使用済みバッテリーは適切かつ迅速に廃棄してください。充電、分解、212°F (100°C) 以上の加熱、または焼却は行わないでください。



のどに詰まりやすい小さな部品が含まれています。3歳未満のお子様には適していません。



この製品には磁性材料が含まれています。体内に埋め込まれている医療機器への影響については、医師にご相談ください。万が一の事故や故障に備えるために、よく見えて手が届く位置にあるコンセントに電源プラグを接続してください。

## 注意事項

- 火災や感電を避けるため、雨の当たる場所や湿度の高い場所で製品を使用しないでください。
- 水漏れやしぶきがかかるような場所でこの製品を使用しないでください。また、花瓶などの液体が入った物品を製品の上や近くに置かないでください。
- 火気や熱源などの近くで使用しないでください。火の付いたろうそくなどの火気を、製品の上や近くに置かないでください。
- 許可なく製品を改造しないでください。
- 本製品に電源インバーターを使用しないでください。
- このシステムに含まれているスピーカーワイヤーと相互接続ケーブルは、壁内設置が承認されていません。壁内設置に必要な正しいタイプのワイヤーとケーブルについては、地域の建築基準法を確認してください。
- 電源プラグまたは電気器具のカプラーが切断装置として使用されている場合、切断装置は容易に操作可能な状態を維持しなければならない。
- 頑丈でない表面や、電気配線や配管など、危険が潜んでいる場所には取り付けしないでください。ブラケットの取り付けに不安がある場合は、資格のあるプロのインストーラーにご相談ください。

## バッテリーの注意と廃棄に関する情報

- 同じタイプの新しい電池のみを製品に取り付けてください。
- 電池コンパートメントに示されているように、正しい極性で電池を挿入しないと、電池の寿命が短くなったり、電池が漏れたりする可能性があります。
- 古い電池と新しい電池を混ぜないでください。
- 充電式（ニッケルカドミウム）、（ニッケル水素）電池は使用しないでください
- アルカリ電池、標準（カーボンジンク）電池、充電式（ニッケルカドミウム）電池、（ニッケル水素）電池を混ぜて使用しないでください。
- 電池を火や水に捨てないでください。
- 州および地域のガイドラインに従って、バッテリーをリサイクルまたは廃棄してください。
- バッテリーを誤って交換すると、爆発の危険があります。同じまたは同等のタイプとのみ交換してください。
- リモコンを長期間（1ヶ月以上）使用しない場合は、電池が漏れないようにリモコンから取り外してください。
- 電池が液漏れした場合は、電池コンパートメント内の液漏れを拭き取り、電池を交換してください。
- 電池を熱や湿気から遠ざけてください。
- バッテリーを他の金属物と一緒に持ち運んだり保管したりしないでください。いバッテリーがショートしたり、液漏れしたり、爆発したりする可能性があります。
- 充電式であることが確認されない限り、絶対に充電しないでください。

## 設置場所


- 本製品は、しっかりとした平らな場所に置くように設計されています。製品の周囲の換気スロットが塞がれ、過熱による寿命が短くなるため、本棚やラックなどのビルトイン設備に製品を置かないでください。本製品の通気性を確保するため、周囲には20cm以上の間隔を空けてください。

- 家具の製品が誤って転倒したり、押し出されたり、引っ張られたりしないように、適切なサイズと強度であることを確認してください。けがや製品の損傷の原因となる可能性があります。

- 壁掛け金具の取り付けは、有資格者のみが行ってください。誤ったインストールでは、重大な人身傷害および物的損害を引き起こす可能性があります。(本製品をご自身で設置される場合は、壁内に埋設されている可能性のある電気配線や配管などの設置を確認する必要があります)。壁が製品と壁取り付けブラケットの総荷重を安全に支えることを確認するのは、設置者の責任です。

## 01 内容物の確認

箱の中身を取り出して、下図の内容物がすべて同梱されていることを確認してください。

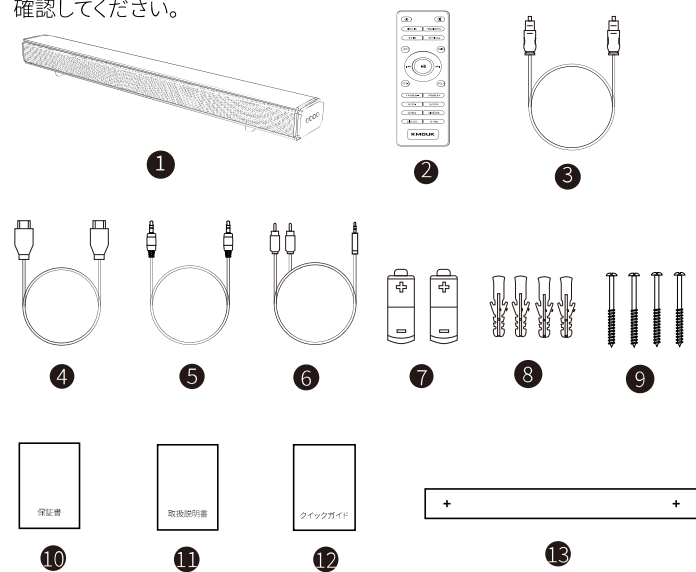


- |                                   |                |
|-----------------------------------|----------------|
| 1. サウンドバー本体                       | 8. 壁アンカー X 4   |
| 2. リモコン                           | 9. 固定ネジ X 4    |
| 3. 光デジタルケーブル (4.92インチ、1500mm)     | 10. 保証書        |
| 4. HDMI ケーブル (4.92インチ、1500mm)     | 11. 取扱説明書      |
| 5. 3.5mm AUXケーブル (3.28インチ、1000mm) | 12. クイックガイド    |
| 6. AUX - RACケーブル (3.28インチ、1000mm) | 13. 壁掛け式テンプレート |
| 7. 単4電池 X 2                       |                |


**ご注意:** 万が一、開梱時に内容物の損傷や欠品などが発見された場合は、使用せず、ただちに買い上げになった販売店または KMOUK カスタマーサービスまでご連絡ください。

## 02 サウンドバー本体の概要


### フロントパネル

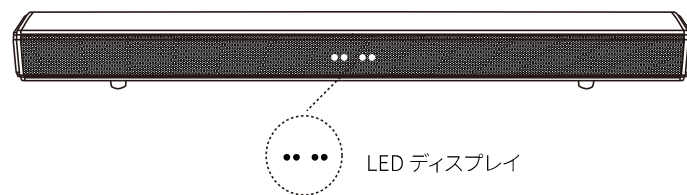

### 後面パネル

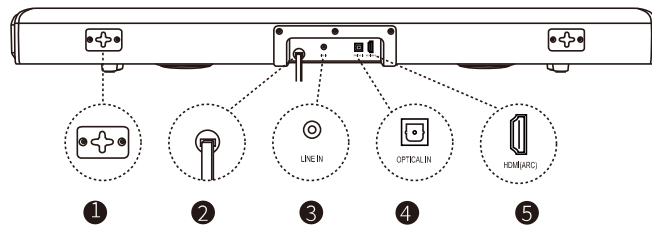


### 右パネル(コントロールパネル)

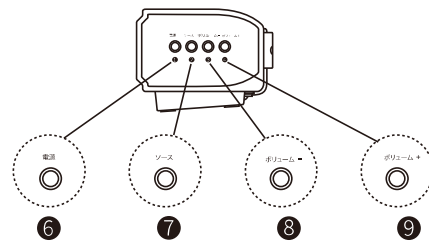

1. 場所の穴
2. 付属のAC 入力
3. 3.5mm LINE 入力
4. 光デジタル入力
5. HDMI 入力
6. 電源: ボタンを押して、オン／オフにします
7. ソース: LINE IN / BT IN / HDMI(ARC) / OPTICAL モードに切り替えます
- 8/9. ボリューム +/-: 音量上げ／音量下げ

### 03 リモートコントロール

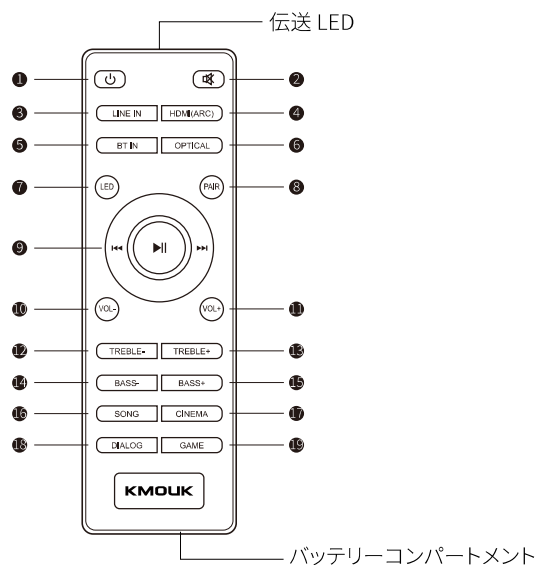


|   | ボタン                                                                               | 操作                                                                                                                      |
|---|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| ① |  | 電源オン／オフ                                                                                                                 |
| ② |  | ミュート／ミュート解除                                                                                                             |
| ③ | LINE IN                                                                           | LINE IN モードに入ります。                                                                                                       |
| ④ | HDMI(ARC)                                                                         | HDMIモードに入ります。                                                                                                           |
| ⑤ | BT IN                                                                             | Bluetoothモードを切り替える、または、最後にペアリングされたデバイスに接続するには、ペアリングされたレコードがない場合は、LEDディスプレイ「bt」が点滅します。BT入力ボタンを長押しすると、切断されてペアリングモードに入ります。 |
| ⑥ | OPTICAL                                                                           | 光デジタルモードに入ります。                                                                                                          |
| ⑦ | LED                                                                               | LEDディスプレイを閉じます。                                                                                                         |
| ⑧ | PAIR                                                                              | 2秒押しでオーディオデバイスを切断します。ペアリングモードに入ります。                                                                                     |
| ⑨ | VOL- VOL+                                                                         | 音量上げ/音量下げ (最大音量:32,最小音量: 0) (iPhoneの場合、音量を同期できます。)                                                                      |
| ⑩ | TREBLE-<br>TREBLE+                                                                | 高音を調整します。(TREBLE-を押して、0 toから-4まで調整します。TREBLE+ を押して、-4 から 4まで調整します。(メモリー機能を搭載している場合、工場出荷時の設定に戻すとデフォルトの「0」に戻ります。)         |
| ⑪ | BASS-<br>BASS+                                                                    | 低音を調整します。(BASS- を押して、0 から -4 まで調整します。BASS+を押して-4から4に調整します。メモリー機能を搭載している場合は、工場出荷時の設定に戻すとデフォルトの「0」に戻ります。)                 |

|    |                                                                                   |                                                                   |
|----|-----------------------------------------------------------------------------------|-------------------------------------------------------------------|
| 12 | SONG                                                                              | 曲に最適化されたEQに切り替えます。                                                |
| 13 | CINEMA                                                                            | シネマサウンド用に最適化されたEQを切り替えます。                                         |
| 14 | DIALOG                                                                            | ダイアログ用に最適化されたテレビ新聞のEQを切り替えます。                                     |
| 15 | GAME                                                                              | ゲーム用に最適化されたEQを切り替えます。                                             |
| 16 |  | Bluetoothモード<br>スキップ:トラックを前後にスキップします。<br>再生/停止:トラックを再生または一時停止します。 |

## 04 サウンドバーを置く

サウンドバー本体をテレビの中心より下に置くか、壁に取り付けるかを選択します。

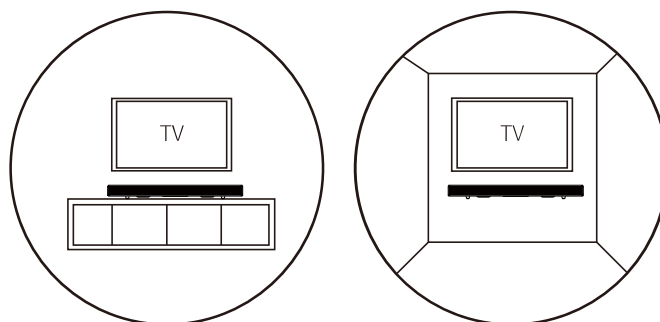

## 壁の設置に関する注意事項


1. サウンドバー本体を壁に取り付ける前に、必ずすべての安全情報をお読みください。


サウンドバー本体を壁に設置

2. 認定メーカーが提供または指定したネジを使用してください。
  3. 壁の取り付けやネジの取り付けが不適切であったことや、壁の強度不足などによる事故や損害については、株式会社KMOUKは一切の責任を負いません。
  4. 垂直方向の壁にのみ設置してください。
  5. 高温多湿の場所に設置しないでください。
  6. 壁が製品の重量を支えるのに十分な強度があるかどうかを確認してください。そうでない場合は、壁を補強する、または、別の設置場所を選択してください。
  7. お持ちの壁の種類（石膏ボード、鉄板、木など）に適した固定ネジまたはアンカーを購入して使用してください。
- サウンドバーを壁に取り付ける前に、ユニットから外部デバイスにケーブルを接続します。
  - インストール前に、デバイスをオフにして、プラグが抜かれていることを確認してください。

## サウンドバーを壁に取り付ける

1. 付属の壁掛け式テンプレートを壁に設置します。壁掛け式テンプレートがテレビの中心から少なくとも2インチ (5cm) 以内にあることを確認してください。
2. レベルを使用して、サウンドバーが正確に配置されていることを確認します。
3. テープを使用して、壁掛け式テンプレートを壁にしっかりと貼り付けます。

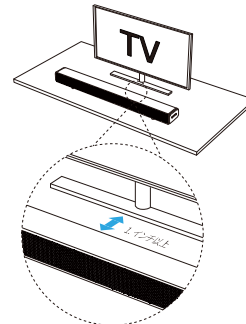

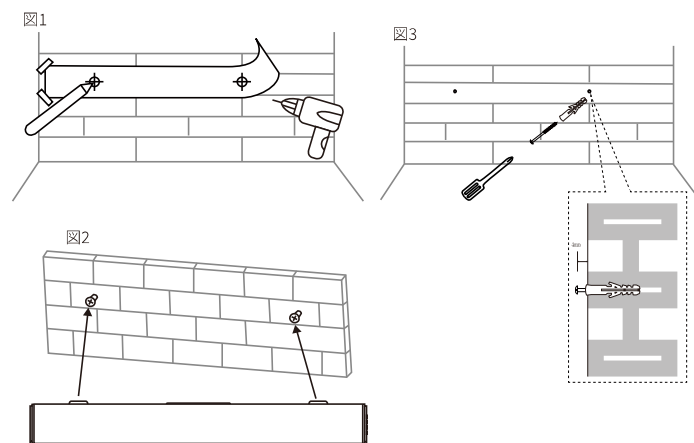

4. 取り付け穴を通してテンプレートの各マーキングを使用して壁にマークを付けます (図1)。

5. 壁掛け式テンプレートを取り外します。

6. 壁の各マーキングにネジ穴を開けます。

7. 付属の壁アンカーを壁にある2つのネジ穴に差し込みます (図1)。

8. 付属の固定ネジを壁アンカーに差し込みます。ネジの頭と壁の間に4mmを残します (図2)。


9. 壁のネジを固定して締め付けます (図3)。

10. サウンドバー本体を固定ネジに掛けます (図3)。

## 05 インストール/リモコンバッテリーの交換

リモコンで操作してもサウンドバーが反応しない場合は、新しい単4電池x2を交換してください。

1. バッテリーの蓋を開きます。
2. 単4電池2本を入れます。バッテリーの (+) と (-) の端が、示されているように (+) と (-) の端と一致していることを確認してください。
3. バッテリーの蓋を閉じます。

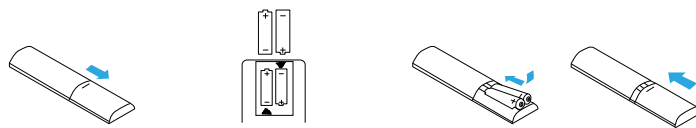


### ご注意:

- バッテリーを誤って交換すると、爆発の危険があります。同じタイプとのみ交換してください。
- 古い電池と新しい電池を混ぜないでください。

## 06 サウンドバーを接続する

サウンドバー本体の位置を固定したら、付属のHDMI、光デジタルケーブル、または、3.5mm AUXケーブルでサウンドバーとテレビ（またはほかのデバイス）を接続します。また、Bluetoothでデバイスも接続します。

### HDMI ケーブルで接続

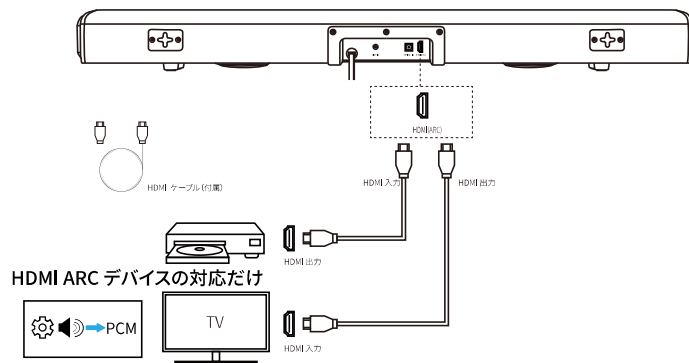


1. HDMIケーブルの一方の端をサウンドバー本体のHDMI 入力インターフェイスに接続し、もう一方の端子をテレビまたはデバイスのHDMI 出力インターフェイスに接続します。
2. **電源ボタン**を押して、オンにします。
3. リモコンの**HDMI(ARC)**ボタンを押すか、サウンドバー本体のソースボタンを繰り返しタッチして、**HDMI(ARC)**モードに入るには、HDMI入力を選択します。
4. サウンドバーディスプレイに「Hd」というマークが表示されると、テレビとオーディオデバイスをオンにします。初回に接続するとき、サウンドバーのスピーカーから音出力されるまでに数秒かかることがあります。

### ご注意:

1. お使いのテレビやデバイスがHDMI ARC機能をサポートしていることとテレビやデバイスの音声ミュートされていることを確認してください。詳細については、お使いのテレビまたはデバイスの取扱説明書を確認してください。
2. HDMI (ARC) で接続を使用する場合は、サウンドバーは接続されたデバイスのリモコンを通して、オンとオフを切り替えます。接続されたデバイスは、CEC (民生用電子機器の制御) プロトコルをサポートしている必要があります。
3. HDMI (ARC) ソケットを通した音声伝送は、すべてのコンポーネントがARCに対応している場合にのみ機能します。送信が失敗した場合は、送信に失敗した場合は、テレビのデジタルオーディオ出力が有効になっているか確認してください。オーディオ出力PCM2.0 (PCMステレオ) を選択します。オーディオ出力PCM2.0 (PCMステレオ) がテレビに設定されていない場合は、サウンドバーは自動的にオフにします。

### 光デジタルケーブルで接続

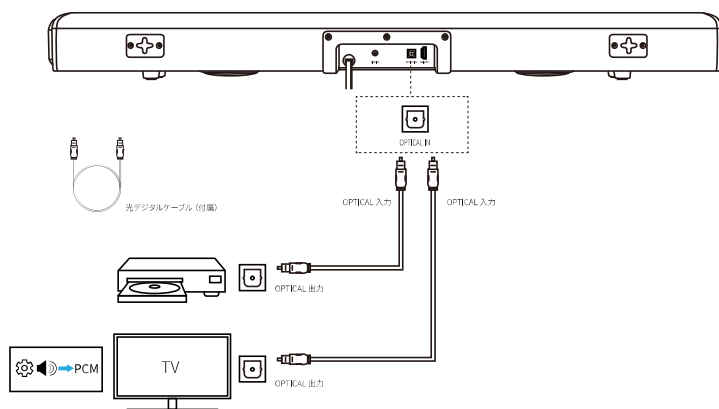


1. 光デジタルオーディオケーブルをオーディオソースの光出力とサウンドバーのOPTICAL INに接続します。
2. リモコンのOPTICALボタンを押して光モードに切り替えるか、本体のソースボタンを繰り返しワンタッチして光モードを選択します。
3. 接続されたデバイスのネイティブコントロールを使用して、オーディオ設定が光オーディオに設定され、オンになっていることを確認します。
4. 接続されたオーディオソースからの音声スピーカーから再生されます。  
ご注意: テレビの音声設定が「外部スピーカー」に対応していることを確認し、テレビの内蔵スピーカーを無効にします。

**ご注意:**

テレビの音声設定が「外部スピーカー」に対応していることを確認し、テレビの付属スピーカーを無効にします。


**AUXケーブルで接続 (3.5mmケーブル)**

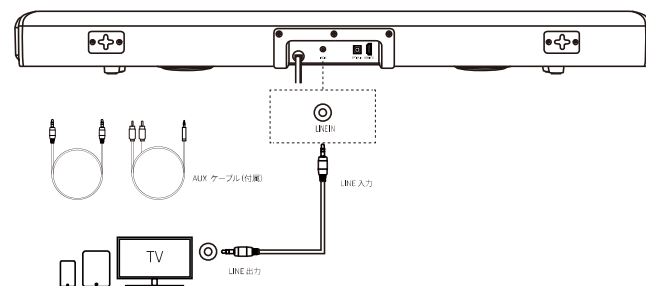

1. 3.5mmオーディオ入力ケーブル (付属) の一方の端子をサウンドバーのLINE入力に差し込みます。ケーブルのもう一方の端を、MP3プレーヤーまたは他のオーディオ出力/イヤホン出力に接続します。
2. リモコンのLINE入力ボタンを押して、**LINEIN**モードに入りますか、本機の**ソースボタン**を繰り返しタッチしてLINEINモードに入ります。
3. 接続されたデバイスで再生されたオーディオがスピーカーから聞こえるようになります。

## 電源で接続

HDMI、OPTICAL、または3.5 mm AUXケーブルをサウンドバーに正しく接続した後、付属のAC電源コードをコンセントに差し込んで、電源をオンにします。

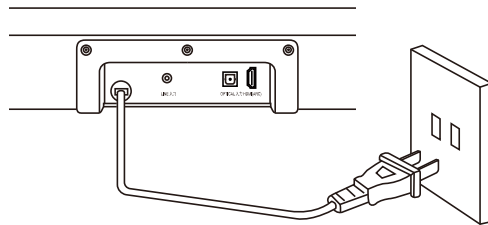


### ご注意:

1. 電源電圧がお住まいの国の安全基準に準拠していることを確認してください。
2. サウンドバーのAC電源コードを壁の電源コードソケットに接続します。初回接続すると、サウンドバーが自動的にオンにします。

## Bluetoothで接続

### 初回利用の場合

1. リモコンのBluetooth **(BT 入力)** ボタンを押して、「BTペアリング」モードに入ります。または、コントロールパネルの**ソースボタン**を押してから**[BT]**を選択します。LEDディスプレイに「bt」が速く点滅していることを示しています。
2. Bluetoothオーディオデバイス（スマートフォンなど）の電源を入れ、Bluetooth接続を開始します。
3. Bluetoothデバイスは「**KMOUK KM-HSB003**」というデバイス識別を受信するようになります。
4. 接続すると、「DongDongDu」という音が鳴り、白色LEDディスプレイに「bL」が点灯し続けます。

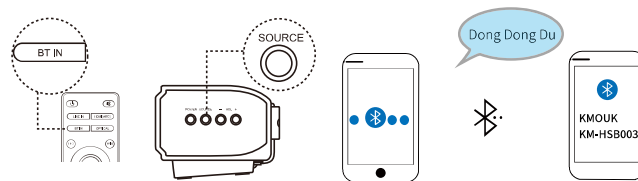

#### ご注意:

1. お使いのワイヤレスデバイスがBluetooth機能に対応していることを確認してください。
2. サウンドバー本体とBluetoothデバイス間の通信範囲は約50インチ (15メートル) です。(Bluetoothデバイスとサウンドバー本体の間に障害物はありません)。
3. 一度に1つのBluetoothデバイスだけをペアリングすることができます。
4. パスワードは必要ありません。

#### 2回目/ 3回目の接続

1. 電源をオンにすると、サウンドバーは最後にペアリングされたデバイスに自動的に接続し、以前の設定に戻ります。
2. 接続すると、「Dong Dong Du」という音が鳴り、白色LEDディスプレイ「」が点灯し続けます。

#### サウンドバーをデバイスから切り離す

リモコンの**ペアリングボタン**を2秒以上押し続けると、デバイスがサウンドバーから解除されます。

#### ご注意:

1. デバイスはサウンドバーからの応答を受信するため、切断には時間がかかります。(デバイスによって、所要時間は異なる場合があります)
2. Bluetooth接続モードでは、サウンドバーとBluetoothデバイスの間の距離が50インチを超えると、Bluetooth接続が切断されます。

3. 以下のような状況では、サウンドバーがBluetoothの検索や接続が正常的に行われない場合があります。
- サウンドバーの周りに強い電界がある場合。
  - 2つ以上のBluetoothデバイスが同時にサウンドバーとペアリングされている場合。
  - Bluetoothデバイスの電源がオフになっている、所定の位置にない、または誤動作している場合。
4. 電子機器は無線干渉を引き起こす可能性があります。電磁波を発生するデバイス（マイクロ波、無線LANデバイスなど）は、サウンドバー本体から遠ざける必要があります。

07 サウンドバーシステムの使用

コントロールパネルやリモコンでサウンドバーを使用して、効果音を調整したり、オーディオソースを選択したりすることができます。

コントロールパネルの操作

| ボタン    | 操作     | 詳細                      | LEDインジケーター                                         | 音声提示          |
|--------|--------|-------------------------|----------------------------------------------------|---------------|
| 電源     | 長押し    | 1.5秒長押しして、オフにします        | チャンネルとサウンドモードを示します                                 | Goodby, Kmouk |
|        | 短押し    | 短押しして、オンにします            |                                                    | Hi, Kmouk     |
| ソース    | クリック   | クリックするとオーディオソースが切り替わります | LEDランプが点灯します                                       | /             |
| ボリューム+ | 短押し／押す | ボリューム上げ                 | 音量が増加するとLEDインジケーターが1回点滅します。最大音量になると、ランプは3回連続で点滅します | /             |
| ボリューム- | 短押し／押す | ボリューム下げ                 | 音量が減少するとLEDインジケーターが1回点滅します。最小音量になると、ランプは3回連続で点滅します | /             |

ご注意:

1. **電源ボタン**を押してシャットダウンし、最後のシャットダウン前の設定を保持したまま再起動します。

2. 電源を入れると、各モードの音量が記憶され、お互いに干渉できなくなります。
3. 停電と再起動すると、音量はデフォルト値の65%に戻り、その他の設定はシャットダウン前の状態のままになります。

リモコン操作

| ボタン          | 操作              | 詳細                                                      | LEDインジケーター                                            | 音声提示         |
|--------------|-----------------|---------------------------------------------------------|-------------------------------------------------------|--------------|
| 電源           | 短押しまたは、1.5秒間長押し | オン／オフ                                                   |                                                       |              |
| ミュート         | 短押し             | ミュート／ミュート解除                                             | LEDインジケータがゆっくり点滅します：1秒オンにして、1秒オフにします                  |              |
| ボリューム+/-     | 短押し             | 音量上げ／音量下げ                                               | LEDインジケーターは、増量／減量すると1回点滅し、最大/最小音量で3回点滅します             |              |
| Bluetoothモード | 短押し             | BTモードに入ると、最後にペアリングされたデバイスと接続します。ペアリング記録がないと、BTボタンが点滅します | 接続した場合: 白いLED「BT」が点灯し続ける<br>ペアリングモード: 白いLED「BT」が点滅します | Dong Dong Du |
|              | 2秒間長押し          | 切断して、ペアリングモードに入ります                                      | 白いLED「BT」が点滅します                                       | Dong Dong Du |
| LINE INモード   | 短押し             | line モードに切り替えます                                         | 白いLED「LINE」が点灯し続けます                                   | /            |
| 光デジタルケーブル    | 短押し             | 光デジタルモードに入ります                                           | 白いLED「OPTI」が点灯し続ける                                    | /            |
| HDMI モード     | 短押し             | HDモードに入ります                                              | 白いLED「HD」が点灯し続ける                                      | /            |
| ミュージック       | 短押し             | ミュージックモードに入ります                                          | LEDディスプレイは 2 秒間で「歌」の音を表示し、現在のモードに戻ります                 | /            |
| 新聞モード        | 短押し             | 新聞モードに入ります                                              | LEDディスプレイは 2 秒間で「ダイアログ」の音を表示し、現在のモードに戻ります             | /            |
| シネマモード       | 短押し             | シネマモードに入ります                                             | LEDディスプレイは 2 秒間で「シネマ」の音を表示し、現在のモードに戻ります               | /            |
| ゲームモード       | 短押し             | ゲームモードに入ります                                             | LEDディスプレイは 2 秒間で「ゲーム」の音を表示し、現在のモードに戻ります               | /            |

**効果音を調整する**

| 音質     | リモコンボタン | ディスプレイ |
|--------|---------|--------|
| ミュージック | ミュージック  | SONG   |
| 映画     | シネマ     | CINE   |
| テレビ    | 新聞      | DIAL   |
| ゲーム    | ゲーム     | GAME   |

**ご注意:**

- 1. TREBLE +/-ボタンで高音を調整します。
- 2. BASS +/-ボタンで低音を調整します。

**オーディオソースを選択します**

| 入力        | 使用                                           | リモコンボタン   | ディスプレイ |
|-----------|----------------------------------------------|-----------|--------|
| HDMI(ARC) | HDMI(ARC)ケーブルとの接続します。例えば<br>テレビ、DVDプレーヤーなどです | HDMI(ARC) | Hd     |
| Bluetooth | スマホなどの無線接続                                   | BT IN     | bt     |
| LINE IN   | 3.5mmステレオジャックケーブル（MP3プレーヤー、電話など）との接続します      | LINE IN   | LINE   |
| 光デジタル     | 光デジタルケーブル（デジタルレシーバー、DVDプレーヤーなど）との接続します       | OPTICAL   | OPTI   |

### ご注意:

1. オーディオソースの切り替え順は、**bt** BT(Bluetooth)- **HD** HD(HDMI入力)- **LINE** LINE(LINE 入力)- **OPTI** OPTI(光デジタル)- **bt** BTで、初期設定はBluetoothモードです。
2. 電源をオンにすると、各モードの音量はメモリー機能があり、お互いに干渉しないようになっています。
3. オーディオソースが他のモード (**BT**ではありません) に切り替わると、サウンドバーは現在の接続を切断し、**BT**に戻ってスイッチすると、それは最後にペアリングされたデバイスに接続されます。

### 工場出荷時リセット

サウンドバーをBluetoothに接続できない、または現在の設定をクリアしたい場合は、工場出荷時の設定に戻すことができます。

1. サウンドバーの電源をオンにして、Bluetoothモードに入ります。
2. **「電源」ボタン**と**「ソース」ボタン**を同時に10秒間押します。
3. その後、サウンドバーはデフォルトの音量と効果音を復元し、Bluetoothペアリングモードに戻ります。

## トラブルシューティング

本製品が正常に使用できない場合は、以下の内容が参照してください。発生している問題が以下のリストに示されていない、または以下の手順で問題が解決しない場合は、製品の電源をオフにして、電源コードを外して、KMOUKカスタマーサービスに連絡するか、support@kmouk.comメールでお問い合わせください。

### 1. サウンドバーの電源がオンにしない場合

- 電気があるか確認してください。
- 電源コードがソケットとサウンドバーにしっかりと差し込まれているか確認してください。
- 電源コードを壁のコンセントから外し、数分後に再接続します。

### 2. 音が出ない

- オーディオケーブルがサウンドバーとデバイスに接続されているかどうか、およびデバイスの音量が十分かどうかを確認してください。
- 正しいオーディオソースが選択されていることを確認してください。
- サウンドバーがミュートされているかどうかを確認してください。ミュートされている場合は、ミュートボタンを押して、ミュートを解除するか、ボリューム+ボタンを押して音量を上げます。

### 3. 音が歪む

- すべてのケーブルが正しく接続されていることを確認してください。
- 正しいソースが選択されているかどうかを確認します。
- Bluetoothデバイスとサウンドバーが有効範囲内で接続されていることを確認してください。

### 4. リモコンが働かない

- 正しい信号源が選択されているかどうかを確認します。
- リモコンとサウンドバー本体の距離が操作可能な範囲内にあることを確認してください。
- バッテリーが消耗していないか確認し、新しいバッテリーと交換してください。

### 5. デバイスがサウンドバーのBluetoothに接続できない

- Bluetooth機能がオンになっていることを確認してください。
- サウンドバーがBluetoothデバイスとペアリングされているかどうかを確認します。

製品仕様

|              |                                        |
|--------------|----------------------------------------|
| モード名称        | KM-HSB003                              |
| 重量           | 2.4kg                                  |
| 寸法           | 32.08*3.17*3.94インチ                     |
| サポート入力       | LINE 入力;Bluetooth;HDMI(ARC) 入力;光デジタル入力 |
| Bluetooth    | V 5.0                                  |
| 接続範囲         | 50インチ以内                                |
| リモートコントロール範囲 | 26.2インチ                                |
| リモコン電池       | 2xAAAサイズバッテリー                          |
| 周波数範囲        | 2400 MHz~2483.5MHz                     |
| 消費電力         | 定額:100W;最大:120w                        |
| 電源           | 入力:100-240V~50/60Hz                    |

法令順守

本製品は、電波法に基づく特定無線設備の技術基準適合証明等に関する規則、および電気通信事業法に基づく端末機器の技術基準適合認定等に関する規則を順守しており、その証として「技適マーク」が本製の下に表示されております。

本製品のネジを外して内部の改造を行った場合、技術基準適合証明などが無効となります。技術基準適合証明などが無効となった状態で使用すると、電波法および電気通信事業法に抵触しますので、絶対に使用されないようお願いいたします。

この機器は、無線周波数エネルギーを発生、使用、放射する可能性があり、指示に従わずに設置、使用した場合、無線通信に有害な干渉を引き起こす可能性があります。しかし、特定の設置場所で干渉が発生しないことを保証するものではありません。本機がラジオやテレビの受信に有害な干渉を引き起こした場合（機器の電源をオフにしたり、オンにしたりすることで確認できます）、以下の方法で干渉を修正することをお勧めします。

- 受信アンテナの向きを変えたり、位置を変えたりしてください。
- 機器と受信機の間隔を広くしてください。
- 本機を受信機が接続されている回路とは異なる回路のコンセントに接続する。
- 本機が故障した場合は、販売店または修理業者にご連絡ください。

この機器は、制御されていない環境において規定されたFCC/ICの放射線被曝リミットに準拠しています。この機器は放射体と体の間を最低20cm離して設置し、操作する必要があります。

廃棄物の乱暴な処理による環境や人体への悪影響を防ぐために、責任を持ってリサイクルし、資源の持続可能な再利用を促進してください。使用済みのデバイスを返品する場合、環境に配慮した安全なリサイクルのために引き取ってくれます。

## 手入れ& メンテナンス

### サウンドバーを使用した後

- 長期間（休日など）放置する場合は、電源を切り、電源プラグを抜いてください。
- サウンドバーを長期間放置する場合は、バッテリーをリモコンに取り付けたままにしないでください。リモコンが漏れて破損する恐れがあります。

### お手入れ& クリア

- すべての手入れと清掃作業は、デバイスを電源から抜いた状態で実行する必要があります。
- 乾いた布でサウンドバーを拭いてください。絶対に液体や溶剤で洗浄しないでください。

## カスタマーサービス

### 12か月の保証期間

ご購入日から1年以内に、製品自体の品質が原因で正常に動作しない場合は、無償で修理または交換いたします。

### お問い合わせ先

メール: [support@kmouk.com](mailto:support@kmouk.com)

## 製造元

会社名: Shenzhen YaFex E-Commerce Co., Ltd  
所在地: Floor 13A, Building11, Tianan Yungu phase 2, 2018 xuegang Road, Bantian street, Shenzhen, China

生産国: 中国



® 205-200063

