



KMOUK Gaming Earbuds KM-HTW006 User Manual

English P1-P14

日本語 P16-P29

Content

Important Safety Instructions	1
Package Contents	2
Product Diagram	2
How to Charge	3
How to Take out the Earbuds	6
How to Wear	7
How to Use	8
Operations and Functions	10
How to Clean	11
Troubleshooting	11
Specifications	12
Compliance	13
Customer Service	14

Important Safety Instructions

Please read this user manual carefully and keep it for future reference.

- This product contains small parts that may be a choking hazard. Not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not put near any heat sources such as radiators, heat registers, and stoves.
- Only use attachments/accessories specified by the manufacturer.
- Do not make unauthorized alterations to the product.
- Always ask professional technicians or authorized personnel for repair.
- Set the earbuds to the low volume before you put them on, then increase the volume gradually as per your preference.
- Do not wear earbuds with high volume for a long time to avoid damaging your hearing.
- For your safety, do not use the earbuds when you drive or do other activities with potential danger, and follow applicable laws regarding earbuds use.

Package Contents

Earbuds

Charging Case


USB Type-C Cable

Quick Start Guide

User Manual

2 Pairs of Eartips (Large and Small)

Product Diagram

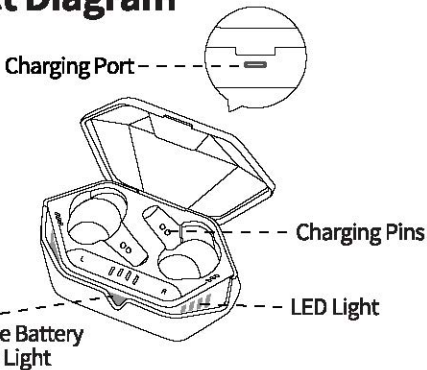

Touch Control Area

Earbud Indicator Light

Microphone

Charging Contacts

How to Charge

Fully charge both the earbuds and the charging case before the first-time use. Charge the earbuds every 3 months when not using them for a long time.

Charge the Earbuds

- Put the earbuds into the charging case.
- Close the lid, and the earbuds will start charging automatically.


Note: When the battery of the earbuds is lower than 10%, the "battery low" prompt will be heard every 3 minutes. The earbuds will power off after 10 minutes.

Charge the Charging Case

- Connect the charging case and 5V 1A charger with a USB Type-C cable. Plug the charger into a power outlet.
- Once fully charged, all 4 parts of the charging case battery indicator will light up.

Charging Case Battery Indicator Light

- There are 4 parts of indicator light from top to the bottom: the first part, the second part, the third part, and the fourth part.

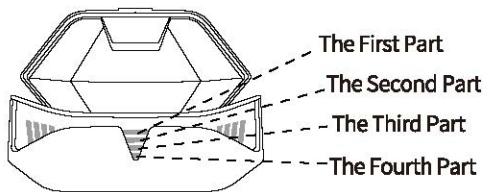

- After opening the lid, the 4 parts of the indicator light will turn on from top to bottom, and light up from bottom to top, then display the battery of the charging case.

Indicator Light Part	Battery Status
The First Part	75%~100%
The Second Part	50%~75%
The Third Part	25%~50%
The Fourth Part	Lower than 25%

Power On/Power Off


- Open the lid of the charging case, and the earbuds will power on automatically.
- Put the earbuds into the charging case and close the lid, the earbuds will power off automatically.

Note: If the earbuds without pairing or connecting with any device for 6 minutes, the earbuds will power off automatically.

How to Take out the Earbuds


The Correct Way

Press your fingertips into the groove of the charging case and buckle out the earbuds.

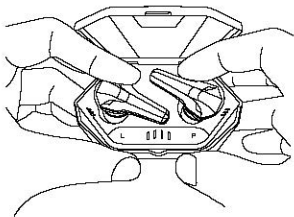


The Wrong Way

Pinch the earbuds with your fingertips to take out the earbuds.

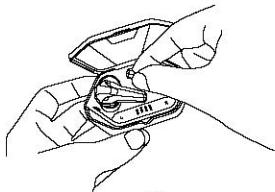


How to Wear

- Choose the eartips that best fit your ears.

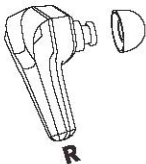

- Identify the left and right earbuds, then insert the earbuds into the inner canal of your ears. Turn and find the most comfortable position.

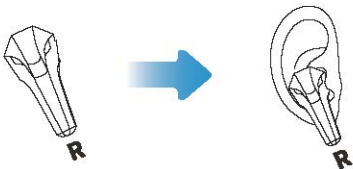

How to Use

Pairing

- Open the lid of the charging case, and the earbuds will enter the Bluetooth pairing mode automatically.
- Turn on Bluetooth on the device, and select "**KMOUK KM-HTW006**" from the device list to connect.
- Once the earbuds are paired to a device, they will automatically try to connect to the last paired device every time the charging case lid is opened.
- To pair with a new device, turn off Bluetooth on the currently connected device first. Then the earbuds will enter pairing mode.

Low Latency Game Mode

- Press and hold the touch control area of either earbud for 3 seconds to enter low-latency game mode, the "Game play mode" prompt will be heard
- Then press and hold the touch control area of either earbud for 3 seconds to exit the game mode and enter Bluetooth mode, the "Bluetooth mode" prompt will be heard.

Factory Reset

The earbuds can restore the factory setting no matter it is connected or not.

Open the charging case' lid when earbuds in, double click and long press either earbud for 6 seconds, then the light will keep red for 1 second, close the lid and open it again, then it finishes clearing the pairing list and resetting operation.

Note: After a factory reset, the pairing record will be lost and you will need to pair the device again.

Operations and Functions

Function	Operation	Voice Prompt
Answer the call	Single tap either earbud	Android phone: Incoming call iPhone: Phone ringtone
Volume -	Single tap left earbud	
Volume +	Single tap right earbud	Toots when reaching the maximum volume
Play/Pause	Double tap either earbud	
Previous track	Triple tap left earbud	
Next track	Triple tap right earbud	
Hang up the call	Long press either earbud for 3s	
Reject the call		Call rejected
Game mode	Long press either earbud for 3s	Game play mode
Bluetooth mode		Bluetooth mode
Activate voice assistant	Long press either earbud for 1.5s	Du
Power on		Power on
Power off		Power off
Go into pairing mode		Pairing
Connected		Connected
Fail to connect		Disconnected
Earbuds are battery low		Battery low

How to Clean

Gently wipe off the dirt with a soft, dry cloth or cotton swab.

Note: Do not insert anything into the earbuds and the charging case.

Troubleshooting

1. Can't find "KMOUK KM-HTW006" in the Bluetooth device list.

The reason is that the earbuds will automatically connect with the previously connected device. Turn off the Bluetooth on the previously connected device, or clear "KMOUK KM-HTW006" from its Bluetooth device list. Then search again.

2. No sound in the earbuds.

Check the earbuds are power on, the earbud indicator light flashes to indicate that the earbud is power on. Make sure the earbuds connect to the device. Next, check the volume of the connected device. Finally, check if the earbuds are set as an audio output device.

3. Can't hear the other person on the phone.

Adjust the call volume on the device. To answer a call on an IOS device (such as iPhone), please select "KMOUK KM-HTW006" as the audio output device.

4. Failed to turn on the earbuds.

The earbuds are low battery. Charge the earbuds, and make sure the charging case has electricity.

5. Easy connection interruption/sound delay.

Keep the earbuds and the connected device are within the effective range (32.8ft) and make sure that there are no obstacles between the devices, such as walls or electrical equipment.

Specification

Bluetooth® Version	5.0
Operating Distance	32.8 ft
Driver	6 mm
Frequency Response	20Hz~20KHz
Impedance	16Ω±15%
Sensitivity	96dB
Input	5V 1A
Playtime	20h
Charge Time	1.5h
Weight	45g
Audio Codec Format	SBC

Compliance

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Recycling

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Service

12-month Warranty Period

Within one year from the date of purchase, we will repair or replace the product for free if it does not work properly due to the quality of the product itself.

Contact Us

Mail: support@kmouk.com

Manufacturer

Name: Shenzhen YaFex E-Commerce Co., Ltd

Address: Floor 13A, Building11, Tianan Yungu phase 2, 2018 xuegang Road, Bantian street, Shenzhen, China



Made in China

目次

重要な安全上の注意	16
内容物	17
各部名称	17
充電方法	18
イヤホンの取り出す方法	21
装着方法	22
使用方法	23
操作・機能	2
お手入れ方法	26
トラブルシューティング	26
製品仕様	27
法令順守	28
カスタマーサービス	29


重要な安全上の注意


- 窒息の恐れがある小さな部品が含まれています。幼児の手の届かない場所で保管してください。
- 本製品には磁性体が含まれています。植え込み型医療機器への影響については、医師にご相談ください。
- 火災や感電の危険性を減らすために、本製品を雨、液体、湿気にさらさないでください。
- 暖炉、ファンヒーターまたは熱を発生する他の器具のような熱源の近くに製品を設置したり、取り付けたりしないでください。
- 必ず指定された付属品、あるいはアクセサリのみをご使用ください。
- 本製品を無断で改造や修理しないでください
- 再生機器の音量を下げてからイヤホンを耳に装着し、適度な音量になるまで少しずつ音量を上げてください。
- 大きな音量で長時間続けて聴くと、聴力に悪い影響を与えることがあります。特に長時間にわたるイヤホンのご使用の際は、大きな音量はお避けください。
- 安全のために、運転中やその他の危険を伴う可能性のある活動中には、イヤホンを使用しないでください。同時に、イヤホンの使用に関して適用される法律に従ってください。

内容物

イヤホン本体
充電ケース
USB Type-Cケーブル
クイックスタートガイド
取扱説明書
2xイヤピース

各部名称

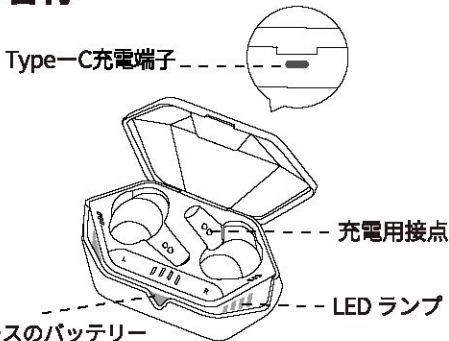

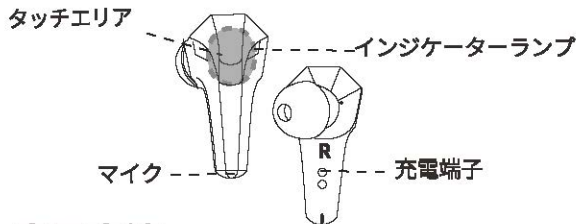

充電方法

- 初回イヤホンを使用前に、イヤホンと充電ケースを完全に充電してください。
- 長期間使用されていない場合は、イヤホンを完全に充電してから使用してください。

イヤホンを充電する

- 充電ケースにイヤホンを入れます。
- 充電ケースの蓋を閉めると、イヤホンが自動的に充電を開始します。


ご注意：イヤホンの電池残量が10%より低い場合は、3分ごとに「battery low」という音声提示を表示します。また、約10分後にイヤホンが自動的にオフにします。

充電ケースを充電する

- 充電ケースを閉じた状態で、USBケーブルの小さい方のプラグをUSB-C端子に接続します。もう一方のプラグをウォールチャージャーに接続します。
- ケースが完全に充電されると、充電インジケータランプが全部点灯します。

充電ケースのバッテリーインジケータランプ

- インジケータランプは上から下まで4つ部分があります。

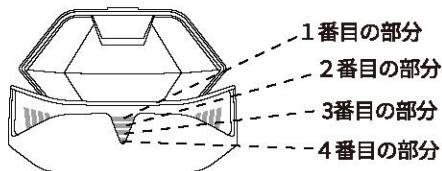

- 充電ケースの蓋を開けると、インジケータランプの4つの部分が上から下に点灯し、次に、下から上に点灯してから、電量が表示されます。

インジケータライト部	バッテリー残量
1番目の部分	75%~100%
2番目の部分	50%~75%
3番目の部分	25%~50%
4番目の部分	25%以下

電源オン・オフ


- 充電ケースの蓋を開けると、イヤホンの電源が自動的にオンにします。イヤホンインジケータランプが2種の色に交互に点滅します。
- 両方のイヤホンを充電ケースに戻します。ケースを閉じると、イヤホンが自動的にオフにします。

ご注意:イヤホンが6分以内にデバイスと接続できない場合は、自動的にオフします。

イヤホンの取り出す方法


おススメ

充電ケースのグループに指先を押し込み、イヤホンを取り出します。

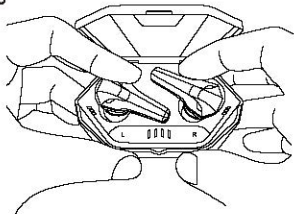


誤った方法

イヤホンを指先でつまんで取り出します。

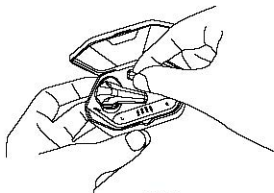

装着方法

- 耳に最も合うイヤチップを選択してください。

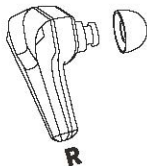

- イヤホンの左右を確認し、耳にフィットするように調節します。



使用方法

ペアリング

- 充電ケースの蓋を開けると、イヤホンが自動的にBluetoothペアリングモードに入ります。
- デバイスのBluetooth機能をオンにし、リストから「KMOUK KM-HTW006」を選択して接続します。
- イヤホンとデバイスがペアリングされる後、充電ケースの蓋を開かれるたびに、最後にペアリングされたデバイスに自動的に接続されます。
- 新しいデバイスとペアリングする場合は、まず、お使っているデバイスのBluetooth機能をオフします。次は、イヤホンがペアリングモードに入ります。

低遅延ゲームモード

- 任意のイヤホンのタッチエリアを3秒間長押しすると、低遅延ゲーミングモードに切り替わり、「Game play mode」という音声になります。
- 任意のイヤホンのタッチエリアを3秒間長押し続けると、Bluetoothモードに切り替わり、「Bluetooth mode」という音声がかかります。

工場出荷時リセット

イヤホンが接続されていなくても、工場出荷時の設定に戻すことができます。

イヤホンを装着した状態で充電ケースの蓋を開け、どちらかのイヤホンをダブルクリックして6秒間長押しすると、ランプが1秒間赤く点灯したままになり、蓋を閉めてから再度開けると、ペアリングリストの消去と工場出荷時リセットが完了します。

ご注意:工場出荷時リセットすると、ペアリング記録がなくなって、デバイスと改めてペアリングする必要があります。

操作・機能

機能	操作方法	提示音
電話の応答	任意のイヤホンをタップ	Android:incoming call iPhone:電話の着信音
音量下げ	左のイヤホンをタップ	
音量上げ	右のイヤホンをタップ	最大音量になると、音が鳴り
再生・停止	任意のイヤホンをダブルタップ	
前のトラック	左のイヤホンを3回タップ	
次のトラック	右のイヤホンを3回タップ	
通話終了	任意のイヤホンを3秒間長押し	
通話拒否		Call rejected
ゲームモード	任意のイヤホンを3秒間長押し	Game play mode
Bluetoothモード		Bluetooth mode
音声アシスタント	任意のイヤホンを1.5秒長押し	Du
電源オン		Power on
電源オフ		Power off
ペアリングモード		Pairing
Bluetooth接続		Connected
Bluetooth切断		Disconnected
低電圧		Battery low

お手入れ方法

乾いた柔らかい布か綿棒などを使って、そっと汚れを拭き取ってください。

ご注意：充電ケースやイヤホンには水や異物を入れないでください。

トラブルシューティング

1. Bluetoothデバイス一覧で「KMOUK KM-HTW006」が見つからない

イヤホンが最近接続されたデバイスと自動的に再接続されたためです。最近接続されたデバイスのBluetooth機能がオフにします。または、Bluetoothデバイスリストから「KMOUK KM-HTW006」を解除します。その後、もう一度接続してみてください。

2. 音が聞こえない

まず、イヤホンがオンにすることを確認します：イヤホンインジケータランプが点滅している場合は、イヤホンがオンにすることを表示します。次に、お使いのデバイスの音量レベルを確認します。最後に、イヤホンがオーディオ出力デバイスに設定されていることを確認します。

3. 電話の相手の声が聞こえない

お使いのデバイスの通話音量が調整します。IOSデバイス（iphone）で通話に応答するには、音声出力デバイスとして「KMOUK KM-HTW006」を選択してください。

4.イヤホンがオンにできない

イヤホンの電池残量が少なくなっています。充電ケースが完全に充電された状態でイヤホンを充電します。

5.接続が途切れる／音が遅れる

接続したデバイスをイヤホンの近くに置くか（10メートル以内）、イヤホンとイヤホンの間に障害物を取り除いてください。（例えば、壁、電気デバイス）

製品仕様

Bluetooth	5.0
通信距離	10 m
ドライバーユニット	6 mm
周波数応答	20Hz~20KHz
インピーダンス	16Ω±15%
感度	96dB
入力	5V 1A
再生時間	20h
充電時間	1.5h
重量	45g
対応コーデック	SBC

法令順守

本製品は、電波法に基づく特定無線設備の技術基準適合証明等に関する規則、および電気通信事業法に基づく端末機器の技術基準適合認定等に関する規則を順守しており、その証として「技適マーク」が本製の下に表示されております。

本製品のネジを外して内部の改造を行った場合、技術基準適合証明などが無効となります。技術基準適合証明などが無効となった状態で使用すると、電波法および電気通信事業法に抵触しますので、絶対に使用されないようお願いいたします。

この機器は、無線周波数エネルギーを発生、使用、放射する可能性があり、指示に従わずに設置、使用した場合、無線通信に有害な干渉を引き起こす可能性があります。しかし、特定の設置場所で干渉が発生しないことを保証するものではありません。本機がラジオやテレビの受信に有害な干渉を引き起こした場合（機器の電源をオフにしたり、オンにしたりすることで確認できます）、以下の方法で干渉を修正することをお勧めします。

- 受信アンテナの向きを変えたり、位置を変えたりしてください。
- 機器と受信機の間隔を広くしてください。
- 本機を受信機が接続されている回路とは異なる回路のコンセントに接続する。
- 本機が故障した場合は、販売店または修理業者にご連絡ください。

この機器は、制御されていない環境において規定されたFCC/ICの放射線被曝リミットに準拠しています。

廃棄物の乱暴な処理による環境や人体への悪影響を防ぐために、責任を持ってリサイクルし、資源の持続可能な再利用を促進してください。使用済みのデバイスを返品する場合、環境に配慮した安全なリサイクルのために引き取ってくれます。

カスタマーサービス

12 か月の保証期間

ご購入日から1年以内に、製品自体の品質が原因で正常に動作しない場合は、無償で修理または交換いたします

お問い合わせ先

メール: support@kmouk.com

製造元

会社名: Shenzhen YaFex E-Commerce Co.,Ltd

住所: Floor 13A, Building11, Tianan Yungu phase 2, 2018 xuegang Road, Bantian street, Shenzhen, China



生産国：中国



www.kmouk.com



support@kmouk.com