EGLOO

Easy and Smart Security

EGLOO Camera

Quick guide for Registration

What's in the box

· Egloo Camera   · Micro 5 Pin Cable   · Power Adapter

Google play

Apple Store

CDS Sensor

Lens

Mic

Micro SD Card Slot
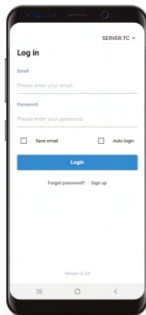
EGLOO

Status LED

EGLOO

Front

Front

Speaker

Rear

Before getting started

You can download the EGLOO App for free
from the Apple App Store or Google Play Store.

1 Sign up & Log in

- If you don't have an account, please tap "sign up"
  to create the account using your email address.
- After signing up, please log in with your account.

2 Registering device

- Please tap the "Register Device" + icon to start

3   Adding Device

- Please select the device you want to install.

4   Camera registration

- Before starting camera registration,
  you can proceed after watching video.

- If finish to watch video,
  please move to Wi-Fi router with camera.

- Please connect power,
  tap "Next" button if you meet Red LED on camera.

5   Check the status of camera

- When you hear installation message
 from camera and the Red LED starts to flicker,
 please tap the "Next" button

6   Connect smart phone to Camera

※Android Phone

(1) Please tap "Wi-Fi settings", move to Wi-Fi list

(2) Please select "EGLOO_CAM_XXXX" from Wi-FI List

(3) "Internet may not be available" message will appear.
This means that the connection is done successfully.
After this message appears, please ignore it and proceed

> **Current network**
>
> 📶 **EGLOO_CAM_AA0AA5**   ⚙
> Checking the quality of your Internet
> connection...

※iPhone

(1) Please move to Wi-Fi list using Background

(2) Please select "EGLOO_CAM_XXXX" from Wi-Fi

(3) You're not getting any messages.
    Please proceed to install

7   Go to the 'Select camera'

※Android Phone
If "EGLOO_CAM_XXXX" Wi-Fi connection is completed,
use the "Back" button to go back to the "Select camera"
page on No.6

※iPhone
If "EGLOO_CAM_XXXX" Wi-Fi connection is completed,
use "Back ground feature on iPhone" to go back to the
"Select camera" page on No.6

8   Select Wi-Fi

- Please select router's Wi-Fi to connect the camera

※ If Wi-Fi isn't detected in use
   When using a telecommunications company's Wi-Fi router
   → Please request 2.4Ghz actication to the telecommunications company.
   When using an individual Wi-Fi router
   → Please activate 2.4Ghz in the router's setting

9   Enter Wi-Fi password

- Please enter a correct Wi-Fi password

※ Please enter capital, small letter and special character correctly.

10   Connecting to server

- Please wait until the camera gets connected
  to the server

- When it's done,
 it will proceed to the next step automatically

11   Select Service

- Please enter camera name and selct storage method. Cloud or SD card

Cloud Recording

- Please enjoy safe Egloo cloud service.

Thank you for purchasing Egloo camera,
We are providing 3days recording service only for 30days After free service,
it will be changed to SD card mode automatically.

12   Select the camera, and Enjoy!

※ Rear of the camera, on the power connection part
You will see a reset button.

reset button

Rear

※ With the camera powered on,
please press the reset button
for about 10 seconds.

※ When you hear " Reset Completed.",
Camera has been reset successfully.

FCC Instructions

FCC Compliance Statement

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept
any interference received, including interference that may cause undesired operation.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device,
pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection
against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and,
if not installed and used in accordance with the instructions, may cause harmful interference
to radio communications. However, there is no guarantee that interference will not occur in a particular
installation. If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to correct
the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance
could void the user's authority to operate this equipment. This transmitter must not be co-located
or operating in conjunction with any other antenna or transmitter.