


4smarts

Location Finder SkyTag Slim

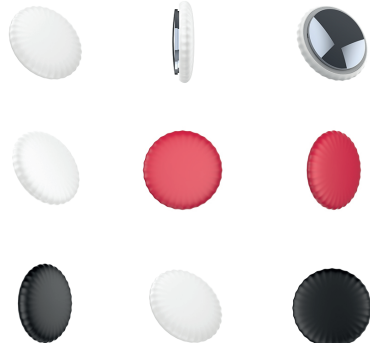

Thank You 

for choosing a quality product from 4smarts

1 Safety Instructions

Please read this manual and the safety instructions carefully before using the device for the first time. We accept no liability for damage caused by failure to observe these operating instructions and the safety instructions.

1.1 General safety instructions

- Avoid strong vibrations, shocks or extrusion, protect the instrument from sun and rain during transport.
- The device should be stored in a clean, cool and dry room, avoid direct sunlight and contact with corrosive substances.
- Do not let children or pets bite into the device or accessories, as this may cause damage or failure of the device.
- The device and accessories contain small parts. Please keep the device and accessories out of the reach of small children. Children may accidentally swallow small parts and choke on them.
- Do not drop the product or subject it to strong impact to avoid damaging it, which may cause the device to fail.

1.2 Precautions for batteries

- Overheating of the battery may cause an explosion.
- If the battery leaks, avoid contact of skin and eyes with the leaking liquid. In case of direct contact, please rinse with clean water immediately and go to hospital for medical treatment.
- If a battery shows discoloration, deformation, abnormal heating or other abnormalities during use, charging or storage, please stop using it and replace it with a new battery.
- Always dispose of the battery according to the regional disposal regulations and do not throw it in the household waste.

2 Technical Details

Bluetooth version: 5.2 with 32-bit processor

BLE range: approx. 10 meters

Battery type: CR2032

Maximum operating time: approx. 1 year

Works with Apple Find My

No additional app required

Acoustic signal to protect against unauthorized tracking of people

Frequency range of wireless connection: 2.4 GHz

Volume: 63 dB

3 Getting Started

The 4smarts SkyTag Slim is a handy device that helps you find lost items more easily. For example, if you put the SkyTag in your wallet, you can always see the location of your wallet.

Remove and insert the battery:

Step 1: Push down on the battery cover and turn it counterclockwise until it stops moving.

Step 2: Remove the cover on the back.

Step 3: Take out the battery.

Add SkyTag to Apple Find My:

Update to the latest version of iOS or iPadOS. Turn on Bluetooth of your phone, then pull the mylar out of SkyTag.

Open the Apple Find My app, tap "+", tap "Add Other Item", search for SkyTag and follow the on screen instructions.

Reset:

If SkyTag is not added to the Apple ID after ten minutes, Bluetooth will stop transmitting to save power. You need to power off/on the battery five times to reset it again. Reset is successful if you hear a different power-on sound. Then you can start adding Find My again. The method is the same as above.

Pair with another Apple ID:

Remove your SkyTag from Find My by tapping on the "Items" tab, tapping the name of the SkyTag item, scrolling down to the bottom of the detail card and then tapping "Remove Item".

Use of the accessories:

Proper insertion of the SkyTag will ensure optimal performance and functionality. Please follow these instructions to avoid potential problems.

Carefully insert the SkyTag into the appropriate accessory. Make sure you can see the top of the SkyTag and not the bottom of the case. Make sure that the SkyTag is firmly and securely seated in the accessory.

4 Function Notes

Find items at close range – Play sound function

For the paired SkyTag, within the short range of the owner's Apple device, you can click "Play Sound" in the Find My app, or say "Hey Siri, find my wallet" to play sound to indicate the SkyTag location. If it's hiding nearby, such as under a cupboard or in the next room, you can easily follow the sound to find it.

SkyTag is away from the owner

The owner can see the location of the lost SkyTag on Apple device, navigate by the map to find SkyTag and items.

Lost Mode – Find things easier

SkyTag can be set as "Lost Mode". Open the Find My app, select an added SkyTag, click on the "Lost Mode", following the instructions of the app, enter phone number, then setting is successful. In Lost Mode you automatically get a notification when it's detected by other devices in the Find My network. So if other pick up your SkyTag, they can know how to contact you by following the learn more instructions in Find My app. People nearby also can identify to the owner, help the owner find lost items.

Find items with help of hundreds of millions of friends

Find My network will help you find your belongings when they are left behind. SkyTag will send out a secure Bluetooth signal that can be detected by nearby iOS devices in Find My network. These devices send the location of your SkyTag device to iCloud, then you can go to the Find My app and see it on the map. The whole process is anonymous and encrypted to protect your privacy. And it's efficient, so there is no need to worry about the battery life and data usage.

Prevent unwanted tracking:

To prevent unwanted tracking, your iOS device will detect a third-party SkyTag that is near you for an extended period of time and send you an alert. If you don't detect the device after a while, it will play an alert sound to warn you. However, you will not receive any notification when a SkyTag is near its owner.

Privacy Protection:

Only you can see the location of your SkyTag. No location data or location history is physically stored in the SkyTag itself. Communication with the Find My network is encrypted throughout, so only you have access to location data. Neither Apple nor anyone else can know the identity or location of the device involved in finding your SkyTag.

5 Care and Maintenance

Do not open the device and have it repaired only by a specialist.
Do not use any harsh chemicals, cleaning agents or the like for cleaning.
Use a clean, dry cloth for wiping.

6 Warranty

4smarts GmbH assumes no liability or warranty for damages resulting from improper installation, assembly and improper use of the product or failure to comply with the operating instructions and / or safety instructions.

7 Disposal Notification



Electrical and electronic devices as well as batteries must not be disposed of with household waste. The consumer is legally obliged to return electrical and electronic equipment as well as batteries at the end of their service life to the public collection points set up for this purpose or to the point of sale.

8 Service and Support

In case of defective products or problems during installation, please contact your dealer or the 4smarts product support at: <http://www.4smarts.com/contact>.

Service Hotline

Monday -Friday: 9 -17h

+ 49(0)821 20708444

Email: customer-service@4smarts.com

9 Attention of Conformity

Hereby, 4smarts GmbH declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity according to the RED directive can be found at www.4smarts.com.

1 Sicherheitshinweise

Bitte lies diese Bedienungsanleitung und die Sicherheitshinweise vor der ersten Inbetriebnahme sorgfältig durch. Für Schäden, die durch Nichtbeachtung dieser Anleitung und der Sicherheitshinweise entstehen, übernehmen wir keine Haftung.

1.1 Allgemeine Sicherheitshinweise

- Vermeide starke Vibrationen, Stöße oder Extrusion, schütze das Gerät vor Sonne und Regen während des Transports.
- Das Gerät sollte in einem sauberen, kühlen und trockenen Raum gelagert werden, direkte Sonneneinstrahlung und Kontakt mit ätzenden Substanzen vermeiden.
- Lass Kinder oder Haustiere nicht in das Gerät oder das Zubehör beißen, da dies zu Schäden oder einem Ausfall des Geräts führen kann.
- Das Gerät und das Zubehör enthalten Kleinteile. Bitte bringe das Gerät und das Zubehör nicht in die Reichweite von Kleinkindern. Kinder können unbeabsichtigt Kleinteile verschlucken und daran ersticken.
- Lass das Produkt nicht fallen und setze es keinen starken Stößen aus, um es nicht zu beschädigen, was zu einem Ausfall des Geräts führen kann.

1.2 Vorsichtsmaßnahmen für Batterien

- Eine Überhitzung der Batterie kann eine Explosion verursachen.
- Falls die Batterie ausläuft, vermeide den Kontakt von Haut und Augen mit der auslaufenden Flüssigkeit. Bei direktem Kontakt spüle bitte sofort mit klarem Wasser und begib dich zur ärztlichen Behandlung in ein Krankenhaus.
- Wenn eine Batterie während des Gebrauchs, des Aufladens oder der Aufbewahrung Verfärbungen, Verformungen, abnormale Erwärmung oder andere Anomalien aufweist, verwende sie bitte nicht mehr und ersetze sie durch eine neue Batterie.
- Entsorge die Batterie stets nach den regionalen Entsorgungsvorschriften und wirf sie nicht in den Hausmüll.

2 Technische Daten

Bluetooth-Version: 5.2 mit 32-Bit-Prozessor

BLE Reichweite: ca. 10 Meter

Batterietyp: CR2032

Maximale Betriebsdauer: ca. 1 Jahr

Kompatibel mit Apple Wo ist?

Keine zusätzliche App erforderlich

Akustisches Signal zum Schutz vor unerlaubtem Tracking von Personen

Frequenzbereich der kabellosen Verbindung: 2.4 GHz

Lautstärke: 63 dB

3 Erste Schritte

Der 4smarts SkyTag Wallet ist ein innovativer Geldbörsenfinder im Kreditkartenformat, der dich vor dem Verlust deiner Geldbörse oder anderer Gegenstände schützt. Wenn du den SkyTag zum Beispiel in deine Brieftasche steckst, kannst du jederzeit den Standort deiner Brieftasche sehen.

Entfernen und Einsetzen der Batterie:

Schritt 1: Drücke die Batterieabdeckung nach unten und drehe sie gegen den Uhrzeigersinn, bis sie sich nicht mehr bewegen lässt.

Schritt 2: Entferne die Abdeckung auf der Rückseite.

Schritt 3: Nimm die Batterie heraus.

Hinzufügen des SkyTag zu Apple Wo ist?:

Aktualisiere dein Gerät auf die neueste Version von iOS oder iPadOS.

Schalte die Bluetooth-Funktion deines Telefons ein und entferne die Schutzfolie vom SkyTag.

Öffne die Apple Wo ist? App und tippe auf das "+"-Symbol.

Wähle "Weiteres Objekt hinzufügen" und suche nach SkyTag.

Folge den Anweisungen auf dem Bildschirm, um den SkyTag hinzuzufügen.

Zurücksetzen:

Wenn der SkyTag nach zehn Minuten nicht zur Apple ID hinzugefügt wurde, wird die Bluetooth-Übertragung ausgeschaltet, um Strom zu sparen. Du kannst den SkyTag zurücksetzen, indem du die Batterie fünfmal aus- und wieder einschaltet. Ein erfolgreiches Zurücksetzen wird durch ein verändertes Einschaltgeräusch bestätigt. Anschließend kannst du erneut mit der Suche in der Wo ist? App beginnen, indem du die oben genannten Anweisungen befolgst.

Mit einer anderen Apple ID koppeln:

Wenn du den SkyTag mit einer anderen Apple Gerät koppeln möchtest, entferne ihn zuerst aus deiner Wo ist? App. Gehe dazu zur Registerkarte "Elemente", tippe auf den Namen des SkyTag-Elements, scrolle zum Ende der Detailkarte und wähle "Element entfernen". Anschließend kannst du den SkyTag mit einer anderen ID koppeln, indem du die oben genannten Anweisungen befolgst.

Verwendung des Zubehörs:

Das korrekte Einsetzen des SkyTags gewährleistet eine optimale Leistung und Funktionalität. Bitte folge diesen Anweisungen, um mögliche Probleme zu vermeiden. Setze den SkyTag vorsichtig in das entsprechende Zubehör ein. Achte darauf, dass du die Oberseite des SkyTags siehst und nicht den Gehäuseboden. Stelle sicher, dass der SkyTag fest und sicher im Zubehör sitzt.

4 Hinweise zur Bedienung:

Gegenstände im Nahbereich finden - Tonalarm abspielen:

Wenn der SkyTag mit deinem Apple-Gerät gekoppelt ist, kannst du in der Wo ist? App den "Tonalarm abspielen" -Button drücken oder "Hey Siri, finde meine Brieftasche" sagen, um einen Alarmon abzuspielen und den Standort des SkyTags anzuzeigen. Wenn sich der Gegenstand in der Nähe versteckt, z.B. unter einem Möbelstück oder im nächsten Raum, kannst du dem Ton einfach folgen, um ihn zu finden.

Gegenstände außerhalb der Reichweite des Benutzers:

Der Besitzer kann den Standort des verlorenen SkyTags auf seinem Apple-Gerät sehen und über eine Karte navigieren, um den SkyTag und die damit verbundenen Gegenstände zu finden.

Verloren-Modus - Gegenstände leichter finden:

Du kannst den SkyTag in den "Verloren-Modus" versetzen. Öffne die Wo ist? App, wähle den hinzugefügten SkyTag aus und klicke auf "Verloren". Befolge die Anweisungen in der App um den Vorgang abzuschließen. Gib deine Telefonnummer an und du erhältst automatisch eine Benachrichtigung, wenn du den Gegenstand mit dem SkyTag irgendwo liegen gelassen hast. Oder wenn andere Personen deinen SkyTag finden, können sie dich kontaktieren, indem sie den Anweisungen in der Wo ist? App folgen. Personen in der Nähe können dich erkennen und dir helfen, deine verlorenen Gegenstände wiederzufinden.

Finde Gegenstände mit Hilfe von Hunderten von Millionen von Freunden:

Das Wo ist? Netzwerk unterstützt dich dabei, verlorene Besitztümer wiederzufinden. Der SkyTag sendet ein sicheres Bluetooth-Signal aus, das von iOS-Geräten im Wo ist? Netzwerk in der Nähe erkannt werden kann. Diese Geräte senden den aktuellen Standort deines SkyTags an iCloud, sodass du ihn in der Wo ist? App auf einer Karte sehen kannst. Der gesamte Prozess ist anonym und verschlüsselt, um deine Privatsphäre zu schützen. Du musst dir keine Gedanken über die Batterielaufzeit oder den Datenverbrauch machen.

Unerwünschtes Tracking verhindern:

Um unerwünschtes Tracking zu verhindern, erkennt dein iOS-Gerät einen SkyTag eines Dritten, der sich für längere Zeit in deiner Nähe befindet, und sendet dir eine Warnmeldung. Wenn du das Gerät nach einer Weile nicht entdeckst, wird ein Alarnton abgespielt, um dich zu warnen. Du erhältst jedoch keine Benachrichtigung, wenn sich ein SkyTag in der Nähe seines Besitzers befindet.

Schutz der Privatsphäre:

Nur du kannst den Standort deines SkyTags sehen. Im SkyTag selbst werden keine Standortdaten oder Standortverlaufsdaten physisch gespeichert. Die Kommunikation mit dem Wo ist?-Netzwerk ist durchgehend verschlüsselt, sodass nur du Zugriff auf die Standortdaten hast. Weder Apple noch andere können die Identität oder den Standort des Geräts erfahren, das bei der Suche nach deinem SkyTag beteiligt war.

5 Wartung und Pflege

Öffne das Gerät nicht und lass es nur von einem Fachmann reparieren.

Verwende zur Reinigung keine scharfen Chemikalien, Reinigungsmittel oder ähnliches.

Verwende zum Abwischen ein sauberes, trockenes Stofftuch.

6 Gewährleistung

Die 4smarts GmbH übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die aus unsachgemäßer Installation, Montage und unsachgemäßem Gebrauch des Produktes oder einer Nichtbeachtung der Bedienungsanleitung und /oder der Sicherheitshinweise resultieren.

7 Hinweise zum Umweltschutz



Elektrische und elektronische Geräte sowie Batterien dürfen nicht mit dem Hausmüll entsorgt werden. Der Verbraucher ist gesetzlich verpflichtet, elektrische und elektronische Geräte sowie Batterien am Ende ihrer Lebensdauer an den dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle zurückzugeben.

8 Service und Support

Bei defekten Produkten oder Problemen während der Installation wende dich bitte an deinen Händler oder an die 4smarts Produktberatung auf: <http://www.4smarts.com/contact>

Service Hotline

Montag –Freitag: 9 –17h

+ 49(0)821 20708444

E-Mail: customer-service@4smarts.com

9 Konformitätshinweise

Hiermit erklärt die 4smarts GmbH, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet. Die Konformitätserklärung nach der RED Richtlinie findest du unter www.4smarts.com.

*To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

The Find Items app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

FCC Warning statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

4smarts

Thanks for buying our product! We at 4smarts are sure it will serve you well. Follow us on social media for news, customer support and to win great prizes. See you there!



@4smarts_official



facebook.com/4smarts



linkedin.com/company/4smarts



All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.