


DOOHOOEEK

# Wireless Remote Control

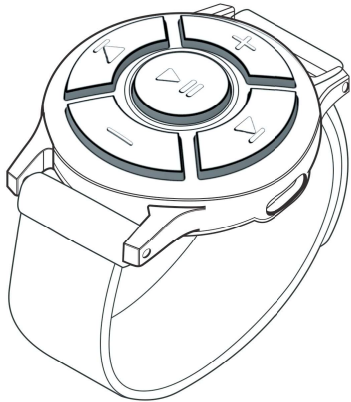


English

Thank you for purchasing from Doohoeek. If you need any support, please contact us via email: [doohoeek@outlook.com](mailto:doohoeek@outlook.com)

### Package List

- Remote Controller x 1
- Wrist Band x 1
- USB-C Charging Cable x 1
- User Manual x 1

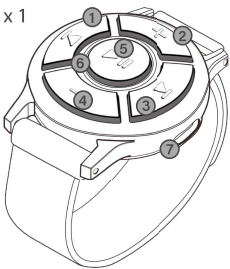

- ①Prev Track: Short press
- ②Volume +: Short press
- ③ Next Track: Short press
- ④Volume -: Short press

- ⑤ **Activate Voice Assistant**  
Long press for 3s  
**Music**  
Play/Pause: Short press;  
**Call**  
Reject: Long press for 3s  
Answer: Short press  
End Call: Short press

- ⑥ LED Indicator
- ⑦ Type-C Charging Port

### Turn On/Off

Turn On : Long press  for 3s;  
Turn Off: Long press  and  for 3s, and the indicator flash 1 time.

### Pairing Instructions

- Press down the Button  for 3 seconds and the white light flashes 1 time and then flickers to enter Bluetooth pairing status;
- Turn on the Bluetooth of your device, search and connect Bluetooth "C10" and the indicator will stop blinking;
- With the memory function, as long as the Bluetooth of your phone is turned on, the product will automatically connect to it after successfully first pairing . (Note: if you want to connect to another device, please disconnect the controller on your old device and then search Bluetooth "C10" on the new device. )

### Specifications

|                     |               |
|---------------------|---------------|
| BT version          | BT 5.4        |
| Working range       | 10 meters     |
| Working time        | 41 hours      |
| Battery capacity    | 200mAh        |
| Charging time       | about 1 hours |
| Working temperature | -20 C - 50 C  |
| Waterproof grade    | IPX7          |

### Indicators

| Actions       | Indicator                                                 |
|---------------|-----------------------------------------------------------|
| Pairing       | White light flashes quickly                               |
| Paired        | White light flashed slowly (20s each time, last for 0.3s) |
| Low Battery   | White light flashes 5s each time, turned off in 3 minutes |
| Charging      | White light stays on                                      |
| Fully Charged | White light turns off                                     |

### Stick on a Smooth Surface



Washable & Reusable  
Nano-Sunction Sticker



Tear off the protective film



Wipe the dust off the surface  
Keep the surface clean and dry

### Tips

- Prohibit prolonged exposure to rain. The waterproof grade of the product is IPX7, which can prevent light rain, but please do not expose it to rain for a long time. If the product gets wet or falls into water, please dry it as soon as possible.
- Prohibit prolonged exposure to sunlight. Long term exposure to sunlight may cause battery damage and reduce lifespan of silicone buttons.
- When the product is turned on and enters pairing mode, the white light will flash for 2 minutes. If it is not connected to the phone in 2 minutes, the product will automatically shut down.
- If the distance between the phone and the product exceeds 10 meters, or if the Bluetooth of the phone is turned off, the product will disconnect from the phone and enter pairing mode again. If it does not connect to any devices after 2 minutes, the product will automatically shut down. Next time you use it, please turn on the Bluetooth of your phone first, and then turn on the product. The product will automatically connect to your phone.
- If the product is not in use for 2 hours, it will automatically shut down.
- The adhesive at the bottom of the product can be reused. If there is dust or dirt on the adhesive, it can be wiped or rinsed with water.

### Troubleshooting


**Question 1: What should I do if I receive the product and it cannot be turned on?**  
Answer: Due to prolonged transportation, the product may run out of battery. Please charge it for 2 hours before attempting to turn it on.

**Question 2: The product is turned on, but I cannot find the Bluetooth "C10" on my phone. What should I do?**  
Answer: Please disconnect the Bluetooth of other devices on your phone; then turn off and turn on the Bluetooth on your phone to search for "C10".

**Question 3: What should I do if it suddenly cannot connect to my phone after using it for a period of time?**  
Answer: Please delete the C10 that has already been connected to the phone; Turn off and then turn on the phone's Bluetooth; Turn off and then turn on the product again and reconnect the product.

**Question 4: I first connected to phone 1, what should I do if I want to connect to another phone?**  
Answer: The product can only connect to one phone and cannot connect to two phones at the same time. If you have already connected a phone and want to connect to another phone, please disconnect the Bluetooth of Phone 1, then turn on the Bluetooth of Phone 2, search and connect Bluetooth "C10". With the memory function, the product will automatically connect to the last connected phone.

# Drahtlose Fernbedienung

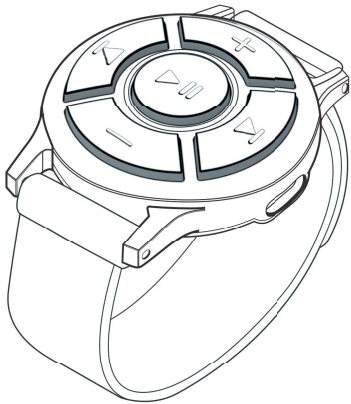


Deutsch

Vielen Dank für Ihren Einkauf bei Doohoeek. Wenn Sie Unterstützung benötigen, kontaktieren Sie uns bitte per E-Mail: [doohoeek@outlook.com](mailto:doohoeek@outlook.com)

Paketliste

- Fernbedienung x 1
- Armband x 1
- USB-C-Ladekabel x 1
- Benutzerhandbuch x 1

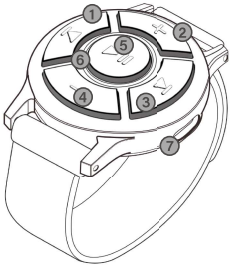

- ①Vorheriger Titel: Kurz drücken
- ②Lautstärke +: Kurz drücken
- ③ Nächster Titel: Kurz drücken
- ④Lautstärke -: Kurz drücken
- ⑤ **Sprachassistent**  
3 Sekunden lang gedrückt halten  
**Musik**  
Wiedergabe/Pause: Kurz drücken  
**Anruf**  
Ablehnen: 3 Sekunden Lang drücken;  
Annehmen: Kurz drücken;  
Anruf beenden: 3 Sekunden Lang drücken
- ⑥ LED-Anzeige
- ⑦Typ-C-Ladeanschluss

Ein-/Ausschalten

Einschalten: 3 Sekunden lang gedrückt halten;  
Ausschalten: und 3 Sekunden lang gedrückt halten, die Anzeige blinkt 1 Mal.

Pairing-Anweisungen

- Drücken Sie die Taste 3 Sekunden lang. Das Weiß Licht blinkt einmal und flackert dann, um in den Bluetooth-Pairing-Status zu gelangen;
- Schalten Sie Bluetooth Ihres Geräts ein, suchen und verbinden Sie Bluetooth „C10“ und die Anzeige hört auf zu blinken;
- With the memory function, as long as the Bluetooth of your phone is turned on, the product will automatically connect to it after successfully first pairing . (Note: if you want to connect to another device, please disconnect the controller on your old device and then search Bluetooth “C10” on the new device. )

Spezifikationen

|                       |                    |
|-----------------------|--------------------|
| BT-Version            | BT 5.4             |
| Arbeitsbereich        | 10 meters          |
| Arbeitszeit           | 41 Stunden         |
| Batteriekapazität     | 200mAh             |
| Ladezeit              | ungefähr 2 Stunden |
| Arbeitstemperatur     | -20 ℃ - 50 ℃       |
| Wasserdichte Qualität | IPX7               |


Indikatoren

| Aktionen            | Indikator                                                      |
|---------------------|----------------------------------------------------------------|
| Koppeln             | Weißes Licht blinkt schnell                                    |
| Gekoppelt           | Weißes Licht blinkt langsam (jeweils 20 s, zuletzt 0,3 s)      |
| Schwache Batterie   | Weißes Licht blinkt jeweils 5 s, schaltet sich nach 3 min. aus |
| Laden               | Weißes Licht bleibt an                                         |
| Vollständig geladen | Weißes Licht schaltet sich aus                                 |

Kleben Sie es auf eine glatte Oberfläche



Waschbarer, wiederverwendbarer Nano-Saugaufkleber



Ziehen Sie die Schutzfolie ab



Wischen Sie den Staub von der Oberfläche. Halten Sie die Oberfläche sauber und trocken

Tipps

- Vermeiden Sie längere Regeneinwirkung. Die Wasserdichtigkeit des Produkts ist IPX7, was leichten Regen verhindern kann, aber bitte setzen Sie es nicht für längere Zeit dem Regen aus. Wenn das Produkt nass wird oder ins Wasser fällt, trocknen Sie es bitte so schnell wie möglich.
- Vermeiden Sie eine längere Sonneneinstrahlung. Eine längere Sonneneinstrahlung kann zu Schäden an der Batterie führen und die Lebensdauer der Silikonknöpfe verkürzen.
- Wenn das Produkt eingeschaltet ist und in den Kopplungsmodus wechselt, blinkt das Weiß Licht 2 Minuten lang. Wenn innerhalb von 2 Minuten keine Verbindung zum Telefon hergestellt wird, wird das Produkt automatisch heruntergefahren.
- Wenn die Entfernung zwischen Telefon und Produkt 10 Meter überschreitet oder Bluetooth des Telefons ausgeschaltet ist, trennt das Produkt die Verbindung zum Telefon und wechselt erneut in den Kopplungsmodus. Wenn nach 2 Minuten keine Verbindung zu einem Gerät hergestellt wird , schaltet sich das Produkt automatisch ab. Wenn Sie es das nächste Mal verwenden, schalten Sie bitte zuerst das Bluetooth Ihres Telefons und dann das Produkt ein. Das Produkt stellt automatisch eine Verbindung zu Ihrem Telefon her.
- Wenn das Produkt 2 Stunden lang nicht verwendet wird, schaltet es sich automatisch ab.
- Der Kleber an der Unterseite des Produkts kann wiederverwendet werden. Sollte sich Staub oder Schmutz auf dem Kleber befinden, kann dieser abgewischt oder mit Wasser abgespült werden.

Fehlerbehebung

**Frage 1: Was soll ich tun, wenn ich das Produkt erhalte und es sich nicht einschalten lässt?**  
Antwort: Aufgrund eines längeren Transports kann es sein, dass der Akku des Produkts leer ist. Bitte laden Sie es 2 Stunden lang auf, bevor Sie versuchen, es einzuschalten.

**Frage 2: Das Produkt ist eingeschaltet, aber ich kann das Bluetooth „C10“ auf meinem Telefon nicht finden. Was soll ich tun?**  
Antwort: Bitte trennen Sie das Bluetooth anderer Geräte auf Ihrem Telefon. Schalten Sie dann Bluetooth auf Ihrem Telefon aus und wieder ein, um nach „C10“ zu suchen.

**Frage 3: Was soll ich tun, wenn ich nach längerem Gebrauch plötzlich keine Verbindung mehr zu meinem Telefon herstellen kann?**  
Antwort: Bitte löschen Sie das C10, das bereits mit dem Telefon verbunden ist; Schalten Sie das Bluetooth des Telefons aus und wieder ein. Schalten Sie das Produkt aus, dann wieder ein und verbinden Sie es erneut.

**Frage 4: Ich habe zuerst eine Verbindung zu Telefon 1 hergestellt. Was soll ich tun, wenn ich eine Verbindung zu einem anderen Telefon herstellen möchte?**  
Antwort: Das Produkt kann nur eine Verbindung zu einem Telefon herstellen und kann keine Verbindung zu zwei Telefonen gleichzeitig herstellen. Wenn Sie bereits ein Telefon verbunden haben und eine Verbindung zu einem anderen Telefon herstellen möchten, trennen Sie bitte die Bluetooth-Verbindung von Telefon 1 und schalten Sie dann die Bluetooth-Funktion des Telefons ein 2, suchen und verbinden Sie Bluetooth „C10“. Mit der Speicherfunktion stellt das Produkt automatisch eine Verbindung zum zuletzt verbundenen Telefon her.

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.