




E62 Plus Smartphone

User Manual

Android is a trademark of Google LLC

Welcome to Eudora. Eudora Mobile specializes in delivering high-quality, competitively priced Android™ smartphones and tablets globally, with a focus on the Affordable Connectivity Program and Lifetime market and a commitment to excellence in product quality and customer service. This guide will show you how to set up and use your phone.


Phone Features

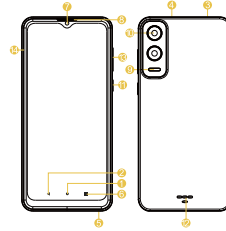


- 1 Home Button
- 2 Back Button
- 3 Headset Jack
- 4 USB/Charging Port
- 5 Microphone
- 6 Recent Apps Button
- 7 Front Camera
- 8 Earpiece
- 9 Flash
- 10 Back Camera
- 11 Power/Lock Key
- 12 Speaker
- 13 Volume Keys
- 14 SIM/Micro SD Card Slot

Insert SIM Card and MicroSD Card

Use the pin tool and insert it in the hole to release the tray. Place the SIM card with gold contacts facing down. Gently insert the SIM and SD card tray.

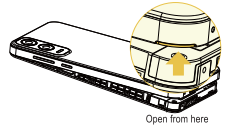


Open from here




SIM and TF card installation methods

Charge the Battery

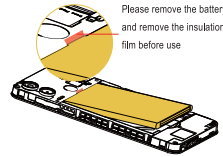


Before turning on your phone, charge it fully. Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug it into an outlet. Open the back lid and install the battery before charging the phone

WARNING:
Only use the approved chargers with your device. Incompatible chargers or tampering with the charger port could damage and void the warranty.



Turn your Phone ON/OFF

To turn ON, press and hold the Power/Lock button. To turn OFF, press and hold the Power/Lock button and follow the prompts.

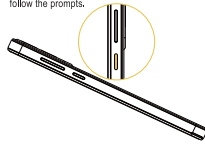

Use Onscreen Gestures


Use onscreen gestures to move around the screen, open, menus, select items, zoom in or out on web pages, and more.

Swipe – Swipe by quickly sliding your finger in any direction.
Drag – Touch and hold an item to move it to a new position.
Double Tap – Tap two times rapidly to zoom in or out on a web page or picture.
Zoom – Spread two fingers apart on a web page, map to zoom in a part. Pinch to Zoom out

Note: Please read this pamphlet carefully to make your phone in perfect condition. Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Lock&unlock Your Phone

To turn on your screen, press the Power/Lock button. Then swipe up on the screen to unlock it.

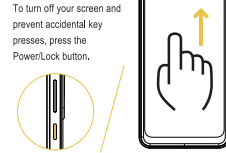

To turn off your screen and prevent accidental key presses, press the Power/Lock button.

Key Actions

Power Key

Press and hold to Power on /off, or Restart the phone. Press to wake up or turn off the display.

Home Key

Touch to return to the home screen. Touch and hold to open the Google Assistant for Android.

Back Key

Touch to go back to the previous screen.

Volume Key

Press or hold to turn the volume up or down.

Main Menu Operations

Call From the home screen, tap the Phone icon to call. Tap the Keypad icon to enter the number.
Text From the home screen, tap the message icon to start a message chat

Camera From the home screen, tap the camera icon to take photo. Pinch the screen to zoom in or pinch open the zoom out.

Open an App Simply touch an app to open it.
App Installation Selected applications are preinstalled on your phone. There are many more available in the Play Store

Uninstall an App Touch and hold an app icon. Then touch the App Info window that appears. Tap UNINSTALL. And then Tap OK or CANCEL.

Connection

WiFi Swipe Wi-Fi to the right to switch on WiFi. Once it's on, it will search for available WiFi networks automatically.

Bluetooth Swipe to the right to switch on Bluetooth. The phone will search automatically for nearby bluetooth devices.

Safety Declaration

This device complies with part 15 of the FCC Rules. Operation is subjected to the following two conditions: This device may not cause harmful interference, and (2) this device must accept any interference received, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Recycle

This product should not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

SAR Information

This device meets international guidelines for exposure to radio waves. This device has been tested and found to comply with the Specific Absorption Rate(SAR)/RF exposure requirements set by international agencies.

Troubleshooting

SIM and Signal Issues Check SIM for damage or misplacement; clean and reposition if needed. Move to areas with better signal; avoid using the phone during peak hours.

Power and Charging Charge the battery fully before use; use only the designated Eudora charger.


Calls and Connectivity If unable to dial, check call barring or SIM validity. For network issues, be sure to be in service area with a strong signal.

Battery Care Charge regularly, keeping levels between 20%-80% for optimal battery health. Avoid using the phone while charging and inspect charging equipment for damage.

For persistent issues, contact Eudora customer service via eudoramobile.com or visit an authorized service center.

Bienvenidos a Eudora. Nos dedicamos en Eudora Mobile a proveer smartphones y tabletas Android™ de alta calidad a precios accesibles en todo el mundo, poniendo énfasis en el Programa de Conectividad Económica y el mercado Lifetime, comprometiéndonos con la excelencia tanto en la calidad del producto como en la atención al cliente. Este manual te indicará cómo instalar y manejar tu teléfono.


Funcionalidades del Teléfono

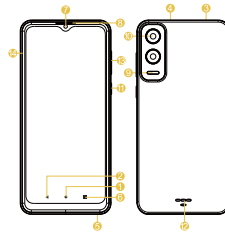


- 1 Botón Principal
- 2 Botón de Retorno
- 3 Conector de Auriculares
- 4 Puerto de Carga/USB
- 5 Microfono
- 6 Botón de Apps Recientes
- 7 Cámara Frontal
- 8 Auricular
- 9 Linterna
- 10 Cámara Posterior
- 11 Botón de Encendido/Bloqueo
- 12 Altavoz
- 13 Botones de Sonido
- 14 Slot de Tarjeta SIM/Micro SD

Instalación de la Tarjeta SIM y MicroSD

Emplea la herramienta puntiaguda e introdúcela en el agujero para sacar la bandeja. Sitúa la tarjeta SIM con los contactos dorados mirando hacia abajo. Introduce suavemente la bandeja de la tarjeta SIM y de la SD.

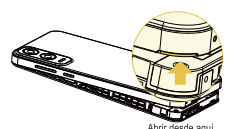


Abrir desde aquí



Tarjetas SIM y TF Método de instalación


Proceso de Carga de Batería

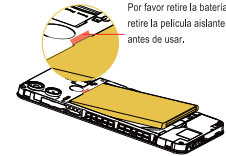

ADVERTENCIA:
Por favor retire la batería y retire la película aislante antes de usar.


Antes de activar tu teléfono, asegúrate de que esté completamente cargado. Introduce el extremo más pequeño del cable USB en el teléfono. Introduce el extremo más grande en el cargador y conéctalo a un enchufe. Levanta la tapa posterior e instala la batería antes de proceder a cargar el teléfono.

PRECAUCIÓN: Solo debes usar cargadores homologados con tu equipo. Cargadores incompatibles o la manipulación del puerto de carga podrían provocar daños e invalidar la garantía.



Encendido y Apagado del Teléfono

Para encenderlo, mantén presionado el botón de Encendido/Bloqueo. Para apagarlo, mantén presionado el botón de Encendido/Bloqueo y sigue las indicaciones.

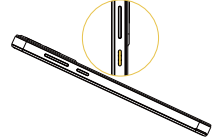

Gestos Táctiles en Pantalla

Emplea gestos táctiles en la pantalla para navegar, abrir menús, elegir opciones, hacer zoom en páginas web y otras acciones.

Deslizar – Desliza tu dedo rápidamente por la pantalla en cualquier sentido.
Arrastrar – Mantén pulsado un artículo para trasladarlo a otro sitio.
Doble Toque – Da dos toques rápidos para ampliar o disminuir en una web o fotografía.
Zoom – Extiende dos dedos en una página web o mapa para acercar. Pélizca para reducir el zoom.

Note: Se recomienda leer cuidadosamente este manual para conservar tu teléfono en condiciones ideales. La compañía se reserva el derecho de alterar este teléfono móvil sin aviso previo y posee la autoridad final para interpretar la funcionalidad de este dispositivo.

Bloqueo y Desbloqueo del Móvil

Para activar la pantalla, pulsa el botón de Encendido/Bloqueo. Después, desliza el dedo hacia arriba en la pantalla para desbloquear.

Para apagar la pantalla y evitar presiones de teclas accidentales, pulsa el botón de Encendido/Bloqueo.



Acciones Esenciales

Botón de Encendido Mantén pulsado para encender/apagar o reiniciar el dispositivo. Presiona para encender o apagar la pantalla.

Botón Principal Pulsa para retornar a la pantalla principal. Toca y sostén para activar el Asistente de Google para Android.

Botón de Retorno Pulsa para retornar a la pantalla previa.

Botón de Volumen Presiona o sostén para aumentar o disminuir el volumen.

Navegación del Menú Principal

Llamada En la pantalla de inicio, presiona el icono de Teléfono para hacer una llamada. Pulsa el icono de Teléfono para marcar el número.

Mensaje Desde la pantalla de inicio, presiona el icono de Mensajes para empezar un chat de mensajes.

Cámara En la pantalla de inicio, pulsa el icono de la cámara para sacar una foto. Pélizca la pantalla para hacer zoom o separa los dedos para alejar.

Abrir una Aplicación Toca simplemente una aplicación para abrirla.

Instalar Aplicaciones Varias aplicaciones elegidas ya están instaladas en tu teléfono. Encuentra muchas más en la Play Store.

Desinstalar una Aplicación Mantén presionada una aplicación. Después toca la ventana de Información de la App que surge. Toca en DESINSTALAR. Y luego selecciona OK o CANCELAR.

Conexiones

WiFi Desliza el Wi-Fi a la derecha para encender el WiFi. Al activarse, comenzará a buscar redes WiFi disponibles de forma automática.

Bluetooth Desliza a la derecha para activar el Bluetooth. El teléfono realizará una búsqueda automática de dispositivos bluetooth cercanos.

Normativa de Seguridad

Este aparato se adhiere a la parte 15 de las normativas de la FCC. Su uso está condicionado a dos requisitos: El aparato no debe provocar interferencias perjudiciales y (2) este aparato debe admitir cualquier interferencia que reciba, y cualquier cambio o modificación no aprobado expresamente por la entidad responsable de la conformidad podría invalidar el permiso del usuario para usar el equipo.

Procedimiento de Reciclaje

Este dispositivo no debería ser manejado como desecho doméstico, en lugar de eso, debe ser entregado al punto de recolección correspondiente para el reciclado de equipos eléctricos y electrónicos.

Datos de SAR

Este dispositivo se ajusta a las normativas internacionales de exposición a ondas de radio. Se ha comprobado que cumple con los límites de la Tasa de Absorción Específica (SAR) para la exposición a RF fijados por organismos internacionales.

Diagnóstico de Problemas

Cuestiones con la SIM y la Señal Comprueba si la SIM está dañada o mal colocada; si es necesario, límpiala y colócala correctamente. Dirígete a lugares con señal más fuerte; trata de no usar el móvil en horas de alta demanda.

Carga y Alimentación Carga la batería por completo antes de utilizarla; emplea únicamente el cargador específico de Eudora.

Llamadas y Conexión Si no puedes efectuar llamadas, revisa si hay restricciones de llamadas o si la SIM es válida. Para inconvenientes de red, confirma estar en un área con buena señal.
Mantenimiento de la Batería Carga de manera regular, manteniendo la batería entre el 20% y el 80% para su mejor estado. No uses el teléfono mientras se está cargando y revisa el cargador para detectar posibles daños. Si los problemas persisten, comunícalos con el servicio al cliente de Eudora mediante eudoramobile.com o visita algún centro de servicio autorizado.



FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Mobile Phone (FCC ID: 2BD9H-E62PLUS) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should be maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2BD9H-E62PLUS