



RADIO VINTAGE
MODEL: 4001973
USER MANUAL



Operation Explanation:

Specifications :

Output power: 80 Watts
Driver Units: 4" + 2.25" x 2
Frequency response: 40Hz-20KHz
S /N: ≥55dB
Distortion: ≤1%(1K, 1W)
Power supply: DC 5V $\equiv$ 2A
Dimensions: L279 x H176 x D152.4(mm)

Features:


- Full audio spectrum performances, ideal for your favourite entertainment like Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents:

Speaker Unit ----- 1 pc
User manual----- 1 pc
Remote control----- 1 pc
Audio input cord----- 1 pc
TYPE-C Cable ----- 1 pc

NO.1

How to use the remote control

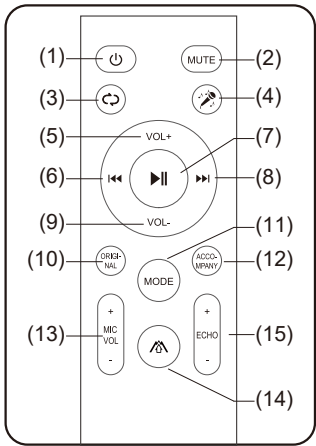

1. ψ
2. MUTE
3. $\text{C}\rightarrow$
4. M
5. VOL+
6. M
7. M
8. M
9. VOL-
10. ORIGI-NAL
11. MODE
12. ACCO-MPANY
13. + MIC VOL -
14. M
15. + ECHO -

1. ψ : Short press to power off. When powered on, long press to display battery power. (The speaker can only be powered on by pressing the power button at the top).
2. MUTE: Press the mute or cancel the mute.
3. $\text{C}\rightarrow$: Short press in USB mode, single, all, random, folder loop.
4. M : Microphone mute.
5. VOL+: Short press to increase volume, long press to continuously increase volume.
6. M : In Bluetooth and USB mode, short press to play the previous song. When playing in USB mode, long press fast rewind.
7. M : When playing in Bluetooth/USB mode, press to play/pause. When Bluetooth is connected, long press to disconnect and enter the search state.

NO.3

8. M : In Bluetooth/USB mode, short press to switch the next song. When playing in USB mode, long press fast forward.
9. VOL-: Short press to decrease volume, and long press to continuously decrease volume.
10. ORIGI-NAL: Short press to switch the original song.
11. MODE: Short press mode switch, the switch sequence is BT-USB-AUX cycle, the corresponding sound source playback will be displayed on the display screen. (U disk inserted into the automatic switch USB mode, not insert U disk can't switch the USB mode).
12. ACCO-MPANY: Short press to switch accompaniment.
13. + MIC VOL - : Decrease/increase the microphone volume. (ML00-ML16).
14. M : Short press indoor and outdoor sound mode to switch.
15. + ECHO - : Short press to adjust echo. (EC00-EC16).

Note: 15 minutes no play or no operation automatically shut down.




***Do NOT use USB port for charging external devices, this device can cause damage. Thankyou.

BT Pairing Method

When the device is powered on, press the “ MODE ” button on the remote control or press the “ BT /TWS ” button. The digital tube displays “ bt ” its lower right dot flashes, turn on the mobile Bluetooth device, search for “ 4001973”, complete the connection.After successful connection, there will be a prompt sound, showing “bt.” the lower right dot is extinguished.
* Note: When Bluetooth is connected, long press “ M ” to disconnect the connection and enter the search state.

NO.4

Front panel

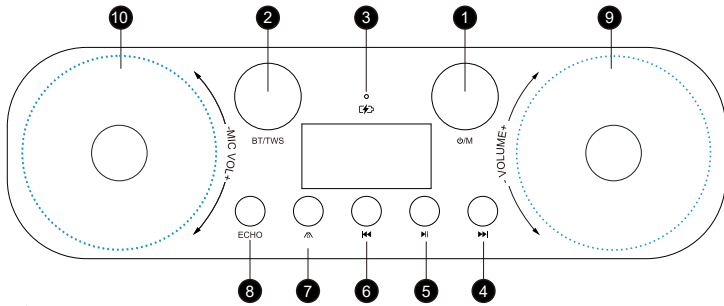

1. ϕ /M: Short press to power on, long press to power off. Short press when power on, mode switch. Press 2 times to display battery power when power on.
2. BT/TWS: Short press to select Bluetooth mode, long press TWS function to turn on or off.
3. $\text{C}\rightarrow$: Charge LED, the red light lights up when charging, and goes off when it's fully charged.
4. M : When playing in Bluetooth/USB mode, short press to play the next song. When playing in USB mode, long press fast forward.
5. M : When playing in Bluetooth/USB mode, press to play/pause. When Bluetooth is connected, long press to disconnect and enter the search state.
6. M : When playing in Bluetooth/USB mode, short press to play the previous song. When playing in USB mode, long press fast rewind.
7. M : Short press indoor and outdoor sound mode to switch.
8. ECHO: Press the echo button and adjust the increase or decrease of echo with the knob “-MIC VOL+”.
9. -VOLUME+: Decrease/increase the volume.
10. -MIC VOL+: Decrease/increase the microphone volume.


NO.2

Rear panel



1. Speaker power input (DC 5V $\equiv$ 2A, Type-C).
2. Forced shutdown (reset button).
3. USB port.
4. 3.5mm signal input.
5. Wired microphone socket.

When in use please pay attention to the following items :

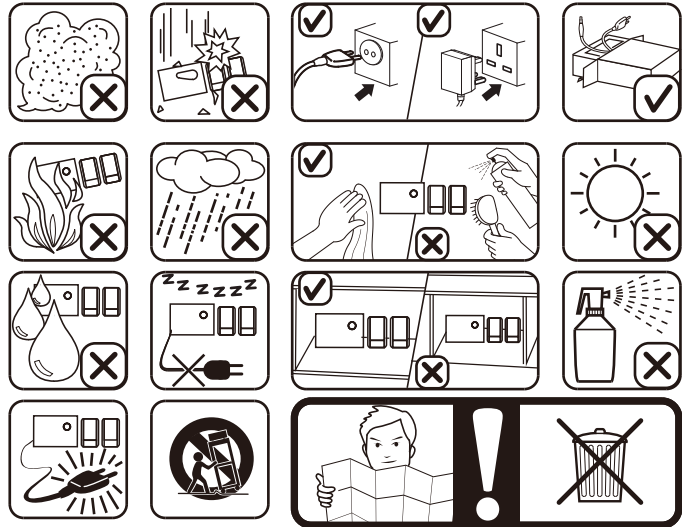

*if the remote is not working. Please replace the batteries and tryagain. Thank you

NO.5




RADIO RETRO

MODELO: 4001973

MANUAL DE USUARIO



Cómo usar el mando a distancia

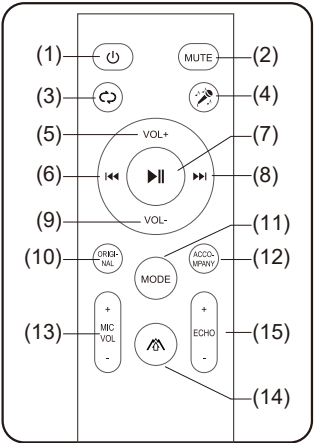

- 1. ❶
- 2. MUTE
- 3. ❸
- 4. ❹
- 5. VOL+
- 6. ❻
- 7. ❼
- 8. ❽
- 9. VOL-
- 10. ORIGINAL
- 11. MODE
- 12. ACCOMPANY
- 13. + MIC VOL -
- 14. ❿
- 15. + ECHO -

- 1. ❶: Presione brevemente para apagar. Cuando esté encendido, mantenga presionado para mostrar la energía de la batería. (El altavoz solo se puede encender presionando el botón de encendido en la parte superior).
- 2. MUTE: Presione el botón de silencio o cancele el silencio.
- 3. ❸: Presione brevemente en modo USB, única pista, todo, aleatorio, bucle de carpeta.
- 4. ❹: Silenciar el micrófono.
- 5. VOL+: presione brevemente para aumentar el volumen, presione prolongadamente para aumentar el volumen continuamente.
- 6. ❻: En el modo Bluetooth y USB, presione brevemente para reproducir la canción anterior. Cuando use en modo USB, mantenga presionado para el rebobinado rápido.
- 7. ❼: Cuando use en modo Bluetooth/USB, presione para reproducir/pausar. Cuando Bluetooth esté conectado, mantenga presionado para desconectarse e ingresar al estado de búsqueda.

Explicación de la operación:

Características técnicas:

- Potencia de salida: 80 vatios
- Unidades de controlador: 4" + 2.25" x 2
- Respuesta de frecuencia: 40Hz-20KHz
- Señal/N: ≥55dB
- Distorsión: ≤1% (1K, 1W)
- Voltaje de alimentación: DC 5V 2A
- Dimensiones: L279 x A176 x P152.4 (mm)

Características:

- Rendimiento de espectro de audio completo, ideal para entretenimiento de películas Mp3, Mp4, CD/DVD y reproducciones digitales.
- Materiales de calidad: Solo los mejores componentes para recrear el sonido fielmente a través de todas las frecuencias.

Contenidos del paquete:

- Unidad de altavoz ----- x 1
- Manual de usuario ----- x 1
- Mando a distancia ----- x 1
- Cable de entrada de audio----- x 1
- Cable TIPO-C ----- x 1

- 8. ❼: En el modo Bluetooth/USB, presione brevemente para cambiar la siguiente canción. Cuando use en modo USB, mantenga presionado para el avance rápido.
- 9. VOL-: Presione brevemente para disminuir el volumen y presione prolongadamente para disminuir el volumen continuamente.
- 10. ORIGINAL: Presione brevemente para cambiar la canción original.
- 11. MODE: Interruptor de modo de pulsación corta, la secuencia del selectores BT-USB-AUX, la reproducción de la fuente de sonido correspondiente se mostrará en la pantalla. (Al insertar una memoria USB se cambia automáticamente al modo USB, al no insertar una memoria USB no puede cambiar al modo USB).
- 12. ACCOMPANY: Presione brevemente para cambiar el acompañamiento.
- 13. + MIC VOL - : Disminuye/aumenta el volumen del micrófono. (ML00-ML16).
- 14. ❿: Presione brevemente para cambiar el modo de sonido interior y exterior.
- 15. + ECHO - : Presione brevemente para ajustar el eco. (CE00-CE16).

Nota: 15 minutos sin reproducción o sin operación se apaga automáticamente.




***NO utilice el puerto USB para cargar sus dispositivos externos, estos dispositivos pueden causar daños. Gracias.

Método de emparejamiento BT


Cuando el dispositivo esté encendido, presione el botón "MODE" en el control remoto o presione el botón "BT/TWS ". El display digital muestra "bt." el punto inferior derecho parpadea, encienda el dispositivo móvil Bluetooth, busque "4001973", complete la conexión. Después de una conexión exitosa, habrá un sonido rápido, que muestra "bt." El punto inferior derecho se extingue.
* Nota: Cuando Bluetooth está conectado, mantenga presionado " ❼ " para desconectar la conexión e ingresar al estado de búsqueda.

Panel frontal

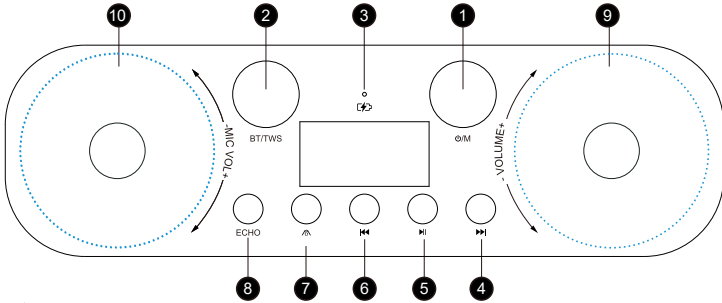


- 1. ❶/M: Presione brevemente para encender, presione prolongadamente para apagar. Encendido, presione brevemente para cambiar de modo. Presione 2 veces para mostrar la energía de la batería.
- 2. BT/TWS: presione brevemente para seleccionar el modo Bluetooth, mantenga presionada encender o apagar la función TWS.
- 3. ❸: LED de carga, la luz roja se enciende cuando se carga y se apaga cuando está completamente cargada.
- 4. ❼: Cuando reproduzca en modo Bluetooth / USB, presione brevemente para reproducir la siguiente canción. Cuando use en modo USB, mantenga presionado para el avance rápido.
- 5. ❼: Cuando use en modo Bluetooth/USB, presione para reproducir/pausar. Cuando esté conectado el Bluetooth, mantenga presionado para desconectarse e ingresar al estado de búsqueda.
- 6. ❽: Cuando se reproduzca en modo Bluetooth/USB, presione brevemente para reproducir la canción anterior. Cuando use en modo USB, mantenga presionado el rebobinado rápido.
- 7. ❿: presione brevemente para cambiar el modo de sonido interior y exterior.
- 8. ECHO: Presione el botón de eco y ajuste el aumento o disminución del eco con la perilla "-MIC VOL+".
- 9. -VOLUME+: Disminuye/aumenta el volumen.
- 10. -MIC VOL+: Disminuye/aumenta el volumen del micrófono.

Panel posterior

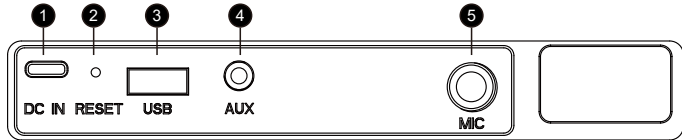

- 1. Entrada de alimentación del altavoz (CC 5V 2A, Tipo-C).
- 2. Apagado forzado (botón de reinicio).
- 3. Puerto USB.
- 4. Entrada de señal de 3,5 mm.
- 5. Toma de micrófono con cable.

Cuando esté en uso, preste atención a los siguientes elementos:

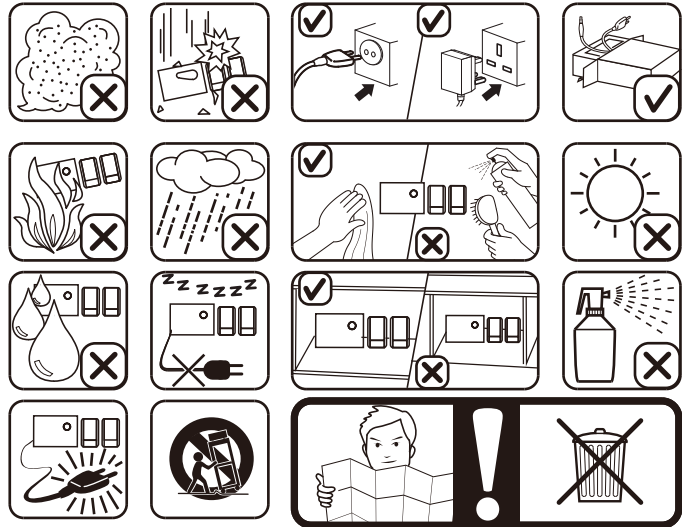

*Si el control remoto no funciona. Sustituya las pilas e inténtelo de nuevo. Gracias

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with **minimum distance 20cm** between the radiator and your body.