



Professionally Test And Recommend Each Toy For You!

- 1 * WARRANTY & AUTHENTICATION
- 2 * BRAND STORY
- 3 * AFTER SALES SERVICE
- 4 * HOW TO USE



* User Manual
Thanks for using our products!
Please read and keep the user manual carefully.



WARRANTY & AUTHENTICATION

⚠ **Vitality, Act Now!**

The default warranty period for the product is 6 months.

Scan the QR code below to

Extend the warranty period to 2 years

Verify the authenticity of the product

Exclusive customer service



* Or visit the "Warranty" menu on the official website to complete your product registration.

* Note: Warranty service is valid only under normal use of the product.

-1-



BRAND STORY

UTIMI

Professional testing and recommendation of each toy

All self-developed products are selected through online screening. Also, tested and recommended by professional players, and judged by the platform as excellent products before they hit the shelves.

Choose Utimi, no longer bad mood by buying inferior products.

Evolution

In 2014, UTIMI was founded.

In 2016, UTIMI became the largest seller in the Sexual Wellness category on Amazon.

In 2018, UTIMI has 100+ patents for adult products.

Over the years, we found a large number of problems with adult products such as short life span, poor use, no privacy packaging, and use of materials that are harmful to the body. To solve these problems, we carried out a comprehensive strategic upgrade and determined to allow users to easily find the right and reassuring products.

Pleasure Products

Utimi provides "high-quality, safe, creative, effective, cost-effective" erotic products, as well as one-on-one expert customer service.

-2-

Each product is selected and developed from the real needs of users, careful analysis and research on the pain points of similar products. We focus on product rationality and how to use it longer and safer.

Each product is tested by professional players around the world, and receives their unanimous recommendation, and then is judged by the platform to be excellent before it goes on sale.

For each order, we invite users to participate in a satisfaction survey. The number of participants reaches more than 50.

Products with a rating or a recommendation ratio separately lower than 4.3 or 80% will be permanently banned from sale. It's our priority to collect users' experience.

Interactions

Freedom, equality, respect, sharing, tolerance!

Sex is a fundamental human need, one that transcends gender, age, color, class, and culture, shameless and unyielding one with no obscurity and no relocation, a spiritual life that humans enjoy equally!

Utimi unites a group of certified professional sex educators, sexology experts, sex toy connoisseurs, and also brings together a group of men and women, LGBTQ, SM players who seek excitement and love to explore and share. You can easily communicate and share with us, and together we can create a very inclusive spiritual paradise.



OUR SLOGAN:

Professionally Test And Recommend Each Toy For You!

-3-



AFTER-SALES SERVICE

If you are not satisfied with the product please contact us first, we will try our best to solve your problem as soon as possible.

Other questions, such as: warranty and authentication, instructions for use, product advice, product representation, etc.

Please contact us through the following ways.



✉ support@utimi.com
☎ +1 5323758507
(GMT+8.09:00 am-06:00 pm Workday)
🌐 <http://www.facebook.com/Utimitoys>
☎ +1 5323758507
🌐 <http://www.utimi.com>

-4-



support@utimi.com ✉
+1 5323758507 ☎
(GMT+8. 9:00 pm - 06:00 am Workday)
<https://www.facebook.com/Utimitoys> 🌐
+1 5323758507 ☎
<https://www.utimi.com/> 🌐



EN

EN

SPECIFICATION

Name: Lesbian wear dildo SM sexy dildo OEM customization Lesbian wear vibrating dildo Female masturbator underwear female wear dildo Abstract dildo Rose red dildo pink pants made in China

Material: silicone+ABS+PU+zinc alloy
Dildos body size: 27*24cm
Diameter of penis part: 3.7cm
Insertable size: 16.5cm
Clitoral length: 14cm, width: 4cm, height 3cm
Waist circumference of wearing pants: 68-115cm (double belt adjustment, short belt 30cm, long belt 60cm)
Thigh and leg circumference: 74-90cm (adjustable to 16cm size)
Weight: 495g
Battery capacity: 500mAh
Charging method: magnetic suction
Charging time: 120 minutes
Usage time: 60 minutes
Maximum noise:<50db
Waterproof level: ipx7
Function: vibration
Function description
10 frequency G point + 10 frequency C point
Accessories list: 1pcs* product wearing PU leather pants*1
1pcs* instruction manual 1pcs* charging cable remote control*1
storage bag*1

-5-

INSTRUCTION OF BUTTON

Charging time: about 2H Discharging time: about 1H
Power off while charging, cannot power on while charging

LED description


1. The LED brightness changes synchronously with the vibration frequency mode.

2. Charging: LED flashes

3. Fully charged: white color stays on.

4. Low voltage reminder:

When the battery power is lower than 3.4V, the product will flash a low-battery alarm and the LED will flash 0.3s_ON/0.3s_OFF until it shuts down. When entering the low battery alarm flashing state, the product can work normally.

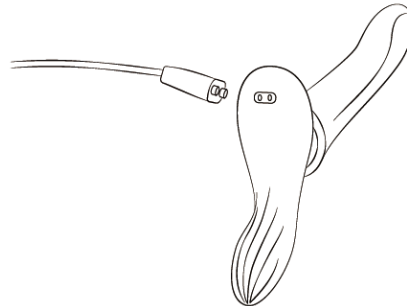

-6-

INSTRUCTION OF BUTTON



Function description
10 frequency G point + 10 frequency C point

Button description

Turn on: Press and hold for 2s to turn on the phone, enter the first mode of standby, and the LED will flash.

Frequency changing: Short press once to cycle through one level of frequency changing (a total of 10 modes).

Shut down: Press and hold for 2 seconds to shut down, the LED will turn off.

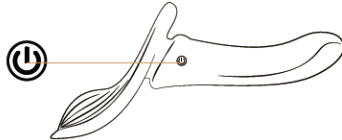


Key Description

A key: Short press to switch the G-spot frequency when the product is in standby mode. Long press to pause the G-spot vibration.

B key: Short press to switch the frequency of point C when the product is in standby mode. Press and hold to pause the vibration of point C.

-7-

HOW TO USE

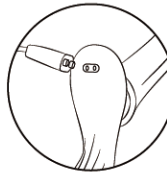

1. Open the box, read the instruction manual and fully charge the product before use.



2. Take out the penis and leather pants, open the crotch button of the leather pants, with the clitoris vibrating downward, first insert the upper hard rubber part into the PU leather, then insert the clitoral vibrating part into the hole, press the button, and then use the corresponding belt according to the waist size. Once assembled and put on, the thigh section can be adjusted to fit your actual leg circumference.



3. Dismantle and clean after use.

-8-

MATTERS NEEDING ATTENTION

Plug the USB charging cable into the charging port of the product.

Plug the USB charging cable into an available PC USB port or AC adapter.

When connected correctly, the indicator light flashes every few seconds.

When the device is fully charged, the indicator light stays on.

Before connecting, make sure your computer's USB port is connected to the product.

Please fully charge this product before using it for the first time or before not using it for a long time.

To ensure the quality of the battery, please fully charge it at least every six months.

Do not use the USB charging cable that is not included. The included USB charging cable is not waterproof.

Please be careful not to put it into water to avoid other accidents such as electric shock or burns.

-9-

CLEANING & STORAGE

>> After use

To wash directly after use, please pat dry with a dry lint-free linen or towel after dry cleaning.

If there is oil or dirt on the product, wipe it with a soft cloth and clean it with mild soap or a neutral detergent.

The product body is flush-proof and can be washed underwater. Do not rinse with hot water and do not boil.

Do not use benzene, alcohol and other solvents to clean to avoid product deformation and discoloration.

>> Storage



Avoid the sun



Away from children



Ventilated place



Fully charge in 6 months

⚠ It is strictly prohibited to immerse this product in water when charging to avoid electric shock, short circuit, fire and other accidents.

⚠ Please do not store this product in places exposed to sunlight, high temperature or high humidity. This can cause discoloration, cracking, heating, and even cause a fire.

-10-

TROUBLESHOOTING

The product is not working properly/the telescopic or rotating function is weak

After pressing the power button, did you hold the power button for 2-3 seconds?

Is he fully charged?

Please release the power until the product cannot be turned on, and then fully charge it. If it doesn't work after several attempts, the battery may be damaged.

This product cannot be charged. (The indicator light does not flash)

Is the charging cable disconnected from the adopter or charging port?

When using the computer USB port, if your computer enters standby mode, the product will not charge. Please check if your computer is in standby mode.

There may be dust and stains on the charging port. Please wipe it with a dry cloth or cotton swab when charging again.

Is the product fully charged? When the product is fully charged, the indicator light will stay on.

Charging will not be completed. (The indicator light does not go out)

Dust and stains may be adsorbed on the charging port. Please wipe it with a dry cloth or cotton swab first, and then charge

If the indicator light is still on after 180 minutes of charging, it may be caused by poor contact between the charging contacts.

SAFETY & WARNINGS

If you are using a medical device/undergoing treatment/pregnant, please consult your doctor before use

If you feel any discomfort while using it, please stop using it and consult a doctor or pharmacist

When you find that the product is working abnormally, please stop using it immediately and turn off the power to avoid personal injury or accidents.

Please keep it out of the reach of children to prevent them from swallowing product parts or accessories

Please use the provided USB charging cable to charge and connect it correctly, otherwise it may cause overheating or burnout.

To avoid electric shock or burns, keep your hands dry when unplugging the charging cable.

Please turn off the power before charging, otherwise it may cause malfunction, heat or even fire.

Please turn off the power before cleaning, otherwise it may cause malfunction, overheating or burning out.

When unplugging the included USB charging cable, please hold the connecting part and do not stretch the cable, otherwise it may accelerate the aging of the cable, resulting in electric shock, short circuit or even fire.

Please unplug the USB charging cable when charging is not needed, otherwise it may cause a short circuit due to dust and moisture, resulting in leakage or fire accidents.

Please clean the USB charging cable connector regularly to avoid dust causing short circuit or fire.

SAFETY & WARNINGS

Please don't use it for profit or trample on it.

If you feel uncomfortable, please discontinue use

Do not use it when you are extremely tired or drunk to avoid causing other discomfort. Do not charge, use or store in extreme temperatures, as this may cause burns or rupture.

Do not pull or remove the surface silicone with force to avoid damaging the product.

Do not bend or pull the included USB charging cable excessively, or wrap the charging cable around the product for storage as this may damage the charging cable.

Do not use when the included USB charging cable is damaged as it may cause electric shock, short circuit or fire.

Do not share this product with multiple people to avoid spreading sexually transmitted diseases.

SPEZIFIKATION

Name: Lesbischer Wear-Dildo, SM-Sexy-Dildo, OEM-Anpassung, Lesbischer Wear-Vibrationsdildo, weiblicher Masturbator, Unterwäsche, weiblicher Wear-Dildo, abstrakter Dildo, rosaroter Dildo, rosa Hose
in China hergestellt

Material: Silikon + ABS + PU + Zinklegierung

Körpergröße des Dildos: 27 x 24 cm

Durchmesser des Penisteils: 3,7 cm

Einführbare Größe: 16,5 cm

Klitorislänge: 14 cm, Breite: 4 cm, Höhe 3 cm

Taillenumfang der Hose: 68-115 cm (doppelte Gürtelverstellung, kurzer Gürtel 30 cm, langer Gürtel 60 cm)

Oberschenkel- und Beinumfang: 74-90 cm (verstellbar auf 16 cm Größe)

Gewicht: 495g

Batteriekapazität: 500 mAh

Lademethode: magnetische Absaugung

Ladezeit: 120 Minuten

Nutzungsdauer: 60 Minuten

Maximaler Lärm: <50 dB

Wasserdichtigkeit: IPX7

Funktion: Vibration

Bedienungsanleitung

10 Frequenz-G-Punkt + 10 Frequenz-C-Punkt

Zubehörliste: 1 Stück* Produkt mit PU-Lederhose*1 1 Stück*

Bedienungsanleitung 1 Stück* Ladekabel-Fernbedienung*1


Aufbewahrungstasche*1

ANLEITUNG ZUM BUTTON

Ladezeit: ca. 2 Stunden. Entladezeit: ca. 1 Stunde
Während des Ladevorgangs ausschalten, während des Ladevorgangs nicht einschalten

LED-Beschreibung

1. Die LED-Helligkeit ändert sich synchron mit dem Vibrationsfrequenzmodus.
2. Laden: LED blinkt
3. Vollständig aufgeladen: Die weiße Farbe bleibt eingeschaltet.
4. Unterspannungserinnerung:
Wenn die Batterieleistung weniger als 3,4 V beträgt, gibt das Produkt einen Alarm bei niedrigem Batteriestand aus und die LED blinkt 0,3 s AN/0,3 s AUS, bis es herunterfährt. Wenn der Alarm bei niedrigem Batteriestand blinkt, kann das Produkt normal funktionieren.

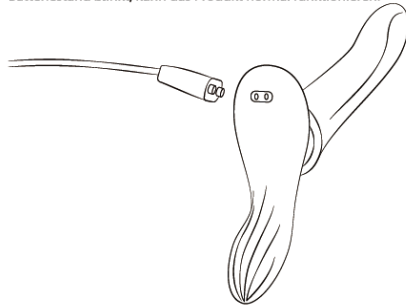

-15-

ANLEITUNG ZUM BUTTON

Bedienungsanleitung


10 Frequenz-G-Punkt + 10 Frequenz-C-Punkt

Schaltflächenbeschreibung

Einschalten: Halten Sie die Taste 2 Sekunden lang gedrückt, um das Telefon einzuschalten, in den ersten Standby-Modus zu wechseln und die LED blinkt.

Frequenzänderung: Einmal kurz drücken, um durch eine Stufe der Frequenzänderung zu blättern (insgesamt 10 Modi).


Herunterfahren: Zum Herunterfahren 2 Sekunden lang gedrückt halten, die LED erlischt.

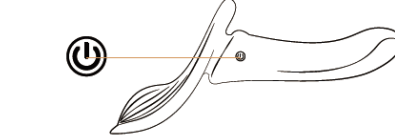

Schlüsselbeschreibung


A-Taste: Kurz drücken, um die G-Punkt-Frequenz umzuschalten, wenn sich das Produkt im Standby-Modus befindet. Lange drücken, um die G-Punkt-Vibration anzuhalten.

B-Taste: Kurz drücken, um die Frequenz von Punkt C umzuschalten, wenn sich das Produkt im Standby-Modus befindet. Halten Sie gedrückt, um die Vibration von Punkt C anzuhalten.



-16-

WIE BENUTZT MAN

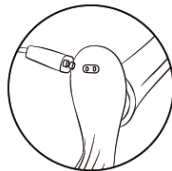

1. Öffnen Sie die Verpackung, lesen Sie die Bedienungsanleitung und laden Sie das Produkt vor der Verwendung vollständig auf.



2. Nehmen Sie den Penis und die Lederhose heraus, öffnen Sie den Schrittknopf der Lederhose, wobei die Klitoris nach unten vibriert, führen Sie zuerst den oberen Hartgummitteil in das PU-Leder ein, führen Sie dann den vibrierenden Teil der Klitoris in das Loch ein und drücken Sie den Knopf, und verwenden Sie dann den entsprechenden Gürtel entsprechend der Taillengröße. Nach dem Zusammenbau und Anlegen kann das Oberschenkelteil an Ihren tatsächlichen Beinumfang angepasst werden.



3. Nach Gebrauch zerlegen und reinigen

-17-

ANGELEGENHEITEN

Stecken Sie das USB-Ladekabel in den Ladeanschluss des Produkts.

Stecken Sie das USB-Ladekabel in einen verfügbaren USB-Anschluss oder ein Netzteil des PCs.

Bei korrektem Anschluss blinkt die Kontrollleuchte alle paar Sekunden.

Wenn das Gerät vollständig aufgeladen ist, bleibt die Kontrollleuchte an.

Stellen Sie vor dem Anschließen sicher, dass der USB-Anschluss Ihres Computers mit dem Produkt verbunden ist.

Bitte laden Sie dieses Produkt vollständig auf, bevor Sie es zum ersten Mal verwenden oder bevor Sie es längere Zeit nicht verwenden.

Um die Qualität des Akkus sicherzustellen, laden Sie ihn bitte mindestens alle sechs Monate vollständig auf.

Verwenden Sie kein USB-Ladekabel, das nicht im Lieferumfang enthalten ist. Das mitgelieferte USB-Ladekabel ist nicht wasserdicht.

Bitte achten Sie darauf, es nicht ins Wasser zu legen, um andere Unfälle wie Stromschläge oder Verbrennungen zu vermeiden.

-18-

REINIGUNG & LAGERUNG

>> Nach Gebrauch

Um es direkt nach dem Gebrauch zu waschen, tupfen Sie es nach der chemischen Reinigung bitte mit einem trockenen, fusselreifen Leinentuch oder Handtuch trocken.

Wenn sich Öl oder Schmutz auf dem Produkt befindet, wischen Sie es mit einem weichen Tuch ab und reinigen Sie es mit milder Seife oder einem neutralen Reinigungsmittel.

Der Produktkörper ist spülwasserfest und kann unter Wasser gewaschen werden.

Nicht mit heißem Wasser abspülen und nicht kochen. Verwenden Sie zum Reinigen kein Benzol, Alkohol oder andere Lösungsmittel, um Verformungen und Verfärbungen des Produkts zu vermeiden.

>> Lagerung



Vermeiden Sie die Sonne



Weg von Kindern



Beatmter Ort



In 6 Monaten vollständig aufladen

⚠ Es ist strengstens verboten, dieses Produkt während des Ladevorgangs in Wasser zu tauchen, um Stromschläge, Kurzschlüsse, Brände und andere Unfälle zu vermeiden.

⚠ Bitte lagern Sie dieses Produkt nicht an Orten, die Sonnenlicht, hohen Temperaturen oder hoher Luftfeuchtigkeit ausgesetzt sind. Dies kann zu Verfärbungen, Rissen, Erwärmung und sogar zu einem Brand führen.

FEHLERBEHEBUNG

Das Produkt funktioniert nicht richtig/die Teleskop- oder Drehfunktion ist schwach

Haben Sie nach dem Drücken des Netzschalters den Netzschalter 2-3 Sekunden lang gedrückt gehalten?

Ist er voll aufgeladen?

Bitte unterbrechen Sie die Stromversorgung, bis sich das Produkt nicht mehr einschalten lässt, und laden Sie es dann vollständig auf.

Funktioniert es auch nach mehreren Versuchen nicht, ist

möglicherweise der Akku beschädigt.

Dieses Produkt kann nicht aufgeladen werden. (Die Kontrollleuchte blinkt nicht)

„Ist das Ladekabel vom Adapter oder Ladeanschluss getrennt?

Wenn Ihr Computer über den USB-Anschluss des Computers in den Standby-Modus wechselt, wird das Produkt nicht aufgeladen. Bitte

überprüfen Sie, ob sich Ihr Computer im Standby-Modus befindet.

Möglicherweise befinden sich Staub und Flecken auf dem Ladeanschluss. Bitte wischen Sie ihn beim erneuten Laden mit einem trockenen Tuch oder Wattestäbchen ab.

Ist das Produkt vollständig aufgeladen? Wenn das Produkt vollständig aufgeladen ist, bleibt die Kontrollleuchte an.“

Der Ladevorgang wird nicht abgeschlossen. (Die Kontrollleuchte erlischt nicht)

Am Ladeanschluss können sich Staub und Flecken ansammeln. Bitte wischen Sie ihn zuerst mit einem trockenen Tuch oder Wattestäbchen ab und laden Sie ihn dann auf.“

Wenn die Kontrollleuchte nach 180 Minuten Ladezeit immer noch leuchtet, kann dies an einem schlechten Kontakt zwischen den Ladekontakten liegen.

SICHERHEIT & WARNUNGEN

„Wenn Sie ein Medizinprodukt verwenden, sich in Behandlung befinden oder schwanger sind, konsultieren Sie bitte vor der Anwendung Ihren Arzt

Wenn Sie während der Anwendung Beschwerden verspüren, brechen Sie die Anwendung bitte ab und konsultieren Sie einen Arzt oder Apotheker

Wenn Sie feststellen, dass das Produkt nicht ordnungsgemäß funktioniert, beenden Sie bitte sofort die Verwendung und schalten Sie es aus, um Verletzungen oder Unfälle zu vermeiden.

Bitte bewahren Sie es außerhalb der Reichweite von Kindern auf, um zu verhindern, dass diese Produktteile oder Zubehör verschlucken

Bitte verwenden Sie zum Laden das mitgelieferte USB-Ladekabel und schließen Sie es richtig an, da es sonst zu Überhitzung oder Durchbrennen kommen kann.

Um Stromschläge oder Verbrennungen zu vermeiden, halten Sie Ihre Hände trocken, wenn Sie das Ladekabel abziehen.

Bitte schalten Sie den Strom vor dem Laden aus, da es sonst zu Fehlfunktionen, Hitze oder sogar einem Brand kommen kann.

Bitte schalten Sie vor der Reinigung den Strom aus, da es sonst zu Fehlfunktionen, Überhitzung oder Durchbrennen kommen kann.

Halten Sie beim Abziehen des mitgelieferten USB-Ladekabels bitte das Verbindungsstück fest und dehnen Sie das Kabel nicht, da es sonst zu einer beschleunigten Alterung des Kabels kommen kann, was zu Stromschlägen, Kurzschlüssen oder sogar Bränden führen kann.

Bitte ziehen Sie das USB-Ladekabel ab, wenn kein Ladevorgang erforderlich ist.

SICHERHEIT & WARNUNGEN

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.