



## FlashFinder Key Keeper



Works with  
**Apple Find My**

**FOOTNOTE™**  
accessories co.

FTNT001

128克双铜 4色印刷  
60x75mm 装钉

# WARNING

Please do not use this tracker on items other than your personal belongings. Contains small parts and magnets.



## What's In The Box

1x FlashFinder Key Keeper  
1x Quick Start Guide

## Key Features

Apple Find My network  
LED Flashlight (4 modes)  
LED Alarm Light (5 modes)  
USB-C Rechargeable  
IPX5 Water Resistant (Not Waterproof)  
Built-in Magnet Mount

## Illustrations

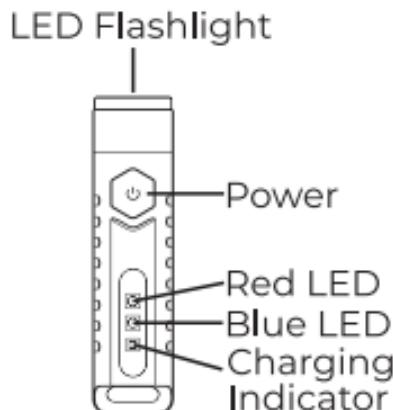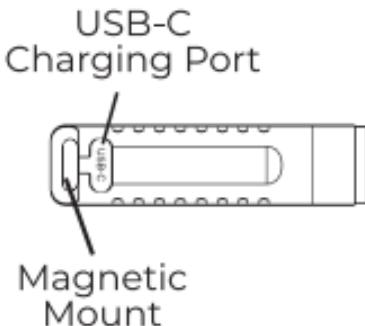

# Specifications

Battery Capacity: 300 mAh

Charging Time: 1.5 Hours

Flashlight Battery Life: 1-6 Hours

Water Resistant Rating: IPX5

Compatible App: Find My

## Low Battery Warnings

When the battery is low, the flashlight and alarm light will be limited to conserve power for Find My locating, and the alarm light will flash periodically—please charge immediately to ensure proper functionality.


## Device Care

- 1, Keep the unit dry and avoid extreme temperatures.
- 2, Keep the unit away from children and medical devices that can be affected by magnets.
- 3, Use non-abrasive cleaners and do not disassemble the unit.  
Do not dispose of the unit in fire.

# Turning On For The First Time


Short press the Power button once to hear a chime, indicating it is powered on and in pairing status.


## Add It To Your Find My App

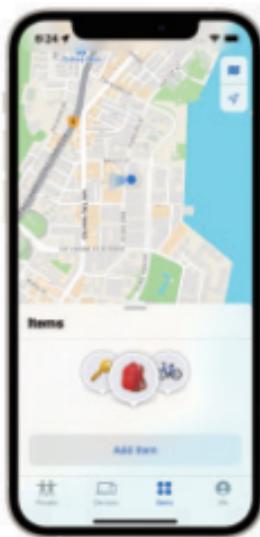

Open “Find My” app on your iPhone or other supported devices.


Select “Items” Tab.  
Then choose “Add Other Item”.


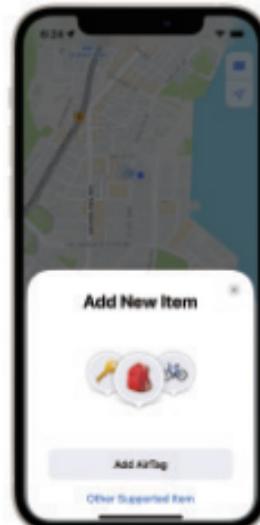


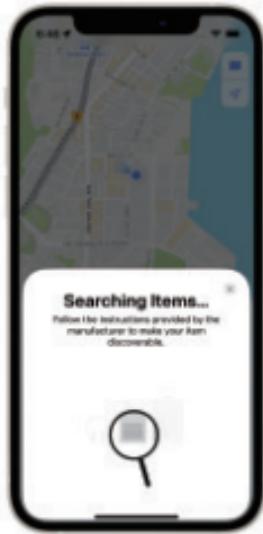

During searching, ensure your FlashFinder is turned on and next to your iPhone.


FlashFinder Keychain Tracker should popup automatically within seconds.

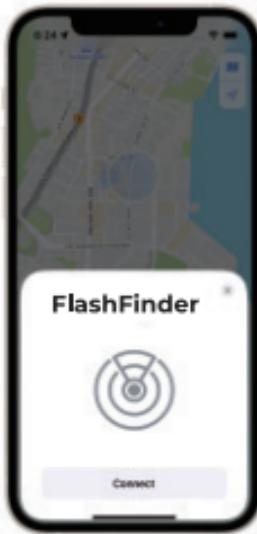

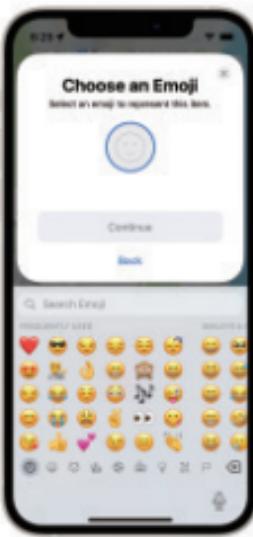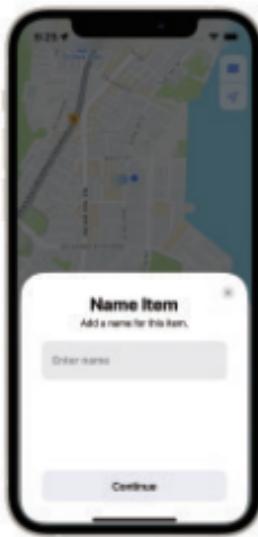

Follow the prompts to name it.

Tap on “Finish” to finalize the setup process.

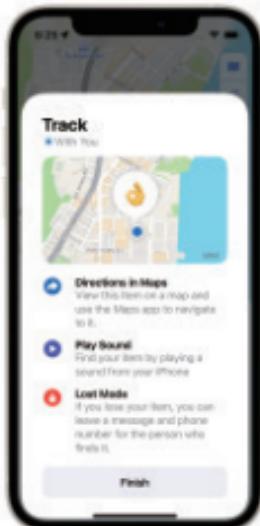

# Use It As A Flashlight (Surprise!)

## Flashlight Mode

Short press Power button to turn on, then short press to cycle through 4 different modes.



Standard



Bright



Eco



Strobe



Off

## Alarm Light Mode

Long press Power button to turn on, then short press to cycle through 6 different modes.

Long press Power button again to turn off.



Red



Red Strobe



Blue



Blue Strobe



Siren

## SOS Signal Mode

The last mode in Alarm Light mode is the SOS light. In this mode, the red light will flash rapidly 3 times, followed by 3 long flashes, and end with 3 short flashes. Note: Not a substitute for professional emergency services or equipment. Use at your own risk.



# About The Find My App

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, iPod touch, or Mac.

## Find My Basic Functions

### See the location of an item

Tap Items at the bottom of the screen, then tap the item you want to locate.

**If the item can be located:** It appears on the map so you can see where it is. The location and timestamp appear below the item's name.

**If the item can't be located:** You see where and when it was last located.

### Play a sound

If the item is nearby, you can play a sound on it to help you find it.

- 1, Tap Items at the bottom of the screen, then tap the item you want to play a sound on.
- 2, Tap Play Sound.
- 3, To stop playing the sound before it ends automatically, tap Stop Sound.

## Turn on Lost Mode for an item

- 1, To mark an item as lost, you need to turn on Lost Mode.
- 2, Tap Items at the bottom of the screen, then tap the name of the lost item.
- 3, Below Lost Mode, tap Enable.
- 4, Follow the onscreen instructions to enter a phone number where you can be reached. To enter an email address instead, tap “Use an email address.”
- 5, Tap Activate.

**Important:** Make sure you allow notifications for the Find My app. See Change notification settings on iPhone.

## What happens when you mark an item as lost?

You can add a message saying that the item is lost and include your phone number or email address. If someone else finds your item, they can use a supported device to see a website with the Lost Mode message.

**When "Lost Mode" is enabled, do not remove the item in the app. Your FlashFinder will be locked and cannot be paired with a new device.**

## Factory Reset

- 1, Press the Power button rapidly four times, then hold it on the fifth press until you hear a chime.
- 2, This reset allows the device to re-enter pairing mode.
- 3, Unpair from the previous connected Apple ID so it can paired with a new one.

## Preventing Unauthorized Tracking

If someone else's device gets mixed with your belongings and tracks you over time, you will be notified in two ways:

- 1, If you have an iPhone, iPad with iOS or iPadOS 14.5 or later, you'll receive alerts on your Apple device.
- 2, If an unknown device travels with you, your iPhone will alert you.

# Compatibility

Compatible with Apple® devices only

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

# Legal and Compliances

## Disclaimer

Futura Gear Inc. is not responsible for any lost or stolen items or related data loss associated with this tracker. Use responsibly and in accordance with all applicable laws.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

## FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.

2. Increase the separation between the equipment and receiver.
3. If the equipment is connected to an outlet, connect it to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this product not authorized by FuturaGear could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

FCC ID: 2BHMT-FTNT001

### **ISED Canada Compliance**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 32793-FTNT001

## **1-Year Limited Warranty**

Footnote Accessories Co., a brand of Futura Gear Inc., provides a one-year limited warranty for its products, covering defects in materials and workmanship under normal use. This warranty includes free repair or replacement of defective products, but excludes damage from misuse, unauthorized modifications, or normal wear and tear. To obtain service, contact Futura Gear Customer Service with proof of purchase. The warranty is governed by local laws and offers specific legal rights, which may vary by region. For more details, please refer to the full warranty terms on our website: [FootnoteAccessories.com](http://FootnoteAccessories.com) or contact email [service@futuragear.com](mailto:service@futuragear.com).

© 2024 Futura Gear Inc. FTNT, the illustrated FTNT logo, and Footnote Accessories Co. are trademarks of Futura Gear Inc. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. All other trademarks are the property of their respective owners. All rights reserved.



## FlashFinder Garde-clés



Works with

**Apple Find My**

**FOOTNOTE™**  
accessories co.

FTNT001

# AVERTISSEMENT

Veuillez ne pas utiliser ce tracker sur des objets autres que vos effets personnels. Contient de petites pièces et des aimants.

## Contenu de la boîte


1x Garde-clés FlashFinder  
1x Guide de démarrage rapide

## Fonctionnalités du porte-clés

Réseau Apple Find My  
Lampe de poche LED (4 modes)  
Lumière d'alarme LED (5 modes)  
Rechargeable par USB-C  
Résistant à l'eau IPX5 (Non étanche)  
Support magnétique intégré


## Illustrations

Port de charge  
USB-C

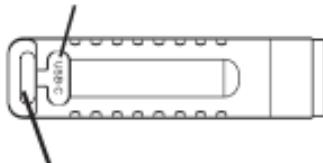

Support  
magnétique

Lampe de poche LED

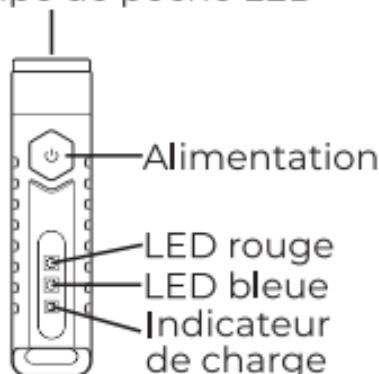

## Spécifications

Capacité de la batterie : 300 mAh

Temps de charge : 1,5 heures

Autonomie de la lampe de poche : 1-6 heures

Indice de résistance à l'eau : IPX5

Application de suivi compatible : Find My

## Avertissements de batterie faible

Lorsque la batterie est faible, la lampe de poche et la lumière d'alarme seront limitées pour conserver l'énergie pour le suivi Find My, et la lumière d'alarme clignotera périodiquement. Veuillez charger immédiatement pour assurer le bon fonctionnement.


## Entretien de l'appareil

1. Gardez l'unité au sec et évitez les températures extrêmes.
2. Gardez l'unité hors de la portée des enfants et des dispositifs médicaux affectés par les aimants.
3. Utilisez des nettoyants non abrasifs et ne démontez pas l'unité.
4. Ne jetez pas l'unité au feu.

## Allumer pour la première fois


Appuyez brièvement sur le bouton d'alimentation une fois pour entendre une sonnerie, indiquant qu'il est allumé et en mode de jumelage.


## Ajoutez-le à votre application Find My

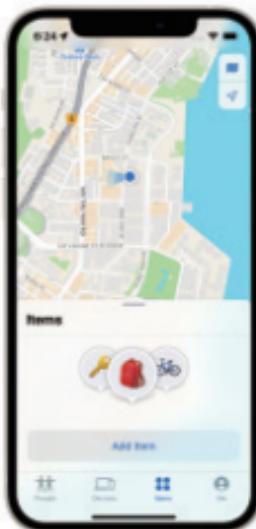

Ouvrez l'application « Find My » sur votre iPhone ou d'autres appareils pris en charge.


Selectionnez l'onglet « Objets ».  
Ensuite, choisissez « Ajouter un autre objet ».

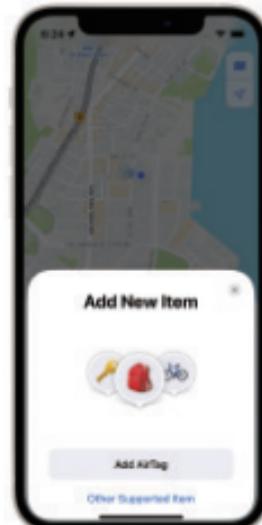

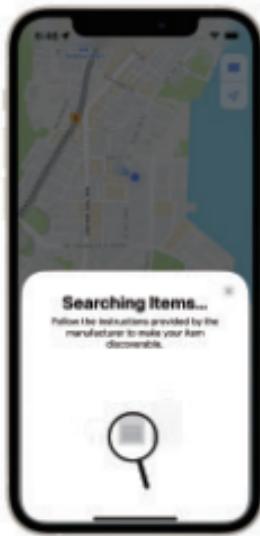

Pendant la recherche,  
assurez-vous que votre  
FlashFinder est allumé et à côté  
de votre iPhone.


Le tracker porte-clés FlashFinder  
devrait apparaître automatique-  
ment en quelques secondes.

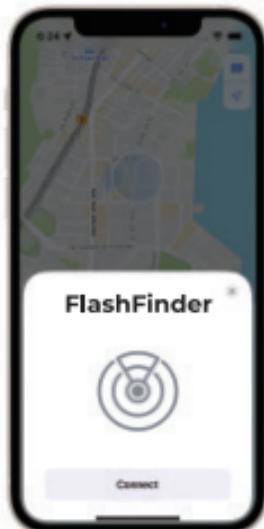



Suivez les invites pour le nommer.

Appuyez sur « Terminer » pour finaliser le processus de configuration.

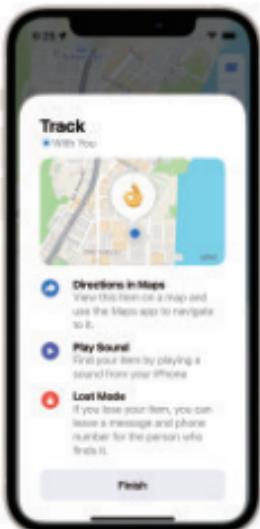

# Utilisez-le comme lampe de poche

## Mode lampe de poche

Appuyez brièvement sur le bouton d'alimentation pour l'allumer, puis appuyez brièvement pour passer par les 4 modes différents.



**Standard Lumineux Éco Stroboscope Éteint**

## Mode lumière d'alarme

Appuyez longuement sur le bouton d'alimentation pour l'allumer, puis appuyez brièvement pour passer par les 6 modes différents.

Appuyez longuement à nouveau sur le bouton d'alimentation pour l'éteindre.



**Rouge Clignotant Rouge**

**Bleu**

**Clignotant Bleu**

**Sirène**

**Bleu**

## Mode Lumière SOS

Le mode final de la lumière d'alarme est le SOS. La lumière rouge clignote rapidement 3 fois, suivie de 3 longs clignotements, puis de 3 courts clignotements. Remarque: Ce produit ne remplace pas les services d'urgence professionnels ou les équipements de secours. Utilisez-le à vos propres risques.



## À propos de l'application Find My

Le réseau Apple Find My offre un moyen simple et sécurisé de localiser des objets personnels compatibles sur une carte en utilisant l'application Find My sur votre iPhone, iPad, iPod touch ou Mac.

## Fonctions de base de Find My

### Voir l'emplacement d'un objet

Appuyez sur Objets en bas de l'écran, puis appuyez sur l'objet que vous voulez localiser.

**Si l'objet peut être localisé :** Il apparaît sur la carte avec son emplacement et horodatage. L'emplacement se met à jour lorsqu'il se connecte au réseau Find My.

**Si l'objet ne peut pas être localisé :** Vous voyez son dernier emplacement. Activez "Notifier lorsqu'il est trouvé" sous Notifications pour être alerté dès qu'il est localisé à nouveau.

### Faire jouer un son

Si l'objet est à proximité, vous pouvez faire jouer un son pour vous aider à le trouver.

1. Appuyez sur Objets en bas de l'écran, puis appuyez sur l'objet sur lequel vous voulez faire jouer un son.
2. Appuyez sur Faire jouer un son.
3. Pour arrêter le son avant qu'il ne se termine automatiquement, appuyez sur Arrêter le son.

## **Activer le mode Perdu pour un objet**

1. Pour marquer un objet comme perdu, vous devez activer le mode Perdu.
2. Appuyez sur Objets en bas de l'écran, puis appuyez sur le nom de l'objet perdu.
3. Sous Mode Perdu, appuyez sur Activer.
4. Suivez les instructions à l'écran pour entrer un numéro de téléphone où vous pouvez être joint. Pour entrer une adresse courriel à la place, appuyez sur « Utiliser une adresse courriel ».
5. Appuyez sur Activer.

**Important :** Assurez-vous d'autoriser les notifications pour l'application Find My. Voir Modifier les paramètres de notification sur iPhone.

## **Que se passe-t-il lorsque vous marquez un objet comme perdu ?**

Vous pouvez ajouter un message avec votre numéro de téléphone ou courriel.

Si quelqu'un trouve votre objet, il peut utiliser un appareil compatible pour voir ce message.

**Lorsque le "mode Perdu" est activé, ne supprimez pas l'objet dans l'application. Votre FlashFinder sera verrouillé et ne pourra pas être jumelé avec un nouvel appareil.**

## Réinitialisation d'usine

1. Appuyez rapidement sur le bouton quatre fois, puis maintenez-le enfoncé lors de la cinquième pression jusqu'à entendre une sonnerie.
2. Cette réinitialisation permet à l'appareil de retourner en mode de jumelage.
3. Dissociez-le de l'identifiant Apple précédemment connecté pour pouvoir le jumeler avec un nouveau.

## Prévention du suivi non autorisé

Si l'appareil de quelqu'un d'autre se mélange à vos effets personnels et vous suit pendant un certain temps, vous serez averti de deux manières :

1. Si vous avez un iPhone, iPad avec iOS ou iPadOS 14.5 ou plus récent, vous recevrez des alertes sur votre appareil Apple.
2. Si un appareil inconnu voyage avec vous, votre iPhone vous alertera.

## Compatibilité

Compatible uniquement avec les appareils Apple®

Modèles d'iPhone® exécutant iOS 14.5 ou plus

récent

Modèles d'iPad® exécutant iPadOS® 14.5 ou plus

récent

## Legal and Compliances

### Avis de non-responsabilité

Futura Gear Inc. n'est pas responsable de toute perte d'objets, de données ou de toute conséquence juridique découlant de l'utilisation de ce produit, y compris mais sans s'y limiter le suivi illégal.

L'utilisation du badge Works with Apple signifie qu'un produit a été conçu pour fonctionner spécifiquement avec la technologie identifiée dans le badge et a été certifié par le fabricant du produit pour répondre aux spécifications et exigences du réseau Apple Find My. Apple n'est pas responsable du fonctionnement de cet appareil, de l'utilisation de ce produit ou de sa conformité aux normes de sécurité et réglementaires.

## **Conformité d'ISDE Canada**

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à utiliser l'équipement.

IC: 32793-FTNT001

## **Garantie Limitée d'1 An**

Footnote Accessories Co., une marque de Futura Gear Inc., offre une garantie limitée d'un an pour ses produits, couvrant les défauts de matériaux et de fabrication dans des conditions normales d'utilisation. Cette garantie inclut la réparation ou le remplacement gratuit des produits défectueux, mais exclut les dommages résultant d'une

mauvaise utilisation, de modifications non autorisées ou de l'usure normale. Pour obtenir le service, contactez le service client de Futura Gear avec une preuve d'achat. La garantie est régie par les lois locales et offre des droits légaux spécifiques, qui peuvent varier selon la région. Pour plus de détails, veuillez consulter les conditions complètes de la garantie sur notre site Web: [FootnoteAccessories.com](http://FootnoteAccessories.com) ou contactez-nous par email à [service@futuragear.com](mailto:service@futuragear.com).

© 2024 Futura Gear Inc. FTNT, le logo illustré FTNT et Footnote Accessories Co. sont des marques de commerce de Futura Gear Inc. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS et watchOS sont des marques de commerce d'Apple Inc. iOS est une marque de commerce ou une marque déposée de Cisco aux États-Unis et dans d'autres pays et est utilisée sous licence. Toutes les autres marques de commerce sont la propriété de leurs propriétaires respectifs. Tous droits réservés.