

尺寸：高105mm宽225mm

正面



POLVCDG®

X13

USER PRODUCT GUIDE

Bone conduction swimming headphones

Product parameters

Product model: X13.

Waterproof level: IPX8.

Wireless version: V5.4.

Memory card format support: MP3,WAV,WMA,APE,FLAC,AAC,M4A.


Battery: 180mAh.

Charging: About 2 hours.

Play: 8-10H @50% volume.

Protocol: A2DP v1.3, AVRCP v1.6, HFP v1.7, HID v1.1, AVCTP v1.4, AVDTP v1.3, SPP v1.2.

Multiple use button

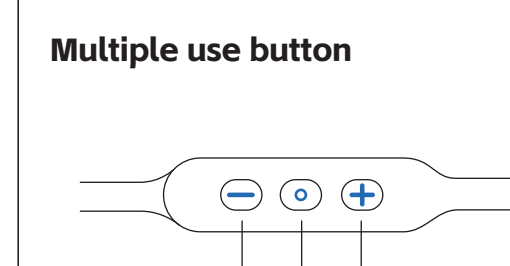

Power on: Press and hold the power button for 3 seconds, and the red and blue indicator lights will flash alternately.

Power off: Press and hold the power button for 3 seconds. The red light will go off.

Bluetooth/MP3: Double-click the power button to switch freely between Bluetooth mode and MP3 mode.

Answer an incoming call: Press the power button.

Reject an incoming call: Long press the power button for 2 seconds.

Volume up: Press the "Volume + " button.

Volume down: Press the "Volume- " button.


Previous song: Press the "Volume- " button for 2 seconds.

Next song: Long press the "Volume + " button for 2 seconds.

Music playback/Pause: Press the power button.

Wake up voice assistant: Long press "Volume + " button for 2 seconds.

Pairing/Pilot lamp

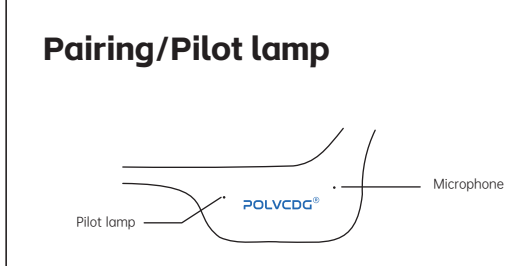

Enter the pairing state: When the machine is turned on, it will enter the pairing mode. When the pairing state is turned on, the red and blue lights will alternately flash.

Please note: The headphones automatically default to wireless mode when turned on.

Pairing: After entering the pairing state, turn on wireless on the device (phone/computer) and search for the device name "POLVCDG X13".Click the device "POLVCDG X13" to pair the connection and the connection is successful.

During an incoming call: The blue light blinks.


When charging: The red light is long on.

When fully charged: Blue light is long on.

Low battery warning: When the battery is low, the red light blinks and an announcement is played every two minutes.

USB data transfer mode: The blue indicator is blinking.

MP3 Mode Switching (memory card function required)

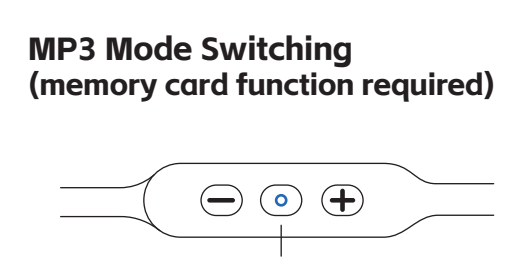

Mode switching: Double-click the power button to enter MP3 mode.

Pairing: The headphones automatically default to wireless mode when turned on.

(TF Card) Playback Mode Switching: When playing a song in MP3 (TF Card) mode, click the Power button 3 times to switch between shuffle playback mode(2 beeps) / sequential playback mode (1 beep).

Charging

- The headphones use a built-in rechargeable battery, which must be fully charged when using the headphones for the first time. If the voice prompts low battery, you need to charge the headphones on time.
- Connect the charging cable to the magnetic charging port of the headphones, and it will be fully charged in about 2 hours. The indicator light stays red while charging and turns blue when fully charged.


Warning!!!

- Magnetic charging has positive and negative poles corresponding to each other, mutual adsorption can be normal charging, mutual rejection can not be charged, or even cause a short circuit.
- The rechargeable battery of this product must be properly disposed of for recycling. Please do not put the battery into the fire to avoid causing an explosion.

Matters needing attention

- Do not soak the headphones in the seawater/salt water for a long time. Rinse the charging magnetic part with fresh water after use.
- If you do not use it for a long time, please charge it at least once a month.
- Please do not disassemble any part of the product without permission. If the product is found defective, stop using the product immediately. Contact the seller for after-sales treatment.
- After each exercise, please wipe the water on the surface of the headphones, especially the position of the charging magnetic suction port. It should be cleaned in time to prevent sweat and salt water from corroding the charging port and affecting the service life of the product.
- Keep the product away from fire, heat source, freezing source, and chemicals, and prohibit violent impact, disassembly, and extrusion of the product.
- Please use the charging head with output 5V 1A or less. If the charge is greater than 5V, it will cause the headphones to heat up, which may cause damage to the battery and motherboard.

Song download

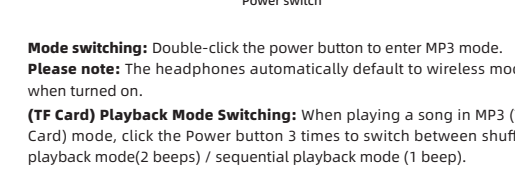

- Connect the headphones to your computer via the magnetic cable.
- Open the disk on your computer.
- Import audio files to the disk.

POLVCDG®
铂典

X13

产品参数

产品型号：X13，
防水级别：IPX8，
无线版本：V5.4，
传输距离：10m。
MP3解码格式：MP3,WAV,WMA,APE,FLAC,AAC,M4A。电池：180mAh。
充电：约2小时。
播放：8-10H@50%音量。
协议：A2DP v1.3, AVRCP v1.6, HFP V1.7, HID v1.1, AVCTP v1.4, AVDTP v1.3, SPP v1.2。

多功能键

音量+键 电源键 音量-键

开机：长按电源键3秒，红蓝灯闪烁。
关机：长按电源键3秒，红灯灭。
蓝牙/Mp3：双击电源键。
接听：短按电源键一下。
结束通话：短按电源键一下。
音量加：短按音量+键。
音量减：短按音量-键。
上一曲：短按2次音量+键。
下一曲：短按2次音量-键。
音乐播放：短按电源键一下。
音乐暂停：短按电源键一下。

配对/指示灯

指示灯 POLVCDG® 麦克风

进入配对状态：开机即进入配对模式，在配对状态下，红蓝光交替闪烁。
配对：进入配对状态后，打开设备上的蓝牙耳机（手机/电脑）搜索设备名称“POLVCDG X13”，点击设备“POLVCDG X13”配对连接，连接成功即可使用。
播放音乐时：蓝灯闪灭。
来电通话时：蓝灯闪烁。
充电时：红灯长亮。
充满电时：蓝灯长亮。
低电提示：低电时红灯闪烁，提示音每隔2分钟提醒一次。
USB数据传输模式：蓝灯闪烁。

双模式切换

双模式切换：双击电源键自由切换蓝牙和MP3(TF卡)模式。
提醒：开机自动默认蓝牙模式。
MP3(Tf卡)模式：默认顺序播放，带记忆功能。
指示音中英文语言切换：连续按3次减号键切换中英文语音提示 （MP3模式下长按无效）
提醒：首次使用时，开机关机（英文语音）。
Tf卡播放模式切换：在Tf卡模式中(收取时)，点击3次电源键切换随机播放模式/顺序播放模式(带记忆功能)。

歌曲下载

U盘 磁吸充電線

1.通过磁性电线将耳机连接到计算机。
2.打开手机上的磁盘。
3.将音频文件导入磁盘。

充电

1.该耳机内置可充电电池，首次使用耳机必须给电池充满电。使用中，若语音“滴滴”提示电量低时，表示电池量很低,此时需要给耳机充电。
2.将充电线连接到耳机的磁吸充电口，2小时左右即可充满。充电状态指示灯长亮，充满电常亮蓝灯。

警告!!!

1.磁吸充电有正负极对应，相互吸附可正常充电，相互排斥则无法充电甚至造成短路。
2.本产品的可充电电池必须妥善处理，以便回收利用。请不要将电池放入火中,以免引起爆炸。

注意事项

1.耳机不能长时间浸泡海水/盐水，使用后用清水冲洗擦干电磁感应部分。
2.如果長時間不使用，请至少一个月充满一次电。
3.请不要私自拆装产品上任何部件，如发现产品有缺陷立即停止产品使用，联系销售方售后服务。
每次运动后将请将耳机表面的水擦拭干净，特别是充电磁吸口位置，要及时处理干净，防止汗水、盐水质腐蚀充电口，影响产品使用寿命。
4.产品远离火灾源、热源、冷冻源、化学品，严禁暴力撞击挤压压力产品。
5.请使用输出5VIA及以内的充电器头。如果大于5V充电，会造成耳机发热，有可能造成电池及主板损坏。

POLVCDG®

X13

제품매개변수

제품 모델: X13.
방수 수준: IPX8.
무선 버전: V5.4.
전송 거리: 10m.
MP3 디코딩 형식: MP3,WAV,WMA,APE,FLAC,AAC,M4A.
배터리: 180mAh.
충전: 약 2 시간.
재생: 8-10H@50% 음량.
프로토콜: A2DP v1.3, AVRCP v1.6, HFP v1.7, HID v1.1, AVCTP v1.4, AVDTP v1.3, SPP v1.2.

다기능 키

전원 켜기: 전원 버튼을 3초 동안 길게 누르면 빨간색과 파란색 등이 깜박입니다.
전원 끄기: 전원 버튼을 3초 동안 길게 누르면 빨간색이 꺼집니다.
무선/MP3: 전원 키를 두 번 클릭합니다.
수신: 전원 버튼을 짧게 누르십시오.
통화 종료: 전원 버튼을 짧게 누르십시오.
볼륨 플러스: 볼륨 + 키를 짧게 누릅니다.
볼륨 감소: 볼륨 - 키를 짧게 누릅니다.
이전 곡: 볼륨 + 키를 두 번 짧게 누릅니다.
다음 곡: 볼륨 - 키를 두 번 짧게 누릅니다.
음악 재생: 전원 버튼을 짧게 누르십시오.
음악 일시정지: 전원 버튼을 짧게 누르십시오.

페어링 / 표시등

쌍 설정: 전원을 켜면 블루 모드로 전환되고 쌍 설정 시 빨간색과 파란색 등이 번갈아 깜박입니다.
페어링: 페어링 상태가 되면 장치에서 무선 (후대폰 / 컴퓨터) 을 켜고 장치 이름을 검색하십시오."POLVCDG X13";장치 "POLVCDG X13"페어링 연결을 클릭하여 연결에 성공하면 사용할 수 있습니다.
음악을 재생할 때: 파란 불이 깜박입니다.
전화 통화 중: 파란 불이 깜박입니다.
충전 시: 빨간불이 켜집니다.
충전 시: 파란색 램프가 길고 밝습니다.
저전력 알림: 저전력 시 빨간불이 깜박이고 알림음이 2분마다 울립니다.
USB 데이터 전송 모드: 파란색 램프가 깜박입니다.

이중 모드 전환

이중 모드 전환: 전원 키를 두 번 클릭하여 무선 및 MP3(TF카드) 모드를 자유롭게 전환합니다.
알림: 전원 켜기 자동 기본 무선 모드.
MP3(TF카드) 모드: 메모리 기능이 있는 기본 순서 재생.
tf 카드 재생 모드 전환: tf 카드 모드 (노래 재생)에서 전원 키를 3번 누르면 무선서 재생 모드/선서 재생 모드 (메모리 기능)로 전환한다.

충전

- 이 헤드폰은 내장 충전 가능한 배터리를 사용하며, 처음 헤드폰을 사용하면 배터리를 충전해야 합니다. 사용 중, 만약 음량 "디디"가 전기가 떨어졌고 배터리의 전기가 떨어졌다는 것을 표시하는데 이때 이어폰을 충전해야 합니다.
- 이어폰의 마그네틱 충전구에 충전선을 연결하면 2시간 정도면 충전할 수 있다. 충전 상태 표시등이 길고 밝으면 전기가 가득 차면 항상 파란색 등을 밝힌다.

충전



- 이 헤드폰은 내장 충전 가능한 배터리를 사용하며, 처음 헤드폰을 사용하면 배터리를 충전해야 합니다. 사용 중, 만약 음량 "디디"가 전기가 떨어졌고 배터리의 전기가 떨어졌다는 것을 표시하는데 이때 이어폰을 충전해야 한다.
- 이어폰의 마그네틱 충전구에 충전선을 연결하면 2시간 정도면 충전할 수 있다. 충전 상태 표시등이 길고 밝으면 전기가 가득 차면 항상 파란색 등을 밝힌다.

경고!!!

- 자가 흡입 충전은 양극극의 대우가 있다. 상호 출력을 정상적으로 충전할 수 있다. 상호 배극의 충전할 수 없다. 심지어 흡입을 초래한다.
- 본 제품의 충전 가능한 배터리는 재충전을 위해 적절하게 처리해야 합니다. 폭발을 일으키지 않도록 배터리를 불 속에 넣지 마세요.

주의 사항

- 이어폰은 바닷물/소금물에 오래 담그면 안되며 사용자 담수로 씻어 충전지기를 흡입 부분을 닦아낸다.
- 장시간 사용하지 않을 경우 최소한 한 달에 한 번은 충전하십시오.
- 제품의 어떤 부분도 사소한 분해하지 마십시오. 만약 제품을 결함이 발견되면 즉시 보증의 사용을 중지하고 판매자에게 연락하여 판매 후 처리합니다.
- 대부분은 후 이어폰 표면의 물을 깨끗이 닦으십시오. 특히 충전 자기 흡입이 유치는 제때에 깨끗이 처리하여 알, 소금물이 충전구를 부식시켜 제품의 사용 수명에 영향을 주지 않도록 해야 합니다.
- 제품은 화염, 열원, 상충원, 화학물을 멀리하고 독적인 충격을 엄격하게 분해하여 제품을 입힌다.
- 출력 5VIA 이내의 충전 헤드폰을 사용하십시오. 5V 이상으로 충전하면 이어폰에 열이 나고 배터리와 마더보드가 손상될 수 있다.

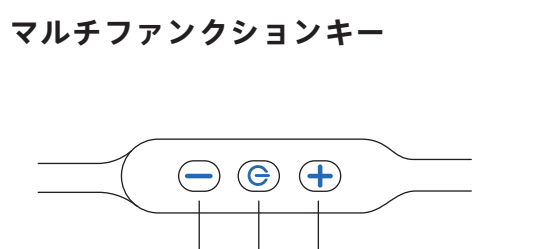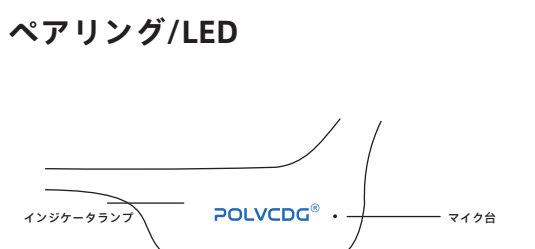 ユーザー製品ガイド  製品パラメータ 製品型番: X13, 防水レベル: IPX8, ワイヤレスバージョン: V5.4, 転送距離: 10m, MP3番号フォーマット: MP3,WAV,WMA,APE,FLAC,AAC,M4A, バッテリー: 180mAh, 充電: 約2時間, 再生: 8-10H@50音量%, プロトコル: A2DP v1.3, AVRCP v1.6, HFP v1.7, HID v1.1, AVCTP v1.4, AVDTP v1.3, SPP v1.2,	マルチファンクションキー  電源オン: 電源ボタンを3秒間押し続けると、赤と青のランプが点滅します。 電源を切る: 電源キーを3秒間押し続け、赤信号が消えた。 ワイヤレス/MP3: 電源キーをダブルクリックします。 受話終了: 電源ボタンを短く押してください。 通話終了: 電源ボタンを短く押してください。 音量減: 音量-キーを短く押します。 音量増: 音量+キーを短く押します。 着信時: 青ランプが点滅する。 着信時: 青ランプが点滅する。 フル充電時: 青ランプが点灯します。 低電力プロンプト: 低電力時に赤信号が点滅し、プロンプト音は2分おきに注意する。 USBデータ転送モード: 青ランプ点滅。	ペアリング/LED  ペアリング状態に入る: 電源を入れるとペアリングモードに入り、ペアリング状態になると赤と青のランプが交互に点滅する。 ペアリング: ペアリング状態になると、デバイス上のワイヤレス (携帯電話/パソコン) 検索デバイス名を聞きます「POLVCDG X13」, デバイス「POLVCDG X13」のペア接続をクリックすると、接続が成功して使用できます。 音楽再生時: 青色灯が消える。 着信時: 青ランプが点滅する。 充電時: 赤信号が点灯。 フル充電時: 青ランプが点灯します。 低電力プロンプト: 低電力時に赤信号が点滅し、プロンプト音は2分おきに注意する。 USBデータ転送モード: 青ランプ点滅。	デュアルモード切り替え  デュアルモード切り替え: 電源キーをダブルクリックして無線モードとMP3 (TFカード) モードを自由に切り替えます。 リマインダ: 電源を入れると自動的にデフォルトのワイヤレスモードになります。 MP3 (TFカード) モード: デフォルトシークエンス再生、メモリ機能付き。 TFカード再生モード切り替え: TFカードモード中(再生時)、電源ボタンを3回クリックしてランダム再生モード/シークエシャル再生モード(メモリ機能付き)に切り替えます。	じゅうでん 1.このイヤホンは内蔵の充電可能な電池を使用しており、初めてイヤホンを使用するには電池に充電しなければなりません。使用中、音声「満満」が電力量が低いことを示す場合は、電池の電力量が低いことを示し、その場合はイヤホンに充電する必要があります。 2.充電ケーブルをイヤホンの磁気吸引充電口に接続し、2時間ほどで充電することができます。充電状態指バイロットランプは長く点灯し、満充電で常に青色ランプを点灯する。 警告!!! 1.磁気吸引充電口にはプラスとマイナスの極が対応しており、相互吸着は正常に充電でき、相互反発は充電できません。故障を引き起こす。 2.本製品の充電可能な電池は、安全のために適切な処理をしなければなりません。爆発を起さないように、電池を火にしないでください。 注意事項 1.イヤホンは長時間海水/塩水に浸すことができます。使用後に真水で洗って充電磁気吸引部分を乾かす。 2.長時間使用しない場合は、少なくとも1ヶ月に1回は充電してください。 3.製品に欠陥があればすぐに製品の使用を停止し、販売元のアフターサービスに連絡して、製品の部品を無償で取り外さないでください。 4.運動のたびにイヤホン表面の水をきれいに拭いてください。特に充電磁気吸引口の位置は、真直にきれいに処理して、汗、塩水が充電口を腐食するのを防止して、製品の使用寿命に影響を与えます。 5.製品は火源、熱源、冷凍源、化学品から離れ、暴力的な衝突による分解・押出は厳禁である。 6.出力5V 1A以内の充電ヘッドを使用してください。5Vより大きく充電すると、イヤホンが発熱し、電池やマザーボードが故障する可能性があります。
---	--	--	---	--

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.