Manufactured by MySmile Oral Care Inc
8238 Mayten ave
Rancho Cucamonga CA 91730

1-909-908-4615 (USA/Canada)
http://www.mysmileteeth.com
support@mysmileteeth.com

Formulated in USA
Made in China

Scan to learn more

@mysmile | mysmile

MySmile

User Manual

Electric Power Flosser | LP233 Pro

- ◆UVC Sanitizer Light
- ◆Water Purifying System
- ◆Water Heating Optional
- ◆Customizable Pressures

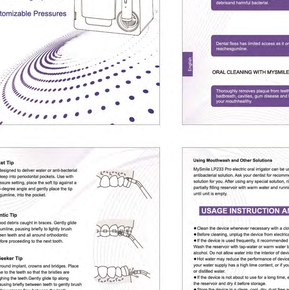

TRADITIONAL ORAL CLEANING

Brushing cannot easily reach hidden food debrisand harmful bacterial.

Dental floss has limited access as it only cleansagainst.

ORAL CLEANING WITH MYSMILE ORAL IRRIGATOR

Thoroughly removes plaque from teeth, prevents tooth decay, gum disease and keeps your mouthhealthy.

English

MySmile

LP233 Pro Electric Power Flosser

Your healthy mouth and charmed smile are always our pursuit. MySmile new-launched LP233 Pro electric oral irrigator will be an essential alternate to your dental care routine. It generates mighty pulsed water stream to thoroughly remove plaque between teeth and along gum line. With diverse modes and pressure levels to choose from, it's compatible with wide ranges from sensitive teeth to deep cleaning. Water heating option is sensitive-teeth friendly, empowering you to clean teeth without worries. Detachable filter helps purify water to ensure water accesses to mouth is clean. An unique stormroom with socket allows you to store jet tips neatly and legibly. Inserted 120 psi helps sterilize nozzles, don't worry there go mouldy anymore after a long time use. Start to enjoy functional teeth flossing from MySmile now!

Contents

Contents 01
Important Safeguards 02-04
Product Description 04-05
Getting Started 05-10
Instruction of Tips 10-12
Usage Instruction and Maintanance 12
Environmental Protection Information 12-14
Product Specifications 14
Trouble Shooting 15

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following.

DANGERS

To reduce the risk of electrocution:

- Do not handle plug with wet hands.
- Do not place in or drop into water or other liquid.
- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Do not transport, inhale or move the device while it's working.
- Do not use when jet tips are unset.
- Do not use when the device is not outfitted out of this instruction.
- Check the power supply cord for damage before the first use and during the life of the product.
- After cleaning, make sure the power plug is completely dry before connected to a power outlet.

WARNINGS

To reduce the risk of burns, electrocution, fire or physical injury to persons:

- Do not place the device into a voltage system that is different from the voltage system specified on the device or charger. Use with improper voltage will damage the device and void warranty.
- Do not direct water under the tongue, into the ear, nose or other delicate areas.
- This product is capable of producing pressure that cause serious damage to these areas.
- Do not direct water into the nose or ear. The potentially deadly amoeba, Naegleria fowleri, may be present in some tap water or unchlorinated well water and may be fatal if introduced into these areas.
- Do not use the device in the shower or near any opening or hose.
- To avoid damage to the product, do not place the product or parts in the dishwasher for cleaning unless otherwise instructed.
- Use the product only as indicated in these instructions or recommended by your dental professional.
- Only use tips and accessories recommended or supplied by MySmile Oral Care Inc.
- Keep electrical cord away from heated surfaces.
- Do not use the product if the power plug or power cord is damaged, if it doesn't operate correctly or if it has fallen to the floor or into liquid.
- Do not use outdoors or operate where aerosol (spray) products or being used or where oxygen is being administered.
- Do not use saline or water insoluble concentrated essential oils in the product. Use of these can reduce performance and will shorten the life of the product. Use of these products may void warranty.
- This application should be used only with cold or warm water (not exceed 60 ℃/140 ℉) specific solutions as defined in the manufacturers' instruction.
- Children above 8 years old should be supervised to ensure that they do not play with the appliance.
- The product contains batteries that are non-replaceable.
- The product contains a battery that cannot be removed or plugged in.
- If product is opened or disassembled for ANY reason, warranty is VOID.
- To avoid damage to the product, do not place the product or parts in the dishwasher for cleaning unless otherwise instructed.
- Use the product only as indicated in these instructions or recommended by your dental professional.
- Only use tips and accessories recommended or supplied by MySmile Oral Care Inc.
- Fill reservoir with water or other dental professional recommended solution only.
- Remove any wet jewelry prior to use of this product.
- If your physician cardiologist has advised you to receive antibiotic premedication before dental procedures, you should consult your dentist before using this instrument or any other hygiene act.
- Contact your dental professional if excessive bleeding occurs after using the product or bleeding continues to occur after 1 week of use.
- If pain occurs while using the product, contact a physician/dentist if discomfort or pain is experienced.
- This appliance complies with the safety standards for electromagnetic devices. If you have a pacemaker of other implanted devices, consult your physician or the manufacturer of the implant device.

PRODUCT DESCRIPTION

1. Reservoir
2. Water Tube
3. Handle Bottom Cap
4. Indicator Light
5. Handle
6. Pressure '+' Button
7. Pressure '+' Button
8. Start/Stop Button
9. Jet Tip
10. Tip Eject Button
11. Operation Panel
12. Reservoir Cover (Fixed Plate)
13. Reservoir Cover (Movable Plate)
14. UV Light Sanitizer
15. Tip Storeroom
16. Water Filter

SAFETY PRECAUTIONS

- Appliance must only be supplied at SELV.
- This appliance contains batteries that are non-replaceable.
- Do not disassemble, modify or repair the appliance by yourself without supervision.
- Oral irrigators can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge under supervision.
- Children do not play with the appliance

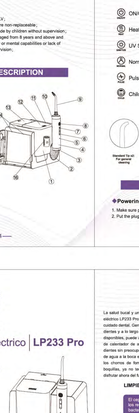

1. ON/OFF Button
2. Operation Panel
3. Display Area
4. Heating Button
5. UV Sanitizing Button
6. Normal Mode
7. Pulse Mode
8. Child Mode

GETTING STARTED

◆Powering the Unit

1. Make sure product appearance, power plug and power cord are in intact.
2. Put the plug into power supply, see image①and②.

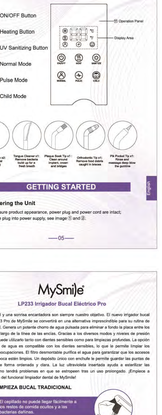

◆Inserting and Removing Tips

◆Preparing the reservoir

1. Pull out reservoir as image③and④ shown.
2. Open the reservoir lid and fill with Lukewarm water, see scale mark for volume reference, shown as image⑤. Suggest clean the reservoir before first use.
3. Replace the reservoir over the base and press down firmly until close the lid.

1. Insert tip into the center of end of the handle, pressing down firmly until the tip clicks into place, see image⑥. Gently pull the tip out to confirm whether the tip is correctly locked. See image⑦.
2. To remove tip from the handle, press the tip eject button on the handle, see image⑧.
3. During working,do not press tip eject button to avoid tip popping up, causing to injury.

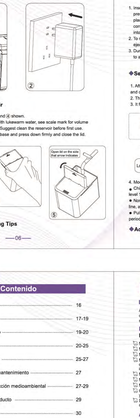

◆Selecting Modes

1. After power supply connected, long press ON/OFF button about 1.5s, display is on and device is on standby state. It automatically shuts off if no action in more than 30s.
2. The device defaults to child mode with pressure level 1 when first use.
3. It features 3 modes for selection, child mode, normal mode and pulse mode.

Child Mode | Normal Mode | Pulse Mode



Long Press | Gentle Touch | Gentle Touch

4. Mode Instruction:
- Child: For child above 6 years old, use under adult supervision. Pressure ranges from 1-3.
- Normal: Remove food debris on teeth surface, between teeth or along the gum line, applies to adults. Pressure ranges level 1-10.
- Pulse: Spray in strong-weak cycle, massage gum and for people with mild periodontitis. Pressure ranges level 1-3.

◆Adjusting Pressure Setting

Press ▲ or ▼ to adjust pressure level

1. After mode selected, short press start/stop button (round button) on the handle to start spraying water.
2. During use you may stop the flow of water by pressing the round button in any time.
3. Press ▲ or ▼ to adjust pressure, from lowest level 1to the highest level 10 for pressure and press "+" to decrease pressure.
4. Use the lowest setting (level 1) for first-time use. Gradually increase pressure over time to the setting you prefer, or as instructed by your dental professional.

Start/Stop Button | Pressure '+' Button | Decrease Pressure

◆Starting Cleaning Your Mouth

Always place the tip in your mouth before turning the device ON. Lean over sink and slightly close lips enough to prevent splashing while still allowing water to flow from mouth into the sink. Turn power ON, Water finished, turn power OFF. Water keeps running 2 minutes, Pre-press start/stop button to continue flossing.

For best result, start with back teeth and work toward the front teeth. Direct the stream at a 90 degree angle to gum line and pause briefly between teeth. Continue you have cleaned the inside and outside of both upper and lower teeth. Refer to image ⑨ and ⑩.

Warm Tips:
- For those who wear denture or braces, please mainly clean between teeth.
- For sensitive teeth, please start with soft mode and then adjust modes based on personal circumstances.

◆After Use

1. Short press start/stop button on handle to pause water flow, then long press ON/OFF button on operation panel to turn device off. Unplug the device, store water tube and put handle back in magnetic place. See image ⑪.
2. Pull reservoir out and empty the water in it, see image ⑫.

Magnetic Holder

◆Storing and Sterilizing Tips

Put tips into socket of the unique-design storeroom, for neat and hygienic storage, and quick take-out the next time. Close the storeroom, press "SANITIZE" button to turn UVC for tips disinfection. You can only switch the sanitizer on if the door is properly closed. It stops working when door is opened during sanitizing cycle. The sanitizer runs for 2 minutes a cycle and then switches off automatically.

Tips Storeroom | UV Light Sanitizer

Press here to open the lid to prompt UV sanitizing

◆Cleaning Reservoir

1. Pull the fixed plate up until it's unlocked from reservoir, see image ⑬.
2. Pull the lid to hold it with clean water, then dry of the air, see image ⑭.
3. Use wet cloth clean up inside the reservoir, see image ⑮.
4. After cleaning, assemble all accessories back in place.

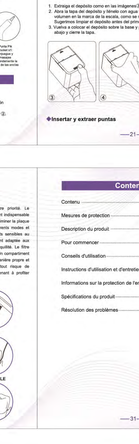

Pull fixed up | Wash up with cloth | Dry of the air

◆Water Heating Option

For people with sensitive teeth, it's recommended to clean teeth with lukewarm water.
Press "+/Δ1" button on operation panel to start water heating, and heated water temperature in a range of 36℃-39℃ (96 ℉-99 ℉).
See image ⑯.

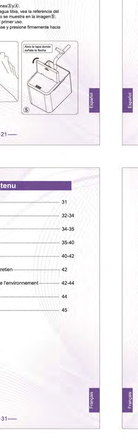

Gentle Touch

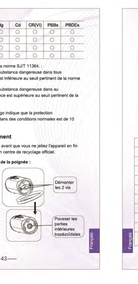

INSTRUCTION OF TIPS

Classic Tip

For general use and to thoroughly remove food residues, plaque and bacteria between teeth and below the gum line, which is proved to be 2X as effective as string floss for improving gum health.

Pik Pocket Tip

Specially designed to deliver water or anti-bacterial solutions deep into periodontal pockets. Use with lowest pressure setting, place the soft tip against a teeth at 45-degree angle and gently place tine tip under the gumline, into the pocket.

Orthodontic Tip

Remove food debris caught in braces. Gently glide tip along gumline, pausing briefly to lightly brush in-between teeth and around orthodontic bracket before proceeding to the next tooth.

Plaque Seeker Tip

To clear around implant, crowns and bridges. Place the tip close to the teeth so that the bristles are gently brushing the teeth.Gently glide tip along gumline,pausing briefly between teeth to gently brush and allow the water to flow between the teeth.

Tongue Cleaner Tip

Remove bacteria build up for a fresh breath. Set to lowest pressure setting. Place tip in the center/middle of your tongue about half way back. Pull forward with light pressure! Increase pressure as you prefer.

Recommended Intervals for Replacing Tips

- Replace every 3 months. Pik pocket tip, plaque seeker tip and orthodontic tip.
- Replace every 6 months: Classic tip and tongue cleaner tip.

NETTOYAGE BUCCAL TRADITIONNEL

Le brossage ne permet pas d'atteindre facilement les débris alimentaires cachés et les bactéries nocives.

La fil dentaire n'a un accès limité car il n' atteindque la ligne gingivale.

NETTOYAGE BUCCAL AVEC L'IRRIGATEUR BUCCAL MYSMILE

Il élimine en profondeur la plaque dentaire, prévient la maladie bactérie, les caries dentaires et les gencives tout maintient votre bouche en bonne santé

Using Mouthwash and Other Solutions

MySmile's LP233 Pro electric oral irrigator can be used to deliver mouthwash and other solutions deep into periodontal pockets. Ask your recommendation of the most appropriate solution for you. For using any special solution, rinse unit to prevent clogging by partially filling reservoir with warm water and running until the pointed tips into the unit until is empty.

USAGE INSTRUCTION AND MAINTANANCE

LISEZ TOUTES LES INSTRUCTIONS AVANT DE L'UTILISER

Lors de l'utilisation de produits électriques, en particulier en présence d'enfants, il convient de toujours respecter les mesures de sécurité de base, notamment les suivantes.

DANGER

Pour réduire le risque d'électrocution :

- Ne manipulez pas la fiche avec les mains mouillées.
- Ne placez pas dans ou ne laissez pas tomber dans l'eau ou tout autre liquide. Ne l'utilisez pas pendant le bain.
- Ne placez pas et ne rangez pas le produit dans un endroit où il pourrait tomber ou être tiré dans une baignoire ou un évier. En cas de chute du produit dans l'eau, débranchez-le immédiatement.
- Ne le transportez, ne respirez ni ne déplacez pas l'appareil lorsqu'il est en marche.
- N'utilisez pas l'appareil s'il les embouts des jets ne sont pas correctement réglés.
- N'utilisez pas l'appareil s'il n'est pas équipé conformément aux instructions de ce manuel.
- Vérifiez que le cordon d'alimentation n'est pas endommagé avant la première utilisation et tout au long de la durée de vie du produit.
- Avant le nettoyage, assurez-vous que la fiche d'alimentation est complètement sèche avant de la brancher sur une prise de courant.

AVERTISSEMENTS

Pour réduire les risques de brûlures, d'électrocution, d'incendie ou de dommages corporels :

- Ne placez pas l'appareil dans un système de tension différent de celui spécifié sur l'appareil ou le chargeur. L'utilisation d'une tension inappropriée endommagera le produit et annulera la garantie.
- Ne dirigez pas l'eau sous la langue, dans l'oreille, le nez ou d'autres zones délicates. Ce produit peut capable de produire une pression qui peut causer de graves dommages à ces zones.
- Ne dirigez pas l'eau dans le nez ou l'oreille. L'amibe Naegleria fowleri, potentiellement mortelle, peut être présente dans l'eau du robinet ou dans l'eau de source non chlorée et peut être fatale si elle est introduite dans ces zones.
- Ne laissez pas tomber ou n'insérez pas de corps étranger dans une ouverture ou un tuyau.
- Pour éviter d'endommager le produit, ne mettez pas le produit ou les pièces dans le lave-vaisselle pour le nettoyer, sauf indication contraire.

Disassemble 2 screws | Remove the battery

Disassemble the battery only when the appliance is being disposed.

◆Environmental Protection

The interior battery must be recycled before you throw away the appliance at the end of its life, or you are liable to hand it in to official recycling center.

Steps to Detach Battery of Handle:

Disassemble 2 screws | Uncurve the button cover of handle in an anticlockwise direction | Push the trapezoidal cover parts off

ENVIRONMENTAL PROTECTION INFORMATION

◆Hazardous Substances Table

Parts	Pb	Hg	Cd	CR(VI)	PBBs	PBDEs
Plastic Parts	○	○	○	○	○	○
PCBA	○	○	○	○	○	○
Hardware Parts	○	○	○	○	○	○
Charging Cable	○	○	○	○	○	○

This table is ☆ completed according to SJ/T 11364 standard.
○: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the limit requirement of GB/T 26572 standard.
X: Indicates that the concentration of the hazardous substance in at least one homogeneous material in the part is above the limit requirement of the GB/T 26572 standard.

The number in this logo indicates that the environmental protection of the product in normal state is 10 years.

TROUBLE SHOOTING

PROBLEMS	CAUSES	SOLUTIONS
Water leakage between tip and base connector	The tip is not inserted properly	1. Remove the tip and re-install it 2. Replace a new tip
Water doesn't come out	Water is not enough.	Add reservoir to maximum.
	The hose is bent.	Detach water tank to check hose.
The device doesn't turn on.	Isn't connected to power supply.	Plug it to power supply.
	Battery of handle runs out of power.	Change battery or return it to after-sale center for repair.
	Internal line fault	Return it to after-sale center for repair.
	Loose contact on charging jack/tube.	Replace charging cable or return it to after-sale center for repair
The display isn't on	Charging adaptor is in fault	Replace a charging adaptor
	Internal line fault	Return it to after-sale center for repair
Water leakage on tube.	Water tube is broken or damaged	Return it to after-sale center for repair.
Incorrect Pressure.	The device is not properly connected.	Place the reservoir properly. Press the reservoir firmly downward.
	The tip is blocked with residue.	Rinse the tip or replace it.
	Motor is in fault.	Return it to after-sale center for repair.

DESCRIPTION DU PRODUIT

1. Réservoir
2. Tube d'eau
3. Poignée Capuchon de fond
4. Voyant lumineux
5. Poignée
6. Bouton « + » de pression
7. Bouton « + » de pression
8. Bouton Start/Stop
9. Embout du jet
10. Bouton d'éjection de l'embout
11. Panneau de commande
12. Couvercle du réservoir (plaque fixe)
13. Couvercle du réservoir (plaque mobile)
14. Lumière pour la stérilisation UV
15. Réserve d'embouts
16. Filtre à eau

POUR COMMENCER

◆Alimentation de l'appareil

1. Assurez-vous que l'aspect du produit, la fiche d'alimentation et le cordon d'alimentation sont intacts.
2. Branchez la fiche sur l'alimentation, voir l'images ① et ②.

◆Préparation du réservoir

1. Retirez le réservoir comme indiqué sur les images③et④.
2. Ouvrez le couvercle du réservoir et remplissez-le d'eau tiède en utilisant les graduations comme référence de volume, comme indiqué sur l'image⑤. Il est recommandé de nettoyer le réservoir avant la première utilisation.
3. Replacez le réservoir sur la base, appuyez fermement et fermez le couvercle.

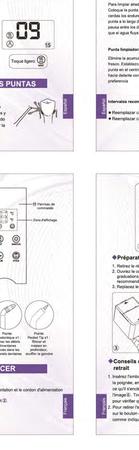

◆Conseils d'insertion et de retrait

1. Insérez l'embout au centre de l'extrémité de la poignée, en appuyant fermement jusqu'à ce qu'il s'enclenche, comme illustré sur l'image⑥. Tirez doucement sur l'embout pour vérifier qu'il est bien verrouillé.
2. Pour retirer l'embout du manche, appuyez sur le bouton d'éjection situé sur la poignée, comme indiqué sur l'image⑦.

◆Réglage de la pression

1. Lorsque le mode est sélectionné, appuyez brièvement sur le bouton de démarrage / arrêt (bouton rond) situé sur la poignée pour commencer à pulvériser de l'eau.
2. Pendant l'utilisation, vous pouvez arrêter l'écoulement de l'eau à tout moment en appuyant sur le bouton rond.
3. Utilisez les touches « + » ou « - » sur la poignée pour régler le niveau de pression.

◆Commencez à nettoyer votre bouche

Placez toujours l'embout dans votre bouche avant de mettre l'appareil en marche. Penchez-vous au-dessus de l'évier et fermez légèrement les lèvres pour éviter les éclaboussures tout en permettant à l'eau de s'écouler de la bouche dans l'évier. Mettez l'appareil sous tension. Lorsque vous avez terminé, éteignez l'appareil. Le moteur continue de tourner pendant 2 minutes. Appuyez à nouveau sur le bouton start/stop pour continuer à utiliser le flosseur.

Il est recommandé de commencer par les dents du fond et progressez vers les dents de devant. Dirigez le jet à un angle de 90 degrés vers la ligne gingivale, l'embout en touche. Faites glisser l'embout le long du vôtre gingival et faites une courte pause entre les dents. Continuez à nettoyer.

Nettoyez à l'extérieur des dents supérieures et inférieures. Voir l'images ⑧ et ⑨.

Conseils pratiques :

- Ne pas utiliser de prothèses dentaires ou d'appareils orthodontiques, nettoyez particulièrement entre les dents.
- Pour les dents sensibles, commencez par le mode doux, puis réglez les modes en fonction de votre situation personnelle.

◆Après l'utilisation

1. Appuyez brièvement sur le bouton start/stop de la poignée pour interrompre l'écoulement de l'eau, puis appuyez longuement sur le bouton ON/OFF du panneau de commande pour l'appareil. Débranchez l'appareil, rangez le tube d'eau, et replacez la poignée dans son emplacement magnétique. Voir l'image ⑪.
2. Retirez le réservoir et videz l'eau qu'il contient. Voir l'image ⑫.

◆Nettoyage du réservoir

1. Tirez la plaque fixe vers le haut jusqu'à ce qu'elle soit déverrouillée du réservoir, voir image ⑬.
2. Retirez le filtre pour le nettoyer à l'eau claire, puis séchez-le à l'air, voir l'image ⑭.
3. Utilisez un chiffon humide pour nettoyer l'intérieur du réservoir, voir image ⑮.
4. Après le nettoyage, remettez tous les accessoires en place.

Pull fixed up | Wash up with cloth | Dry of the air

◆Option de chauffage de l'eau

Pour les personnes ayant des dents sensibles, il est recommandé de se nettoyer les dents avec de l'eau tiède.

Appuyez sur le bouton « HEAT » sur le panneau de commande pour démarrer le chauffe-l'eau, et la température de l'eau chauffée sera une gamme de 36℃-39℃ (96℉-99℉). Voir image ⑯.

Gentle Touch

INSTRUCTION OF TIPS

Pointe Classique

Pour un usage général et pour éliminer en profondeur les débris alimentaires, la fente dentaire et les taches entre les dents et sous la ligne gingivale. Il a été prouvé qu'il est deux fois plus efficace que le fil dentaire pour améliorer la santé des gencives.

Contenu

Contenu 31
Mesures de protection 32-34
Description du produit 34-35
Pour commencer 35-40
Conseils d'utilisation 40-42
Instructions d'utilisation et d'entretien 42
Informations sur la protection de l'environnement 42-44
Spécifications du produit 44
Résolution des problèmes 45

◆Connexion électrique de la unidad

1. Asegúrese de que el producto, el enchufe y el cable de alimentación se encuentran intactos.
2. Conecte el enchufe a la fuente de alimentación, ya sea la imagen ① o ②.

◆Insertar y extraer puntas

1. Inserte la punta en el centro del extremo de la empuñadura, presionando firmemente hasta que la punta encaje en su sitio, ver imagen ③. Tire de la punta suavemente para confirmar si está correctamente en su sitio. Ver imagen ④.
2. Para retirar la punta de la empuñadura, pulse el botón de expulsión de la empuñadura, ver imagen ⑤.
3. Durante la utilización no presione el botón de expulsión de la punta para evitar que esta salga proyectada, causando lesiones.

◆Selección de modos

1. Después de conectar la corriente, pulse prolongadamente el botón ON/OFF durante aproximadamente 1,5 s, la pantalla se encenderá y el aparato se encontrará en modo de espera. Se apagará automáticamente si no hay ninguna acción en más de 30s.
2. El dispositivo se pone por defecto en modo infantil con nivel de presión 1 cuando se utiliza por primera vez.
3. Dispone de 3 modos, modo infantil, modo normal y modo pulso.

Modo Infantil | Modo Normal | Modo Pulso

Toque largo | Toque suave | Toque suave

4. Instrucción de modos:
- Infantil: Para niños mayores de 6 años, utilizar bajo la supervisión de un adulto. Rangos de presión nivel 1-3.
- Normal: Retire los restos de comida en la superficie de los dientes, entre los dientes o a lo largo de la línea de las encías, para adultos. Rangos de presión nivel 1-10.
- Pulso: Rociar en ciclo fuerte-débil, masajear la encía para personas con periodontitis leve. Rangos de presión nivel 1-3.

◆Ajuste de la presión

1. Ajcha vez seleccionado el modo, pulse el botón de iniciar/pausa (botón redondo) para comenzar.
2. Durante el uso puede detener el flujo de agua pulsando el botón en cualquier momento. Mantenga pulsado el botón + o - para ajustar la presión, desde el nivel 1 hasta el nivel 10, y pulse "+" para disminuirla.
3. Utilice el ajuste más bajo (nivel 1) para el primer uso. Aumente gradualmente la presión con el tiempo hasta el ajuste que prefiera, o según le indique su profesional de la odontología.

Boton inicio | Disminuir presión

◆Empezar la limpieza bucal

Coloque siempre la punta en la boca antes de encender el aparato. Incline sobre el lavamanos y cierre ligeramente los labios para evitar salpicaduras, permitiendo al mismo tiempo que el agua fluya de la boca al lavamanos. Encienda el aparato. Al terminar, apague el aparato. El motor seguirá funcionando durante 2 minutos. Pulse el botón de "ON/OFF" para continuar utilizando el aparato.

Limpie los dientes superiores e inferiores por ambos lados.

Para obtener el mejor resultado, comience por los dientes posteriores y trabaje hacia los anteriores. Dirija el chorro en un ángulo de 90º hacia la línea de las encías con la punta en la boca. Deslice la punta a lo largo de la línea de las encías y haga una breve pausa entre los dientes. Continúe limpiando el interior y el exterior de los dientes superiores e inferiores. Consulte las imágenes ⑨ y ⑩.

Abra la tapa para iniciar la fluidez de agua

Consejos:
- For those who wear denture or braces, please mainly clean between teeth.
- For sensitive teeth, please start with soft mode and then adjust modes based on personal circumstances.

◆Después de su utilización

1. Short press start/stop button on handle to pause water flow, then long press ON/OFF button on operation panel to turn device off. Unplug the device, store water tube and put handle back in magnetic place. See image ⑪.
2. Pull reservoir out and empty the water in it, see image ⑫.

Magnetic Holder

◆Consejos para almacenar y esterilizar

Coloque las puntas en el depósito del almacenamiento para guardarlas de forma ordenada e higiénica y sacarlas con rapidez la próxima vez. Cierre el almacén, pulse el botón «SANITIZE» para activar el UVC para esterilizar las puntas. Sólo podrá activar el esterilizador si la puerta está bien cerrada. Deja de funcionar si se abre la puerta durante el ciclo de esterilización. El esterilizador funciona durante 2 minutos por ciclo y luego se apaga automáticamente.

Depósito de UV

Apagar la luz UV cuando el depósito de almacenamiento esté abierto

◆Limpieza del depósito

1. Tire de la placa fija hasta que se libere del depósito, ver imagen ⑬.
2. Saque el filtro para enjuagarlo con agua limpia y después séquelo al aire libre, ver imagen ⑭.
3. Limpie el interior del depósito con un paño húmedo, ver imagen ⑮.
4. Después de la limpieza, ensamble todos los accesorios de nuevo en su lugar.

Presione | Levante con pinza

◆Opción de calentador de agua

Para las personas con dientes sensibles, se recomienda limpiar los dientes con agua tibia. Pulse el botón "HEAT" del panel de control para iniciar el calentar el agua y una temperatura en un rango de 37℃-39℃ (96℉-99℉). Ver imagen⑯.

Toque ligero

INSTRUCCIÓN DE LAS PUNTAS

Punta Clásica

Para uso general y para eliminar a fondo los restos de comida, el sarro dental y las manchas entre los dientes y por debajo de la línea de las encías, que ha demostrado ser 2 veces más eficaz que el hilo dental para mejorar la salud de las encías.

PRECAUCIONES DE SÉCURITÉ

- El aparato no debe ser alimentado por SELV.
- Este aparato contiene pilas no reemplazables.
- No desmonte, modifique o repare el aparato usted mismo sin supervisión.
- Los irrigadores bucales pueden ser utilizados por niños a partir de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas o falta de experiencia y conocimientos bajo supervisión.
- Los niños no juegan con el electrodoméstico

1. Botón ON/OFF
2. Botón de limpieza
3. Botón de desinfección UV
4. Modo normal
5. Modo pulso
6. Modo infantil

Panel de control | Zona de limpieza

DESCRIPCIÓN DEL PRODUCTO

1. Depósito
2. Tubo de agua
3. Empuñadura Tapa inferior
4. Indicador luminoso
5. Empuñadura
6. Botón « + » de presión
7. Botón « + » de presión
8. Botón de encendido/apagado
9. Punta del chorro
10. Botón de expulsión de la punta
11. Panel de control
12. Tapa del depósito (placa fija)
13. Tapa del depósito (placa móvil)
14. Luz UV Desinfectante
15. Almacén de puntas
16. Filtro de agua

Depósito de almacenamiento de puntas para una fácil extracción | Punta para limpiar la placa dental, ideal para implantes, la corona y el puente | Punta para limpiar la lengua, ideal para eliminar la suciedad de la lengua | Punta para limpiar las encías, ideal para masajear las encías

POUR COMMENCER

◆Alimentation de l'appareil

1. Assurez-vous que l'aspect du produit, la fiche d'alimentation et le cordon d'alimentation sont intacts.
2. Branchez la fiche sur l'alimentation, voir l'images ① et ②.

◆Préparation du réservoir

1. Retirez le réservoir comme indiqué sur les images③et④.
2. Ouvrez le couvercle du réservoir et remplissez-le d'eau tiède en utilisant les graduations comme référence de volume, comme indiqué sur l'image⑤. Il est recommandé de nettoyer le réservoir avant la première utilisation.
3. Replacez le réservoir sur la base, appuyez fermement et fermez le couvercle.

◆Conseils d'insertion et de retrait

1. Insérez l'embout au centre de l'extrémité de la poignée, en appuyant fermement jusqu'à ce qu'il s'enclenche, comme illustré sur l'image⑥. Tirez doucement sur l'embout pour vérifier qu'il est bien verrouillé.
2. Pour retirer l'embout du manche, appuyez sur le bouton d'éjection situé sur la poignée, comme indiqué sur l'image⑦.

◆Réglage de la pression

1. Lorsque le mode est sélectionné, appuyez brièvement sur le bouton de démarrage / arrêt (bouton rond) situé sur la poignée pour commencer à pulvériser de l'eau.
2. Pendant l'utilisation, vous pouvez arrêter l'écoulement de l'eau à tout moment en appuyant sur le bouton rond.
3. Utilisez les touches « + » ou « - » sur la poignée pour régler le niveau de pression.

◆Commencez à nettoyer votre bouche

Placez toujours l'embout dans votre bouche avant de mettre l'appareil en marche. Penchez-vous au-dessus de l'évier et fermez légèrement les lèvres pour éviter les éclaboussures tout en permettant à l'eau de s'écouler de la bouche dans l'évier. Mettez l'appareil s