


Space Rocket Music Projector Lamp




EN FR DE IT ES JA




Product Name: Space Rocket Music Projector Lamp
Product Model: M9
Material: ABS/PC
Weight: ≈425g
Battery Capacity: 200mAh
Input: USB DC5V/2A (Max)
Product size: 118×119×148mm

EN FR DE IT ES JA




- [illegible]

EN FR DE IT ES JA




- | | |
|---|--|
| ① Power On/Off | ⑩ Volume up |
| ② Rhythmic mode switch
(Speaker and white noise) | ⑪ Previous song |
| ③ Star projection | ⑫ Play/Pause |
| ④ Aaxos projection (3 modes) | ⑬ Next song |
| ⑤ White noise switch (buses, waves,
rain, insects, birds, fire, wind chimes) | ⑭ Decrease alarm digits |
| ⑥ Decreased brightness of the Aaxos | ⑮ Set alarm |
| ⑦ Aaxos with/voluer switch | ⑯ Increase alarm digits |
| ⑧ Aaxos brightness increases | ⑰ Decrease time digit(s) (when setting time) |
| ⑨ Volume down | ⑱ Set time |
| ⑪ Speaker On/Off | ⑲ Increase time digit(s) (when setting time) |
| | ⑳ Set timer to 30 minutes, 60 minutes |

EN FR DE IT ES JA




Nom du produit :
 lampe de projection de musique Space Rocker
 Modèle de produit : M9
 Matériau : ABS/PC
 Poids : ≈ 425 g
 Capacité de la batterie : 200 mAh
 Entrée : USB DC5V/2A (Max)
 Taille du produit : 118 × 119 × 148 mm


EN **FR** DE IT ES JA




- [illegible]

EN **FR** DE IT ES JA


- | | |
|--|---|
| ① Microchénite | ② Augmentation du volume |
| ③ Commutateur de mode rythmique
(Haut-parleur et bruit blanc) | ④ Choix précédente |
| ⑤ Projection d'étoiles | ⑤ Lecture/Pause |
| ⑥ Projection d'oursins (2 modes) | ⑥ Choix suivante |
| ⑦ Commutateur de bruit blanc | ⑦ Diminution des chiffres de l'heure |
| (Lumière, vagues, pluie, insectes, étoiles,
ventilateurs, carillons sonnés) | ⑧ Réglage de l'heure |
| ⑧ Diminution de la luminosité de l'heure | ⑧ Augmentation des chiffres de l'heure |
| ⑨ Commutateur d'alarme | ⑨ Diminution des chiffres de l'heure |
| ⑩ Commutateur de couleur | ⑩ Réglage de l'heure |
| ⑪ Augmentation de la luminosité de l'heure | ⑪ Augmentation des chiffres de l'heure |
| ⑫ Réduction du volume | ⑫ Diminution des chiffres de l'heure |
| ⑬ Microchénite du haut-parleur | ⑬ Réglage de la minuterie sur 30 minutes
ou 60 minutes |

EN FR **DE** IT ES JA


Produktname: Space Rocket Musik Projektor Lampe
Produktmodell: M9
Material: ABS/PC
Gewicht: ≈425 g
Akkukapazität: 200 mAh
Eingang: USB DC5V/2A (max.)
Produktgröße: 118 × 119 × 148 mm

EN FR **DE** IT ES JA

- [illegible]


EN FR **DE** IT ES JA

- | | |
|---|---|
| ① Ein-Ausschalten | ⑩ Lautstärke erhöhen |
| ② Rhythmusmedienwechsler
(Lautsprecher und weiches Tauschen) | ⑪ Vorherigen Lied |
| ③ Stoppfunktion | ⑫ Wiederholungs/Pause |
| ④ Ansperrfunktion (Zurück) | ⑬ Nächstes Lied |
| ⑤ Weiches Tauschen
(Flammen, Meeres, Regen, Brücken,
Vogel, Ventilatoren, Windspiele) | ⑭ Alarmschritt verringern |
| ⑥ Verringerung der Lautstärke | ⑮ Alarm einstellen |
| ⑦ Anzeichen für Fehlfunktion | ⑯ Alarmschritt erhöhen |
| ⑧ Ausschaltfunktion erhöht sich | ⑰ Zeit einstellen |
| ⑨ Lautstärke verringern | ⑱ Zeit-Pfeil erhöhen
(jein Eindeutigkeit der Zeit) |
| ⑫ Lautsprecher-Einstellung | ⑲ Timer auf 30 Minuten, 60 Minuten
einstellen |

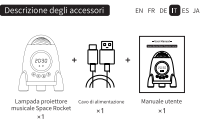


Specifiche

Nome prodotto:
Lampada proiettore musicale Space Rocket
Modello prodotto: M9
Materiale: ABS/PC
Peso: 425g
Capacità batteria: 200mAh
Ingresso: USB DC5V/2A (Max)
Dimensioni prodotto: 118 x 119 x 148mm

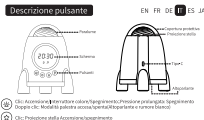


② Innovazione modalità di lavoro

- | | |
|--|---|
| ① Accensione/apagamento | ⑤ Volume alto |
| ② Interruttore modalità ritmo | ⑥ Controllo precedente |
| ③ Interruttore modalità ritmo | ⑦ Riproduzione/Pausa |
| ④ Presetone radio | ⑧ Riproduzione successiva |
| ⑤ Presetone sintonia (FM/AM) | ⑨ Diminuisce il volume |
| ⑥ Interruttore sintonia bianca (flamme, onde, pioggia, uccelli, uccelli, venturi, campane, ecc.) | ⑩ Interruttore allarme |
| ⑦ Livello di sintonia della radio | ⑪ Aumenta il volume |
| ⑧ Interruttore antirumore/antirumore | ⑫ Aumenta il tempo (quando si preme il tasto) |
| ⑨ La luminosità del display aumenta | ⑬ Interruttore Fast |
| ⑩ Volume basso | ⑭ Aumenta il tempo (quando si preme il tasto) |
| ⑪ Riproduzione - On/Off | ⑮ Interruttore a timer (da 30 minuti a 90 minuti) |

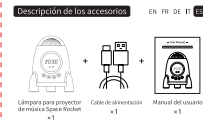

Especificación

Nombre del producto:
Lámpara para proyector de música Space Rocket
Modelo del producto: M9
Material: ABS/PC
Peso: ≈425 g
Capacidad de la batería: 200 mAh
Entrada: USB DC5V/2A (máx.)
Tamaño del producto: 118 × 119 × 148 mm

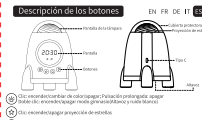


Modo de configuración de
Cuando se enciende la alarma, 1

Ⓟ Interrupción de ruido/baja
El motor, el ventilador, las ventilaciones, campanas de extracción
Pulsación prolongada en modo ruido/baja: apagar
Pulsación prolongada: encendido/apagado de altavoces
Pulsación breve: cuando el teléfono está conectado, reproducción/pausa
Botón de: cuando el teléfono está conectado, reproducción/pausa
El altavoz interno automáticamente se mueve de izquierda a derecha después de encendido. Después
"off" en la programación de consumo del dispositivo móvil y constante
El altavoz interno automáticamente se mueve de izquierda a derecha después de 20 segundos.
Este producto tiene una función de apagado automático de 4 horas. Después de 4 horas de
funcionamiento continuo, se apagará automáticamente.




① Encendido/apagado
② Interruptor de modo de

- | | |
|---|---|
| (1) Escudo/pagado | (6) Serb volumen |
| (2) Intermor de modo de ritmo
(Alavez y no balanc) | (7) Caeñio anterior |
| (3) Protección de extrínscas | (8) Reproduch/Passa |
| (4) Preyección de aurora (2 modos) | (9) Siguiente canchale |
| (5) Intermor de rubio balanc
Jurnal, des, fura, inocso, pilavos,
ventadores, canchale de vortez | (10) Reducir los dígitos de la aurora |
| (6) Intermor de aurora/Intermor de color | (11) Establecer la aurora |
| (7) Aumento del brillo de la aurora | (12) Aumentar los dígitos de la aurora |
| (8) Bajar volumen | (13) Reducir los dígitos del tiempo |
| (9) Aftivar escudo/pagado | (14) Aumentar los dígitos del tiempo
(si configurar el tiempo) |
| | (15) Establecer el tiempo corrido
(si configurar el tiempo)
1 minuto, 5 minutos |

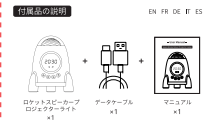


製品パラメータ

製品名: ロケットスピーカープロジェクトランブ
製品モデル: M9
材質: ABS/PC
正味重量: 約425g
バッテリー容量: 200mAh
入力: USB DC5V/2A (最大)
商品サイズ: 118×119×148mm

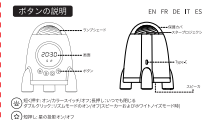

アラームを調整するときに
目覚まし時刻を設定する

- [illegible]

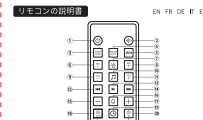

⑤ マスタースイッチ

- | | |
|---|--|
| ① マスターズスイッチ | ④ 初回のみ |
| ② リズム・モーズスイッチ | ⑤ 初回・10分限定 |
| (スピーカー・バックライト/ワイズモード・90度) | ⑥ 夜のみ |
| ③ ①の逆 | ⑦ 目覚まし時計の数が異なる |
| ④ オートロック(リモート) | ⑧ 目覚まし時計の数字が異なる |
| ⑤ オートロック(リモート) | ⑨ 目覚まし時計の数字が固定 |
| (「A」,「B」,「C」,「D」,「E」,「F」,「G」,「H」,「I」,「J」,「K」,「L」,「M」,「N」,「O」,「P」,「Q」,「R」,「S」,「T」,「U」,「V」,「W」,「X」,「Y」,「Z」,「0」,「1」,「2」,「3」,「4」,「5」,「6」,「7」,「8」,「9」) | ⑩ 時刻の数字が異なる |
| ⑥ オートロックの解除が可能な | ⑪ 時刻の数字が異なる(機能) |
| ⑦ オートロックの解除が可能な | ⑫ 時刻の数字が異なる |
| ⑧ オートロックの解除が可能な | ⑬ 時刻の数字が異なる(機能) |
| ⑨ 両向き | ⑭ タイマーを30分・60分・90分・120分・150分・180分・210分・240分・270分・300分・330分・360分・390分・420分・450分・480分・510分・540分・570分・600分・630分・660分・690分・720分・750分・780分・810分・840分・870分・900分・930分・960分・990分・1020分・1050分・1080分・1110分・1140分・1170分・1200分・1230分・1260分・1290分・1320分・1350分・1380分・1410分・1440分・1470分・1500分・1530分・1560分・1590分・1620分・1650分・1680分・1710分・1740分・1770分・1800分・1830分・1860分・1890分・1920分・1950分・1980分・2010分・2040分・2070分・2100分・2130分・2160分・2190分・2220分・2250分・2280分・2310分・2340分・2370分・2400分・2430分・2460分・2490分・2520分・2550分・2580分・2610分・2640分・2670分・2700分・2730分・2760分・2790分・2820分・2850分・2880分・2910分・2940分・2970分・3000分・3030分・3060分・3090分・3120分・3150分・3180分・3210分・3240分・3270分・3300分・3330分・3360分・3390分・3420分・3450分・3480分・3510分・3540分・3570分・3600分・3630分・3660分・3690分・3720分・3750分・3780分・3810分・3840分・3870分・3900分・3930分・3960分・3990分・4020分・4050分・4080分・4110分・4140分・4170分・4200分・4230分・4260分・4290分・4320分・4350分・4380分・4410分・4440分・4470分・4500分・4530分・4560分・4590分・4620分・4650分・4680分・4710分・4740分・4770分・4800分・4830分・4860分・4890分・4920分・4950分・4980分・5010分・5040分・5070分・5100分・5130分・5160分・5190分・5220分・5250分・5280分・5310分・5340分・5370分・5400分・5430分・5460分・5490分・5520分・5550分・5580分・5610分・5640分・5670分・5700分・5730分・5760分・5790分・5820分・5850分・5880分・5910分・5940分・5970分・6000分・6030分・6060分・6090分・6120分・6150分・6180分・6210分・6240分・6270分・6300分・6330分・6360分・6390分・6420分・6450分・6480分・6510分・6540分・6570分・6600分・6630分・6660分・6690分・6720分・6750分・6780分・6810分・6840分・6870分・6900分・6930分・6960分・6990分・7020分・7050分・7080分・7110分・7140分・7170分・7200分・7230分・7260分・7290分・7320分・7350分・7380分・7410分・7440分・7470分・7500分・7530分・7560分・7590分・7620分・7650分・7680分・7710分・7740分・7770分・7800分・7830分・7860分・7890分・7920分・7950分・7980分・8010分・8040分・8070分・8100分・8130分・8160分・8190分・8220分・8250分・8280分・8310分・8340分・8370分・8400分・8430分・8460分・8490分・8520分・8550分・8580分・8610分・8640分・8670分・8700分・8730分・8760分・8790分・8820分・8850分・8880分・8910分・8940分・8970分・9000分・9030分・9060分・9090分・9120分・9150分・9180分・9210分・9240分・9270分・9300分・9330分・9360分・9390分・9420分・9450分・9480分・9510分・9540分・9570分・9600分・9630分・9660分・9690分・9720分・9750分・9780分・9810分・9840分・9870分・9900分・9930分・9960分・9990分・10020分・10050分・10080分・10110分・10140分・10170分・10200分・10230分・10260分・10290分・10320分・10350分・10380分・10410分・10440分・10470分・10500分・10530分・10560分・10590分・10620分・10650分・10680分・10710分・10740分・10770分・10800分・10830分・10860分・10890分・10920分・10950分・10980分・11010分・11040分・11070分・11100分・11130分・11160分・11190分・11220分・11250分・11280分・11310分・11340分・11370分・11400分・11430分・11460分・11490分・11520分・11550分・11580分・11610分・11640分・11670分・11700分・11730分・11760分・11790分・11820分・11850分・11880分・11910分・11940分・11970分・12000分・12030分・12060分・12090分・12120分・12150分・12180分・12210分・12240分・12270分・12300分・12330分・12360分・12390分・12420分・12450分・12480分・12510分・12540分・12570分・12600分・12630分・12660分・12690分・12720分・12750分・12780分・12810分・12840分・12870分・12900分・12930分・12960分・12990分・13020分・13050分・13080分・13110分・13140分・13170分・13200分・13230分・13260分・13290分・13320分・13350分・13380分・13410分・13440分・13470分・13500分・13530分・13560分・13590分・13620分・13650分・13680分・13710分・13740分・13770分・13800分・13830分・13860分・13890分・13920分・13950分・13980分・14010分・14040分・14070分・14100分・14130分・14160分・14190分・14220分・14250分・14280分・14310分・14340分・14370分・14400分・14430分・14460分・14490分・14520分・14550分・14580分・14610分・14640分・14670分・14700分・14730分・14760分・14790分・14820分・14850分・14880分・14910分・14940分・14970分・15000分・15030分・15060分・15090分・15120分・15150分・15180分・15210分・15240分・15270分・15300分・15330分・15360分・15390分・15420分・15450分・15480分・15510分・15540分・15570分・15600分・15630分・15660分・15690分・15720分・15750分・15780分・15810分・15840分・15870分・15900分・15930分・15960分・15990分・16020分・16050分・16080分・16110分・16140分・16170分・16200分・16230分・16260分・16290分・16320分・16350分・16380分・16410分・16440分・16470分・16500分・16530分・16560分・16590分・16620分・16650分・16680分・16710分・16740分・16770分・16800分・16830分・16860分・ |

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

NOTE: This equipment does not contain a frequency synthesizer and is not subject to FCC Part 15.247. This equipment has been designed and built to comply with the rules for Class B digital devices. Normal operation of this equipment may cause radio interference to other licensed devices, but this equipment has been designed to minimize such interference in a residential installation. Any changes or modifications to the printed instructions may void the user's authority to operate this equipment.

NOTE: This equipment does not contain a frequency synthesizer and is not subject to FCC Part 15.247. This equipment has been designed and built to comply with the rules for Class B digital devices. Normal operation of this equipment may cause radio interference to other licensed devices, but this equipment has been designed to minimize such interference in a residential installation. Any changes or modifications to the printed instructions may void the user's authority to operate this equipment.

Interference Caution: This device complies with the following interference requirements:

- **1** This equipment does not cause harmful interference to radio or television reception.
- **2** This equipment is designed, constructed, and tested to minimize radio frequency interference to other licensed devices.
- **3** This equipment does not cause interference to any of the following radio services:
 - **A**—Frequencies below 30 MHz (except for the 30-90 MHz band).
 - **B**—The 30-90 MHz band.
 - **C**—Frequencies above 30 MHz, except for the 30-90 MHz band.
 - **D**—The 30-90 MHz band.
- **4**—Increase the separation between the equipment and receiver.
- **5**—Turn off the equipment.
- **6**—Turn off the equipment.
- **7**—Turn off the equipment.
- **8**—Turn off the equipment.
- **9**—Turn off the equipment.
- **10**—Turn off the equipment.
- **11**—Turn off the equipment.
- **12**—Turn off the equipment.
- **13**—Turn off the equipment.
- **14**—Turn off the equipment.
- **15**—Turn off the equipment.
- **16**—Turn off the equipment.
- **17**—Turn off the equipment.
- **18**—Turn off the equipment.
- **19**—Turn off the equipment.
- **20**—Turn off the equipment.
- **21**—Turn off the equipment.
- **22**—Turn off the equipment.
- **23**—Turn off the equipment.
- **24**—Turn off the equipment.
- **25**—Turn off the equipment.
- **26**—Turn off the equipment.
- **27**—Turn off the equipment.
- **28**—Turn off the equipment.
- **29**—Turn off the equipment.
- **30**—Turn off the equipment.
- **31**—Turn off the equipment.
- **32**—Turn off the equipment.
- **33**—Turn off the equipment.
- **34**—Turn off the equipment.
- **35**—Turn off the equipment.
- **36**—Turn off the equipment.
- **37**—Turn off the equipment.
- **38**—Turn off the equipment.
- **39**—Turn off the equipment.
- **40**—Turn off the equipment.
- **41**—Turn off the equipment.
- **42**—Turn off the equipment.
- **43**—Turn off the equipment.
- **44**—Turn off the equipment.
- **45**—Turn off the equipment.
- **46**—Turn off the equipment.
- **47**—Turn off the equipment.
- **48**—Turn off the equipment.
- **49**—Turn off the equipment.
- **50**—Turn off the equipment.
- **51**—Turn off the equipment.
- **52**—Turn off the equipment.
- **53**—Turn off the equipment.
- **54**—Turn off the equipment.
- **55**—Turn off the equipment.
- **56**—Turn off the equipment.
- **57**—Turn off the equipment.
- **58**—Turn off the equipment.
- **59**—Turn off the equipment.
- **60**—Turn off the equipment.
- **61**—Turn off the equipment.
- **62**—Turn off the equipment.
- **63**—Turn off the equipment.
- **64**—Turn off the equipment.
- **65**—Turn off the equipment.
- **66**—Turn off the equipment.
- **67**—Turn off the equipment.
- **68**—Turn off the equipment.
- **69**—Turn off the equipment.
- **70**—Turn off the equipment.
- **71**—Turn off the equipment.
- **72**—Turn off the equipment.
- **73**—Turn off the equipment.
- **74**—Turn off the equipment.
- **75**—Turn off the equipment.
- **76**—Turn off the equipment.
- **77**—Turn off the equipment.
- **78**—Turn off the equipment.
- **79**—Turn off the equipment.
- **80**—Turn off the equipment.
- **81**—Turn off the equipment.
- **82**—Turn off the equipment.
- **83**—Turn off the equipment.
- **84**—Turn off the equipment.
- **85**—Turn off the equipment.
- **86**—Turn off the equipment.
- **87**—Turn off the equipment.
- **88**—Turn off the equipment.
- **89**—Turn off the equipment.
- **90**—Turn off the equipment.
- **91**—Turn off the equipment.
- **92**—Turn off the equipment.
- **93**—Turn off the equipment.
- **94**—Turn off the equipment.
- **95**—Turn off the equipment.
- **96**—Turn off the equipment.
- **97**—Turn off the equipment.
- **98**—Turn off the equipment.
- **99**—Turn off the equipment.
- **100**—Turn off the equipment.

The device has been evaluated to meet specific FCC equipment requirements. The device does not contain a frequency synthesizer and is not subject to FCC Part 15.247.

After-Sales Contact:
Intel Wireless Communications, Inc.
1955 N. Wolfe Rd., Suite 300
Folsom, CA 95630
Tel: 916.353.3000
Fax: 916.353.3001
Email: wireless@intel.com
Web: www.intel.com/wireless