


Selfie Stick

User Manual




- ① Phone Clip
- ② Telescopic Shaft
- ③ Indicator Light
- ④ Built-in Tripod
- ⑤ Locking Knob
- ⑥ Remote Control
- ⑦ Shutter Button
- ⑧ Fill Light (options)


Selfie Stick Introductions

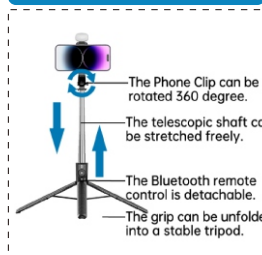

Fill Light (options)

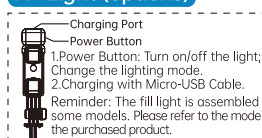

Detachable Remote

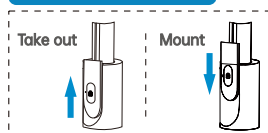

Quick Steps for Remote

Step 1: On your phone, tap Settings > Bluetooth, and then turn on the Bluetooth.

Step 2: Hold down the shutter button (about 2s) until indicator light starts flashing to turn on the remote control.

Step 3: Once the Bluetooth name of "VIPs" appears in the display, select it and tap "pair".

Step 4: Press the Shutter button to take photos.

Step 5: Hold down the shutter button (about 2s) until indicator light goes out to turn off the remote control.


Reminder: The remote control is compatible with Android 4.3, IOS 5.0 and later.

Replace the Battery

Reminder: The Bluetooth remote control has two types. Please follow the corresponding steps to replace the battery according to the type of your purchased product.


1. Covering Type

Force apart the upper shell at the groove on the side of the remote with fingernail, then replace the battery, and finally fasten the shell back.



2. Sliding Type

Slide the back cover in the direction of the arrow as shown, then replace a new battery, and finally insert the cover back.



Troubleshooting:

1. If your phone is unable to connect to the remote.
 - Delete the Bluetooth pairing on your phone, reboot the remote and start a new device search.
 2. If your Android phone can't take photos when you press the shutter button,
 - Open the camera App and change the "Volume button function" to "Default" or "Shutter".
- Attention:**
1. Don't store the product in icy or damp environment.
 2. Don't place the product in the heat.
 3. When replacing the battery, place the positive pole "+" of the battery outwards.
 4. This product contains a battery, please place it out of the touch of infants to prevent children from swallowing it by mistake.
 5. Don't use the product in restricted district to avoid violating public order.

Thanks for your support !



Certificated




Selfie Stick

Benutzerhandbuch




- ① Handyhalter
- ② Verlängerungsstab
- ③ Anzeigelicht
- ④ Stativ
- ⑤ Verschlussmechanismus
- ⑥ Bluetooth - Fernbedienung
- ⑦ Aufnahme - Taste
- ⑧ Fülllicht (optional)


Funktionsbeschreibung des Selfiesticks

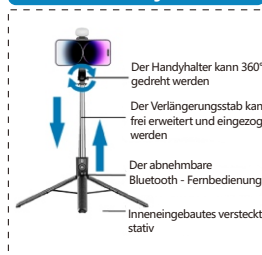

Aufhellungslicht (optional)

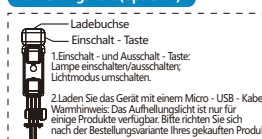

Das Anbringen und Abnehmen der Bluetooth - Fernbedienung

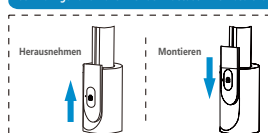

Schritte zum Gebrauch der Bluetooth - Fernbedienung

Schritt 1: Auf Ihrem Handy klicken Sie nacheinander auf „Einstellungen“ > „Bluetooth“ und schalten das Handy - Bluetooth ein.

Schritt 2: Halten Sie die Aufnahme - Taste gedrückt (ca. 2 Sekunden), bis die Indikatorlampe blinkt und die Fernbedienung erfolgreich eingeschaltet ist.

Schritt 3: Wenn das Bluetooth - Gerät mit dem Namen "VIPs" gefunden wird, klicken Sie darauf und wählen Sie "Paaren" aus.

Schritt 4: Öffnen Sie die Kamera - App und drücken Sie die Aufnahme - Taste, um Fotos oder Videos aufzunehmen.

Schritt 5: Halten Sie die Aufnahme - Taste gedrückt (ca. 3 Sekunden) bis die Indikatorlampe erlischt und die Fernbedienung erfolgreich ausgeschaltet ist.


Warnhinweis: Diese Bluetooth - Fernbedienung ist kompatibel mit Android 4.3, iOS 5.0 und höheren Systemversionen.

Schritte zum Austausch der Batterie

Warnhinweis: Der Bluetooth - Fernbedienung dieses Produkts ist in zwei Modellen erhältlich. Wählen Sie die entsprechenden Schritte zum Austausch der Batterie je nach Stil des von Ihnen gekauften Produkts.


1. Klappdeckel - Typ

Mit Hilfe eines Tools (z. B. einer Plastikfolie, einer Fingernagel) nehmen Sie die obere Hülse am Rollenschnitt der Seite der Fernbedienung ab, entnehmen Sie die Batterie und tauschen sie aus. Anschließend setzen Sie die obere Hülse an die passende Position und klappen sie zu.



2. Schiebedeckel - Typ

Schieben Sie den Rückdeckel in Richtung der auf dem Bild dargestellten Pfeile, nehmen Sie die Batterie heraus und tauschen sie aus. Anschließend montieren Sie den Rückdeckel wieder.



Störungsbehebung

1. Die Bluetooth - Fernbedienung lässt sich nicht einschalten.
 - Tauschen Sie die Batterie gegen eine neue aus.
 2. Bluetooth kann nicht verbunden werden / funktioniert nicht richtig, nachdem die Fernbedienung eingeschaltet wurde.
 - Löschen Sie die Bluetooth - Paarung auf Ihrem Handy, starten Sie die Bluetooth - Fernbedienung neu und paaren Sie sie erneut.
 3. Wenn die Fernbedienung auf einem Android - Handy nicht zum Fotografieren genutzt werden kann.
 - I Wenn die Aufnahme - Taste zum Verändern der Lautstärke verwendet werden kann, Öffnen Sie die Kamera - App und ändern Sie die Funktion der Lautstärke - Taste in die Standardeinstellung oder in die Funktion „Fotografieren“. Dann können Sie mit der Fernbedienung Fotos aufnehmen.
 - II Wenn die Aufnahme - Taste nicht zum Verändern der Lautstärke verwendet werden kann, Führen Sie die Schritte in Problem 2 erneut aus, um die Paarung und Verbindung wiederherzustellen.
- Hinweise**
1. Lagern Sie das Produkt nicht in einer Umgebung mit niedriger Temperatur oder hoher Feuchtigkeit auf.
 2. Lagern Sie das Produkt nicht in einer Umgebung mit starkem Sonnenstrahlung oder Hitze, wie beim Braten über einem Feuer.
 3. Verwenden Sie das Produkt nicht an Orten, an denen die Verwendung von Geräten eingeschränkt ist, um das Vergehen gegen die öffentliche Ordnung zu vermeiden.
 4. Wenn Sie die Batterie austauschen, legen Sie die Batterie mit der Plus - Seite nach außen. Ein Gegenüberlegen der Plus - und Minus - Pole ist verboten.
 5. Dieses Produkt enthält eine Batterie. Legen Sie es an einem Ort auf, den Kleinkinder nicht erreichen können, um zu vermeiden, dass Kinder es versehentlich verschlucken.

Vielen Dank für Ihre Unterstützung



Genehmigungszeugnis



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.