



Lumina210

PARTY SPEAKER
OPERATING
INSTRUCTIONS



Built-In BT



USB Input



Micro SD



Radio Input



TRUE
WIRELESS
STEREO



BT
cut off



Gitar Input



LED Light


Content

Content	1
Technical Specifications	1
Safety Precautions	2
Top Panels operating instructions	3
operating instructions for Remote controllers	4
TWS function Operation	5
Operation wireless microphone	5
Instruction & BT Operation	6

Technical Specifications


- Power: 200W
- Impedance: 4 Ω
- Input Sensitivity: 96 $\pm$ 3 dB
- Frequency Response: 50-18K Hz
- S/N Ratio: $\geq$ 70dB
- Drive Unit: 1"+2x10"
- BT Name: Lumina210
- Voltase: 100-240V~ 50/60Hz

Safety Precautions

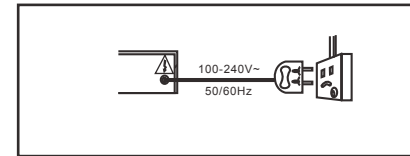


1.Power

When working/recharging under AC power, please operate only under the power indicated on the instructions marked on the device.

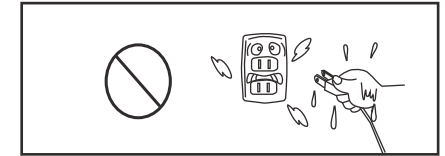


2.Caution to avoid Electrical Shocks

NEVER plug or unplug the device with wet hands to avoid electrical shock. Do not place the device on a wet area or under the rain or in a place where it can collect any liquid on its surface. Do not place any container with water or any other liquid on top of the device.

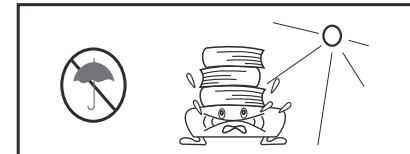


3.Do not ballast heavy objects

Do not place any items on top of the device. This machine cannot bear any load. Avoid direct sunlight and keep it away from any heating source as stoves, radiators, etc. Do not install in environments with dust, high temperatures, strong lights or magnetic fields, etc.

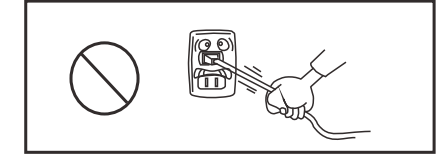


4.Power line protection

Do not pull the cord; to disconnect from the electrical outlet pull the plug. Keep the power cord away from places where it could be stepped on, pinched, or tripped over. Do not place any heavy objects over the cord.

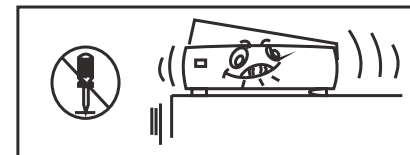


5. Do not dismantle the case. Serious electric shock may occur if you touch internal parts of the device. Prevent any metal pieces and liquids from dropping inside the device openings.

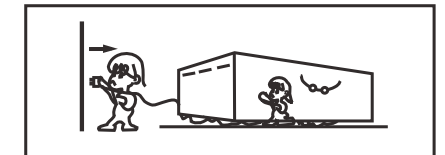

6.Power line protection

When the unit is completely powered off, please disconnect the power cord, the plug is used for the power cut-off device and must be kept easy to operate.

Top Panels operating instructions

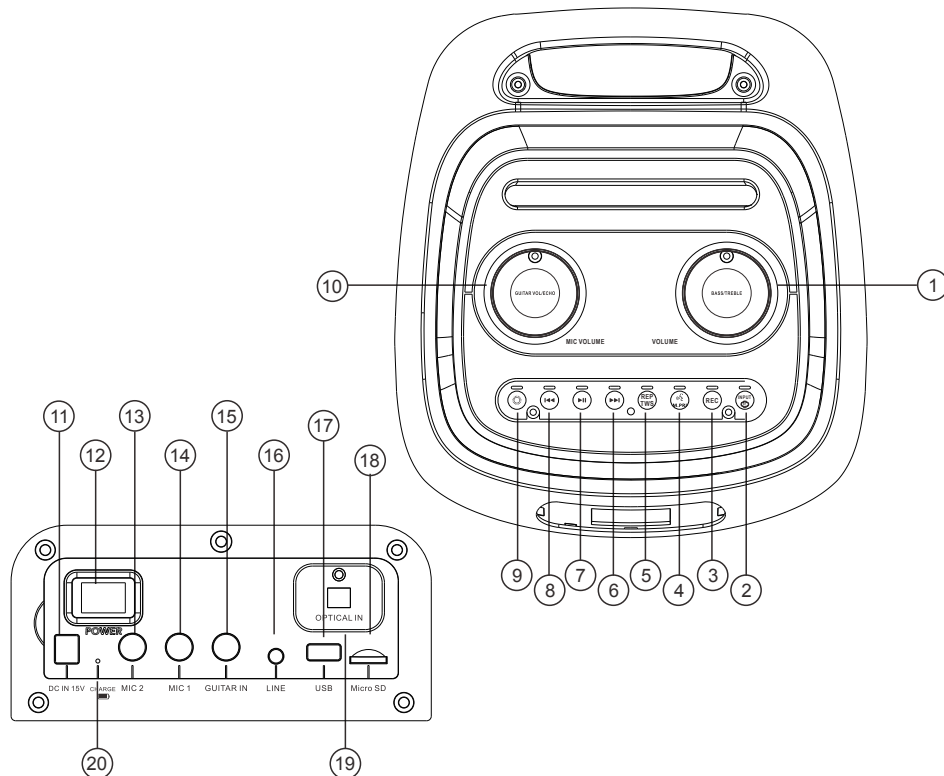

1. Volume control

Press it to enter into the Treble volume adjust
Press again to enter into the Bass volume adjust

2. Short press input key

BT cut off
press it for 3 seconds

3. REC key

4. Microphone priority

Short press repeat key
TWS-press it for 3 seconds

6. Next key & FM channel + key

7. Play/Pause key & FM scan key

8. Previous key & FM channel - key

9. LED switch

10. Microphone volume control

Press it to enter into the Echo volume adjust
Press again to enter into the Guitar volume adjust

11. DC15V Adapter input

12. Power switch

13. Microphone2 input

14. Microphone1 input

15. Guitar input

16. Line input


17. USB jack

18. Micro SD jack

19. Optical input jack

20. Charging indicator light

Operating instructions for Remote controllers

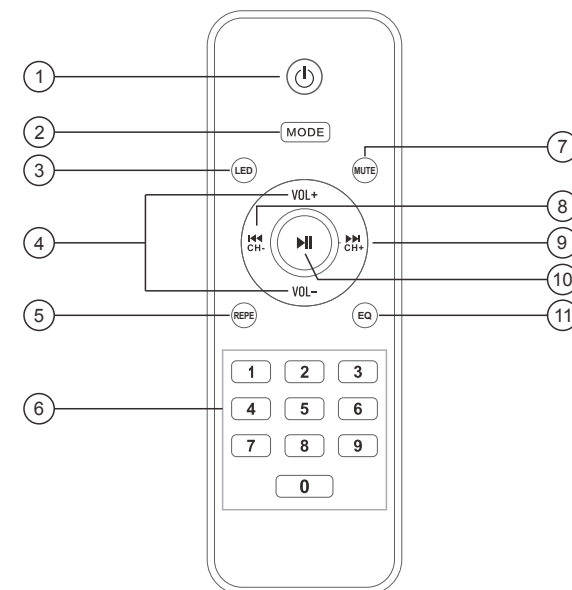

1. Standby Key

2. Mode Key- to Select

Input Singal Source

3. LED Switch

4. Volume +/- Key

5. Repeat Key

6. Track selection key

7. Mute Key

8. Previous /FM ch-Key

9. Next /FM ch+ Key

10. Play/ Pause

11. EQ Mode Key

TWS function Operation

TRUE WIRELESS STEREO (TWS) TECHNOLOGY

TWS technology enables user to make wireless connection between two speakers which are same model and compatible with TWS. In TWS connection, two speakers will be automatically grouped to be a Stereo-speaker System which outputs the left and right channel.

HOW TO ESTABLISH

TWS CONNECTION? Reminding: Two speakers must be same model and both compatible with TWS.

1.Please switch on both speakers and select "BT" Mode;

2.Press the TWS button on the control panel of one of the speakers until you hear a Prompt sound.It becomes the main speaker (left channel), automatically searches for and connects with the other speaker (right channel). After connection, you will hear a Prompt sound

3.Connect your mobile phone or BT player to the speaker by BT. After connection, you can play music with the TWS Stereo-speaker System.

TWS MODE MANIPULATIONS In TWS mode, manipulations to the main speaker will be simultaneously effected in the other speaker, for example, volume up and down, previous and next song selection, play and pause, power on and off.

DISCONNECT TWS

Two speakers which were connected by TWS will be automatically reconnected when they are power on and both in BT mode. Long press TWS button to disconnect two speakers by TWS.

Instructions

- The battery charges for 8hours before the first use of this product.
- It must be replaced with batteries of the same specifications when needed,otherwise, the product may not work properly or be damaged.
- To extend battery life, it needs to be charged regardless of the lack of power after each use.
- The charging time depends on the battery specifications. The charging scheme (or the power supply voltage is unstable) is generally 8-16hours.
- Please keep away from the product more than 2meters from CRT display or television, because of the speaker magnet field is strong, magnetic interference causes display magnetization or discoloration phenomenon.

BT Operation

First connection of BT with cellophane

1.Turn the power on, press the "MODE" key or "INPUT" key on the panel or remote control, and switch the speaker to Bluetooth channel. Then turn on the mobile phone BT function.

2.Search the BT device list and select the BT name "Lumina210".The speaker will make a notification tone when the connection is successful.

3.Select the BT which is on BT device list.

Open the mobile phone music player and play a song. The music is transferred via BT and sound comes out through the BT speaker.

Connect to the mobile phone which already been connected before.

When the mobile phone BT is turned on, press the"MODE"and select to BT mode, the BT speaker will automatically connect to the mobile phone which is connected last time. Another way is that you can search the BT list on your mobile phone, when you find the"Lumina210", select it and connect your mobile phone to the BT speaker.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



Lumina210

PARTY SPEAKER
INSTRUCCIONES DE USO



Built-In BT



USB Input



Micro SD



Radio Input



TRUE
WIRELESS
STEREO



BT
cut off



Gitar Input



LED Light


CONTENIDO

Contenido	8
Especificaciones técnicas	8
Precauciones de seguridad	9
Instrucciones de funcionamiento de los paneles superiores	10
Instrucciones de funcionamiento para controladores remotos	11
Funcionamiento de la función TWS	12
Funcionamiento Micrófono inalámbrico	12
Funcionamiento BT	13

Especificaciones técnicas


- Potencia: 200 W
- Impedancia: 4 G
- Sensibilidad de entrada: 96+3 dB
- Respuesta de frecuencia: 50-18 K Hz
- Relación señal/ruido: ≥ 70 dB
- Unidad de control: 1"+2x10"
- Nombre de Bluetooth: Lumina210
- Voltaje: 100-240 V, 50/60 Hz

PRECAUCIONES DE SEGURIDAD

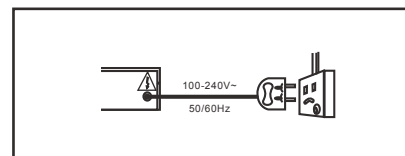


1. Alimentación

Cuando trabaje o recargue con corriente alterna, hágalo funcionar únicamente con la corriente indicada en las instrucciones marcadas en el dispositivo.

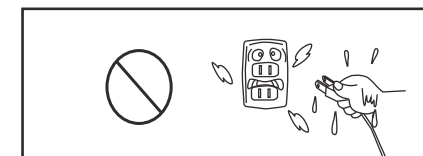


2. Precauciones para evitar descargas eléctricas Nunca enchufe ni desenchufe el dispositivo con las manos mojadas para evitar descargas eléctricas. No coloque el dispositivo en un área húmeda o bajo la lluvia o en un lugar donde pueda acumular líquido en su superficie. No coloque ningún recipiente con agua ni ningún otro líquido sobre el dispositivo.

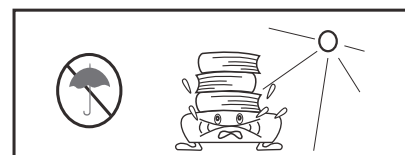


3. No lastres objetos pesados

No coloque ningún objeto sobre el dispositivo. Esta máquina no puede soportar ninguna carga. Evite la luz solar directa y manténgala alejada de cualquier fuente de calor como estufas, radiadores, etc. No la instale en entornos con polvo, altas temperaturas, luces fuertes o campos magnéticos, etc.

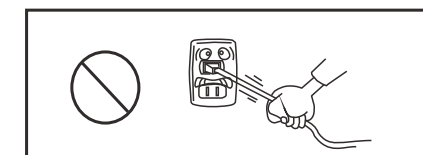


4. Protección de la línea eléctrica

No tire del cable; para desconectarlo de la toma de corriente, tire del enchufe. Mantenga el cable de alimentación alejado de lugares donde pueda pisarlo, pincharlo o tropezar con él. No coloque objetos pesados sobre el cable.

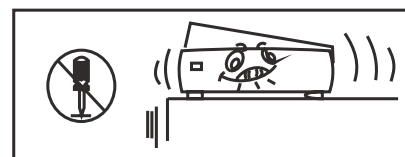

5. No desmonte la carcasa


Si toca las partes internas del dispositivo, puede sufrir una descarga eléctrica grave. Evite que caigan piezas metálicas o líquidos en las aberturas del dispositivo.

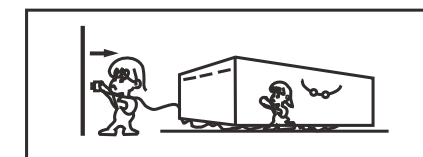

6. Protección de la línea eléctrica

Cuando la unidad esté completamente apagada, desconecte el cable de alimentación; el enchufe se utiliza como dispositivo de corte de energía y debe mantenerse en un lugar fácil de usar.


INSTRUCCIONES DE FUNCIONAMIENTO DE LOS PANELES SUPERIORES

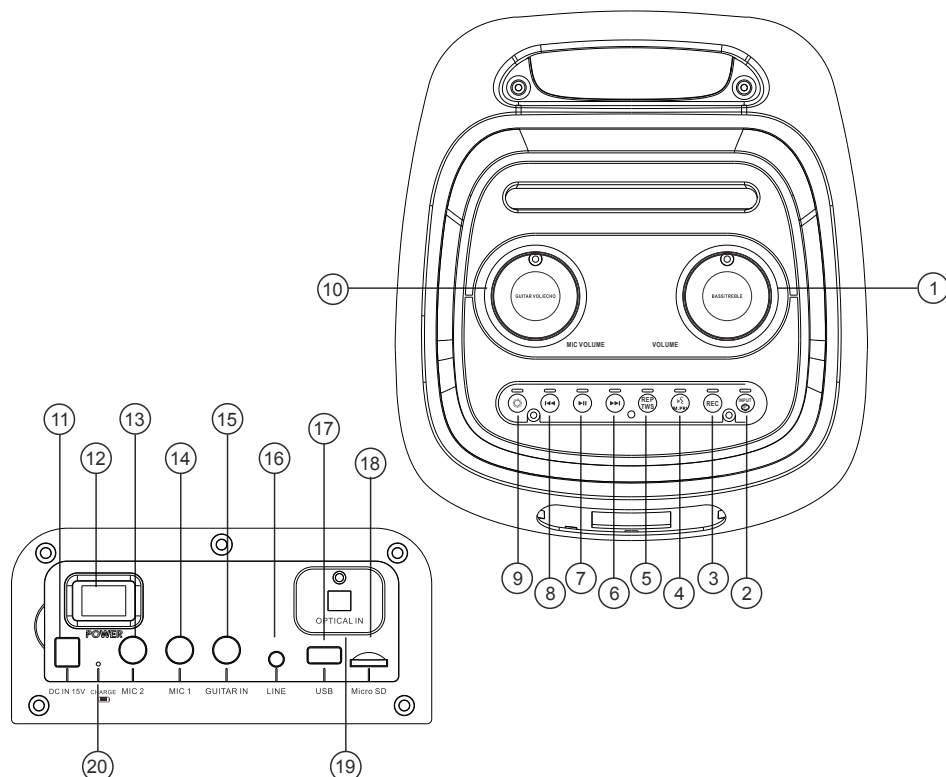

1. Control de volumen
Púlselo para entrar en el ajuste de volumen de agudos
Púlselo de nuevo para entrar en el ajuste de volumen de graves
2. Pulse brevemente la tecla de entrada BT cut off Púlsela durante 3 segundos
3. Tecla REC
4. Prioridad del micrófono
5. Pulse brevemente la tecla de repetición TWS: presiónela durante 3 segundos
6. Tecla siguiente y tecla + de canal FM
7. Tecla de reproducción/pausa y tecla de escaneo FM
8. Tecla anterior y tecla - de canal FM

9. Interruptor LED
10. Control de volumen del micrófono
Presiónelo para entrar en el ajuste de volumen de eco
Púlselo de nuevo para entrar en el ajuste de volumen de guitarra
11. Entrada de adaptador DC15V
12. Interruptor de encendido
13. Entrada de micrófono 2
14. Entrada de micrófono 1
15. Entrada de guitarra
16. Entrada de línea
17. Conector USB
18. Conector Micro SD
19. Conector de entrada óptica
20. Luz indicadora de carga

INSTRUCCIONES DE FUNCIONAMIENTO PARA CONTROLADORES REMOTOS

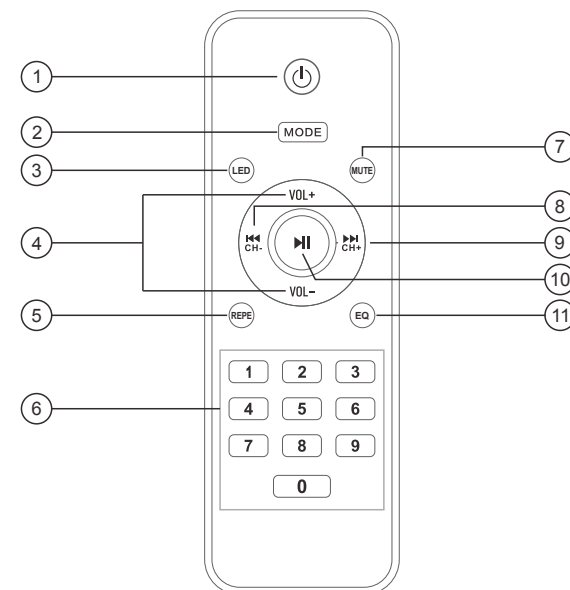

1. Tecla de modo de espera
2. Tecla de modo para seleccionar Fuente de señal de entrada
3. Interruptor LED
4. Tecla de volumen +/-
5. Tecla de repetición

6. Tecla de selección de pista
7. Tecla de silencio
8. Tecla anterior/canal FM -
9. Tecla siguiente/canal FM +
10. Reproducir/Pausa
11. Tecla de modo EQ

FUNCIONAMIENTO DE LA FUNCIÓN TWS

TECNOLOGÍA ESTÉREO VERDADERAMENTE INALÁMBRICA (TWS)

La tecnología TWS permite al usuario realizar una conexión inalámbrica entre dos altavoces del mismo modelo y compatibles con TWS. En la conexión TWS, dos altavoces se agruparán automáticamente para formar un sistema de altavoces estéreo que emite el canal izquierdo y derecho.

¿CÓMO ESTABLECER UNA CONEXIÓN TWS?

Recordatorio: los dos altavoces deben ser del mismo modelo y ambos compatibles con TWS.

1. Encienda ambos altavoces y seleccione el modo "Bluetooth";
2. Pulse el botón TWS en el panel de control de uno de los altavoces hasta que escuche un sonido de aviso. Se convierte en el altavoz principal (canal izquierdo), busca automáticamente y se conecta con el otro altavoz (canal derecho). Después de la conexión, escuchará un sonido de aviso.
3. Conecte su teléfono móvil o reproductor Bluetooth al altavoz mediante Bluetooth. Después de la conexión, puede reproducir música con el sistema de altavoces estéreo TWS.

MANIPULACIONES DEL MODO TWS: En el modo TWS, las manipulaciones del altavoz principal se efectuarán simultáneamente en el otro altavoz, por ejemplo, subir y bajar el volumen, seleccionar la canción anterior y siguiente, reproducir y pausar, encender y apagar.

DESCONECTAR TWS

Dos altavoces que estaban conectados mediante TWS se volverán a conectar automáticamente cuando se enciendan y ambos estén en modo Bluetooth. Mantenga presionado el botón TWS para desconectar dos altavoces mediante TWS.

INTRUCCIONES

- La batería se carga durante 8 horas antes del primer uso de este producto.
- Debe reemplazarse con baterías de las mismas especificaciones cuando sea necesario; de lo contrario, el producto podría no funcionar correctamente o dañarse.
- Para prolongar la vida útil de la batería, debe cargarse independientemente de la falta de energía después de la carga.
- El tiempo de carga depende de las especificaciones de la batería. El esquema de carga (o el voltaje de la fuente de alimentación es inestable) es generalmente de 8 a 16 horas.
- Mantenga el producto a más de 2 metros de la pantalla CRT o el televisor, ya que el campo magnético del altavoz es fuerte y la interferencia magnética provoca la magnetización de la pantalla o el fenómeno de decoloración.

OPERACIONES BT

Primera conexión de BT con celofán

1. Encienda el dispositivo, presione la tecla "MODE" o la tecla "INPUT" en el panel o el control remoto y cambie el altavoz al canal Bluetooth. Luego, active la función BT del teléfono móvil.
2. Busque la lista de dispositivos BT y seleccione el nombre BT "Lumina210". El altavoz emitirá un tono de notificación cuando la conexión sea exitosa.
3. Seleccione el BT que se encuentra en la lista de dispositivos BT. Abra el reproductor de música del teléfono móvil y reproduzca una canción. La música se transfiere a través de BT y el sonido sale a través del altavoz BT.

Conéctese al teléfono móvil que ya se conectó anteriormente.

Cuando el BT del teléfono móvil esté encendido, presione "MODE" y seleccione el modo BT; el altavoz BT se conectará automáticamente al teléfono móvil que se conectó la última vez. Otra forma es buscar la lista BT en su teléfono móvil, cuando encuentre "Lumina210", selecciónelo y conecte su teléfono móvil al altavoz BT.