ZNOYAF
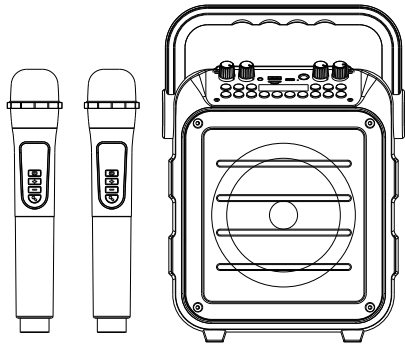
PORTABLE KARAOKE MACHINE
Model:NS8

USER MANUAL

Please read this manual thoroughly before using it and keep it for future reference.
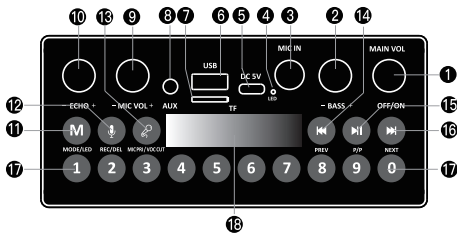

SCAN TO ACTIVATE YOUR WARRANTY

FUNCTION PANEL

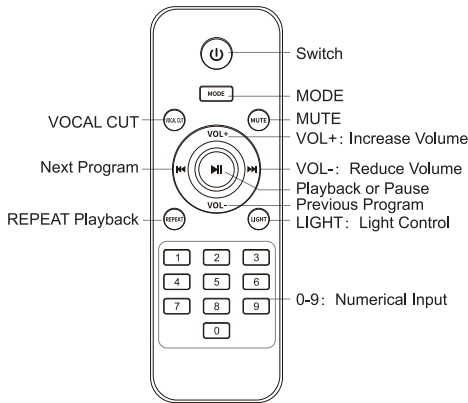|	
1.ON/OFF/MAIN VOL	10.ECHO
2.BASS	11.MODE/LED
3.MIC IN	12.REC/DEL
4.LED	13.MIC PRI/VOCAL CUT
5.DC 5V	14.PREV
6.USB	15.P/P
7.TF	16.NEXT
8.AUX	17.0-9 numeric keys
9.MIC VOL	18.Display screen

FUNCTION PANEL

1.ON/OFF/MAIN VOL： Power switch and adjust the volume.

2.BASS: Adjust the bass effect.

3.MIC IN： Connect a wired microphone or wireless microphone receiver with a 6.35mm interface.

4.LED: When charging,the red light will turn on,and when fully charged,the light will turn off.

5.DC 5V： When the speaker indicates low battery,connect a charger to charge the speaker.

6.USB : Insert a USB drive to play MP3 music files on the drive.

7.TF： Insert the TF card and play MP3 music files on the card.

8.AUX: Connect to external audio sources to achieve amplification or playback.

9.MIC VOL: Adjust the volume of the microphone.

10.ECHO: Adjust the microphone reverberation effect.

11.MODE/LED : Short press， Switch playback mode,Bluetooth mode,USB mode,TF card mode,FM radio mode,AUX mode Long press， control the changes in lighting.

12.REC/DEL: When there is a TF card or USB drive inserted,connect the phone Tube,press this button to record the microphone.After singing and speaking,press again.This button will end the recording and automatically enter the recording playback.If not satisfied,long press this button to delete the recording.

13.MIC PRI/VOCAL CUT

"Microphone Priority" Short press it to turn on.When the microphone calls out,the background music fades,stop the call,and the background music rises again.Long press to enter the "VOCAL CUT" mode,which is the accompaniment mode.The vocal part of the song fades and the accompaniment music is retained.

14.PREV: Short press to switch to the previous track,long press to rewind playback.

15.P/P： Playing and pausing music.

16.NEXT: Short press to switch to the next track,long press to fast forward playback.

17.0-9 numeric keys: numeric input.

18.Display screen: displays the working status of the speaker.

- Switch
- MODE
- VOCAL CUT
- MUTE
- VOL+：Increase Volume
- Next Program
- VOL-： Reduce Volume
- Playback or Pause
- Previous Program
- REPEAT Playback
- LIGHT： Light Control
- 0-9： Numerical Input

WIRELESS CONNECTION USAGE

1. The Wireless version of this device is BT5.3, which supports HSP,HFP,A2DP,and AVRCP protocols with a prompt sound. The device name is the speaker model.

2. Turn on the speaker power, and after a "click" sound, the speaker will officially turn on. In the absence of any music media connected to the speaker, the speaker will default to Bluetooth mode, accompa-nied by a prompt sound. At this point, turn on your phone and light up the Bluetooth icon, automatically search for signals, and click on the device name to pair and connect.

3. After a successful connection, play music or watch movies on your phone for sound amplification.

TF CARD USAGE

When the speaker is inserted into the TF card,it automatically enters TF playback mode.

USB DRIVE USAGE

When the speaker is inserted into the USB drive,it automatically enters the USB drive playback mode.

AUX IN MODE

When the speaker is connected to AUX,it automatically enters AUX playback mode.

CHARGING EXPLANATION

When the speaker indicates low battery,please charge the speaker promptly.

If left unused for a long time,ensure to fully charge once a month.

CHARGING EXPLANATION

Speaker specification: 1*6.5 inch bass speaker+2*1.5 inch tweeter

Bluetooth version: V5.3

Control panel: MIC VOL,BASS,TREBLE,ECHO,MIC PRI

Working mode: BT/USB/AUX/TF/FM

Input: DC5V 2A

Speaker size: W9.45*D5.7*H13.19inches /W24*D14.5*H33.5cm

Frequency band： 100Hz-18KHz

Maximum transmission power： 5DB

Manufacturer: Guangdong Onesix8 Electronics Co.,Ltd

ManufacturerAddress: NO.19-4, Pingbu Ave. Huadu District, Guangzhou City, GuangdongProvince, China.510800

PACKING LIST

Karaoke Machine*1

Portable belt*1

Wireless microphone*2

Remote control*1

Charging cable*1

Aux cable*1

User's manual*1