



QUICK START GUIDE






VENGEANCE[®] 2000



Package Contents

02

1. Wireless gaming headset, Vengeance 2000: HF2012-RX
2. Dongle (wireless USB adapter): HF2012-TX
3. USB extension cable
4. USB charging cable
5. Quick start guide
6. Warranty card
7. Safety leaflet

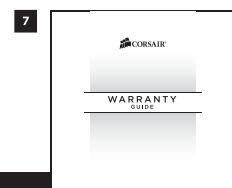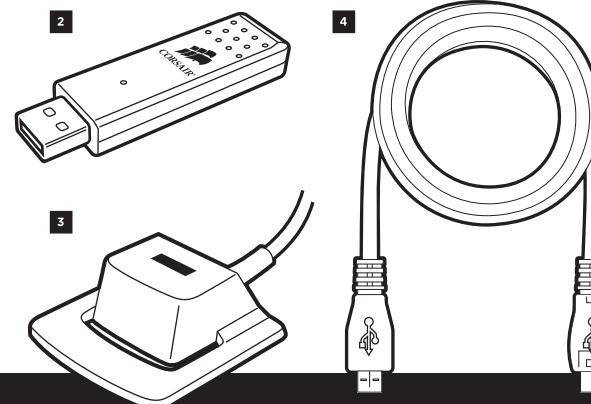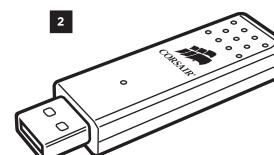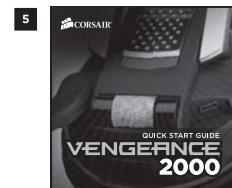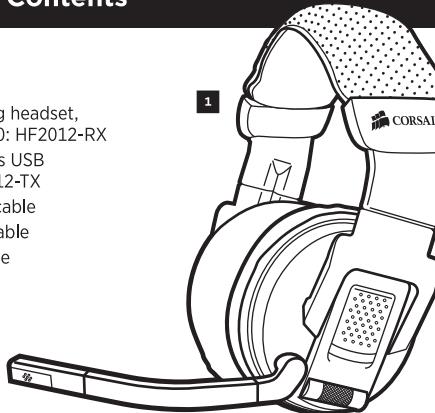


ENGLISH	2
FRANÇAIS	12
ESPAÑOL	22
PORTUGUÉS	32



Getting started

04

- A** Padded headband
- B** Headband adjustment
- C** Tuned 50mm gaming audio drivers
- D** Memory foam covered microfiber earpads
- E** Volume controller
- F** Status indicator
- G** Power button
- H** Power/charging port
- I** Battery life indicator
- J** USB charging cable
- K** Dongle (wireless USB adapter)
- L** Wireless status indicator
- M** USB extension cable
- N** Wireless pairing hole*
- O** Microphone

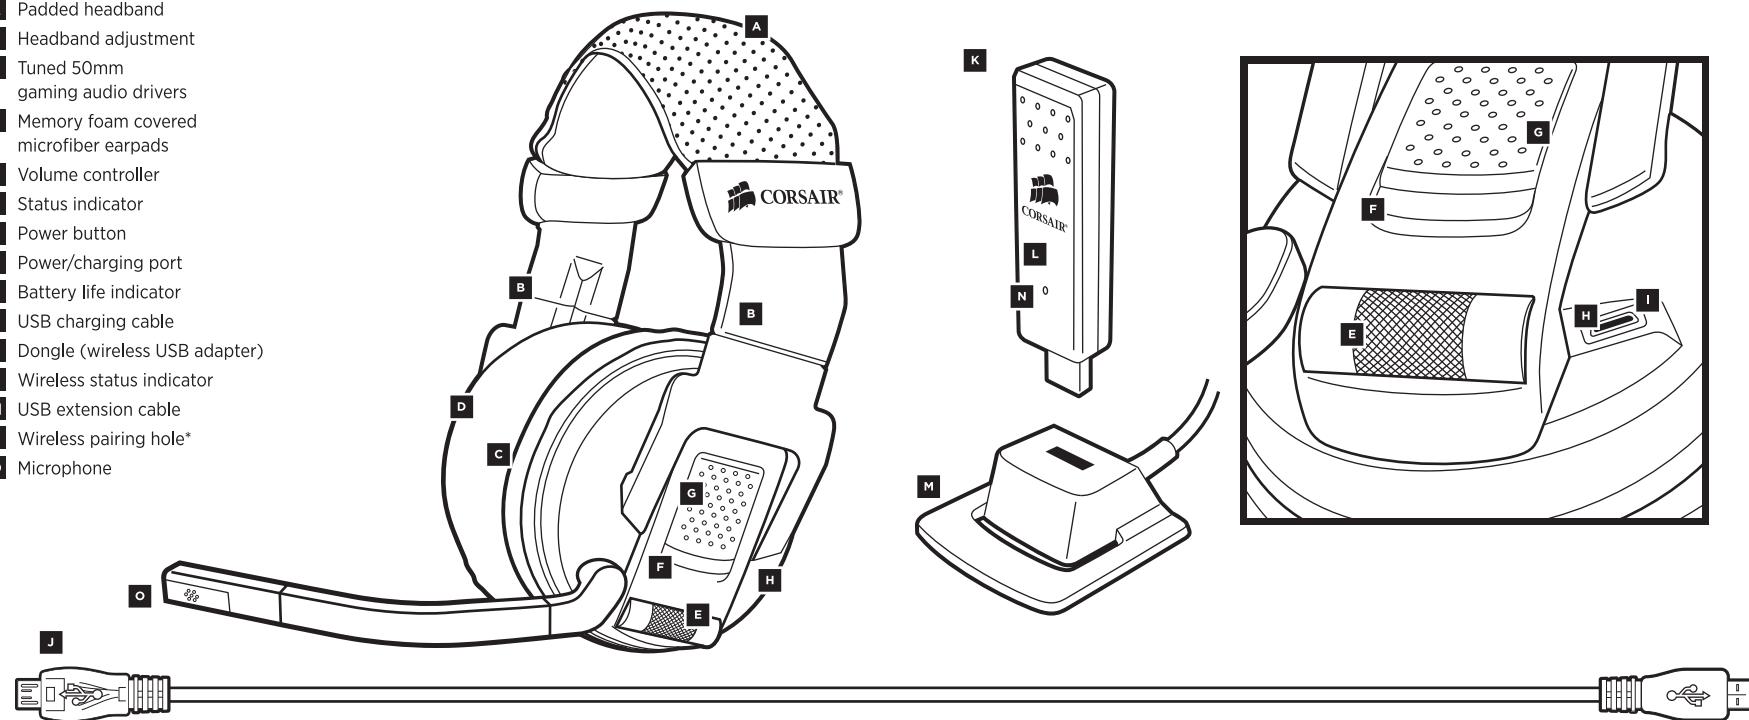


*See on-line troubleshooting guide at www.corsair.com/vengeance2000 under FAQ & support tab

1

Connect the dongle (wireless USB adapter) to any working USB port on your PC or connect the USB extension cable to your PC, and then attach the dongle to the extension cable.

Using the USB extension cable may extend the wireless range of your Vengeance 2000, by allowing you to position the antenna to get the best reception. Using the USB extension cable can make it easier to move the adapter from PC to PC. The Vengeance 2000 is designed to operate at a range of up to 40 feet (12m) from the dongle, but other wireless devices, electronics, and obstructions such as walls may reduce wireless range.

IMPORTANT: *The first time you use the Vengeance 2000 dongle on a PC or Mac, the Operating System will automatically install the device driver. After the device driver loads we recommend you reboot your PC or Mac before you use your headset.*

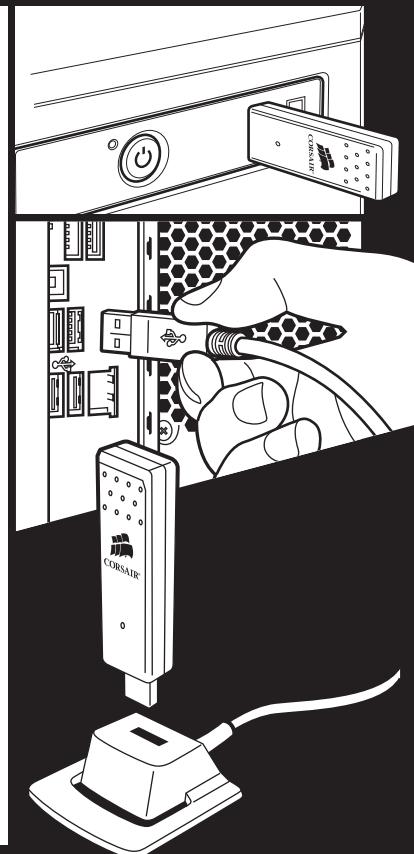**2**


IMPORTANT:

The Vengeance 2000 wireless headset must be fully charged before its first use.

- Connect the USB charging cable to any working USB port on your PC
- If desired, turn off the headset by pressing the power button for approximately 1-2 seconds.
- Connect the USB charging cable to the Vengeance 2000.

When the USB charging cable is plugged in, the battery life indicator on the Vengeance 2000 lets you know the charge status:

- ⊗ **No light**
The headset is off, or the battery is fully drained
- **Red — fast blinking**
Low battery (less than 10% charge remaining)
- **Amber — slow pulse**
Charging
- **Green — solid**
Charge complete


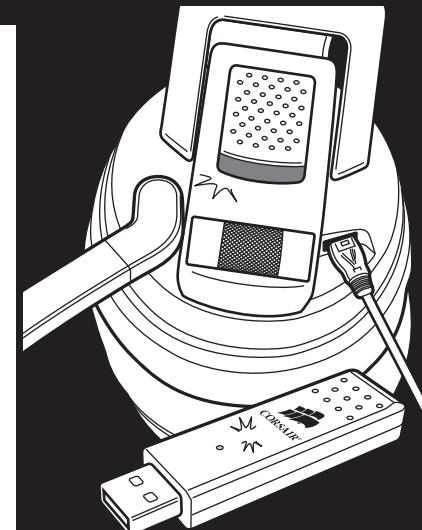


3

Once the battery life indicator is green, disconnect the headset from the power cable and press the power button. The status indicators on the headset and on the dongle will rapidly blink blue (2-second cycle) while a wireless connection is being established and then will change to solid blue once the wireless connection has been made. After the connection is established, the indicators will change to a solid blue on the wireless USB transmitter, and to a slowly blinking blue (4-second cycle) on the headset.

Note: If a wireless connection is not made, try turning your headset off and then back on again. If you still have a problem, then try using the USB extension cable and repositioning the dongle.

If you continue to have a problem making a connection, view the on-line troubleshooting guide at www.corsair.com/vengeance2000 under FAQ & support tab or contact Corsair.

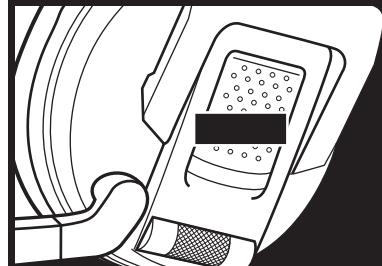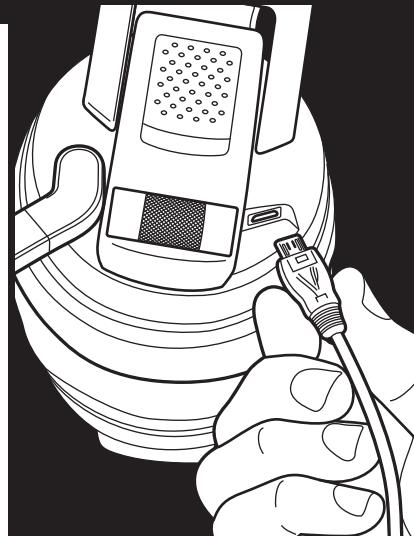**4**

- Go to corsair.com/vengeance2000 to download the Vengeance 2000 Application Software
- Install the software on a PC running Windows XP or later
- After installation is complete, reboot your PC

Launch the Vengeance 2000 Application Software.

You can use it to:

- Adjust volume
- Select your positional audio preferences
- Select audio profiles
- Shape the sound with the equalizer
- Mute volume
- Adjust microphone levels
- Adjust microphone loopback
- And more!

The software's built-in documentation explains how to use all the features.



5

Place the headset on your head and adjust the headband for a comfortable fit. The extra-large earpads and deep earcups allow Vengeance 2000 to fit comfortably so you can play for hours without fatigue.

As with any PC audio product, it's best to reduce the volume before trying it with an audio source the first time.


You can reduce the volume with:

- The volume controller on the headset (roll it down to reduce the volume and up to increase)
- The standard Windows audio controller
- The volume controller in the Vengeance 2000 Application Software

Once you're playing an audio source, you can turn up the volume to a comfortable level.

To use the microphone, slide it down and adjust it so that it's between 1-2 inches (2.5cm to 5cm) away from your mouth.

Enjoy your Vengeance 2000! If you have any questions or comments, see the back panel of this guide for contact information.

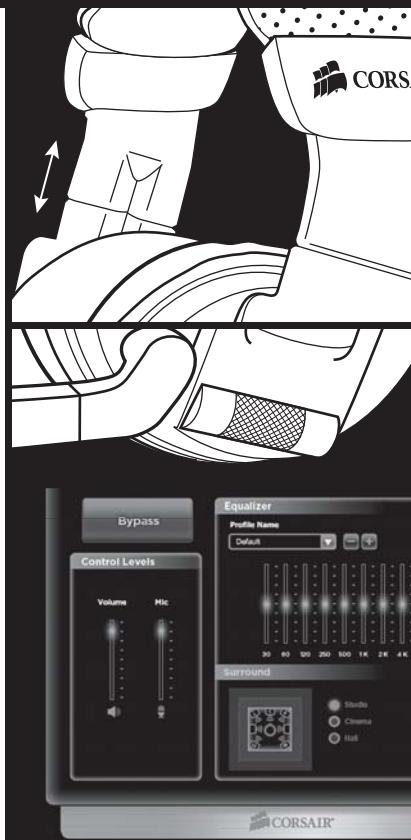

6

The Vengeance 2000 wireless headset battery has no "memory effect", so you don't have to completely discharge it before recharging. The Lithium-ion battery in the Vengeance 2000 will last for hundreds of charge/discharge cycles.

The battery is replaceable either by you or via Corsair. Follow the directions in the safety leaflet for proper disposal.

Remember that the USB charging cable requires a high power (500mA) USB port. Many USB ports found on keyboards and monitors do not support high-power devices. If the battery life indicator on the headset does not turn amber or green when the USB charging cable is connected, try another USB port on your PC.

GENERAL TIPS

For optimal wireless performance:

- Place the dongle in an open, unobstructed area. An extension cable is included.
- The dongle requires a powered USB port (100mA).

For optimal battery life:

- Make sure the battery is fully charged before initial use.
- Do not leave the battery fully discharged for long periods. Battery life is maximized by keeping the battery in a partially charged state.
- Remove the USB charging cable promptly after the headset has been fully charged.
- Keep the headset at room temperature (20-30° C or 68-86° F).

For the best audio performance:

- Download the Vengeance 2000 Audio Software from www.corsair.com/vengeance2000
- Don't be afraid to use the software equalizer to adjust the audio quality to your liking. We've provided EQ presets for popular gaming and media types.
- By default, the software places the Vengeance 2000 in "bypass" mode, which generates stereo sound, even with multi-channel sources. To enable multi-channel audio, click the "Surround" icon.





Prolonged listening at high volumes may adversely affect your hearing. Take breaks between sessions and always begin with the volume at the lowest possible level before increasing.



Contenu de l'emballage

12

1. Casque de jeu sans fil Corsair Vengeance 2000: HF2012-RX
2. Émetteur USB sans fil: HF2012-TX
3. Câble d'extension USB
4. Câble de charge USB
5. Guide de démarrage rapide
6. Carte de garantie
7. Notice de sécurité

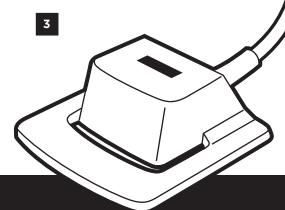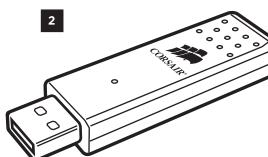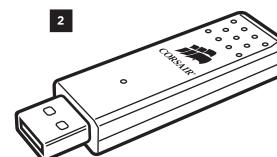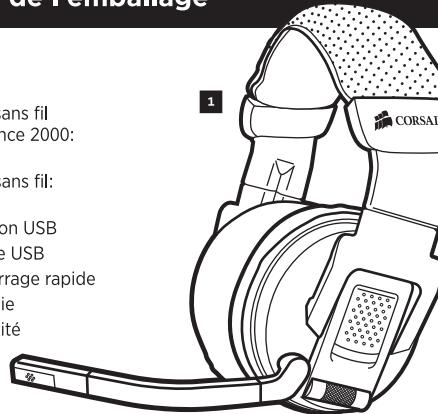




Démarrage

14

- A** Arceau rembourré
- B** Réglage de l'arceau
- C** Amplis de jeu prérglés de 50mm
- D** Écouteurs en mousse à mémoire de forme avec revêtement en microfibre
- E** Contrôleur de volume
- F** Indicateur d'état
- G** Bouton d'alimentation
- H** Port d'alimentation/de charge
- I** Indicateur de batterie
- J** Câble de charge
- K** Adaptateur sans fil
- L** Indicateur d'état de la connexion sans fil
- M** Câble d'extension pour l'adaptateur sans fil
- N** Orifice pour la synchronisation sans fil*
- O** Micro

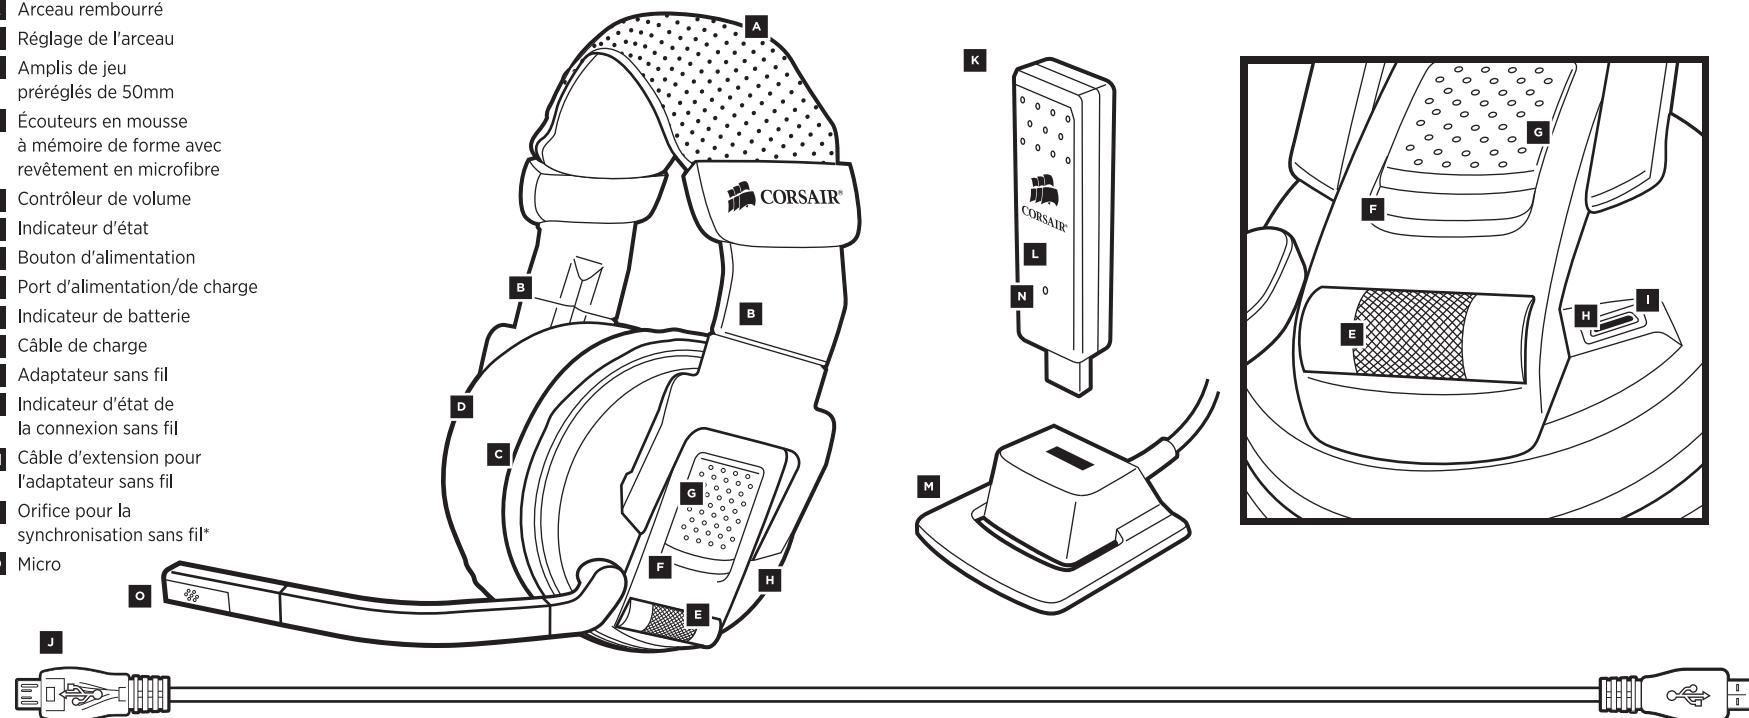


*Consultez le guide de résolution des problèmes à l'adresse www.corsair.com/vengeance2000 dans la section FAQ et assistance

1

Branchez l'adaptateur sans fil dans l'un des ports USB de votre PC. Vous pouvez également brancher le câble d'extension pour l'adaptateur sans fil sur votre PC puis brancher l'adaptateur sur le câble.

Selon la configuration de votre PC, le câble d'extension peut faciliter le déplacement de l'adaptateur d'un PC à un autre. L'utilisation du câble peut également augmenter la portée sans fil en vous permettant de positionner l'antenne au mieux. La portée de l'adaptateur permet au Vengeance 2000 de fonctionner jusqu'à 12m. Cependant, d'autres périphériques sans fil, des appareils électroniques et des obstacles tels que des murs peuvent réduire cette portée.

IMPORTANT: lorsque vous utilisez l'adaptateur sans fil Vengeance 2000 sur un PC ou un Mac pour la première fois, le système d'exploitation installe automatiquement le pilote du périphérique. Une fois le chargement du pilote du périphérique terminé, redémarrez votre PC ou Mac avant d'utiliser votre casque.

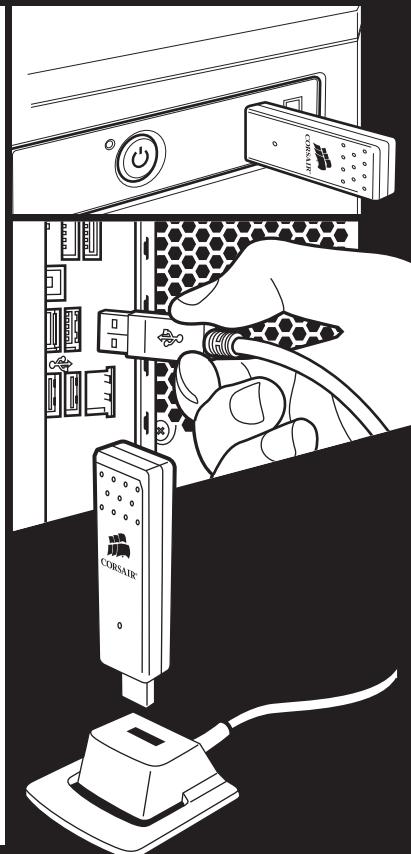
**2****IMPORTANT:**

Le casque sans fil Vengeance 2000 doit être totalement chargé avant sa première utilisation.

- Branchez le câble de charge sur l'un des ports USB de votre PC
- Si nécessaire, éteignez le casque en appuyant sur le bouton d'alimentation pendant 1 à 2 secondes. L'indicateur d'alimentation s'éteindra.
- Branchez le câble de charge sur le Vengeance 2000.

Lorsque le câble de charge USB est branché, l'indicateur de batterie du Vengeance 2000 vous indique l'état de charge:



- ⊗ **Pas de lumière**
Le casque est éteint ou la batterie est à plat
- **Rouge — clignotements rapides**
Low battery (less than 10% charge remaining)
- **Orange — clignotements lents**
Charging
- **Vert — lumière fixe**
Charge complète

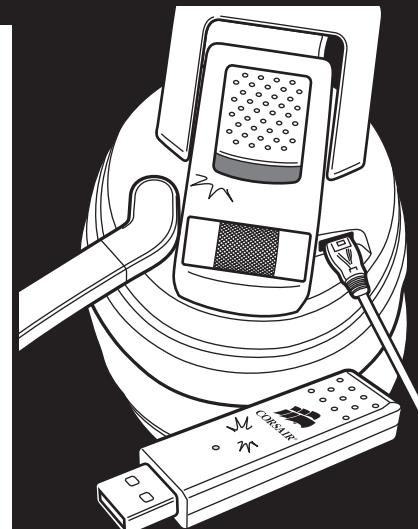

3

Une fois l'indicateur de batterie vert, débranchez le câble de charge du casque et appuyez sur le bouton d'alimentation. Les indicateurs d'état du casque et de l'adaptateur sans fil clignoteront rapidement en bleu (toutes les 2 secondes) jusqu'à ce que la connexion sans fil soit établie. Une fois la connexion sans fil établie, le voyant bleu de l'adaptateur sans fil restera allumé mais cessera de clignoter et celui du casque clignotera toutes les 4 secondes.

Remarque: si vous n'obtenez pas la connexion sans fil, éteignez puis rallumez votre casque. Si le problème persiste, essayez en utilisant le câble d'extension USB et en déplaçant l'adaptateur sans fil. Si cela ne fonctionne toujours pas, consultez notre guide en ligne de résolution de problèmes à www.corsair.com/vengeance2000 sous les rubriques FAQ & support, ou contactez Corsair.

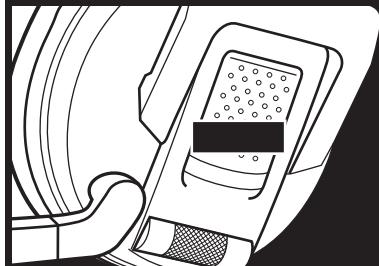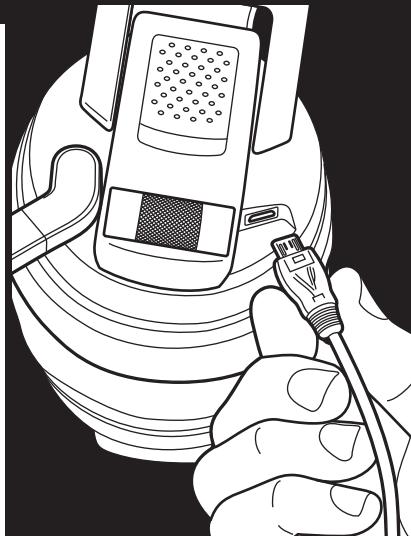**4**

- Rendez-vous sur corsair.com/vengeance2000 pour télécharger le logiciel d'application du Vengeance 2000
- Installez le logiciel sur un PC exécutant Windows XP ou une version ultérieure
- Une fois l'installation terminée, redémarrez votre ordinateur

Lancez le logiciel Vengeance 2000.

Vous pouvez l'utiliser pour réaliser les actions suivantes:

- Réglage du volume
- Sélection de vos préférences HRTF
- Sélection de profils audio
- Utilisation de l'égaliseur
- Couper le son
- Ajuster les niveaux du micro
- Ajuster le retour du micro
- Et bien plus encore!

La documentation intégrée au logiciel décrit l'utilisation de toutes ces fonctionnalités.



5

Placez le casque sur votre tête et réglez l'arceau pour obtenir une position confortable. Grâce à ses écouteurs extra-larges et profonds, le Vengeance 2000 est très confortable et vous permet de jouer pendant des heures sans ressentir de fatigue.

Comme pour tout périphérique audio pour PC, il est préférable de baisser le son avant de lancer une source audio pour la première fois.


Vous pouvez baisser le volume en utilisant:

- le contrôleur de volume du casque (tournez la molette vers le bas pour baisser le volume et vers le haut pour l'augmenter);
- le contrôleur audio standard de Windows;
- le contrôleur de volume intégré au logiciel Vengeance 2000

Une fois que vous avez lancé une source audio, vous pouvez augmenter le volume de manière confortable.

Pour utiliser le micro, faites-le coulisser et ajustez-le pour qu'il soit situé à une distance comprise entre 2.5 et 5cm de votre bouche.

Et voilà, vous pouvez utiliser votre Vengeance 2000! En cas de questions ou de commentaires, nos coordonnées figurent au dos de ce guide.

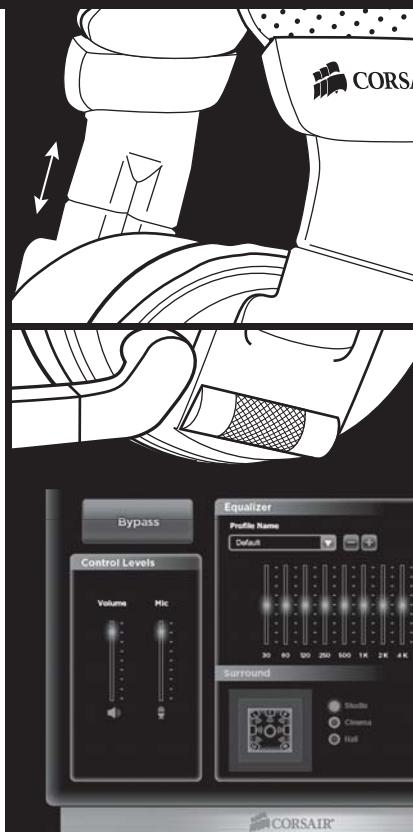

6

La batterie du casque sans fil Vengeance 2000 ne disposant pas d'« effet mémoire », vous n'avez pas besoin de la décharger totalement avant de la recharger. La batterie lithium-ion du Vengeance 2000 est prévue pour supporter des centaines de cycles de charge/décharge.

La batterie peut être remplacée par vous ou Corsair. Suivez les instructions de la notice de sécurité pour une mise au rebut adéquate.

N'oubliez pas que le câble de charge USB nécessite un port USB à forte alimentation (500mA). De nombreux ports USB intégrés à des claviers ou des moniteurs ne prennent pas en charge les périphériques à forte alimentation. Si l'indicateur de batterie du casque ne s'allume pas en orange ou en vert lorsque le câble de charge est branché, essayez un autre port USB sur votre PC.

CONSEILS GÉNÉRAUX

Pour une connexion sans fil optimale:

- Placez l'adaptateur sans fil dans un endroit dégagé. Une rallonge est incluse.
- L'adaptateur sans fil nécessite un port USB sous tension (100mA).

Pour une durée de vie optimale de votre batterie:

- Assurez-vous que la batterie est chargée à 100% avant de l'utiliser pour la première fois.
- La batterie ne doit pas être laissée déchargée complètement pendant des périodes prolongées. Si vous gardez la batterie partiellement déchargée, vous optimiserez sa durée de vie.
- Une fois le casque chargé complètement, retirez le câble de charge sans tarder.
- Le casque doit rester à température ambiante (20 à 30°C).

Pour des performances audio optimales:

- Téléchargez le logiciel audio destiné au casque Vengeance 2000 sur www.corsair.com/vengeance2000.
- N'hésitez pas à utiliser l'égaliseur logiciel pour ajuster la qualité audio à votre convenance. Nous avons intégré des préselections pour les types de jeu et de médias les plus populaires.
- Par défaut, le logiciel place le Vengeance 2000 en mode « by-pass » pour produire un son stéréo, même en cas de sources multicanaux. Pour activer le son multicanal, cliquez sur l'icône « Surround ».

Une écoute prolongée à un volume élevé peut endommager votre oreille. Prenez une pause entre chaque partie et commencez toujours au volume le plus bas possible avant de l'augmenter.

 CORSAIR®
VENGEANCE 2000

corsair.com

EMAIL: support@corsair.com
FACEBOOK: facebook.com/vengeancegaming
BLOG: blog.corsair.com



FORUM: forum.corsair.com
TWITTER: twitter.com/corsairmemory
WEB: corsair.com/vengeancegaming

USA and CANADA: (800) 205-7657 | INTERNATIONAL: (510) 657-8747 | FAX: (510) 657-8748

CORSAIR COMPONENTS, INC. • 46221 LANDING PARKWAY • FREMONT • CALIFORNIA • 94538 • USA

© 2012 Corsair Components, Inc. All rights reserved. Corsair, the sails logo, and Vengeance are registered trademarks in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured. Document Number: 49-000120 rev AA