


amazonbasics

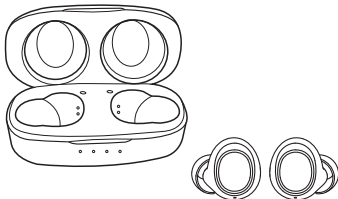


Ultra-Light True Wireless Bluetooth Earbuds
Écouteurs Bluetooth Vraiment Sans Fil et Ultralégers
Ultraleichte Kabellose Bluetooth-Ohrhörer
Capsule Bluetooth Senza Fili Leggerissime
Auriculares de Botón True Wireless Bluetooth Ultraligeros
Zeer Lichte Echt Draadloze Bluetooth Oortjes
超軽量本格ワイヤレス Bluetooth イヤバッド

B07T3VJKF4, B07T3VHSQ5

English	3
Français	16
Deutsch.....	27
Italiano	38
Español	49
Nederlands.....	60
日本語	71

Welcome Guide • English

Contents: Before getting started, ensure the package contains the following components:

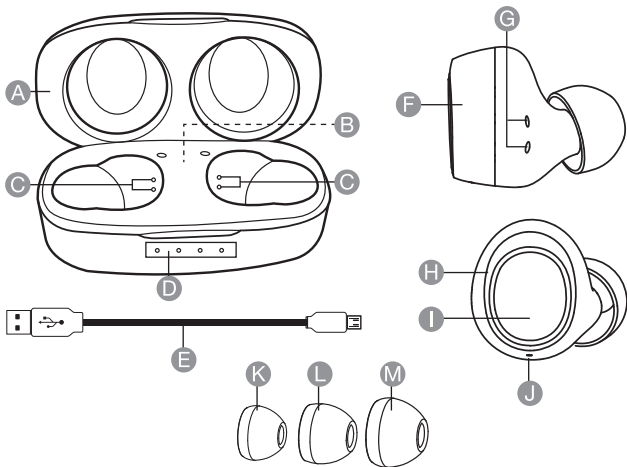

- | | |
|---------------------------|-----------------------------|
| Ⓐ Battery-powered case | Ⓗ Indicator light |
| Ⓑ USB Micro B port | Ⓘ MF (multifunction) switch |
| Ⓒ Charging contact points | ⓵ Microphone |
| Ⓓ Charging indicators | Ⓚ Small earbud x2 (L/R) |
| Ⓔ USB cable | Ⓛ Medium earbud x2 (L/R) |
| Ⓕ Earphone x2 | Ⓜ Large earbud x2 (L/R) |
| Ⓖ Charging contact points | |

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

- Keep the product away from sources of heat (e.g. direct sunlight), dust and water.



To prevent possible hearing damage, do not listen at high volume levels for long periods. Do not use the earphones while driving or cycling, or in any situation where you should be able to hear other sound.

Battery Warnings

- The battery contained in this product is non-replaceable. Do not throw the product into a fire.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Do not charge overnight.
- Charge this product once every 3 months to avoid shortening its battery life.
- Charge this product only with a compatible power source from reputable manufacturers e.g. a power adapter or USB port on a PC.

Intended Use

- The product is intended for wireless audio playback. The product also can be used for hands-free calling via a paired Bluetooth® device.
- The earphones are protected against water jets from any direction. Do not immerse in water.
- The battery-powered case is intended to be used in indoor dry areas only.

Before First Use

- Check for transport damages.

⚠ DANGER **Risk of suffocation!** Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Operation

Charging the case (A)

NOTICE When the battery charge drops below 20%, a chime sounds intermittently until the earphones (F) switch off automatically.

- Charge the case (A) when the charging indicators (D) do not light up once the earphones (F) are returned to the case (A).
- Connect the USB cable (E) to the USB Micro B port (B).
- Connect the other end of the USB cable (E) to a USB-A port on a computer or a suitable power adaptor 5 V $\overline{\text{---}}$ 2 A.

	<25%		<100%
	<50%		100%
	<75%		

Charging the earphones (F)

- Place the earphone(s) (F) into the case (A). The indicator light (H) lights up red.
- The indicator light (H) goes off when the earphone(s) (F) is fully charged.

Stereo pairing

NOTICE

The earphones automatically switch on when removed from the case. If the case has low battery level, press and hold the MF switch (I) to switch on the earphones manually.

- Remove both earphones (F) from the case (A). Both earphones light up blue 3 times.
- The earphones pair automatically. The right earphone flashes alternating red and blue lights.
- Activate Bluetooth® on the device you wish to pair and search for a new device.
- Select “AmazonBasics BE-2101” from the list on your device.
- Once the devices are paired, both earphones flash blue.

Pairing single earphone (Mono)

- Take only one of the earphones (F) out of the case (A). The earphone lights up blue 3 times then flash alternating red and blue lights.
- Activate Bluetooth® on the device you wish to pair and search for a new device.
- Select “AmazonBasics BE-2101 L” or “AmazonBasics BE-2101 R” from the list on your device.
- Once the devices are paired, the earphone flashes blue.

Switching from Mono to Stereo pairing

- While the L or R earphone is connected, take out the other earphone from the case (A).
- Wait for a beep tone from the currently connected piece. This confirms that the other earphone is also added into the Bluetooth® connection.

Clearing pairing records

- Press and hold the MF switch (I) for 5 seconds to switch off the earphone (F). The indicator light (H) flashes red 3 times.
- Press and hold the MF switch (I) until the indicator light (H) lights up purple. The earphone (F) restarts.

Playback control

- To play/pause, press the MF switch (I) once.

Calling

- To accept/end call, press the MF switch (I) once.
- To reject a call, press and hold the MF switch (I).

Activate voice assistant

NOTICE

This function is supported only on certain devices.

- To activate voice assistant (e.g. Siri, Google assistant etc.) on smart devices, press the MF switch (I) twice.

Cleaning and Maintenance

NOTICE

During cleaning do not immerse the electrical parts of the product in water or other liquids.

Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

- Store in a cool and dry place away from children and pets, ideally in the case (A).

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID:HBOBE2101R

IC: 10550A-BE2101R

FCC ID: HBOBE2101L

IC: 10550A-BE2101L

Canada IC Notice

- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - (1) this device may not cause interference, and
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) standard.

Simplified EU Declaration of Conformity

- Hereby, Amazon EU Sarl declares that the radio equipment type B07T3VJKF4, B07T3VHSQ5 is in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address: https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Disposal



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amazon.com, Inc. or its affiliates is under license.



Specifications

(Battery-powered case)

Voltage/battery type:	3.8 V  , 410 mAh
Charging time:	1.5 hours
Power consumption:	2.05 W

Specifications (earphones)

Voltage/battery type:	3.7 V  , 55 mAh
Charging time:	1.5 hours
Playback time:	3.5 hours
Power consumption:	0.275 W

RF power:	4 dBm
Frequency range:	2402 to 2480 MHz
Sensitivity:	87 $\pm$ 3 dB @ 1 kHz
Impedance:	16 Ω
Support:	A2DP V1.3, AVRCP V1.5, HFP V1.7
Bluetooth® version:	5.0
Operating distance:	32.8 ft (10 m)
IP rating (earphones only):	IPX5
Net weight:	approx. 1.6 oz (45 g)

Warranty Information

To obtain a copy of the warranty for this product:



US: amazon.com/AmazonBasics/Warranty

UK: amazon.co.uk/basics-warranty




US: +1-866-216-1072

UK: +44 (0) 800-279-7234

Guide de Démarrage • Français

Contenu : Avant de commencer, veuillez vous assurer que l'emballage contient les composants suivants :

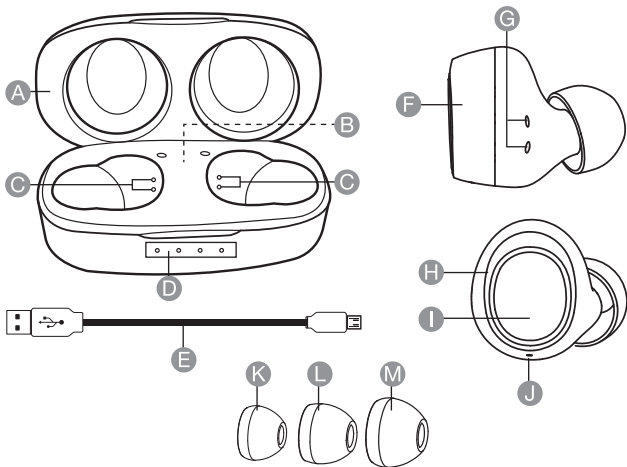

- | | |
|-------------------------------------|---------------------------------------|
| A Étui équipé d'une batterie | H Voyant lumineux |
| B Port USB Micro B | I Bouton MF (multifonction) |
| C Connecteurs de chargement | J Microphone |
| D Témoins de chargement | K Petite oreillette x 2 (G/D) |
| E Câble USB | L Oreillette moyenne x 2 (G/D) |
| F Écouteur x 2 | M Grande oreillette x 2 (G/D) |
| G Connecteurs de chargement | |

MESURES DE SÉCURITÉ IMPORTANTES

Veuillez lire attentivement les présentes instructions et les conserver afin de pouvoir vous y référer ultérieurement. En cas de cession de ce produit à un tiers, le présent manuel d'utilisation doit également lui être remis.

- Maintenez le produit à l'écart des sources de chaleur (comme la lumière directe du soleil), de la poussière et de l'eau.



Afin de prévenir toute altération éventuelle de l'ouïe, n'écoutez pas de la musique à un volume élevé de façon prolongée. N'utilisez pas les écouteurs en conduisant ou en faisant du vélo, ni dans toute autre situation où vous devez être en mesure d'être à l'écoute de votre environnement.

Avertissements Relatifs aux Batteries

- La batterie contenue dans ce produit n'est pas remplaçable. Ne pas incinérer le produit.
- Ne pas laisser la batterie en charge pendant une période prolongée lorsque le produit n'est pas utilisé.
- Ne pas recharger le produit de nuit.
- Rechargez ce produit une fois tous les 3 mois afin de ne pas réduire la durée de vie de sa batterie.
- Ne rechargez ce produit qu'avec une source d'alimentation compatible, comme un adaptateur secteur ou un port USB d'un PC, et provenant de fabricants réputés fiables.

Utilisation Prévue

- Le produit est destiné à la restitution audio sans fil. Le produit peut également être utilisé pour les appels mains libres par le biais d'un appareil Bluetooth® apparié.
- Les écouteurs sont protégés contre les projections d'eau dans toutes les directions. Ne pas immerger dans l'eau.
- L'étui équipé d'une batterie est destiné à être utilisé exclusivement en intérieur et dans des environnements secs.

Avant La Première Utilisation

- Vérifiez que le produit ne présente aucun dommage dû au transport.

⚠ DANGER **Risque d'étouffement !** Maintenez tous les matériaux d'emballage hors de la portée des enfants. Ces matériaux constituent une source de danger potentiel comme l'étouffement.

Utilisation

Chargement de l'étui (A)

REMARQUE Lorsque la charge de la batterie est inférieure à 20 %, un signal sonore retentit par intermittence jusqu'à ce que les écouteurs (F) s'éteignent automatiquement.

- Lorsque vous placez les écouteurs (F) dans l'étui (A) et que les témoins de chargement (D) ne s'allument pas, chargez l'étui (A).
- Branchez le câble USB (E) au port USB Micro B (B).
- Connectez l'autre extrémité du câble USB (E) à un port USB A d'un ordinateur ou à un adaptateur secteur 5 V $\overline{\text{---}}$ 2 A adapté.

	<25 %		<100 %
	<50 %		100 %
	<75 %		

Chargement des écouteurs (F)

- Placez le ou les écouteurs (F) dans l'étui (A). Le voyant lumineux (H) s'allume en rouge.
- Le voyant lumineux (H) s'éteint lorsque le ou les écouteurs (F) sont complètement chargés.

Appariement stéréo

REMARQUE

Les écouteurs s'allument automatiquement lorsqu'ils sont retirés de l'étui. Si la batterie de l'étui est faible, appuyez sur le bouton MF (I) et maintenez-le enfoncé pour allumer les écouteurs manuellement.

- Retirez les deux écouteurs (F) de l'étui (A). Les deux écouteurs s'allument 3 fois en bleu.
- Les écouteurs s'apparient automatiquement. L'écouteur droit clignote alternativement en rouge et en bleu.
- Activez la fonction Bluetooth® sur l'appareil que vous souhaitez appairer, puis recherchez un nouveau périphérique.
- Sélectionnez « AmazonBasics BE-2101 » à partir de la liste présentée par votre appareil.
- Une fois les appareils appariés, les deux écouteurs clignotent en bleu.

Appariement d'un seul écouteur (Mono)

- Ne retirez qu'un seul écouteur (F) de l'étui (A). L'écouteur s'allume 3 fois en bleu puis clignote alternativement en rouge et en bleu.
- Activez la fonction Bluetooth® sur l'appareil que vous souhaitez appairer, puis recherchez un nouveau périphérique.
- Sélectionnez « AmazonBasics BE-2101 L » ou « AmazonBasics BE-2101 R » à partir de la liste présentée par votre appareil.
- Une fois les appareils appariés, l'écouteur clignote en bleu.

Passage de l'appariement Mono à l'appariement Stéréo

- Lorsque l'écouteur L ou R est connecté, retirez l'autre écouteur de l'étui (A).
- Patientez jusqu'à ce que l'élément déjà connecté émette un signal sonore. Ceci confirme que l'autre écouteur est également intégré à la connexion Bluetooth®.

Suppression des appariements mémorisés

- Maintenez pressé le bouton MF (I) pendant 5 secondes pour éteindre l'écouteur (F). Le voyant lumineux (H) clignote 3 fois en rouge.
- Maintenez pressé le bouton MF (I) jusqu'à ce que le voyant lumineux (H) s'allume en violet. L'écouteur (F) reprend son fonctionnement.

Contrôle de la lecture

- Pour lire/mettre en pause, pressez le bouton MF (I) une fois.

Appels

- Pour accepter/mettre fin à un appel, pressez le bouton MF (I) une fois.
- Pour rejeter un appel, maintenez pressé le bouton MF (I).

Activation de l'assistant vocal

REMARQUE

Cette fonction n'est prise en charge que par certains appareils.

- Pour activer l'assistant vocal (comme Siri, Google assistant, etc.) sur les appareils dits intelligents, pressez le bouton MF (I) à deux reprises.

Nettoyage et Entretien

REMARQUE

Pendant le nettoyage, ne pas plonger les composants électriques du produit dans l'eau ni dans tout autre liquide.

Nettoyage

- Nettoyez le produit en l'essuyant à l'aide d'un chiffon doux légèrement humide.
- Ne jamais utiliser de détergents corrosifs, de brosses métalliques, de lavettes abrasives ou d'ustensiles tranchants ou en métal pour nettoyer le produit.

Rangement

- Rangez le produit dans un endroit frais et sec, hors de la portée des enfants et des animaux domestiques, de préférence dans son étui (A).

Énoncé d'Industrie Canada (IC)

- Cet appareil est conforme aux normes RSS d'Industrie Canada. Son utilisation est soumise aux deux conditions suivantes :
 - (1) Cet appareil ne doit pas provoquer d'interférences, et
 - (2) Cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles d'engendrer un dysfonctionnement.
- Cet appareil numérique de Classe B est conforme à la norme canadienne CAN ICES-3(B)/NMB-3(B).

Déclaration UE de Conformité Simplifiée

- Le soussigné, Amazon EU Sarl, déclare que l'équipement radioélectrique du type B07T3VJKF4, B07T3VHSQ5 est conforme à la directive 2014/53/UE.
- Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante :
<https://www.amazon.fr/marque-privee-amazon-conformite-EU>

Mise Au Rebut



La directive relative aux déchets d'équipements électriques et électroniques (DEEE) vise à réduire au minimum l'impact des produits électriques et électroniques sur l'environnement, en augmentant la réutilisation et le recyclage et en réduisant la quantité de DEEE mis en décharge. Le symbole figurant sur ce produit ou sur son emballage signifie que ce produit doit être mis au rebut séparément des ordures ménagères ordinaires en fin de vie. Gardez à l'esprit que la responsabilité vous incombe de mettre au rebut les équipements électroniques dans des centres de recyclage afin de contribuer à la préservation des ressources naturelles. Chaque pays doit disposer de centres de collecte dédiés au recyclage des équipements électriques et électroniques. Pour plus d'informations sur les zones de recyclage de votre localité, veuillez contacter les autorités responsables de la gestion des déchets d'équipements électriques et électroniques de votre commune, votre mairie ou le service local de traitement des ordures ménagères.

Mise au Rebut des Batteries



Ne mettez pas au rebut les batteries usagées avec vos déchets ménagers. Déposez-les à un point de collecte approprié.

Marques

Le nom et les logos Bluetooth® sont des marques commerciales enregistrées appartenant à Bluetooth SIG, Inc. et toute utilisation desdites marques par Amazon.com, Inc. ou ses filiales leur est concédée sous licence.



Caractéristiques

(Étui équipé d'une batterie)

Tension/type de batterie :	3,8 V  , 410 mAh
Temps de chargement :	1,5 heure
Consommation électrique :	2,05 W

Caractéristiques (écouteurs)

Tension/type de batterie :	3,7 V  , 55 mAh
Temps de chargement :	1,5 heure
Durée d'écoute :	3,5 heures
Consommation électrique :	0,275 W