


REV#	DESCRIPTION	DRAWN	DATE
REV 0	ADDED ARTWORK	NN	101317

FRONT (QSG)




BACK (CHARGING INFO)

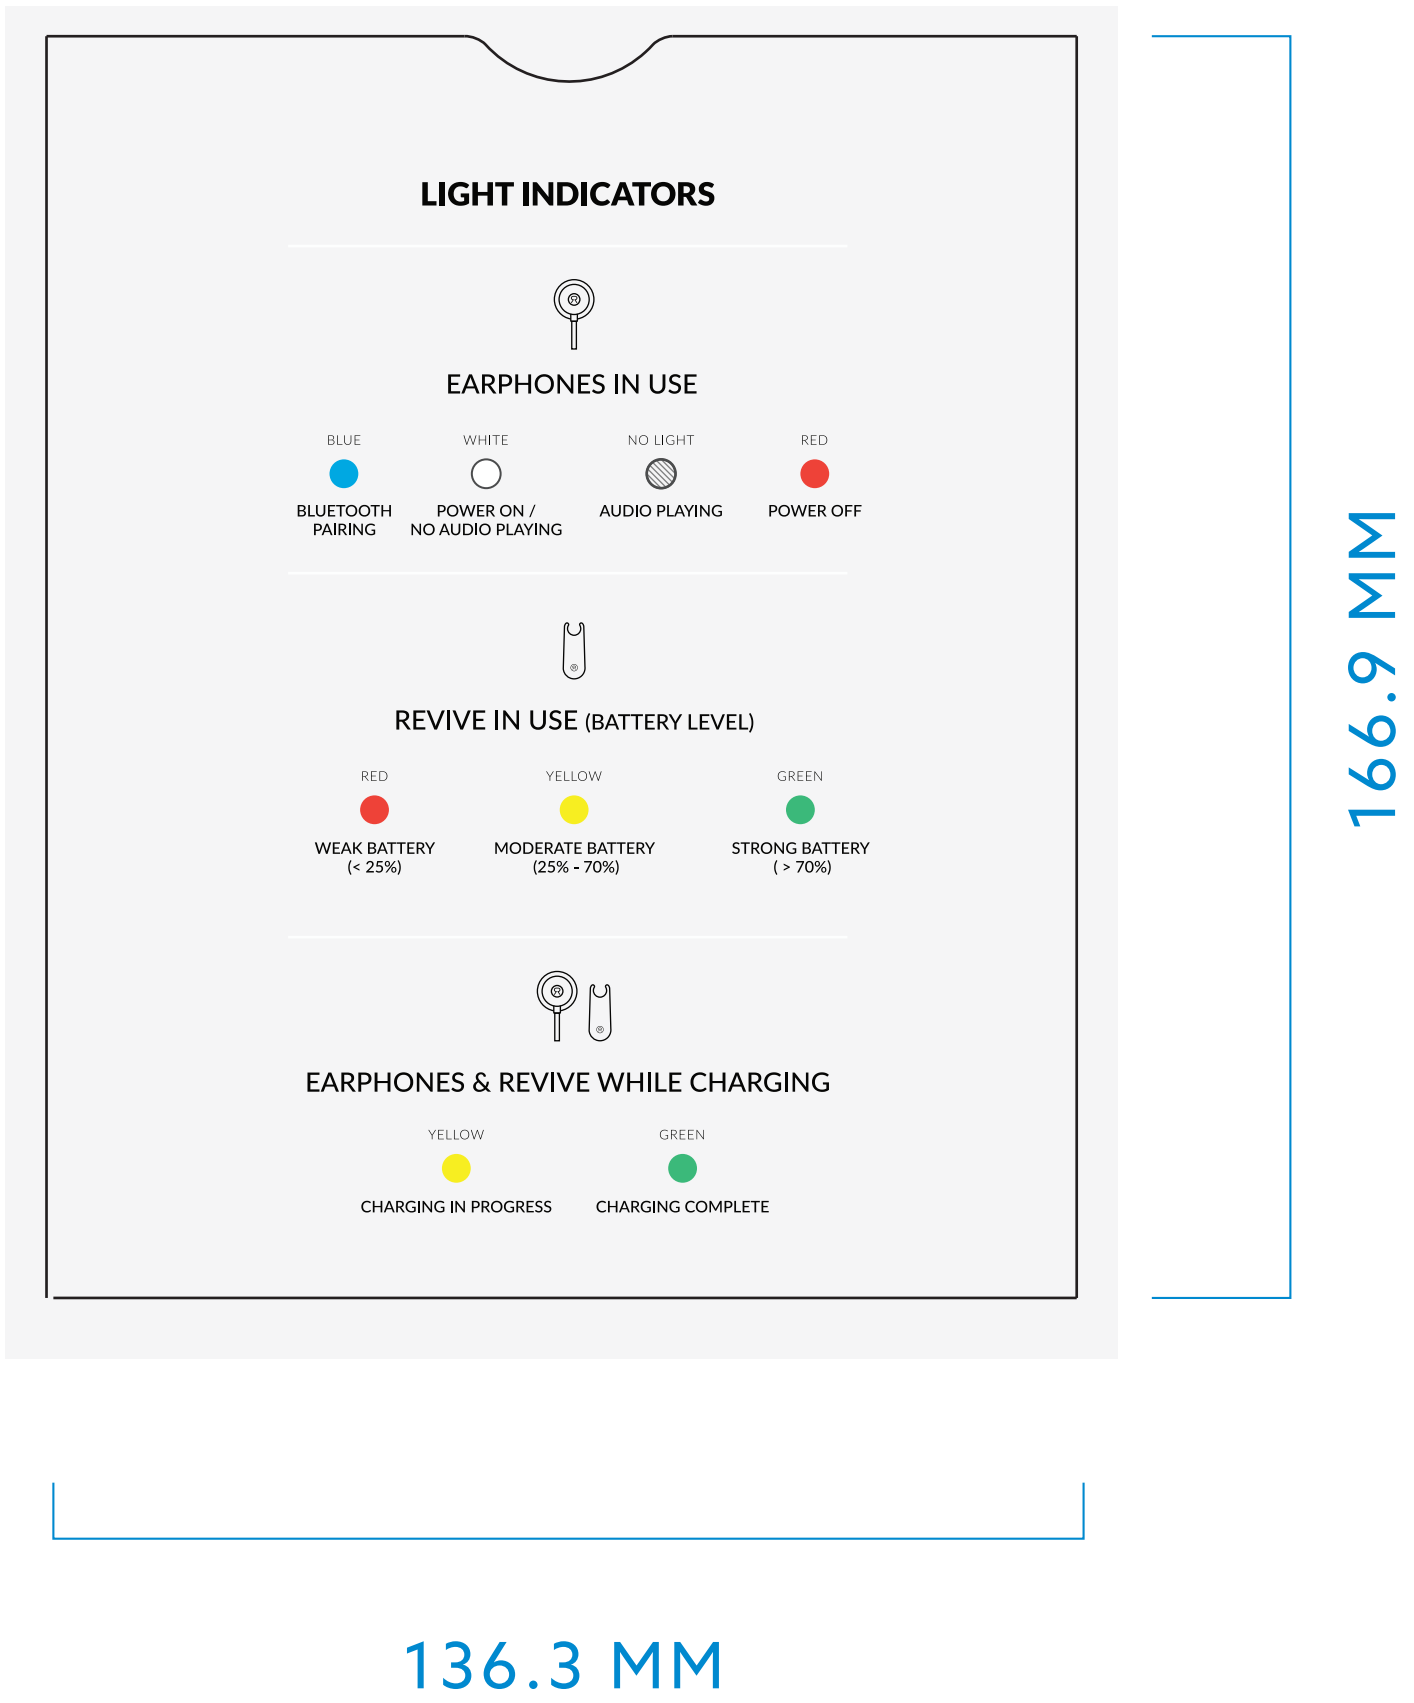

APPROVED BY: _____

INKS & FINISHES :

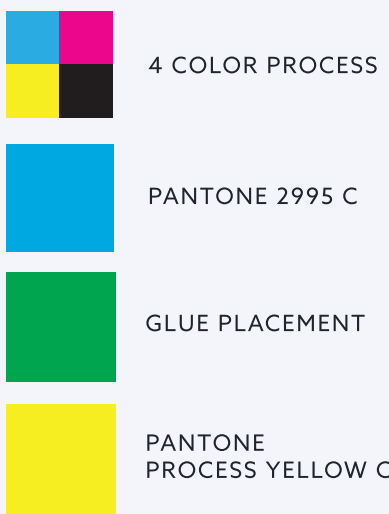

CUT LINES: _____

DIMENSIONS: _____

CREASE LINES: _____

BLEED: _____

MATERIAL NOTES :

250 GSM
C2S

REV# DESCRIPTION DRAWN DATE


REV 0 ADDED ARTWORK NN 101317

PART NO. VERSION :

SCALE : 1:1

SIZE :

THIRD ANGLE PROJECTION :

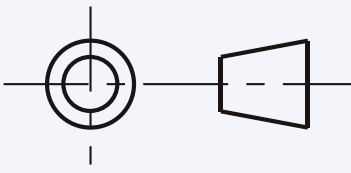

PART NO.

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS. TOLERANCES ARE: +/- 1MM AS SPECIFIED IN COSMETIC CRITERIA DOC. DIMENSIONING AND TOLERANCING SHALL BE IN ACCORDANCE WITH ASME Y 14.5M-2009

PRIVATE & CONFIDENTIAL

THIS DRAWING AND ANY ASSOCIATED DIGITAL FILES OR COMMUNICATIONS CONTAIN INFORMATION CONFIDENTIAL TO UNEKA CONCEPTS OR PROFESSIONAL AFFILIATES. CONTENTS MAY NOT BE USED, DISCLOSED, REPRODUCED, OR MODIFIED WITHOUT WRITTEN CONSENT OF UNEKA.

English

Read Manual Before Product Use.



Warning! Exposure to noise above 85 decibels for long periods may cause hearing damage. Protect your hearing by establishing safe volumes.

Establish safe listening volumes.

- Start your audio playing device with the volume control at its lowest setting.
- Slowly increase the volume until you can hear it comfortably and without distortion.
- Avoid using the earphones in noisy environments where you may want to turn up the volume.
- Turn down the volume if you cannot hear people speaking near you.

Listen safely.

To use these earphones safely, avoid listening at high sound levels. Follow the guidelines established by the U.S. Occupational Safety Health Administration on maximum time exposure to sound pressure levels before hearing damage occurs:

Sound pressure level dB(A)	Permissible noise exposure duration per day
90	8 hours
95	4 hours
100	2 hours
105	1 hour
110	30 minutes
115	Hearing damage will occur.

Protect your hearing during use.

- If using earphones with an unfamiliar or unstable sound system (airplane, public access ports, etc.) keep volume low to account for possible "break-in" bursts of loud sounds.
- Remove earphones if they cause any ear discomfort or you have difficulty inserting the ear cushions.
- If sharing earphones, remove ear cushions and clean them with antiseptic wipes before and after use.

Hearing damage can be gradual and cumulative.

Your ears may adapt over time to a higher volume of sound, which could result in damage to your hearing. Sometimes, no obvious warning signs present for hearing damage. However ringing or buzzing in the ears, difficulty understanding speech, a sensation of pressure or fullness in your ears, or muffing of sounds can indicate hearing damage. If you experience any of these symptoms, STOP using these earphones.

BATTERY WARNING! Improperly replaced batteries may present a risk of leak or explosion and personal injury. Mistreated rechargeable batteries may present a risk of fire or chemical burn. Do not disassemble or expose to conducting materials, moisture, liquid, or heat above 54°C (130°F). Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Do not leave your battery discharged or unused for extended periods. Do not short circuit. Your device may contain an internal, rechargeable battery that is not replaceable. Battery life varies with usage. Non-operational batteries should be discarded according to local laws. If no laws or regulations govern, dispose of your device in a waste bin for electronics. Keep batteries away from children.

Use Guidelines: Safe & Proper Use of Your Product

- Do not use your earphones in any environment where a failure to hear surrounding sounds may be dangerous.
- Do not use your earphones while driving, biking, walking, or operating machinery.
- Do not modify the product. Do not disassemble or attempt to service this product.
- Do not immerse product in any liquid or expose to moisture. Moisture will corrode the product.
- This is not a Children's Product and is not intended for use by children under 14 years old.
- This product is safe under normal and reasonably foreseeable operating conditions. If product is operating improperly, call Logitech support. Product must be returned to Logitech for any service or repair.
- **WARNING!** The product contains small, detachable parts, which may cause choking, personal injury, or death, especially in children. Please exercise care in the use and handling of small parts, and keep them away from children under 4 years of age.
- Refer to product Quick Start Guide for use instructions.

See the product support page on the Logitech website www.logitech.com/support for additional information.

Logitech Compliance. For Product Safety, EMC, and RF information, go to www.logitech.com/compliance. Maintenance is not required for product compliance.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. And, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Where shielded interface cables or accessories have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC. Changes or modifications to product not expressly approved by Logitech, Inc could void your right to use or operate your product by the FCC.

IC statement: CAN ICES-003 (B) / NMB-003 Class (B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This wireless product complies with FCC and IC radiation exposure limits for portable devices.

Pour obtenir des informations complémentaires, veuillez vous reporter à la page de support technique du site Web de Logitech (www.logitech.com/support).

Conformité Logitech. Pour les mentions de sécurité, EMC et RF relatives au produit, rendez-vous sur www.logitech.com/compliance. Ce dispositif ne requiert aucun entretien pour rester en conformité.

Déclaration FCC

Ce dispositif a été testé et déclaré conforme à la section 15 du règlement de la FCC. L'utilisation de la caméra est soumise aux deux conditions suivantes: 1) le dispositif concerné ne doit pas causer d'interférences dangereuses et 2) il doit accepter toute interférence reçue, y compris les interférences risquant d'engendrer un fonctionnement indésirable. Cet équipement a été testé et déclaré conforme aux limitations prévues dans le cadre de la catégorie B des appareils numériques selon la définition de la section 15 du règlement de la FCC. Ces limitations permettent de fournir une protection raisonnable contre les interférences dans une installation résidentielle. Cet équipement génère, utilise et diffuse des ondes radio. De plus, s'il n'est pas installé ni utilisé en conformité avec les instructions, il peut causer des interférences gênantes avec les communications radio. Il n'y a en revanche aucune garantie que des interférences n'apparaîtront pas dans une installation donnée. Si ce dispositif produit des interférences graves lors de réceptions radio ou télévisées qui peuvent être détectées en activant ou désactivant le dispositif, vous êtes invité à les supprimer de plusieurs manières:

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance séparant le dispositif du récepteur.
- Connectez le dispositif à un circuit différent de celui auquel le récepteur est connecté.
- Contactez votre revendeur ou un technicien radio/TV qualifié.

Avertissement: si des câbles d'interface blindés ont été fournis avec le produit ou si des composants ou des accessoires complémentaires sont recommandés, ils doivent être utilisés lors de l'installation du produit afin d'assurer la conformité avec le règlement FCC. Toute modification ou tout changement effectué sans l'accord exprès de Logitech, Inc pourrait annuler votre droit d'utiliser votre produit en vertu du règlement de la FCC.

Déclaration IC: NMB-003 Classe (B)

Ce dispositif est conforme à la norme/aux normes CNR du ministère canadien de l'Industrie applicable aux appareils radio exempts de licence. L'utilisation du dispositif est soumise aux deux conditions suivantes: (1) le dispositif concerné ne doit pas causer d'interférences et (2) il doit accepter toute interférence reçue, y compris les interférences risquant d'engendrer un fonctionnement indésirable.

Logitech Limited Hardware Product Warranty – A Summary

Logitech warrants that its hardware product shall be free from defects in materials and workmanship for the length of time identified on your product package beginning from the date of the original retail purchase.

See support.logitech.com for specific warranty information about your product and procedures to act on a warranty claim.

Logitech's entire liability and your exclusive remedy for any breach of warranty shall be, at Logitech's option, to repair or replace a functional equivalent of the product, or to refund the price paid, if the hardware is returned to the point of purchase or such other place as Logitech may direct along with a receipt.

Warranty protections are in addition to rights provided under local consumer laws and may vary among countries. See full warranty information to know your consumer rights and the additional protections provided by this product warranty.

Logitech Address: Logitech, Inc., 7700 Gateway Blvd, Newark, California 94560. 1.866.244.3399

Full Warranty Information: support.logitech.com



© 2018 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2018 Logitech. Logitech, Logi et les autres marques Logitech sont la propriété de Logitech et sont susceptibles d'être déposées. Toutes les autres marques sont la propriété exclusive de leurs détenteurs respectifs. Logitech décline toute responsabilité en cas d'erreurs dans ce manuel. Les informations énoncées dans le présent document peuvent faire l'objet de modifications sans avis préalable.

620-008400.002

Français

Lire le manuel avant utilisation.



Avertissement! L'exposition à du bruit supérieur à 85 décibels pendant des périodes prolongées peut causer des troubles auditifs. Protégez votre audition en définissant des volumes d'écoute modérés.

Définissez des volumes d'écoute modérés.

- Mettez votre dispositif audio sous tension en vous assurant que la commande de volume est réglée au minimum.
- Augmentez lentement le volume jusqu'à obtenir un son net et sans distorsion.
- Évitez d'utiliser les écouteurs dans des environnements bruyants où vous pourriez être tenté d'augmenter le volume.
- Baissez le volume si vous n'entendez pas les gens parler près de vous.

Écoute sûre.

Pour utiliser ces écouteurs en toute sécurité, évitez les niveaux sonores trop élevés. Prenez en compte ces recommandations de l'Occupational Safety Health Administration, l'agence américaine pour la sécurité et la santé au travail, relatives à la durée d'exposition maximale à des niveaux de pression sonore avant que des troubles de l'audition ne se produisent:

Niveau de pression sonore en dB(A)	Durée d'exposition quotidienne admissible
90	8 heures
95	4 heures
100	2 heures
105	1 heure
110	30 minutes
115	Apparition de troubles auditifs.

Protégez votre audition pendant l'utilisation.

- Si vous utilisez des écouteurs avec un système audio instable ou inhabituel (avion, ports à accès public, etc.), assurez-vous que le volume reste faible afin de conserver un niveau sonore confortable.
- Si les écouteurs vous gênent ou si vous avez du mal à insérer les embouts, retirez-les.
- Si vous les partagez, retirez les embouts et nettoyez-les avec des lingettes antiseptiques avant et après l'utilisation.

Les troubles de l'audition peuvent apparaître progressivement et s'accumuler.

Vos oreilles peuvent s'adapter au fil du temps à des volumes sonores plus élevés, ce qui peut à la longue endommager votre audition. Certains troubles de l'audition ne sont pas précédés de signes avant-coureurs. Cependant, des tintements ou bourdonnements d'oreille, des difficultés de compréhension du discours, une sensation de pression à l'intérieur de vos oreilles ou l'étouffement des sons peuvent être des signes de troubles auditifs. Si vous ressentez l'un de ces symptômes, cessez toute utilisation des écouteurs.

AVERTISSEMENT RELATIF AUX PILES! Un remplacement incorrect des piles peut présenter des risques de fuite, d'explosion et de blessure. Les piles rechargeables peuvent présenter des risques d'incendie ou de brûlure chimique si elles ne sont pas manipulées comme il se doit. Ne pas démonter ou exposer à des matériaux conducteurs, à l'humidité, à du liquide ou à une température supérieure à 54° C. Ne les utilisez pas et ne les rechargez pas si vous observez une fuite, une décoloration, une déformation ou une quelconque anomalie. Ne laissez pas les piles déchargées ou inutilisées pendant de longues périodes. Ne pas court-circuiter. Il est possible que votre dispositif contienne une pile rechargeable interne ne pouvant pas être remplacée. La longévité de la batterie/des piles varie en fonction de leur utilisation. Les piles hors d'usage doivent être mises au rebut conformément aux directives locales. S'il n'existe aucune loi ou aucun règlement en vigueur, veuillez jeter votre dispositif dans un bac dédié au recyclage d'appareils électroniques. Tenez les piles hors de portée des enfants.

Consignes d'utilisation: sécurité et utilisation correcte de votre produit

- N'utilisez pas vos écouteurs dans un environnement où il peut s'avérer dangereux de ne pas entendre les bruits ambiants.
- N'utilisez pas vos écouteurs lorsque vous conduisez, faites du vélo, marchez ou travaillez sur des machines.
- Ne modifiez pas le produit. Ne démontez pas ce produit ou n'essayez pas de l'entretenir vous-même.
- N'exposez pas le produit à des liquides ou à l'humidité. Il risquerait de s'oxyder.
- Ce produit n'est pas destiné aux enfants et n'est pas adapté aux enfants âgés de moins de 14 ans.
- Ce produit est sûr dans des conditions d'utilisation normales et raisonnablement prévisibles. En cas de dysfonctionnement du produit, contactez l'assistance technique Logitech. Le produit doit être renvoyé à Logitech pour tout entretien ou réparation.
- **AVERTISSEMENT!** Le produit comporte des petites pièces détachables qui peuvent provoquer des étouffements, des blessures graves ou même la mort, en particulier chez les enfants. Faites preuve de précaution au moment d'utiliser ou de manipuler ces petites pièces, et conservez-les hors de portée des enfants de moins de 4 ans.
- Reportez-vous au guide de démarrage rapide du produit pour les consignes d'utilisation.

