




Modes
of Use

Modes of Use

Using your Audio Monitor on a Flat Surface


Once a child has outgrown the bassinet, using the Audio Monitor on a tabletop or nightstand provides extended use with its audio monitoring, soothing sounds, and nightlight.

The Audio Monitor can sit on a tabletop or nightstand by plugging the long power cable directly from the monitor to the wall (Figure 1).

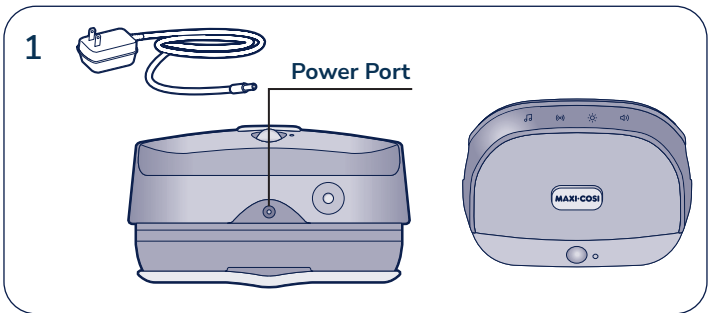

⚠ WARNING

STRANGULATION HAZARD—Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not use on Cribs or Play Yards.

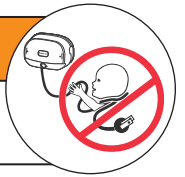


Mounting your Audio Monitor on the Sibia Bassinet

The Audio Monitor can be attached to either side of the Sibia Bassinet. Ensure that the Maxi-Cosi logo is facing outwards and away from your child, and that all cords remain outside the bassinet frame.

Insert one side of the short cord into the Audio Monitor (Figure 2) and the other side into the port under the rim of the bassinet (Figure 3). Then, plug the power adapter into the port on the lower leg (Figure 4) and the other end into a wall outlet.

See the Sibia Bassinet instruction manual for more information.

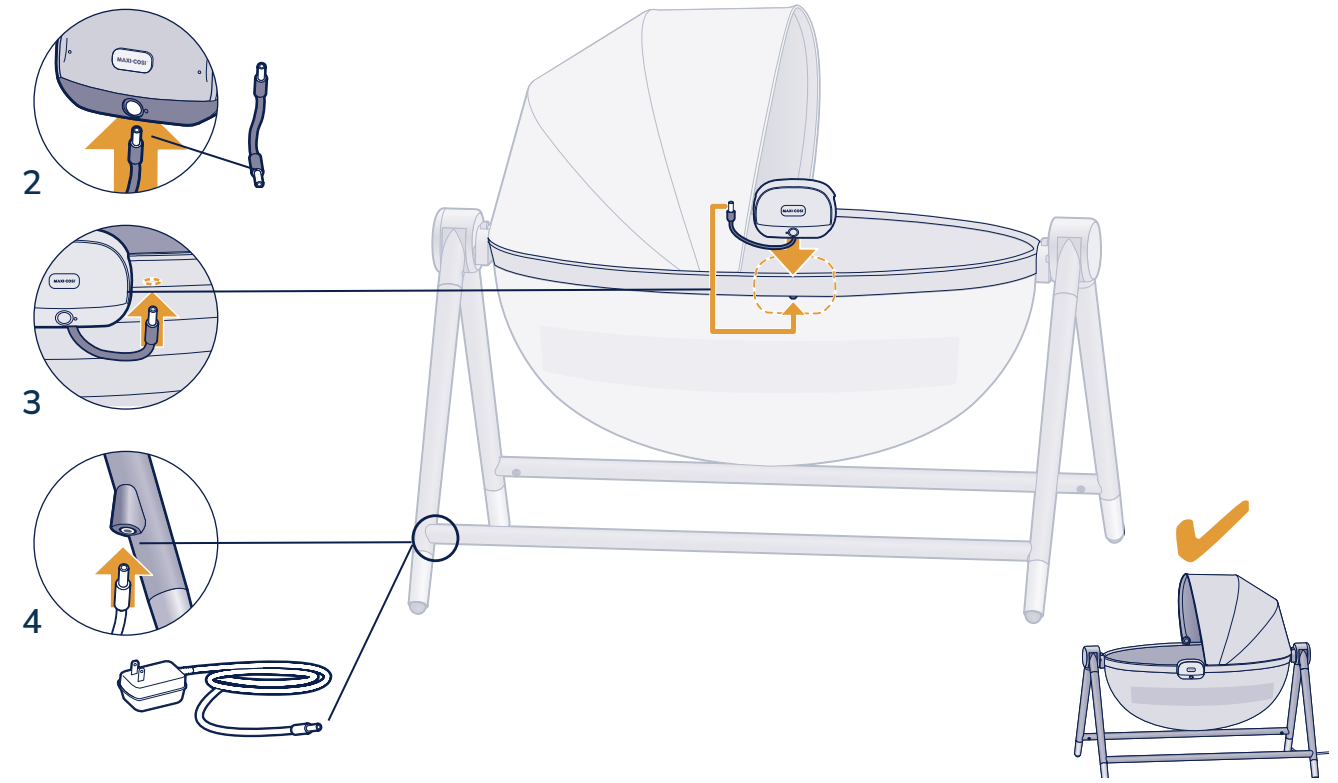



Care and
Maintenance

Care and Maintenance

Clean product with a slightly damp cloth or with an anti-static cloth. ALWAYS unplug from electrical outlet before cleaning. **NEVER USE** cleaning agents or abrasive solvents. **DO NOT** clean any part of the product with thinners or other solvents and chemicals—this may cause permanent damage to the product, which is not covered by the warranty. Keep product away from hot, humid areas or strong sunlight, and do not let it get wet. Every effort has been made to ensure high standards of reliability of your product. However, if something does go wrong, please do not try to repair it yourself—contact Consumer Care for assistance.



Disposal

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electronic equipment in accordance with your local laws. Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products, you make an important contribution to the protection of the environment. Please contact your recycling center for more information on the collection points in your area.

Prior to disposal of this device, make sure to reset the device to its factory state and remove the device from your account, which will help clear the device of personal data from the device. Remove or securely erase any storage media, such as MicroSD cards, which may contain personal data like videos, photos, and documents.

Replaceable Parts

- Power cord
- Short cable
- To order parts, call 1-800-544-1108 or text 1-812-203-4747. Have the model number ready (MO191), the product serial number (found at the bottom of the monitor), and a brief description of the part.

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (CryAssist™ Audio Monitor) is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Care Department at the address noted on the back cover and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or inconsequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.


Note: Changes or modifications not expressly approved by Dorel Juvenile Group can void your authority to operate this equipment under Federal Communications Commission's rules.

Use of other accessories may not ensure compliance with the FCC exposure guidelines.

CAUTION: This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Restrictions declaration in the 5 GHz band: the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

IC Information

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This Class B digital apparatus complies with Canadian ICES-003.

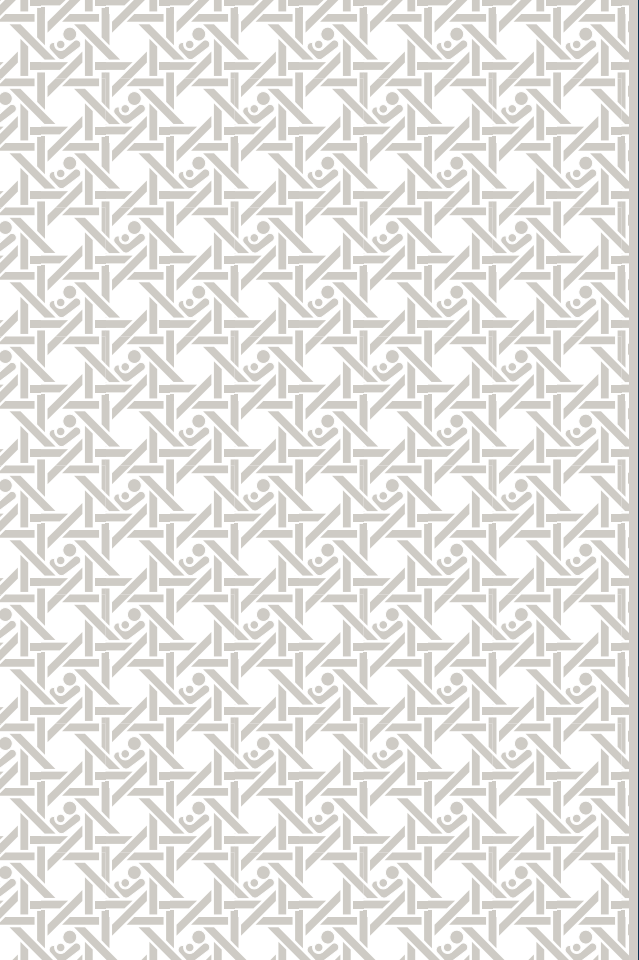

Français



Présentation de la collection Kindred de Maxi-Cosi

Notre collection Kindred de Maxi-Cosi est inspirée par l'ascendance, la connexion et les liens inséparables de la famille. Lorsque vous choisissez de nous inviter chez vous, vous nous permettez de faire partie de votre vie.

Ces articles sont plus que des meubles ou des produits pour bébés, ce sont les porteurs et les gardiens de souvenirs précieux et de liens familiaux. Grâce à leur qualité exceptionnelle et à leur confection, les souvenirs qu'ils laisseront sont innombrables. Chaque article de la collection Kindred de Maxi-Cosi est conçu avec soin, présente une conception intemporelle, est composé de métaux spéciaux et d'EcoCare premium, un tissu recyclé fabriqué à partir de bouteilles en plastique, et est destiné à être aimé et partagé.

La collection Kindred de Maxi-Cosi
Toute une histoire dans une conception.

Table des matières

MISE EN GARDE 35

PIÈCES ET CARACTÉRISTIQUES 39

 Indicateurs d'état des DEL..... 41

 Jumelage de votre téléphone intelligent..... 42

 Activation du haut-parleur Bluetooth^{MD} 44

 Réinitialisation de votre moniteur 44

 Sons et musique..... 45

 Vibration..... 46

 Veilleuse..... 47

MODES D'UTILISATION 49

 Sur une surface plane 50

 Sur le berceau Sibia 50

ENTRETIEN 53

 Mise au rebut..... 54

 Pièces remplaçables..... 54

 Renseignements sur la garantie..... 54


 Déclaration de conformité FCC..... 55


 Renseignements sur ISDE..... 55

Consultez le manuel d'instructions complet du berceau Sibia pour en savoir plus sur le montage du moniteur audio sur le berceau.

Voir la couverture arrière pour les coordonnées et l'assistance.

Pour une utilisation avec le berceau Sibia de la collection Kindred de Maxi-Cosi

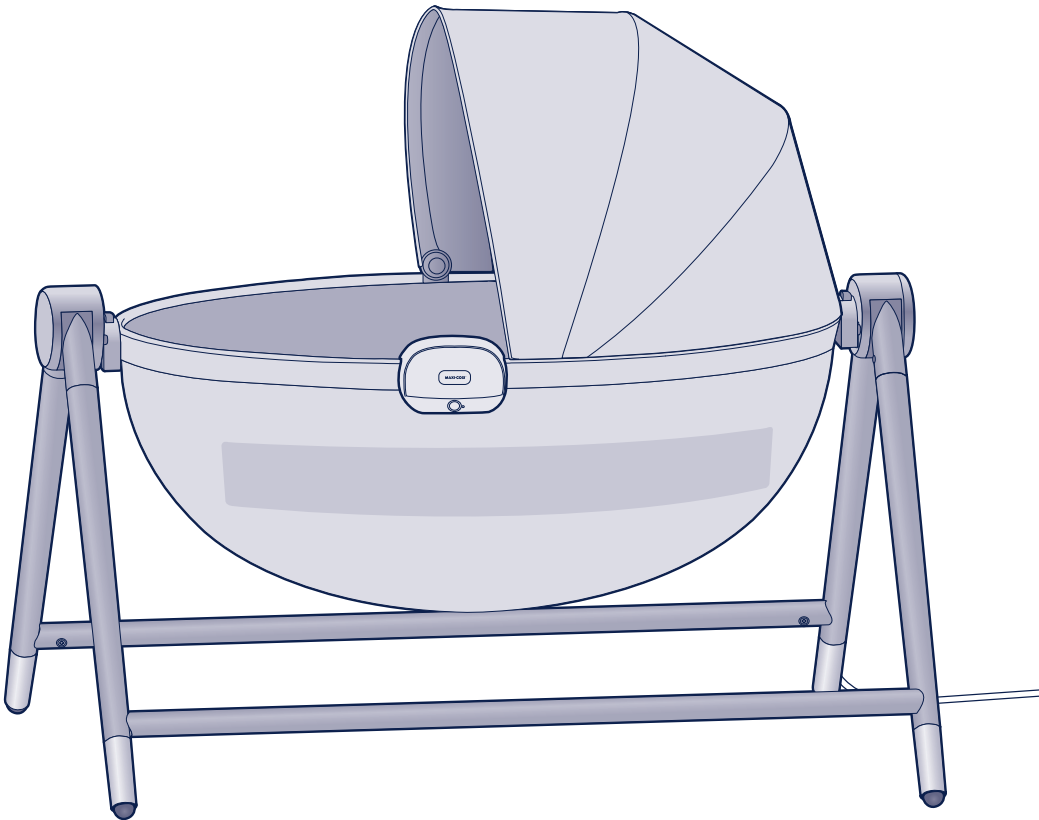

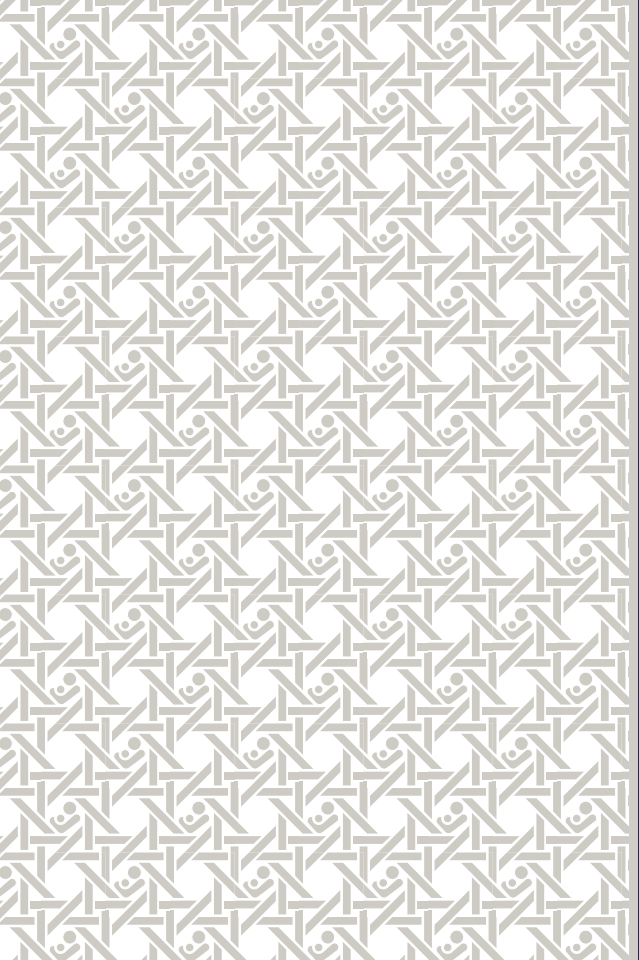

Mise en garde

Lire toutes les instructions avant d'utiliser ce produit. Gardez les instructions pour référence ultérieure.

⚠ MISE EN GARDE

RISQUE D'ÉTRANGLEMENT—Des enfants se sont **ÉTRANGLÉS** avec les cordons. Gardez ce cordon hors de la portée des enfants (à plus de 0,9 m (3 pi) de distance). Ne pas utiliser sur les lits d'enfant ou les parcs de jeu.



L'UTILISATEUR NE DOIT PAS ESSAYER D'ENTREtenir OU DE RÉPARER LE MONITEUR. TOUS LES SERVICES DOIVENT ÊTRE CONFIEs AU SERVICE À LA CLIENTÈLE.

Il est important de vérifier la réception régulièrement. Le moniteur utilise une transmission cryptée sur des fréquences gérées par la FCC.

N'oubliez pas de sécuriser votre routeur Wi-Fi avec un mot de passe.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- **VENTILATION : NE PAS** bloquer les ouvertures de ventilation. **NE PAS** placer sur un lit, un canapé, un tapis ou une surface similaire. **NE PAS** placer dans une bibliothèque ou une armoire qui pourrait restreindre la circulation de l'air.
- **CHALEUR** : Le moniteur doit être situé loin des sources de chaleur telles que les radiateurs, les registres de chaleur, les cuisinières ou d'autres appareils qui produisent de la chaleur. Gardez également ces composants loin de la lumière directe du soleil.
- **PROTECTION DU CORDON D'ALIMENTATION** : Le cordon d'alimentation doit être placé de manière à ce qu'on ne puisse pas marcher dessus ou qu'il ne soit pas pincé par des objets placés sur ou contre lui. Portez une attention particulière au cordon au niveau de la fiche, de la prise de courant et de la sortie du moniteur.

⚠ MISE EN GARDE

Pour une utilisation à l'intérieur seulement. Pour réduire le risque d'incendie ou de décharge électrique, **NE PAS** exposer ce produit à l'eau ou à l'humidité. **NE PAS** utiliser le moniteur près de l'eau (comme un bain, un évier, etc.) ou ne pas l'immerger dans l'eau.

- Ce moniteur n'est pas destiné à être utilisé comme moniteur médical et son utilisation ne devrait pas remplacer la supervision appropriée d'un adulte/parent. Vous devriez vérifier l'activité de votre enfant à intervalles réguliers, car ce moniteur n'alertera pas les parents des activités silencieuses d'un enfant.

- **NE JAMAIS** essayer de démonter le produit. Cela est dangereux et annulera la garantie.

- Testez le moniteur périodiquement lorsqu'il est utilisé et qu'il change d'emplacement.

- Utilisez uniquement l'adaptateur fourni avec ce produit. Une polarité ou une tension incorrecte de l'adaptateur peut gravement endommager le produit.

- Pour éviter l'enchevêtrement et la surchauffe, **NE PAS** utiliser de rallonges.

- L'adaptateur et l'appareil peuvent devenir légèrement chauds au toucher pendant le fonctionnement. C'est normal.

- **TOUJOURS** débrancher l'adaptateur d'alimentation du mur pendant les périodes de non-utilisation prolongées.

- Vérifiez que les plaques des prises murales ne sont pas anormalement chaudes au toucher. Si c'est le cas, débranchez immédiatement les cordons de ces prises. Vérifiez que toutes les connexions de prise sont en bon état, que l'adaptateur n'est pas desserré et qu'aucun câble n'est exposé. Demandez à un électricien qualifié et agréé de vérifier le câblage dès que possible.

- Ce moniteur permet aux utilisateurs de l'Internet d'entendre l'activité. Utilisez la fonction de sécurité incluse avec cet appareil pour restreindre l'audience sur Internet.

- **NE PAS** placer l'adaptateur/fiche murale sous une fenêtre où un enfant pourrait l'utiliser pour monter et/ou atteindre quelque chose qui pourrait être dangereux.

- Lorsque vous installez le moniteur à côté d'un berceau, assurez-vous que le côté avec les microphones est orienté vers l'intérieur et que tous les cordons restent hors de portée des enfants.

- Lorsque vous installez le moniteur sur le côté du berceau, assurez-vous qu'il est complètement installé.

- L'assemblage par un adulte est nécessaire. Gardez les petites pièces loin des enfants lors de l'assemblage. Faites preuve de prudence lorsque vous déballez le produit.

- Ce produit n'est pas un jouet. **NE PAS** permettre aux enfants de jouer avec.