

1. OPEN THE BATTERY COVER AND SNAP IN A 9V BATTERY.

2. TURN THE "ON/OFF" SWITCH TO "ON" POSITION.

3. PRESS THE "PUSH TO TALK" BUTTON TO TRANSMIT YOUR VOICE.

PRESS THE "MORSE CODE BUTTON" AT THE SAME TIME TO TRANSMIT MORSE CODES.

4. RELEASE "PUSH TO TALK" BUTTON FOR RECEIVING VOICE OR MORSE CODES.

5. TURN THE "ON/OFF" SWITCH TO "OFF" POSITION AFTER USING.

MODE D'EMPLOI:

1. OUVRE LE COUVERCLE DES PILES ET INSTALLE UNE PILE 9 VOLTS.

2. METS L'INTERRUPTEUR "MARCHIE/ARRET" SUR LA POSITION "MARCHIE".

3. APPUIE SUR LE BOUTON "POUSSE POUR PARLER" POUR TRANSMETTRE LA VOIX. APPUIE SUR LE "BOUTON CODE MORSE" EN MEME TEMPS POUR TRANSMETTRE EN MORSE.

4. LACHE LE BOUTON "POUSSE POUR PARLER" POUR RECEVOIR LA VOIX

OU LE CODE MORSE

5. METS L'INTERRUPTEUR "MARCHIE/ARRET" SUR LA POSITION "ARRET" APRES UTILISATION.

WARNING:

DO NOT TOUCH OR MODIFY THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.


ATTENTION:

NE PAS TOUCHER OU MODIFIER LES COMPOSANTS INTERNES EN DEHORS DU CHANGEMENT DES PILES.

REQUIRES 2-9 VOLT ALKALINE BATTERIES (NOT INCLUDED)

FONCTIONNE AVEC 2 PILES ALCALINES DE 9 VOLTS (NON FOURNIES)

MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE.

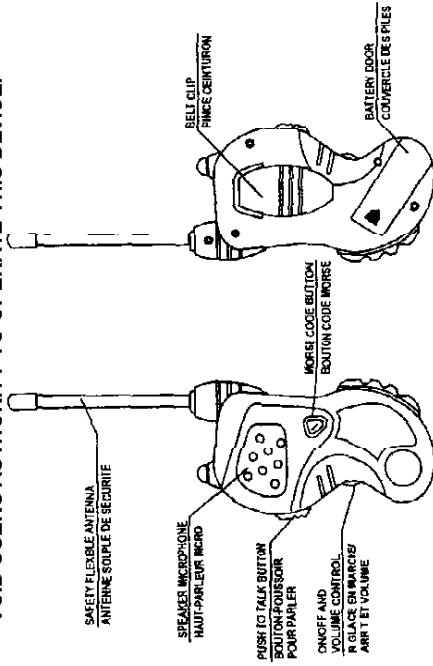

MADE IN CHINA

FABRIQUE EN CHINE

- DO NOT MIX OLD AND NEW BATTERIES

- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.

- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).

- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION (IF REMOVABLE).

- DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED.

- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.

- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.

- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.

- THE SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.

- THE PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.

- DO NOT USE RECHARGEABLE BATTERIES

Ne pas mélanger de piles usagées et de piles neuves.

Ne pas mélanger de piles alcalines, standard (carbon zinc) ou de piles rechargeable (nickel cadmium).

Les piles rechargeable doivent être enlever du jouet avant être recharger. (si on peut l'enlever)

Les piles doivent être recharger sous la surveillance d'une adulte. (si on peut l'enlever)

Il ne faut pas recharger les piles non-rechargeables.

Il ne faut pas mélanger différents types de piles ou des piles neuves et usées.

Il faut utiliser seulement des piles du même type ou d'un type équivalent recommandé.

Il faut insérer les piles selon la polarité correcte.

Il faut enlever les piles épuisées du jouet.

Il ne faut pas court-circuiter les bornes d'alimentation.

Ne pas utiliser les piles rechargeables.