

# SYLVANIA

 **IPX6 WATER RESISTANT FLOATING SPEAKER**



B28

## Introduction



Thank you for choosing the B28 as your source for entertainment! You can use this item with iPads, iPhones, and enjoy handsfree calling. In order to get the best results when using the device, please read this manual first before using.

## Important Waterproof/Safety Information

Important: DO NOT submerge the B28 speaker in water, this unit is not intended to function properly after being under water. B28 is rated IPX6, which means the speaker can be heavily splashed with water or left in the rain (but not submerged in water) for approximately a limited time. If the B28 gets wet, it is recommended that you dry the speaker completely before using it again.

Please note: Speaker is not water-resistant when the silicone cover is open, please make sure that cover is closed and secure before using in a wet environment.

## Description:

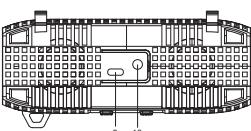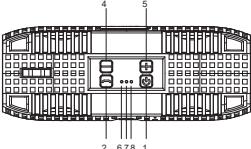

1

- 1.ON/OFF button
- 2.Play/Pause/Phone
- 3.MIC
- 4.Previous/Volume -
- 5.Next/Volume +
- 6.Blue LED(Bluetooth)
- 7.Red LED(Charging)
- 8.Green LED(AUX)
- 9.Micro USB Charging Port
- 10.AUX in Port

## Included:

- 1.Speaker
- 2.USB Micro Charging Cable
- 3.3.5 mm Audio Cable
- 4.User Manual

## Specifications

Bluetooth Version : 5.0  
Supported Profiles: A2DP, HFP, AVRCP  
Bluetooth Range:33ft (10m)  
Dimensions: 185X69X82 mm  
Battery: rechargeable Lithium-ion battery  
Charging: 5V @ 500 mA

## Operation

### Powering On

Press and Hold "ON/OFF" button 2 seconds to power ON, the Blue LED will start to flash.

If an Aux (3.5 mm) cable is connected to the unit, the Blue LED will turn off, and the Green LED will stay illuminated, notifying you, the unit is in Aux-In mode.

### Powering Off

Press and Hold "ON/OFF" button 2 seconds to power OFF

## Bluetooth Mode

### Pairing

The unit will automatically go into "Pairing Mode" when it is powered ON.

Go into your Bluetooth device settings menu and look for "B28".

After the unit has paired and connected, it will re-connect automatically when the unit is powered on and the device is in range.

Note: Bluetooth Timeout :10 minutes

2

## Begin Streaming Music

Press "Bluetooth" to start playing music  
Press and Hold "Bluetooth" 2 seconds to play the next track  
Press and Hold "Bluetooth" 2 seconds to play previous track  
Press either "+" or "=" for volume control

## Making and Receiving Phone Calls

When the unit is connected and paired to your device, the unit allows you to make or receive phone calls with its built-in microphone.  
Press "Bluetooth" to accept a call  
To end a call press "Bluetooth"  
To reject a call, press and hold "Bluetooth" for 2 seconds

## Aux-In Mode

Plug in the supplied 3.5 mm cable into the unit. The other end is connected to your device. The Green LED will only illuminate when in "Aux" mode.  
Please note music and volume can be controlled by your device.

## Charging

Attach the USB cable to the unit, and plug into any USB charger. If the unit is completely discharged, it will take approximately 4 hours to fully charge.

The Red LED will illuminate during charging, when it has completed, the Red LED will turn off.

Note: There will be a beep when the battery is low and needs to be recharged.

## LED Status

|                                    |                |
|------------------------------------|----------------|
| Blue LED flashing & Blue LED solid | Bluetooth Mode |
| Green LED on solid                 | Aux Mode       |
| Red LED                            | Charging       |

## Troubleshooting

|                                      |  |
|--------------------------------------|--|
| Unit doesn't connect to device       | Speaker needs to be connected/re-paired to device      |
| A tone is heard every few seconds    | Speaker needs to be charged                            |
| Unit will not power on               | Speaker needs to be charged                            |
| Unit doesn't control track(s)/volume | Speaker needs to be in Bluetooth mode for full control |
| Unit distorts at high volume         | The devices' volume needs to be lowered                |

## FM mode

1. Short press the power on/off button to switch the Bluetooth and FM mode.
2. After entering FM mode, the voice will remind you of 'FM mode'.
3. Press and hold the phone button for 2 seconds to search for all of the available radio stations. This will last around 2 minutes.
4. After searching the radio station, the speaker will play the first station automatically.
5. Press and hold the Vol + or Vol - button for 2 seconds to switch to the next or previous radio station.
6. Short press the Vol + or Vol - button to increase or decrease the speaker volume.

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

## 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price.

Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

For service assistance and product information, please call: 1-800-968-9853.

Pour obtenir assistance et information appelez: 1-800-968-9853.  
Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3  
www.curtisinc.com

3

4

# SYLVANIA

 HAUT-PARLEUR FLOTANT RÉSISTANT À L'EAU IPX6



B28



## Introduction

Merci d'avoir choisi le B28 comme source de divertissement ! Vous pouvez utiliser ce manuel avec les iPad et les iPhone et profiter du mode mains-libres. Afin d'obtenir des résultats optimaux avec cet appareil, veuillez lire ce manuel avant de l'utiliser.

## Informations importantes sur l'étanchéité et à la sécurité

Important : Ne PAS immerger l'enceinte B28, cet appareil n'est pas conçu pour fonctionner correctement après avoir pris l'eau. Le B28 est conforme à l'indice IPX6, ce qui signifie que l'enceinte peut être éclaboussée abondamment ou laissée sous la pluie (mais pas immergée) pendant un temps limité. Si le B28 prend l'eau, il est conseillé de le sécher complètement avant de le réutiliser. Remarque : L'enceinte n'est pas étanche lorsque le couvercle en silicone est ouvert. Veuillez vous assurer que le couvercle est bien fermé avant d'utiliser l'enceinte dans un environnement humide.

## Description :

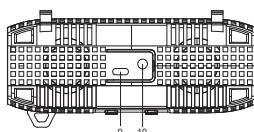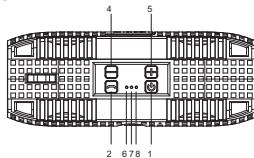

1

1. Bouton marche/arrêt
2. Lecture/Pause/Téléphone
3. MICROPHONE
4. Précédent/Volume -
5. Suivant/Volume +
6. Voyant bleu (Bluetooth)
7. Voyant rouge (chargement)
8. Voyant vert (AUX)
9. Port de chargement micro-USB
10. Entrée auxiliaire

## Inclus :

1. Enceinte
2. Câble de chargement micro-USB
3. Câble audio de 3,5 mm
4. Manuel de l'utilisateur

## Spécifications

Version Bluetooth : 5.0  
Profils pris en charge : A2DP, HFP, AVRCP  
Portée Bluetooth : 33 pieds (10 m)  
Dimensions : 185x69x82 mm  
Batterie : batterie lithium-ion rechargeable  
Chargement : 5 V à 500 mA

## Fonctionnement

**Allumer l'enceinte**  
Maintenez le bouton « marche/arrêt » enfoncé pendant 2 secondes pour allumer l'enceinte ; le voyant bleu se mettra à clignoter.  
Si un câble auxiliaire (3,5 mm) est raccordé à l'enceinte, le voyant bleu s'éteindra et le voyant vert restera allumé, signalant que l'enceinte est en mode entrée auxiliaire.

**Éteindre l'enceinte**  
Maintenez le bouton « marche/arrêt » enfoncé pendant 2 secondes pour éteindre l'enceinte

## Mode Bluetooth

**Couplage**  
L'enceinte passera automatiquement en « mode couplage » lorsqu'elle sera allumée. Ouvrez les réglages de votre appareil Bluetooth et cherchez le nom « Sylvania B28 »

Une fois l'enceinte couplée et connectée, elle se reconnectera automatiquement dès qu'elle sera allumée et que le dispositif sera à portée.

Note : Délai d'expiration Bluetooth : 10 minutes

2

## Commencer à lire de la musique

Appuyez sur «  » pour commencer à lire de la musique. Maintenez le bouton «  » enfoncé pendant 2 secondes pour lire la piste suivante. Maintenez le bouton «  » enfoncé pendant 2 secondes pour lire la piste précédente. Utilisez les boutons «  » et «  » pour contrôler le volume.

## Passer et recevoir des appels

Lorsque l'enceinte est connectée et couplée à votre appareil, celle-ci vous permet de passer ou de recevoir des appels téléphoniques grâce à un microphone intégré.

Appuyez sur «  » pour prendre un appel.

Pour raccrocher, appuyez sur «  ».

Pour rejeter un appel, maintenez le bouton «  » enfoncé pendant 2 secondes.

## Mode entrée auxiliaire

Branchez le câble 3,5 mm inclus dans l'enceinte. Raccordez l'autre extrémité à votre appareil. Seul le voyant vert s'allumera en mode « auxiliaire ». Veuillez noter que la musique et le volume peuvent être contrôlés depuis votre appareil.

## Chargement

Raccordez le câble USB à l'enceinte et branchez-le dans n'importe quel chargeur USB. Si l'enceinte est complètement déchargée, la charge prendra environ 4 heures.

Le voyant rouge s'allumera au cours du chargement et s'éteindra une fois le chargement terminé.

Note : L'enceinte émet un bip lorsque la batterie est faible et doit être rechargée.

## État des voyants

|  |                 |
|--|-----------------|
| Voyant bleu clignotant et voyant bleu fixe | Mode Bluetooth  |
| Voyant vert fixe                           | Mode auxiliaire |
| Voyant rouge                               | Chargement      |

## Dépannage

|  |   |
|--|---|
| L'enceinte ne parvient pas à se connecter à l'appareil | L'enceinte doit être connectée/couplée de nouveau à l'appareil  |
| Un bip sonore se fait entendre à intervalle régulier   | L'enceinte doit être rechargée                                  |
| L'enceinte ne s'allume pas                             | L'enceinte doit être rechargée                                  |
| L'enceinte ne peut pas contrôler la lecture/le volume  | L'enceinte doit être en mode Bluetooth pour un contrôle complet |
| Le son de l'enceinte sature à volume élevé             | Vous devez baisser le volume de l'appareil                      |

## Mode FM

1. Appuyez brièvement sur le bouton marche / arrêt pour basculer entre les modes Bluetooth et FM.
2. Après être entré en mode FM, la voix vous rappellera le « mode FM ».
3. Appuyez et maintenez le bouton du téléphone pendant 2 secondes pour rechercher toutes les stations de radio disponibles. Cela durera environ 2 minutes.
4. Après avoir recherché la station de radio, le haut-parleur lira automatiquement la première station.
5. Appuyez sur le bouton Vol + ou Vol - et maintenez-le enfoncé pendant 2 secondes pour passer à la station de radio suivante ou précédente.
6. Appuyez brièvement sur le bouton Vol + ou Vol - pour augmenter ou diminuer le volume du haut-parleur.

Pour faire une demande de garantie, ne retournez pas ce produit au magasin. Veuillez envoyer un courriel électronique à support@curliscs.com ou appeler le 1-800-968-9853.

## 90 jours de garantie

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jugé défectueux, à notre choix; Cependant, vous êtes responsable de tous les coûts associés au retour du produit. Si le produit ou le composant n'est plus disponible, nous le remplacerons par un produit similaire de valeur égale ou supérieure. Avant l'envoi d'un produit de remplacement, le produit doit être rendu inutilisable ou nous être renvoyé.

Cette garantie ne couvre pas le verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou si il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).

Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisant pas les limitations de garanties implicites ou de dommages spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner.

Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

4

## FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.