


Sound Bar Speaker(2.1CH) SB-250

Package Contents



Manual




RCA audio cable




3.5mm audio cable



Remote Control

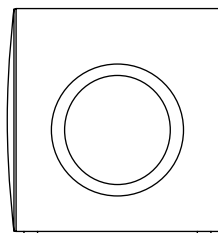


SB-250 Sub-Woofer



SB-250 Sound Bar


Sub-Woofer




Power Adapter
(100-240V~50/60Hz)

Quick Connection Guide


1

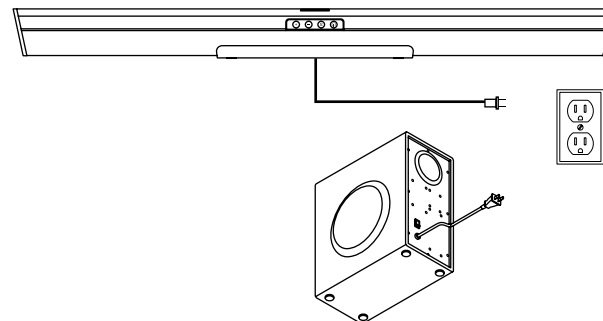


2

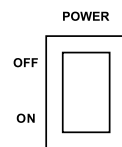

3

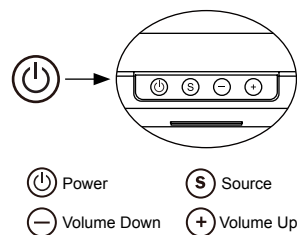

4

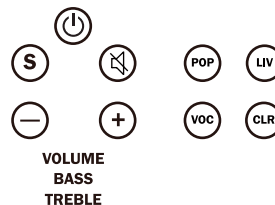

Step 1 Plug the AC adapter into the wall outlet.
The jack is located on the back of the system.

Step 2 Switch Power button to On position to turn on power.
Both on Suond Bar and Sub-Woofer have a Power button.

Step 3 Switch on the "Stand-By" button on sound bar.

Step 4 Tune volume, bass, treble with remote control and setting up EQ per your taste.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Canada Statement

This device complies with Industry Canada RSS-210. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio RSS-210. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et

- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN 	CAUTION Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To reduce the risk of the electric shock, do not remove cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.	WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
 PRECAUCION RIESGO DE CORRIENTAZO NO ABRA 	 ATTENTION RISQUE D'ELECTROCUTION NE PAS OUVRIR 
PRECAUCION: Para reducir el riesgo de incendios o descargas eléctricas, no permita que este aparato quede expuesto a la lluvia o la humedad. Para disminuir el riesgo de corrientazo, no abra la cubierta. No hay piezas adentro que el usuario pueda reparar deje todo mantenimiento a los técnicos calificados.	ATTENTION: Protégez cet appareil de la pluie et de l'humidité afin d'éviter tout risque d'incendie ou d'électrocution. Pour réduire d'électrocution ne pas enlever le couvercle aucune pièce interne n'est réparée par l'utilisateur. Pour toute réparation, s'adresser à un technicien qualifié.

EXPLANATION OF GRAPHICAL SYMBOLS:
EXPLICACION DE SIMBOLOS GRAFICOS:
EXPLICATION DES SYMBOLES GRAPHIQUES:



"DANGEROUS VOLTAGE"
"VOLTAJE PELIGROSO"
"DANGER HAUTE TENSION"



"IT IS NECESSARY FOR THE USER TO REFER TO THE INSTRUCTION MANUAL"
"ES NECESARIO QUE EL USUARIO SE REFIERA AL MANUAL DE INSTRUCCIONES."
"REFERREZ-VOUS AU MANUAL D'UTILISATION"

Important safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground plug: A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain or Moisture.
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall not be placed on the apparatus.
17. No naked flame sources, such as lighted candles, should be placed on the apparatus.
18. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
19. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
20. The mains plug of the power supply cord (or appliance coupler) shall be remain readily operable.

CONSIGNES DE SÉCURITÉ IMPORTANTES

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Respectez toutes les instructions.
4. Suivez toutes les instructions.

5. Ne pas utiliser cet appareil près de l'eau.
6. Nettoyer avec un chiffon sec.
7. Ne pas bloquer les ouvertures de ventilation. Installer conformément aux instructions du fabricant.
8. Ne pas installer près de sources de chaleur telles que radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur.
9. Ne vainquez jamais la sécurité des prises bipolaires ou des prises terre. Une fiche polarisée possède deux lames dont l'une est plus large que l'autre. Une prise de terre possède deux lames et une broche de terre. La lame large ou la troisième broche est fournie pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour faire remplacer la prise obsolète.
10. Protégez le cordon d'alimentation d'être piétiné ou pincé, particulièrement au niveau des prises de commodité, et le point où ils sortent de l'appareil.
11. N'utilisez que des accessoires spécifiés par le fabricant.
12. Utilisez uniquement le chariot, un trépied, une console ou table spécifiés par le fabricant ou vendus avec l'appareil. Quand un chariot est utilisé très prudemment lorsque vous déplacez l'ensemble chariot / appareil pour éviter les blessures renversement.



13. Débranchez cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes de temps.
14. Les travaux d'entretien à un personnel qualifié. Un entretien est requis lorsque l'appareil a été endommagé de quelque façon, par exemple ce cordon d'alimentation ou plug est endommagé, liquide a été renversé ou des objets sont tombés dans l'appareil.
15. L'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou s'il est tombé.
16. L'appareil doit être déconnecté de l'alimentation secteur en plaçant le commutateur d'alimentation en position fermée et en débranchant le cordon d'alimentation de l'appareil de la prise secteur.
17. La prise de sortie doit être installée près de l'équipement et doit être facilement accessible.
18. Ce produit ne doit jamais être placé dans une installation encastrée comme une bibliothèque ou une étagère à moins qu'une ventilation adéquate soit assurée ou les instructions du fabricant ont été respectées.
19. L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures et qu'aucun objet rempli de liquide, tels que des vases ne doit pas être placé sur l'appareil.