Polaroid

9" Internet Tablet
Operating System: Android 4.0, Ice Cream Sandwich

In the box

Location of controls

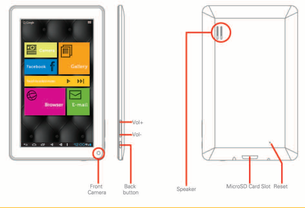

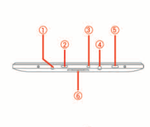

1. DC Input
2. Mini USB Port
3. Mic
4. Headphone Jack
5. Power Button
6. MicroSD Card Slot

Basic operation

Charging the battery:
Connect the tablet to a wall outlet using the included AC adapter.

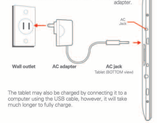

The tablet may also be charged by connecting it to a computer using the USB cable, however, it will take much longer to fully charge.

Battery Tips:
- *Turn off Wi-Fi when it's not in use.*
- *Lock the tablet (the display is off) to shorten charging time.*
- *To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.*

Turning on the tablet

Unlock (enter) the tablet

Lock (standby) the tablet
The tablet locks automatically after the time you've set. Briefly press the button (Lock the device to conserve the battery).

Turning off the tablet
For quick power-off, you can select the "Power" button on the Polaroid Settings widget to turn off the tablet.

Press the Power button, and the Power off dialog appears.



Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left)
Polaroid Media widget

Home screen (center)
Polaroid Home widget

Home screen (right)
Polaroid Settings widget

Swipe the screen left or right to access other Home screens.

1 Access apps & widgets screen
Press to access the Apps & widgets screens.

Swipe the Apps & Widgets screen left or right to access more apps and widgets.

Placing apps & widgets on the Home screen
Press & hold an app or widget to place it on one of the Home screens.

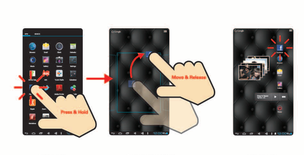

Removing shortcuts or widgets
Press and hold the app or widget and slide it as shown below.

You can always bring the widgets back from the Widgets screen.

Status Bar

2 The Status Bar is available on all screens and apps of the tablet.

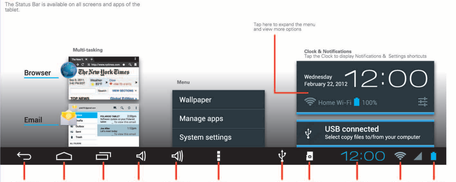

Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi
To browse web sites, use e-mail and download apps, you must first connect the tablet to the Internet.

To set up Wi-Fi, use the "Polaroid Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid Settings widget.

2. Select "Wi-Fi Setup".

3. Select a network.

4. If required, enter the correct password and select "Connect".

Select "Show password" to avoid mistakes.

5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Downloading an App Store

To access a large library of free/paid apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" on the Settings widget.

1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Polaroid Settings widget.

2. Select an app store, and follow the instructions to download and install it on the tablet.

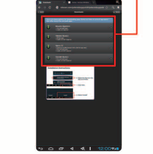

4. Select the downloaded app store (.apk file) from the Pop-up window.

5. Select "Install" to install the app.

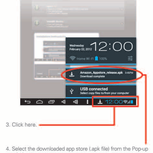

6. The app store appears on the Apps screen.

Downloading and installing apps:
After downloading the selected app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Note: Apps compatibility / games:
There are many apps available on the various app stores. Please note that not all apps will be compatible with the tablet. This is because some of the apps are designed for mobile phones and require functions or specifications that are not supported by the tablet. We recommend always searching for the free or "Lite" version of an app and testing it before purchasing the paid app.

**Avoid apps that require GPS as these apps will not be supported by the tablet.*

The tablet supports many game apps - however we recommend always testing the free version (if available) before purchasing.

Note: *Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon or the Amazon appstore.*

Games
Sometimes, while playing games, the g-sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

1. Open "Settings."
2. Select "Display."
3. Select "Accelerometer Coordinate System."
4. The default setting is "Default Coordinate System." This setting should work for most games.
5. In case your game is not functioning properly, select "Special coordinate system to support some other games".

Camera and video chat

Front facing camera
Select on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in camera.

Select the picture to go to the pictures folder of the gallery app where all the pictures and videos are saved.

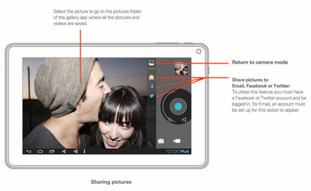

Video chat
Use the built-in, front facing camera to video chat with friends and family.
There are many different services that offer video chat, which are available on the app stores.

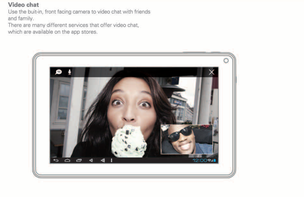

Web browsing

Select "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

Mobile browser mode

Desktop (Full view) browser mode

Setting up e-mail

Select "E-mail" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to Wi-Fi before accessing or setting up email account).

Email Setup screen

Click to access Email settings

INBOX screen

Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.

Photo gallery screen

Viewing pictures:
Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Watching videos:
While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Share pictures to Email, Facebook or Twitter:
To utilise this feature you must have a Facebook or Twitter account and be logged in, for Email, an account must be set up for this option to appear.

Share: Share the selected picture through Email, Facebook, or Twitter

Delete: Delete the selected picture

Menu: Slideshow, edit and more

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Conserve Internal Memory!
It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Tips: Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet - this will conserve the internal memory, and allow you to download more apps.

Inserting Micro SD card
The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet:

1. Insert the card face up into the card slot until it clicks and locks into place.

2. Once the card is mounted, the card icon appears on the Status Bar.

3. To access the Micro SD card, select "File Manager" from the Apps screen.

To unmount the card before taking it out of the tablet, it will cancel any media files currently being accessed. Failure to unmount the card before removing it may cause it to become damaged. Make sure to unmount the card before removing it out of the tablet.

Unmount & remove the Micro SD card:

1. Open "Settings."
2. Select "Storage."
3. Select "Unmount Micro SD card."
4. It is now safe to remove the card from the tablet.
5. To remove the card, gently push it in until it pops out.

It will cant can only be inserted one way; do not use force when inserting the card.

Connecting the tablet to a PC or Mac:
1. Connect the smaller end of the included USB cable to the "Mini USB port" of the tablet and the bigger end of the cable to the computers USB port.

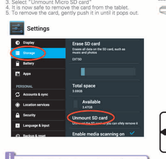

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

3. The "Autoplay" window appears on your computer's display - select "INTERNAL" to view and manage files on the tablet, or if a Micro SD card is inserted, select "Removable Disk" to manage files on the card.

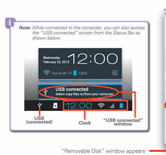

"Removable Disk" window appears if a Micro SD card is inserted

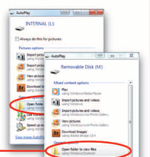

4. Copy media files from your computer to the Micro SD card.

Tips: Organize your media pictures, videos and music by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.

"Removable Disk" access the Micro SD card

Conserve Internal Memory!
Transfer media files to "Removable Disk" (Micro SD card)

5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

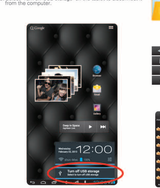

Browsing files

File Manager:
To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" on the Apps screen.

Briefly press a file or folder to open it.

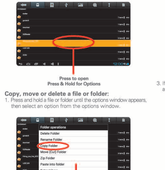

Copy, move or delete a file or folder:
Press and hold a file or folder until the options window appears, then select an option from the options window.

2. Select a file or folder.

3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Multimedia

Use the tablet to store and play music, pictures and video files.

Music
Access music files stored on the tablet.

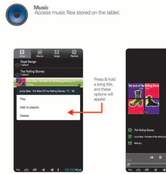

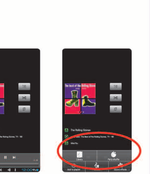

Settings

Settings app:
Select and customize the options in "Settings" to change display options, manage applications, change Wi-Fi settings, passwords and more.

Online help

Select "Online Help" on the Apps screen/Polaroid Settings Widget to access:
- Online help
- Technical support
- Product registration

Software updates

Your tablet is capable of receiving OTA (over the air) updates. The tablet is set to automatically check for updates, and will notify you when there is an update available.

Manually check for updates
To manually check for updates, follow the instructions below: (You must connect to Wifi before checking for updates)

1. On the apps screen, select "Settings"
2. Under the "System" tab, select "Software update"
3. Select "Update" to manually check for OTA updates

Resetting

In the event that the tablet freezes or does not function properly, try correcting the problem by pressing the RESET button located on the bottom panel (shown below).

Use a paper clip or the tip of a stylus to press the RESET button. Doing reset on the tablet will not be affected by using the RESET button.

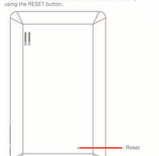

Restore

Note: *If the problem persists it may be necessary to restore the tablet to the factory default settings.*

1) Select "Settings" from the Apps screen.
2) Select "Backup & reset".
3) Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

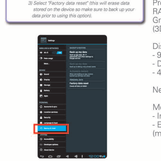

Specifications

Specifications:
Operating System: Android 4.0, Ice Cream Sandwich
Processor: ARM CORTEX-A8
Processor Speed: 1 GHz
RAM: 512 MB DDR3
Graphic accelerator: OpenGL ES 2.0 (3D game support)

Display:
- 9" capacitive multi-touch screen
- Display resolution: 800*480
- 4 way auto rotation

Network: WiFi (802.11 b/g/n)

Memory
- Internal Memory: 4GB
- External Memory: Micro SD card slot (max 32GB)

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Unauthorized repair or modification of this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Specifications

Specifications:
Operating System: Android 4.0, Ice Cream Sandwich
Processor: ARM CORTEX-A8
Processor Speed: 1 GHz
RAM: 512 MB DDR3
Graphic accelerator: OpenGL ES 2.0 (3D game support)

Display:
- 9" capacitive multi-touch screen
- Display resolution: 800*480
- 4 way auto rotation

Network: WiFi (802.11 b/g/n)

Memory
- Internal Memory: 4GB
- External Memory: Micro SD card slot (max 32GB)

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by AIT, Inc. (AIT) to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

Product Type: Tablet PC
Territory: United States / Canada
Parts Warranty: 1 Year
Labor Warranty: 1 Year

To obtain Warranty Service and Troubleshooting Information:
1) Visit our website at: www.polaroid.com
2) Call AIT at: 1-800-330-0619
3) Email us at: polaroidtabletsupport@uniontelecom.com

To receive Warranty service, the original consumer purchaser must contact AIT, or an authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to AIT or the authorized service provider at time of the Distribution, in order to obtain the requested service.

Shipping expenses to the authorized service center or Return Facility are not covered by this warranty, and must be paid by the consumer.

Exclusions and Limitations
This Warranty does not apply to: (a) defects in materials and workmanship encountered in the normal, noncommercial use of the Product, and does not cover consumer instruction, delivery, installation, software issues, set-up, adjustments, cosmetic damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use, modification of any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen.

This Warranty applies to the original consumer only and does not cover products sold AS IS OR WITH ALL FAULTS, sold as refurbished or reconditioned, or those with no serial number (e.g., tubes, batteries, bulbs etc.). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the country where the consumer purchased the product, and only applies to products purchased and serviced in that country.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE PAID, AT DISTRIBUTOR'S OPTION AND DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, REVENUE, DATA OR USE) INCURRED BY ANY PERSON OR ENTITY, USE, MISUSE OR INABILITY TO USE THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY NOTWITHSTANDING THE FOREGOING, CONSUMER'S S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum and Polaroid Pixel & Polaroid are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of their respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.
© 2012 All Rights Reserved.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives and ordinances governing the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to www.polaroid.com and reference **Social Responsibility** http://www.polaroid.com/social-responsibility to find a collection facility in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization processes may vary depending on your device, so you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process."

Android is a trademark of Google Inc.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Polaroid

internetablet