


Controller operation for movement

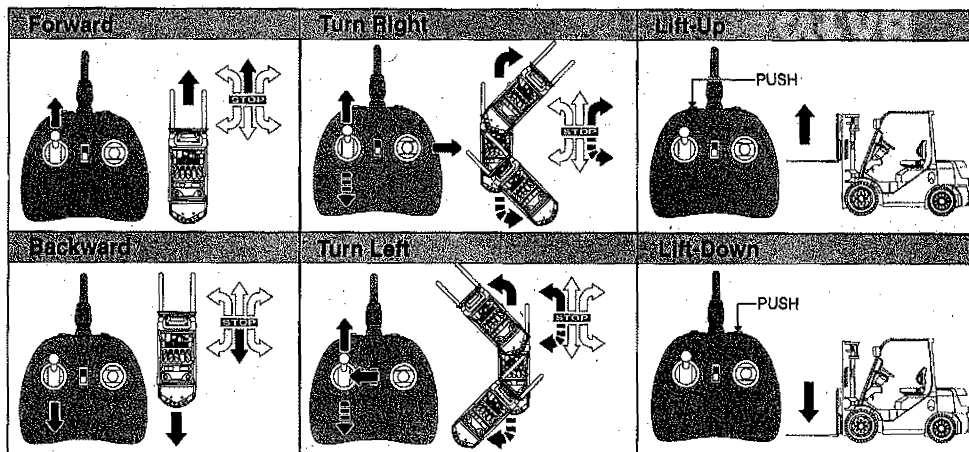

- * When the vehicle hits an obstacle, stop the motion and remove it from the obstacle immediately.
- * Performance of the vehicle depends on surface on which it is played.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

For parents to read:

1. This product is not suitable for children under 12 years old due to small parts which may be hazardous. Please retain this information for future reference.
2. Do not use rechargeable battery as it may cause excessive heat, fire, leakage, or even explosion.
3. Use LR03-size batteries only (non-rechargeable type).
4. Non-rechargeable batteries are not to be recharged.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. The supply terminals are not to be short-circuited.
7. Do not use new and old batteries together. Do not mix different brands or different kinds of batteries.
8. Make sure to insert batteries with correct (+) and (-) polarity.
9. Make sure to switch off the toy after each play and remove batteries.
10. Do not short-circuit the toy, as it will cause danger.
11. If the toy gets wet, dry it up and stop playing to avoid short-circuit and causing hazards.
12. Do not put it into fire or water.
11. Do not put the toy near hot or damp places, for example, heater or bathroom.
12. Do not bend the antenna, this may cause sharp points and the child may get hurt.
13. Do not put finger, hair, or clothes into the shaft or rotating parts of the toy.
14. Always play in safe places only.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT


NOT SUITABLE FOR CHILDREN UNDER 12 YEARS OLD.

27MHz

Instructions

8FG/8FD25

Contents : Forklift x 1, Controller x1, Pallet x 1,
Cone x 4, Miniature Carton x 1

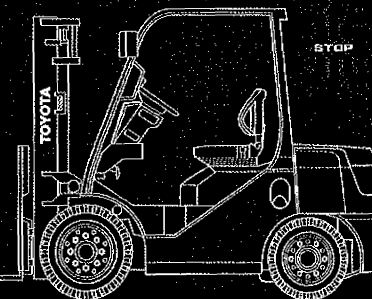


Battery placement

1. Remove the battery cover (seat) of the vehicle and place 3 pieces of "LR03"(AAA) battery with correct (+) and (-) polarity as shown. Put the battery cover (seat) back after adding batteries.
2. Remove battery cover from backside of the controller, put a piece of 9V(6LR61) battery with correct (+) and (-) polarity. Put the battery cover back after adding battery.


BATTERY REQUIRED

LR03(AAA)x3
9V(6LR61) x1
(Not Included)

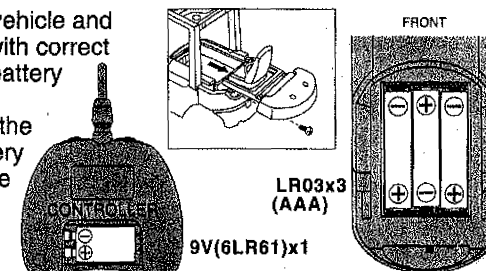

How to play


1. Switch on the vehicle by the ON/OFF switch of the Vehicle. The vehicle is now ready for motion. (The transmission range is normally 2 to 3 meters but may vary, depending on conditions of batteries and transmission environment.)
2. Use the two control sticks to control movement of the vehicle, and use the two lift buttons to control the up and down motions of the lift.
3. Steering trim Adjust straight move Slightly adjust straight move by turning left or right.

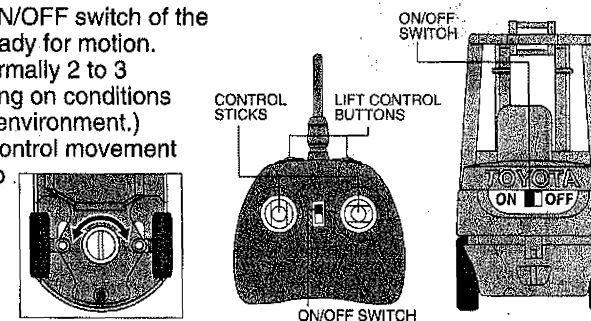

WARNING

1. Do not play in the street or in crowded places.
2. As this toy uses radio waves of low energy level, transmission range may become short when being played in sheltered areas e.g. under the table. In situation that the unit cannot function, try at a different place or at a later time.
3. As this toy contains sophisticated, delicate parts, please pay attention to the following:
 - Do not disassemble the control unit or the vehicle.
 - Do not play under rain, in the water, under extreme strong sunlight or on thick carpet.
 - Do not apply strong shock to the toy or drop it from height.
 - Do not put the toy near heater or hot areas.
4. Unexpected out-of-control motions may result when two vehicles are being played together. Keep distance from one another to avoid interference.
5. When battery level gets low, it may result in incorrect motions. In such case replace all batteries with new ones.

コントローラーの操作と車の動き

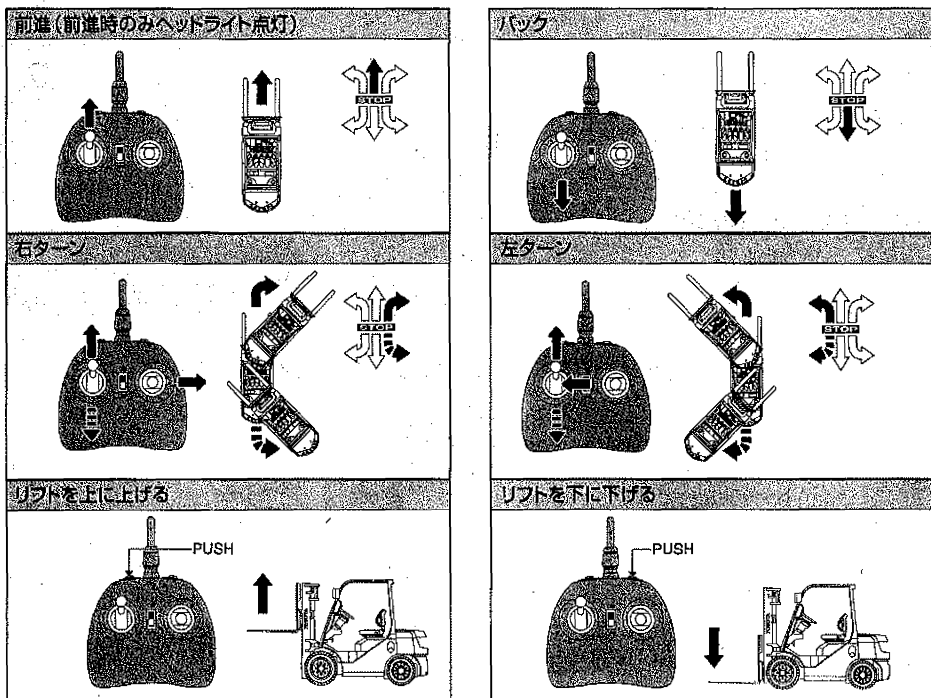

- * フォークに重い物などをのせたりしないでください。
- * 障害物などによって車が止まった場合は、操作を中止して障害物から車を取り出してください。
- * 走行性能は路面の状況により、かわることがあります。

注意 (ちゅうい)

保護者の方へ、必ずお読みください。

- 小さな部品があります。口の中には絶対に入れないでください。窒息などの危険があります。
- 糸を指などに巻きつけたりしないでください。血がかわなくなり危険です。
- 誤飲、糸による事故の危険がありますので、12才未満のお子様には絶対に与えないでください。
- 事故の危険がありますので、屋外では絶対に遊ばないでください。
- 階段、縁側など転落の恐れのある場所、傾斜のある場所、火気のある場所では絶対に使用しないでください。
- 本体の車輪や可動部分の隙間などに、指や髪、毛や服などをはさまれないように注意してください。
- 落としたり投げつけたり、振り回すなどの乱暴な遊びはしないでください。アンテナの先端が目などにあたり、怪我をする恐れがあります。
- 安全のため、本製品が破損・変形・故障した場合は、直ちに使用をやめてください。
- コントローラーのアンテナ部分を長時間下記のものなどに接触させると、色移りする場合があります。
★床(フローリング、クッションフロアなど) ★カーペット・マット ★壁紙 ★他のプラスチック製品
- 持ち運びをする時は、必ず本体を持ってください。
- 遊んだ後は、12才未満のお子様の手の届かない所に保管してください。
- 《電池を誤使用すると発熱・破損・液漏れの恐れがあります。下記に注意してください。》
- 充電式(ニカドなど)電池は絶対に使用しないでください。
- 古い電池と新しい電池、いろいろな種類の電池を混ぜて使わないでください。
- + (プラス)と- (マイナス)を正しくセットしてください。本体にセットする時は、必ず一側を先に入れてください。
- 遊ばない時は、必ず本体とコントローラーの電池をはずしてください。
- ショートさせたり、充電・分解・加熱・火の中に入れてたりしないでください。
- 万一、電池から漏れた液が目に入った時は、すぐに大量の水で洗い、医師に相談してください。皮膚や服についた時は水で洗ってください。

製造元 株式会社エポック社
東京都台東区駒形2-2-2

©2006 EPOCH CO., LTD. MADE IN CHINA


取扱説明書

対象年齢12才以上

27MHz


8FG/8FD25

商品内容:本体×1、コントローラー×1、パレット×1、
パイロン×4、ミニチュアカートン×1

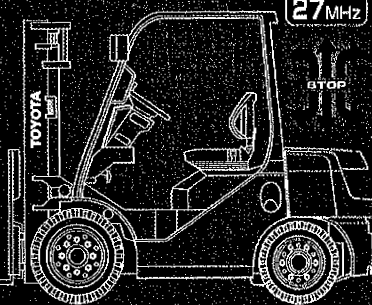


電池の入れ方

1. 本体のスイッチ横のネジと電池カバー(座席)をはずして、図のように単4電池の $\oplus\ominus$ を確認し正しくセットします。セットし終わったら電池カバー(座席)をしめます。
2. コントローラーの裏側のネジと電池カバーをはずし6LR61-9V電池1本を $\oplus\ominus$ を確認し正しくセットします。

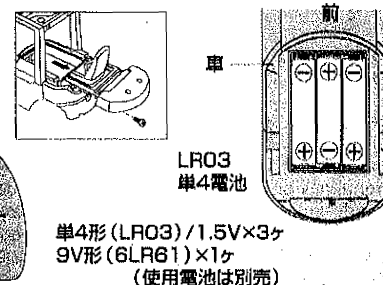

遊び方

1. コントローラーと車本体の後部のON/OFFスイッチをONにすれば走行準備OK。
(送信可能な距離は約4~7mですが、電池の容量や送信状態、使用場所などによって異なります。)
2. 2本のコントロールスティックを使って車をコントロールします。又、2個のボタンでリフトの上げ下げができます。
3. まっすぐ走らない場合はステアリングトリムを左右に回し微調整をしてください。

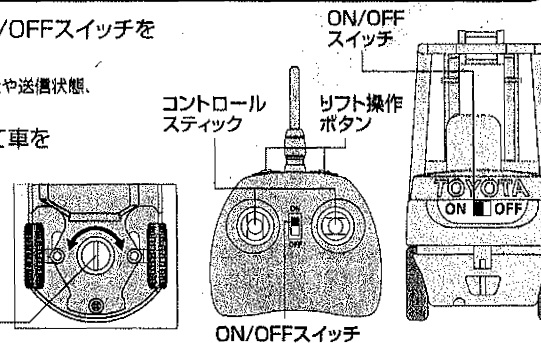

使用上の注意

- 傾斜の無い平らな場所で遊んでください。
- 破損・故障の原因となりますので、マスト部分の糸を引っ張ったり、フォーク、マスト、屋根、車輪、アンテナなどには無理な力を加えないでください。
- 落としたり、強い衝撃や無理な力を加えないでください。
- 本製品を高温・多湿な場所や日光のあたる場所には置かないでください。
- 防水性はありませんので水に濡らさないでください。
- 本製品を分解したりしないでください。故障の原因となります。
- コントローラーと車本体が近すぎたり、アンテナが他のものに接触していると、作動しなかったり、誤作動を起こす場合があります。
- 毛足の長いじゅうたんのうすでは、うまく走行しない場合があります。
- 《破損・故障・変形の原因となりますので、下記に注意してください。》
- 回転しているタイヤは無理にとめないでください。
- コントローラー・車のアンテナを無理に引っ張ったり、曲げたりしないでください。

一お客様へ

この度は、弊社製品をお買い上げいただきまして、誠にありがとうございます。弊社では、より良い製品をお届けするために、常に研究・改良をおこなっております。そのため、同一製品の中にも生産ロットにより多少仕様が異なる場合がありますので、ご了承ください。品質には万全を期しておりますが、万一お気づきの点がございましたら、下記までご連絡ください。

〒300-4193 茨城県土浦市藤沢 3647-5
(株)エポック社 お客様サービスセンター
TEL.0298-62-5789
電話番号は間違えないよう、よく確かめてからおかけください。
[電話受付時間]月~金曜日(祝・祭日 及び弊社特休日を除く)
10時~12時、13時~17時